


Mercedes Vito A2 and A3 **Smartfloor Rear Module**

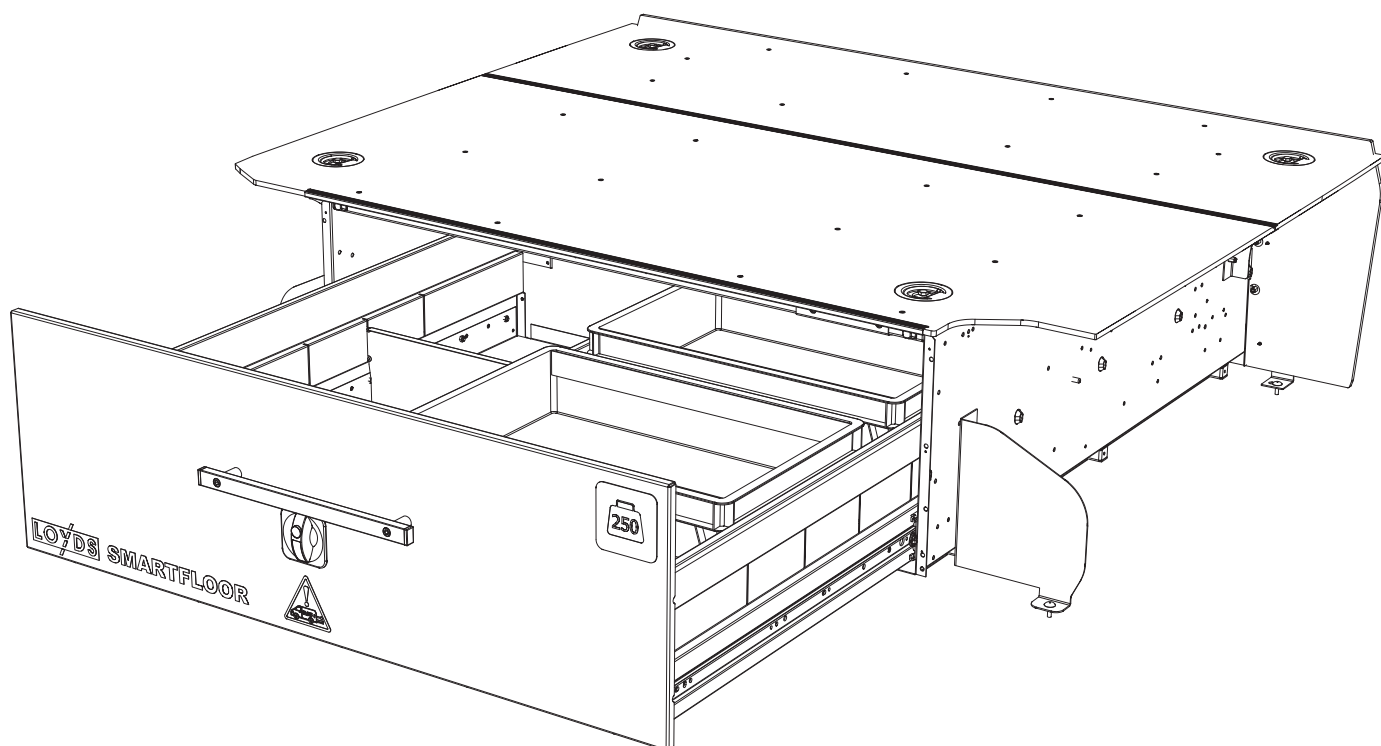

Installation Manual

Manual 15023968_A





Loyds Industri AS - 2023-03-13




Revision Record						
Rev nr	Date	Page	Picture	Update	New	Deleted steps
A	2023-03-13				X	



Use colors when printing this installation manual. / Ved utskrift, bruk farger.

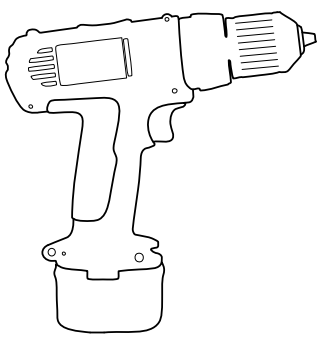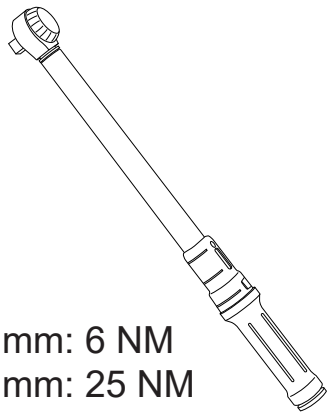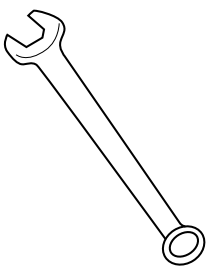
Tools		
	 6 mm: 6 NM 8 mm: 25 NM	 13 mm
 T25 T30 T40	 PH2	 6 mm

15022226 Rear Module Drawer Vito A3

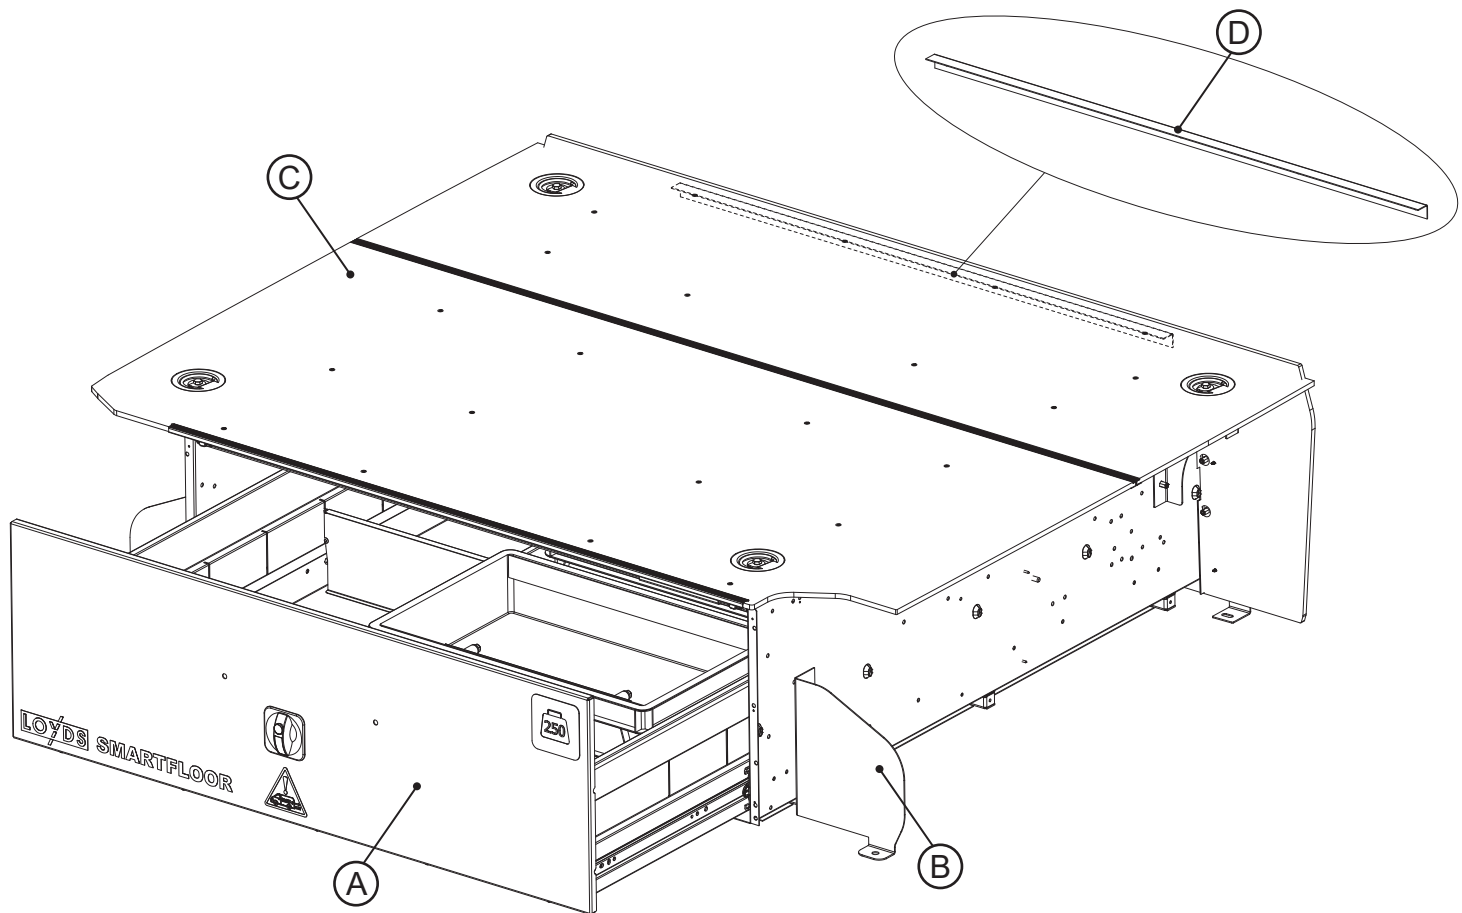


Number	Quantity	Part Number	Definition
A	1	15022501	Rear Drawer RD W1140 L1200
B	1	15022716	Steelbracket Set Rear Mod Drawer Vito A2 A3
C	1	15023533	Floor Set Rear Mod Drawer Vito A2 A3 SF2020
D	1	15021265	Angle Vertical Floor Half Mod Drawer

15022716 Steelbracket Set Rear Mod Drawer Vito A2 A3

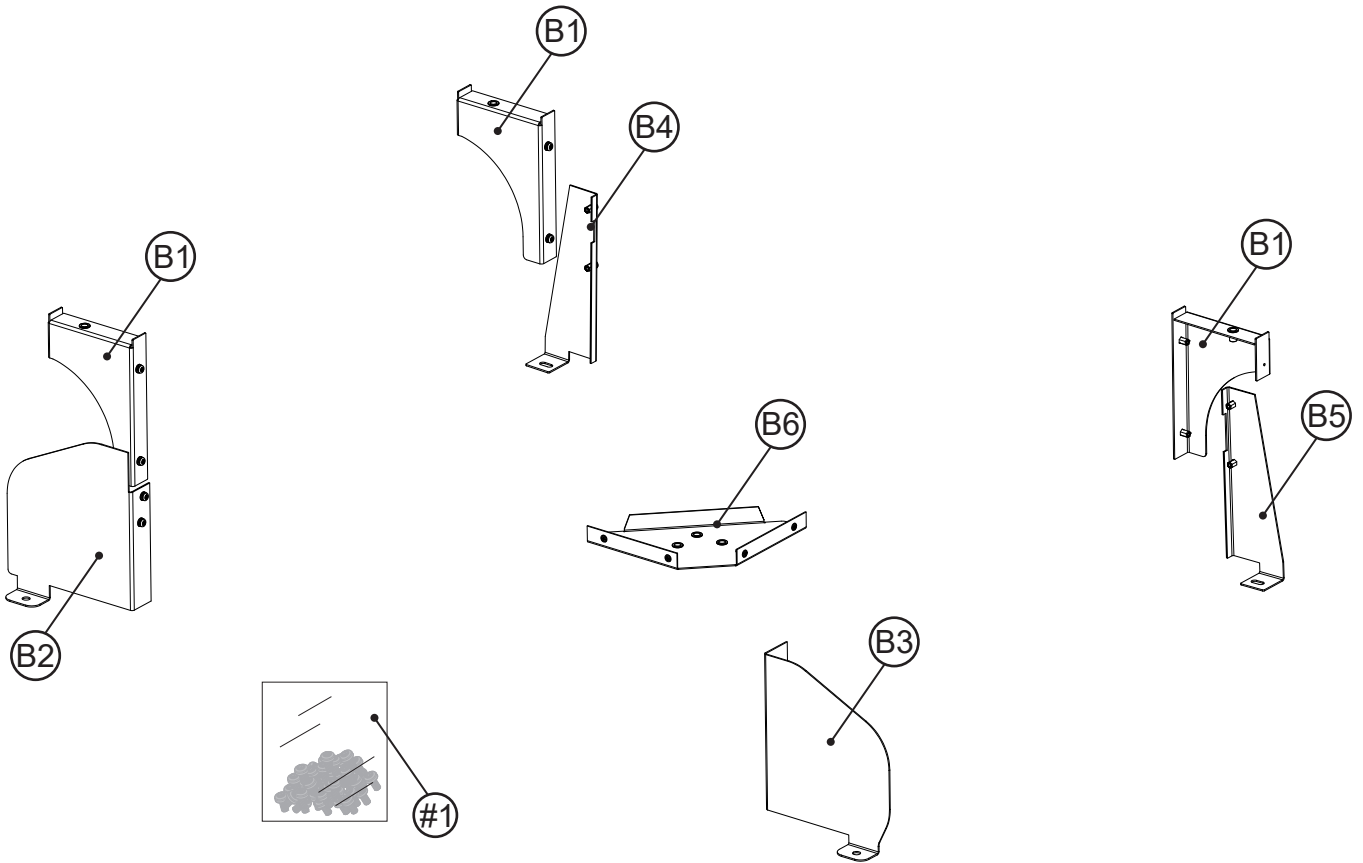


Number	Quantity	Part Number	Definition
B1	3	15018461	Bracket Latchcup Side M8 SF 2020 ASSY
B2	1	15021254	Bracket Left Rear Mod Draw Vito 2020 ASSY
B3	1	15021256	Bracket Right Rear Mod Drawer Vito 2020 ASSY
B4	1	15021258	Bracket Rear Mod Draw Front Left ASSY
B5	1	15021260	Bracket Rear Mod Draw Front Right Vito ASSY
B6	1	15018460	Bracket Latch Inner 8mm ASSY
#1	1	15022717	Bracket Fitting Kit, Rear Vito A2, A3

15023533 Floor Set Rear Mod Drawer Vito A2 A3 SF2020

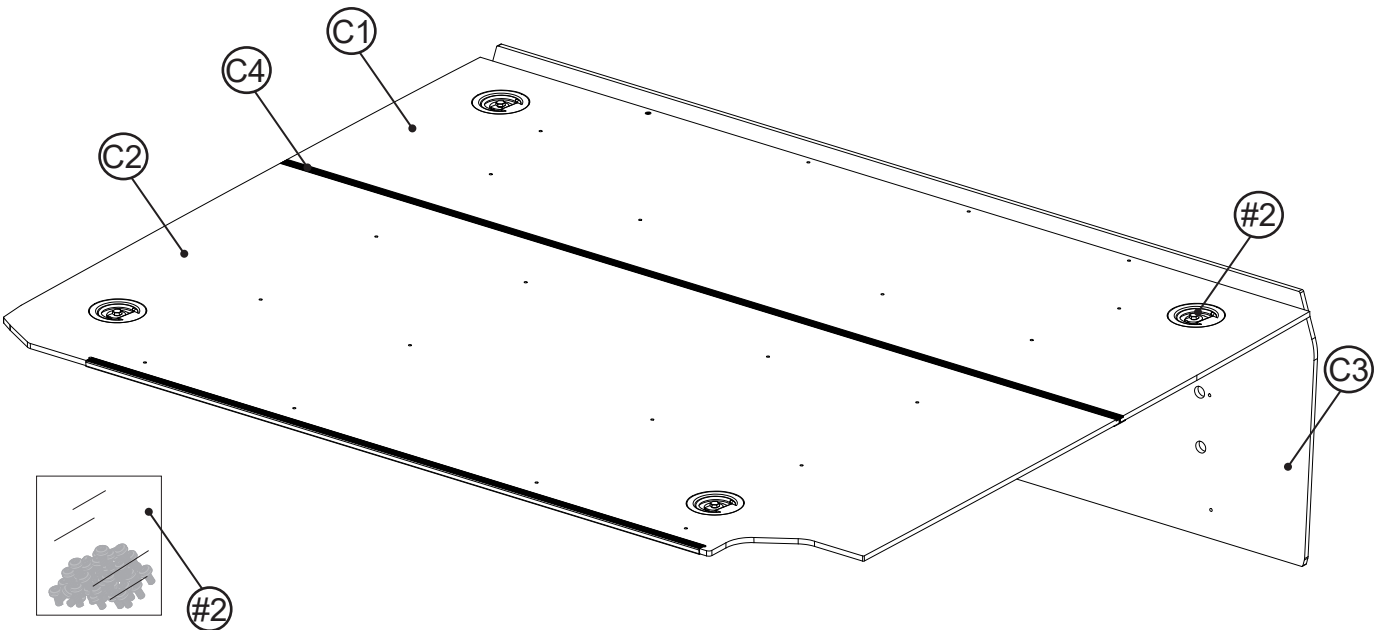


Number	Quantity	Part Number	Definition
C1	1	15022227	Floor Middle SF Rear Mod Draw Vito
C2	1	15022718	Floor Rear SF Rear Mod Draw Vito Assy
C3	1	15023532	Floor Vertical Rear Module Drawer Vito A2 A3
C4	1	15022713	H-profile 9mm L=1669
#2	1	15022715	Fitting Kit Floor Set Rear Mod Drawer Vito A2 A3 SF2020

15010236 Handle Assy

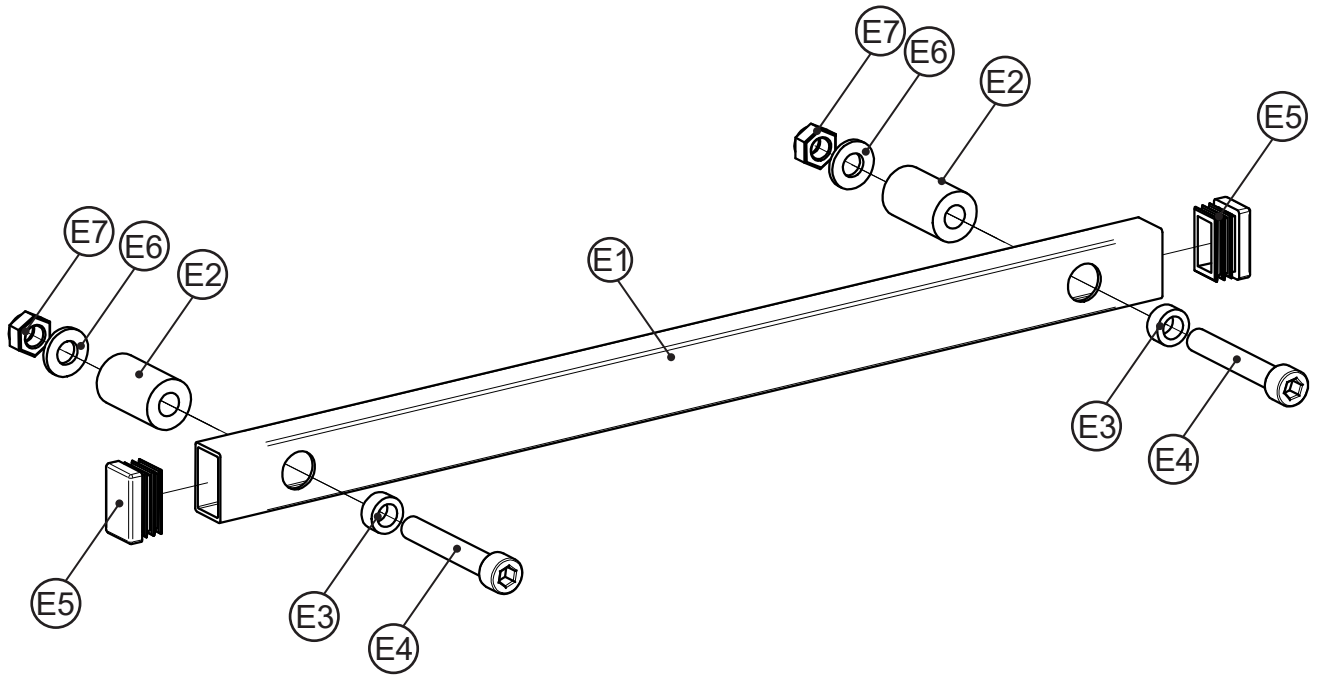

Number		Quantity	Part Number	Definition
E	E1	1	15009441	Handle Tube 25x15x286
	E2	2	15009442	Spacer Ø8,3x18x30 Nylon Black
	E3	2	15009443	Spacer Ø8,1x13x6mm Galv
	E4	2	15009444	Screw M8x50 Cylinderh Hex
	E5	2	15009438	End sleeve Black
	E6	2	8,4x17x2	M8 Washer, DIN 125
	E7	2	8 NMU	Mutter M8 Nyloc DIN985

#1 15022717 Bracket Fitting Kit, Rear Vito A2, A3

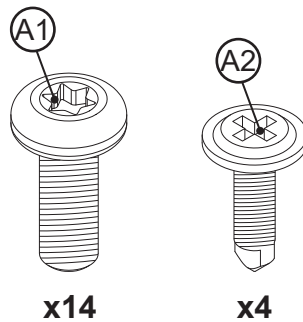


x14

x4

A1	15003551 M6x16 TX30 pan (DIN 7985)
A2	4,2x16 FLS Platescrew selfdrilling E45759 Black

#2 15022715 Fitting Kit Floor Set Rear Mod Drawer Vito A2 A3 SF2020

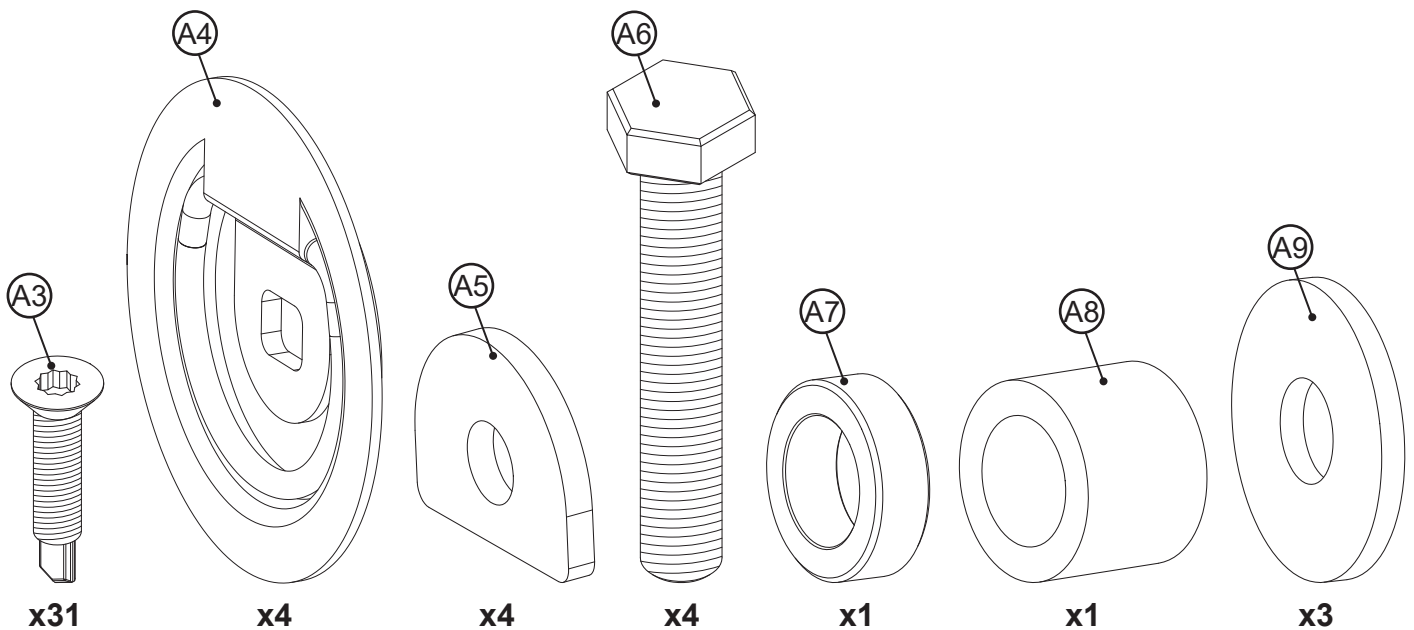

x31

x4

x4




x4




x1

x1


x3

A3	15016947 Screw 4,8x25 Selfdrill Counters Torx Elz
A4	15005497 Latch Cup Black Ø90 Ø12x15 1000Kp
A5	15005884 Washer Latchcup for Ø8
A6	15004713 M8x50 screw, 6K DIN 933 Black, ElZn+Cr3
A7	13x20x6,4 Spacer, U-709
A8	15001584 Distansehylse D20 d13 h15
A9	29,5x11x2,5 Stoppskive M10 Din 9021

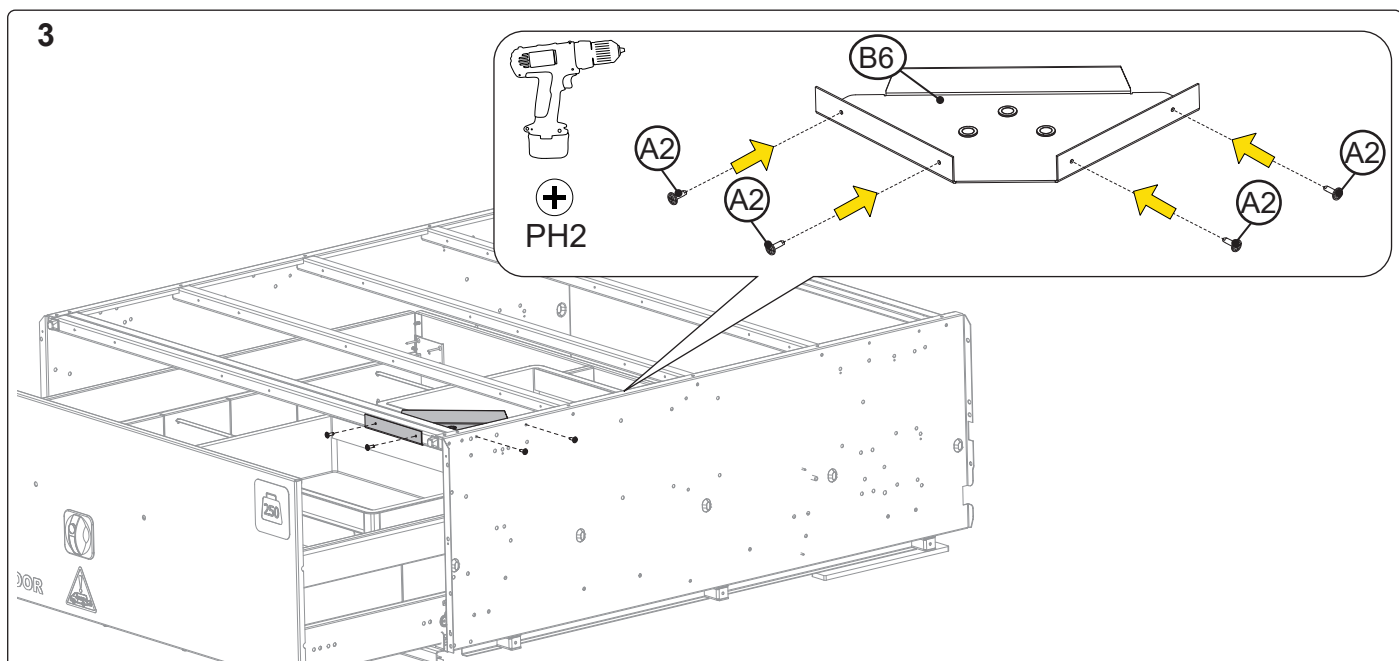
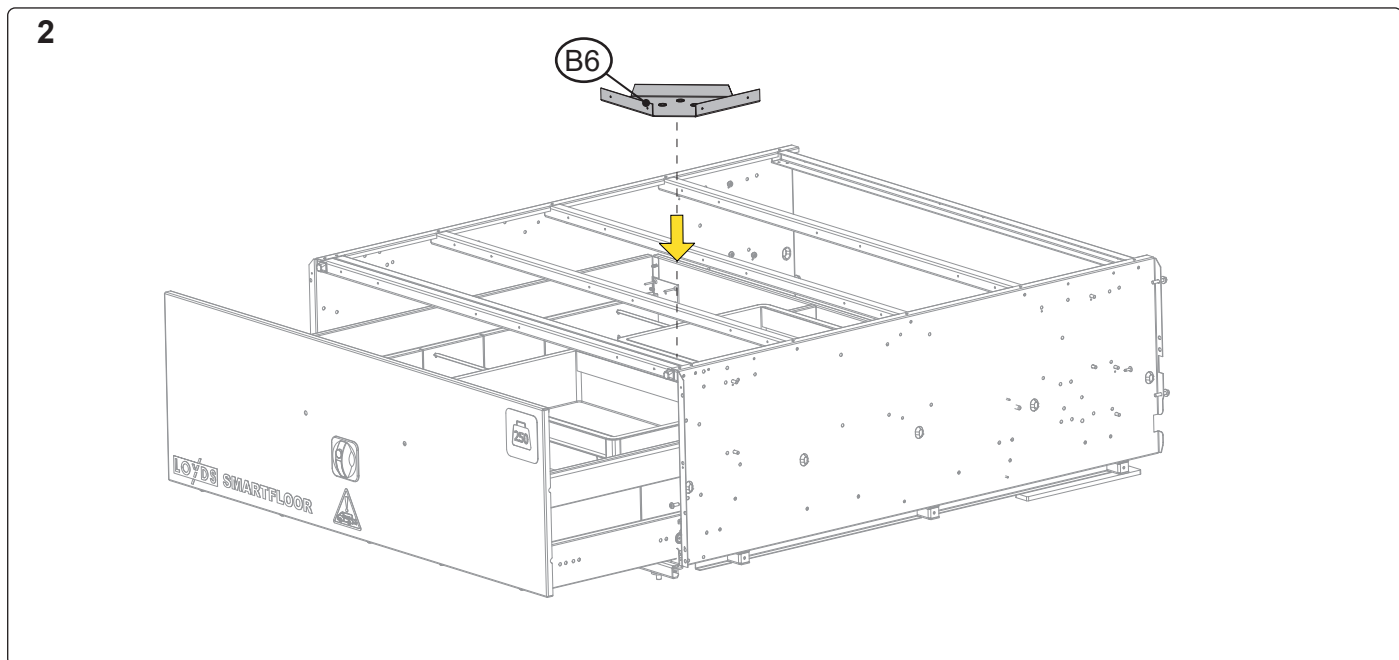
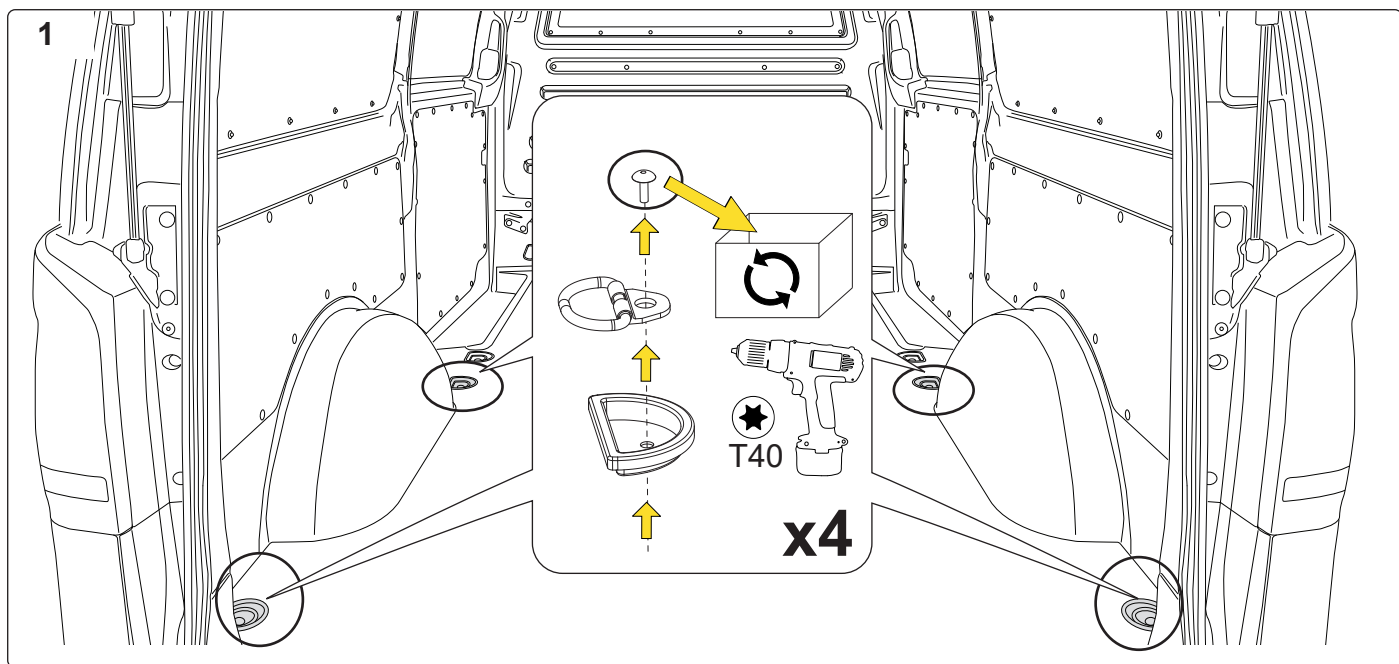


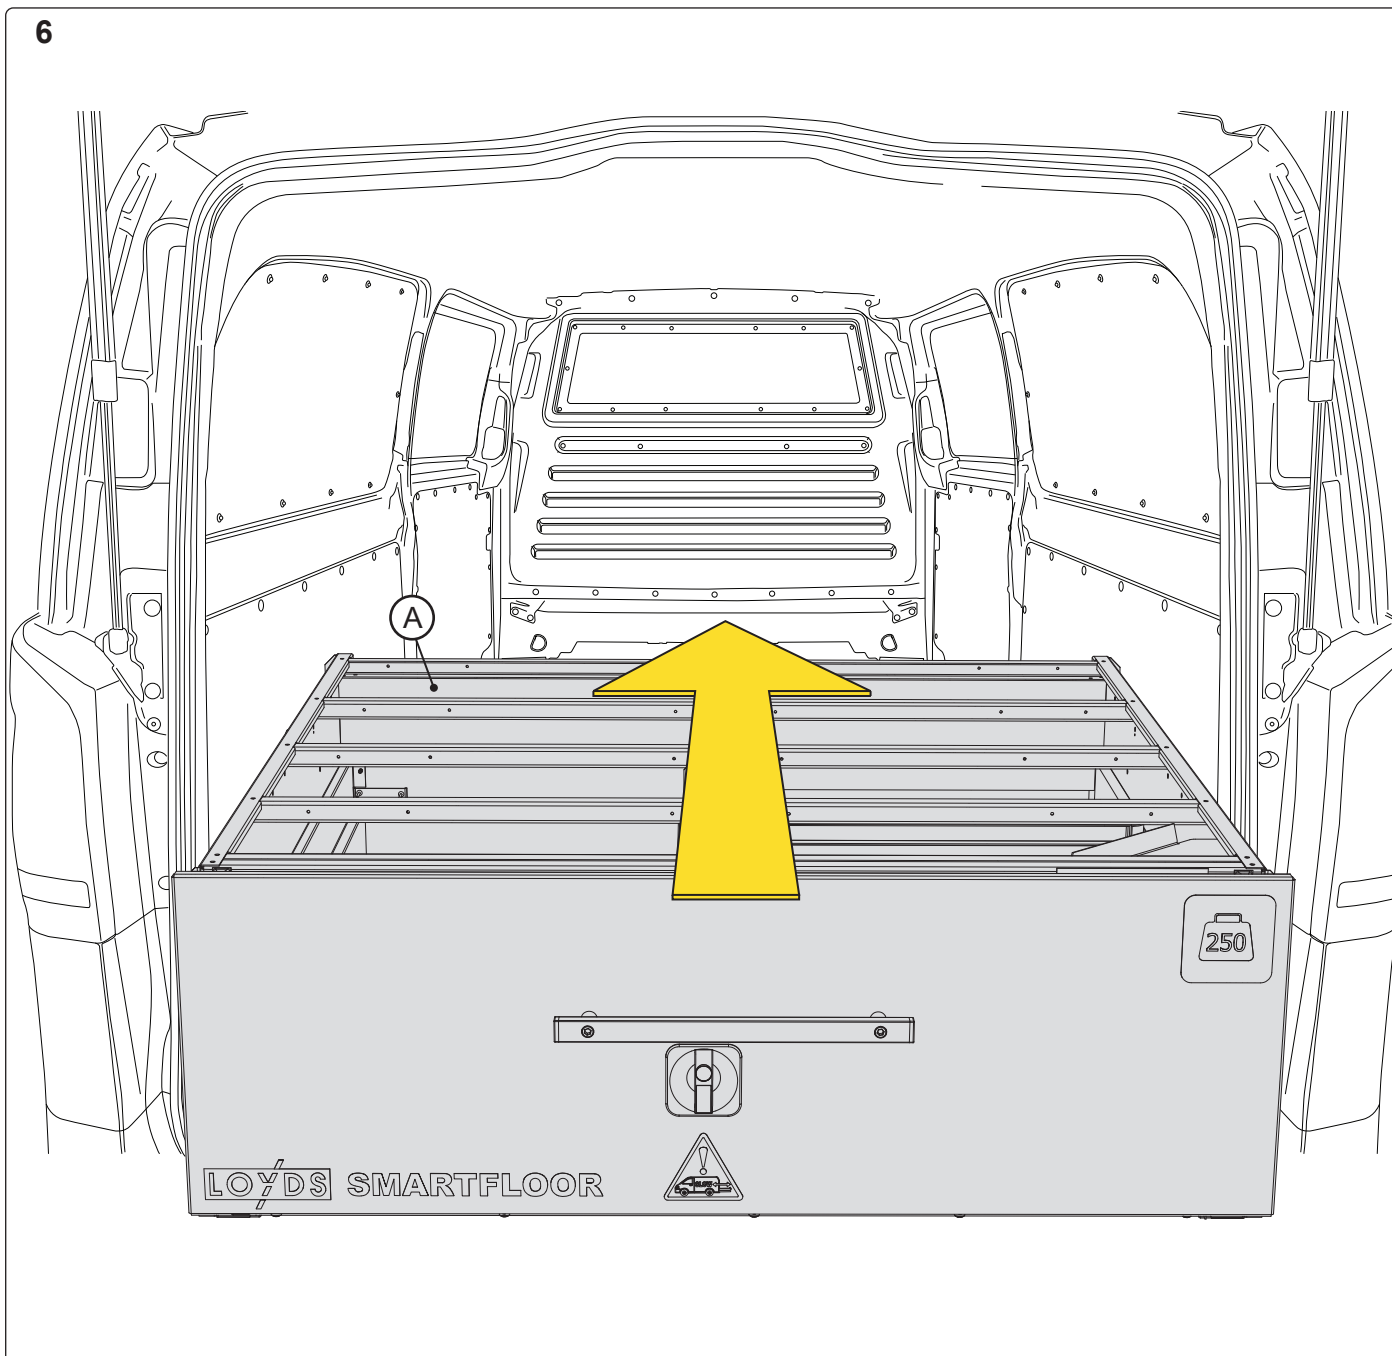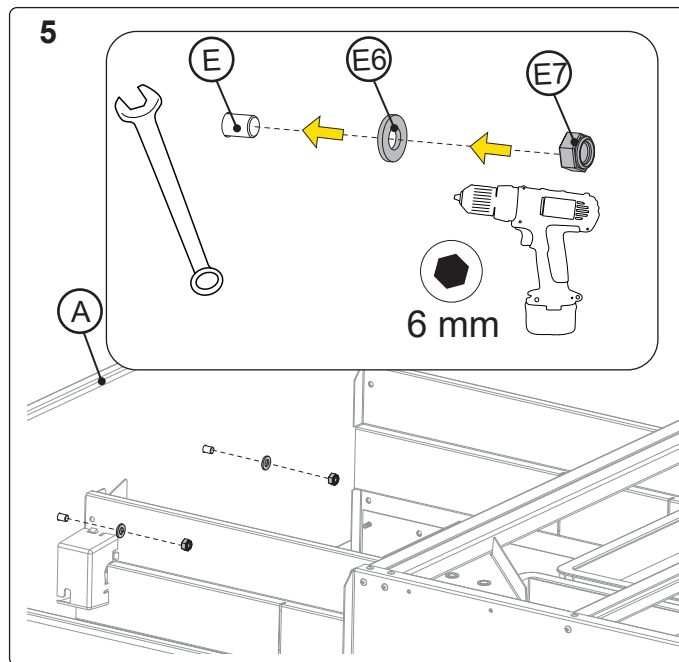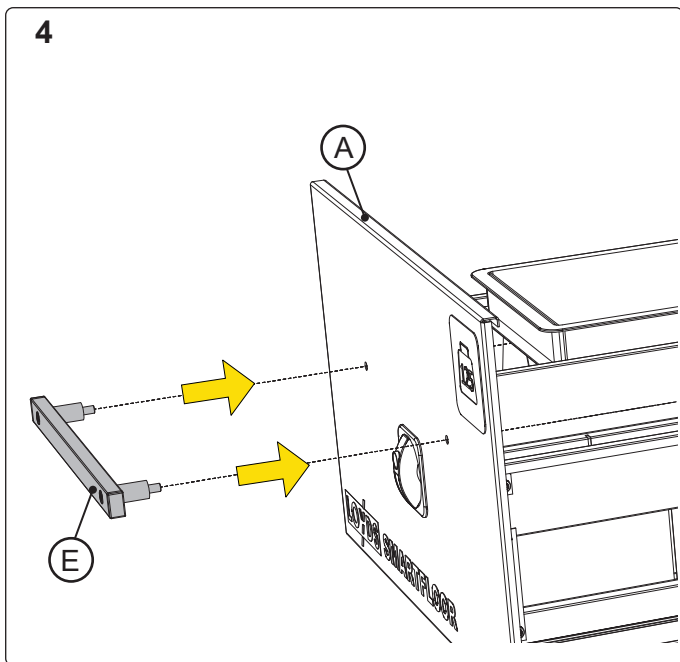


7



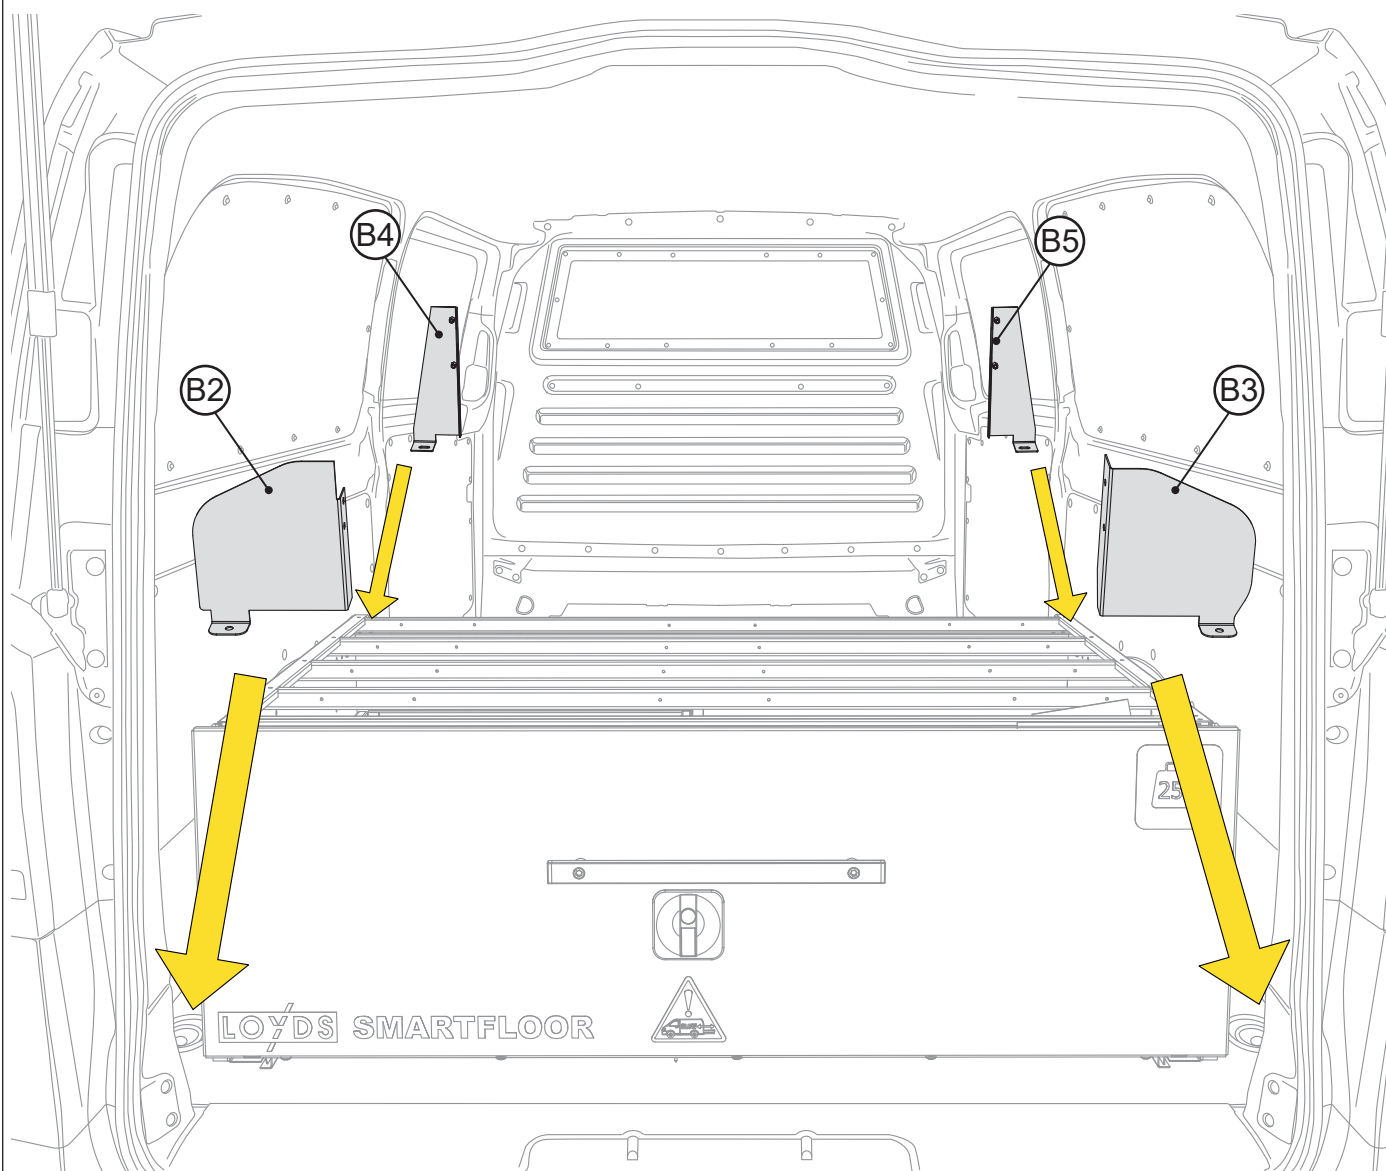


8

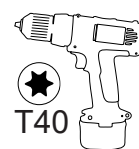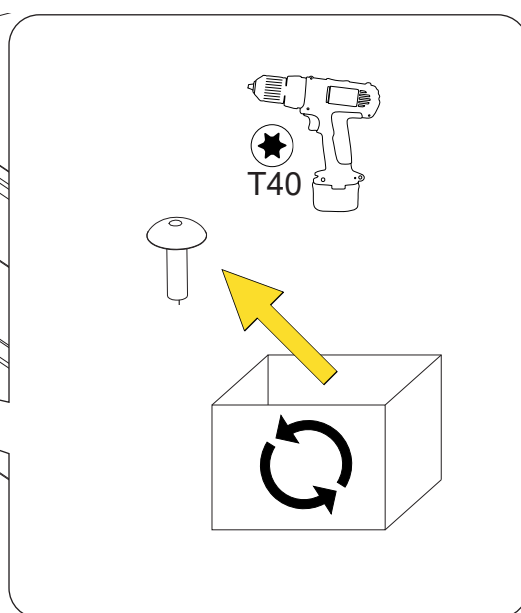
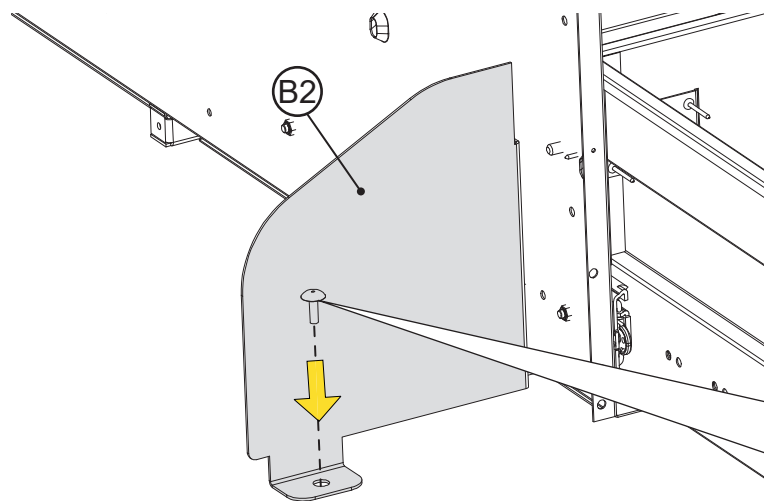


T40

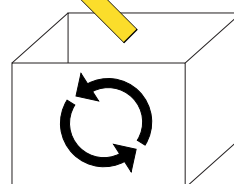


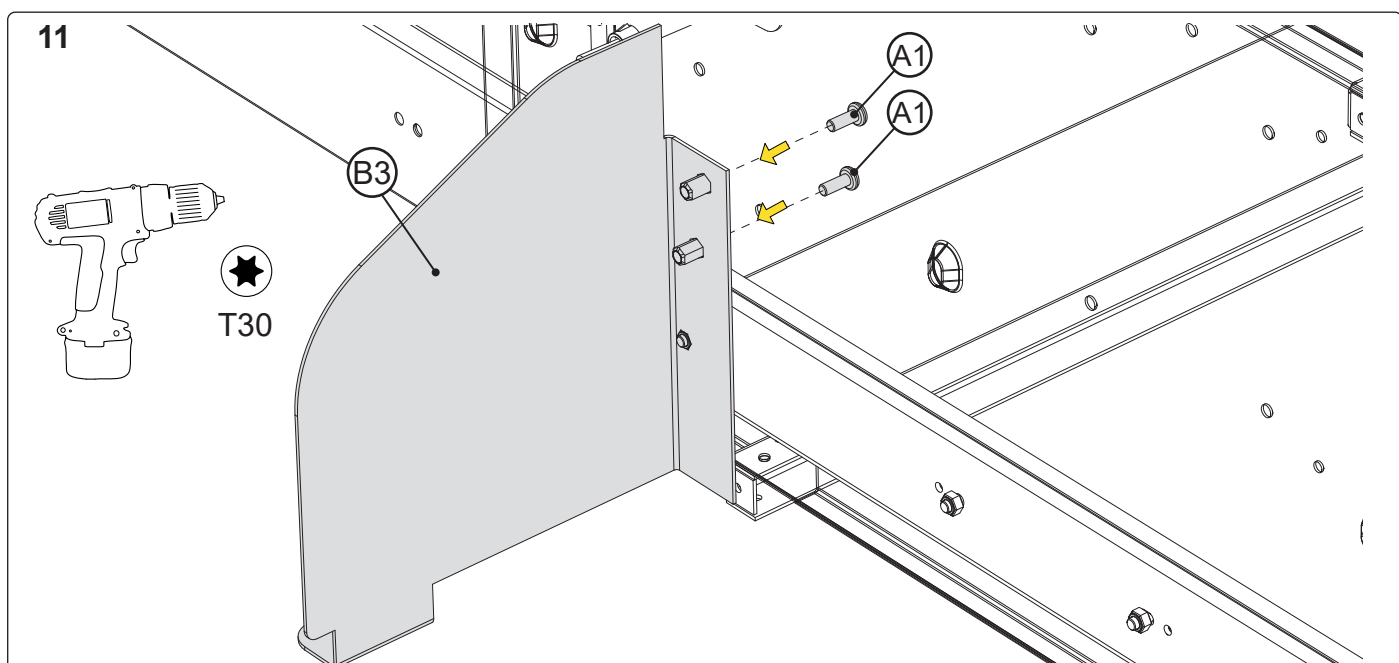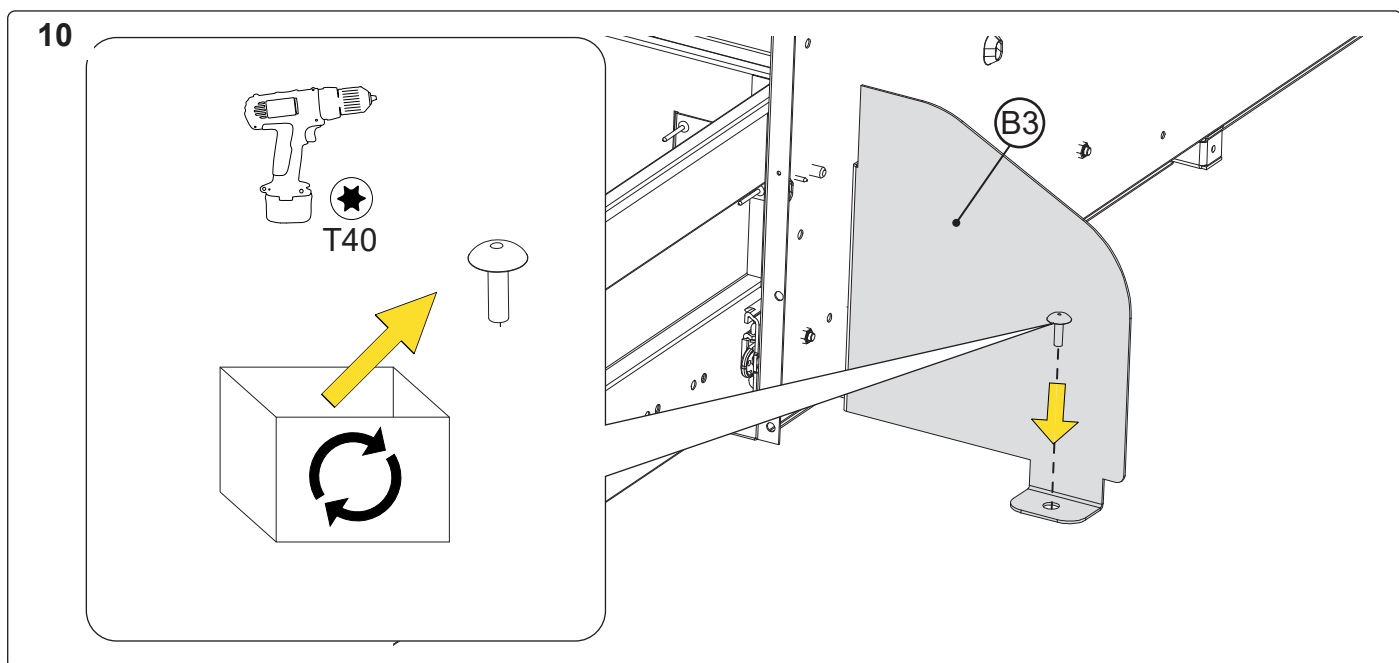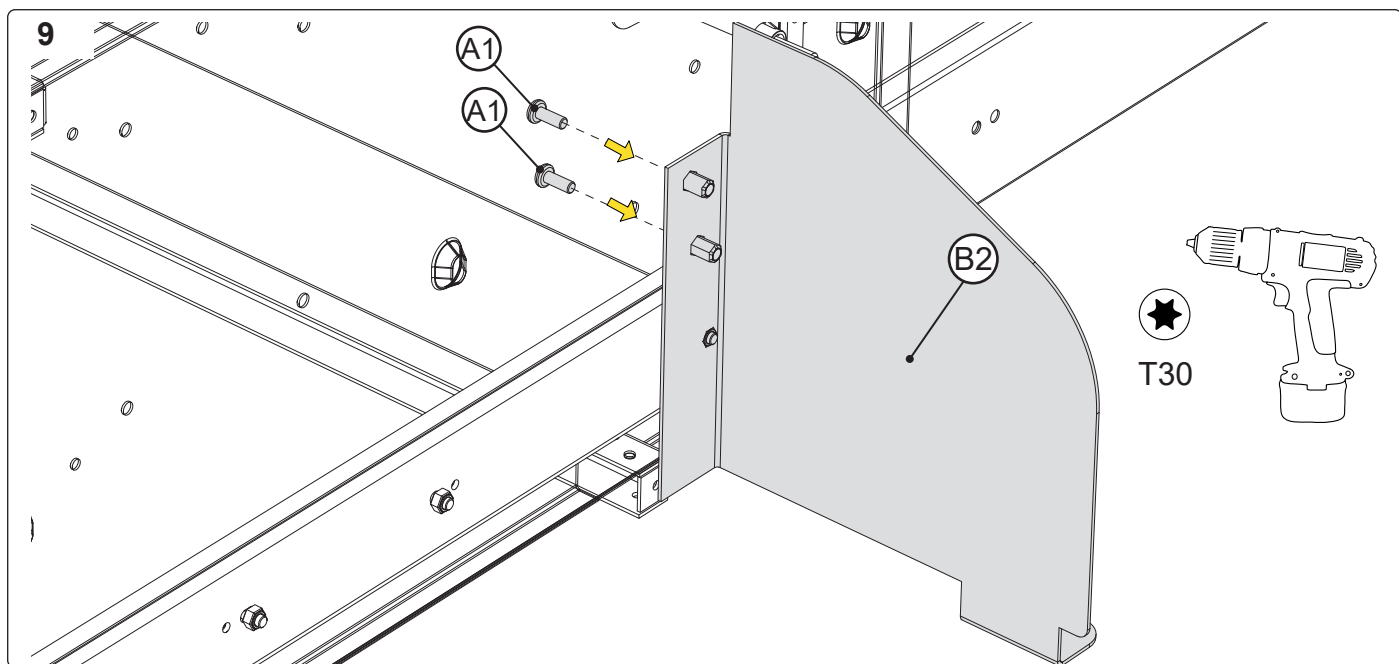



12

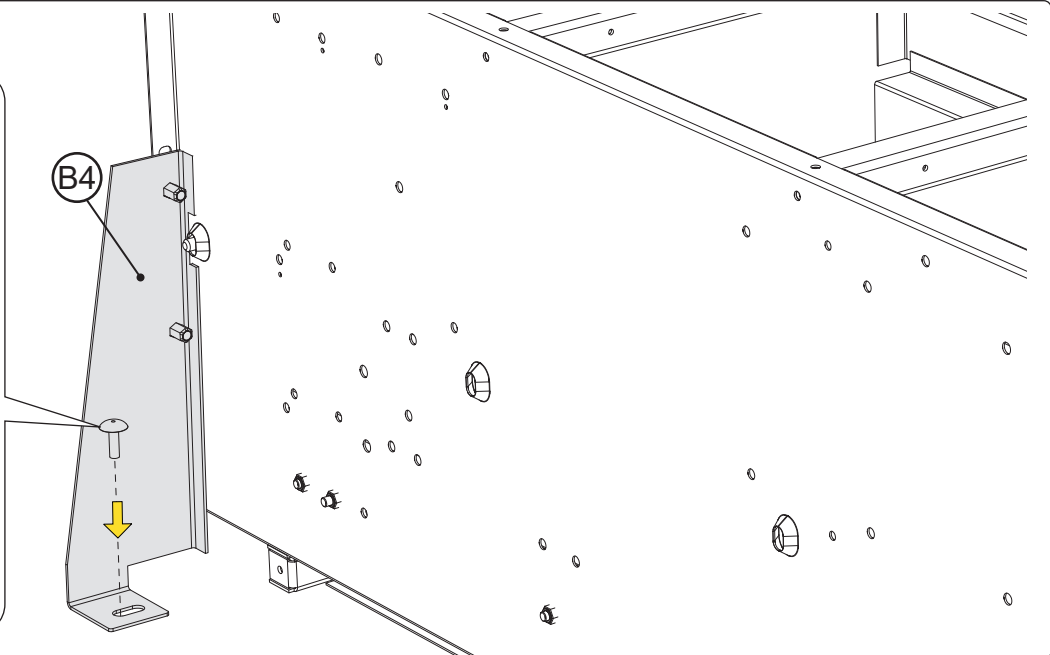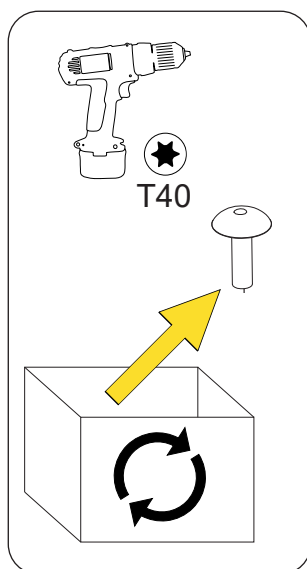



13

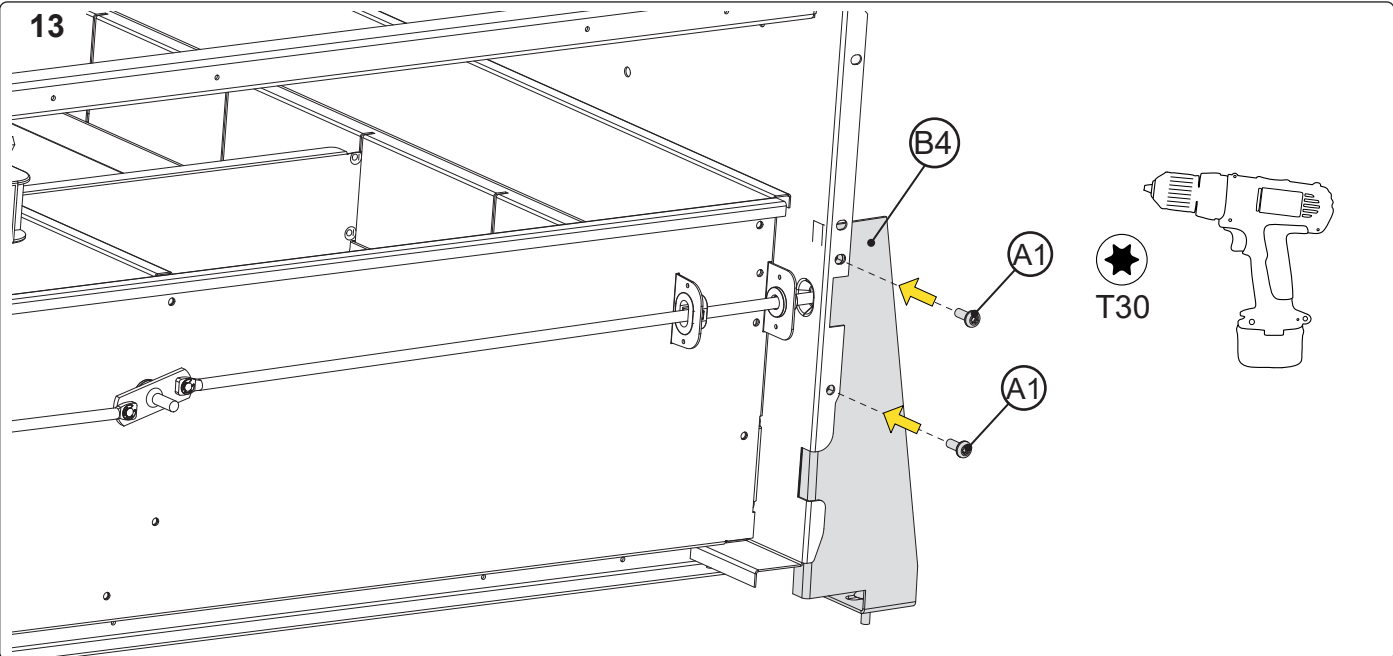


14

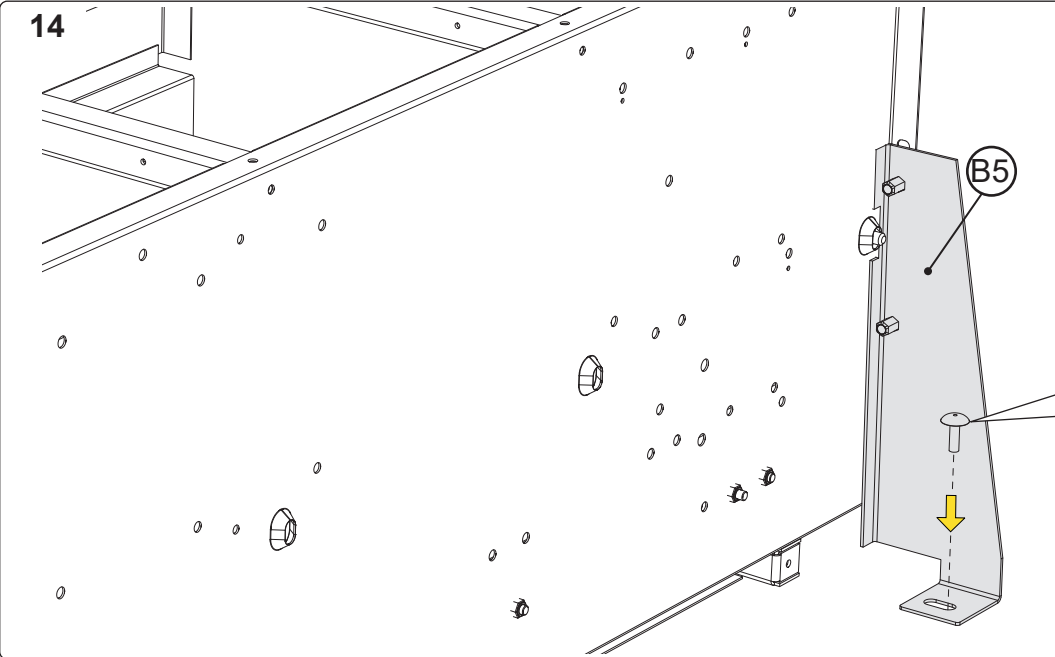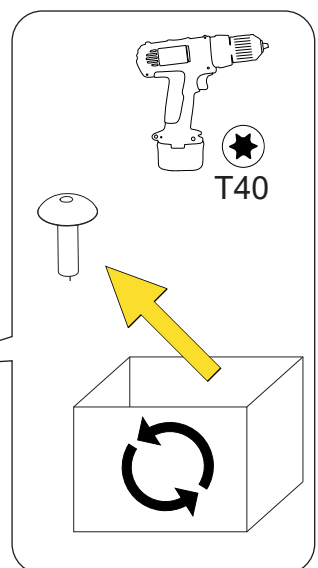


15

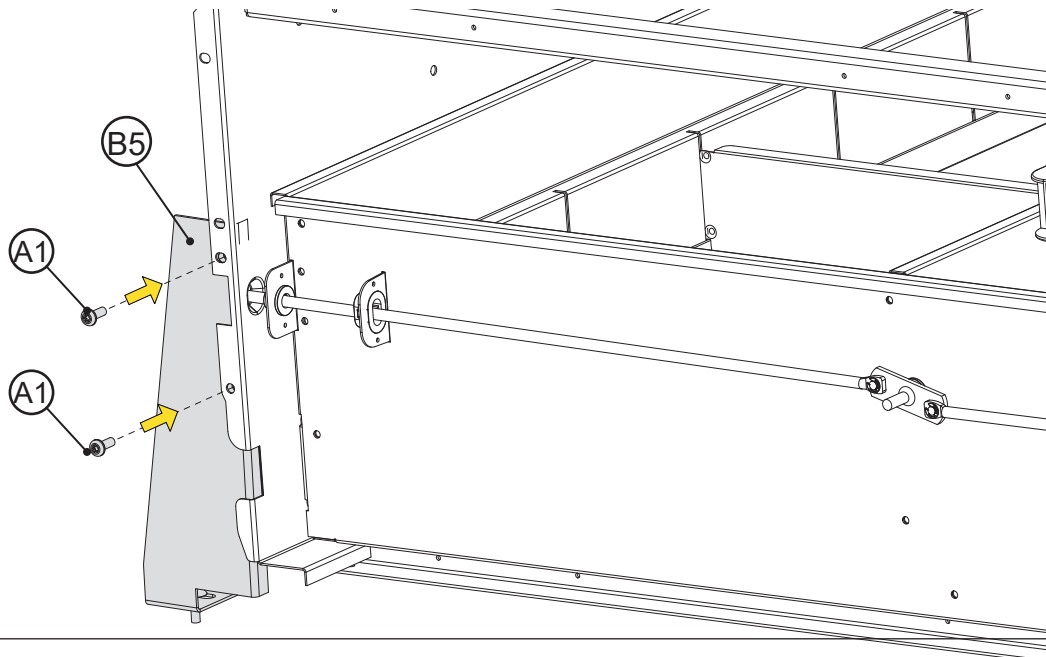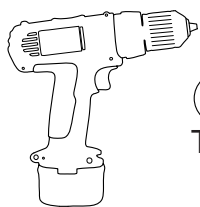


16

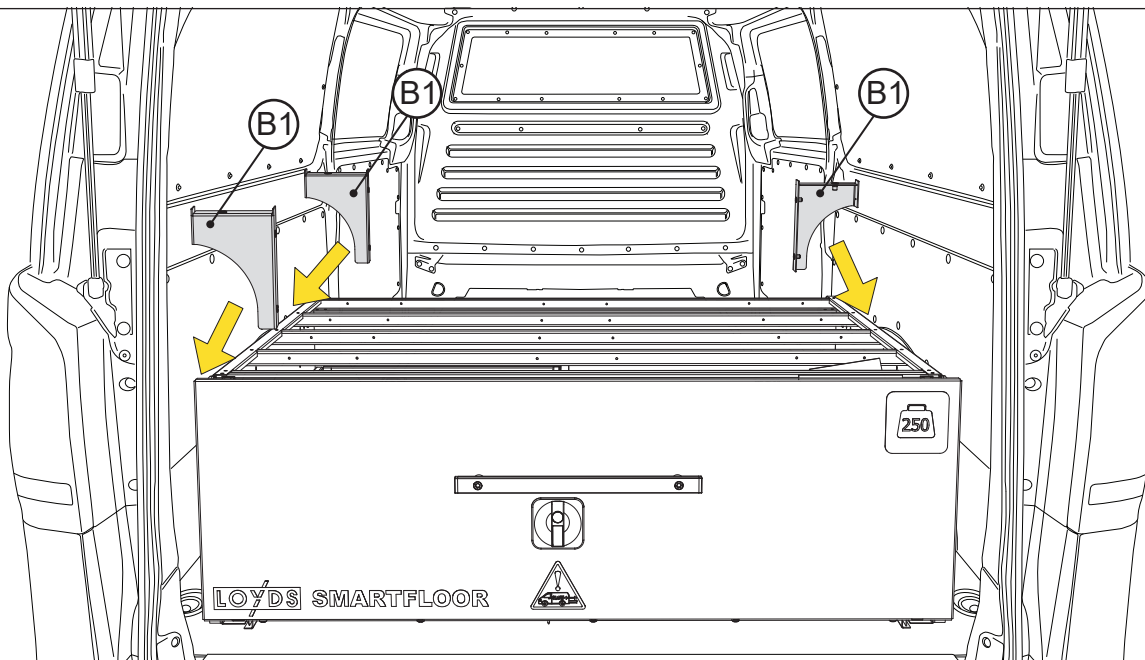


17

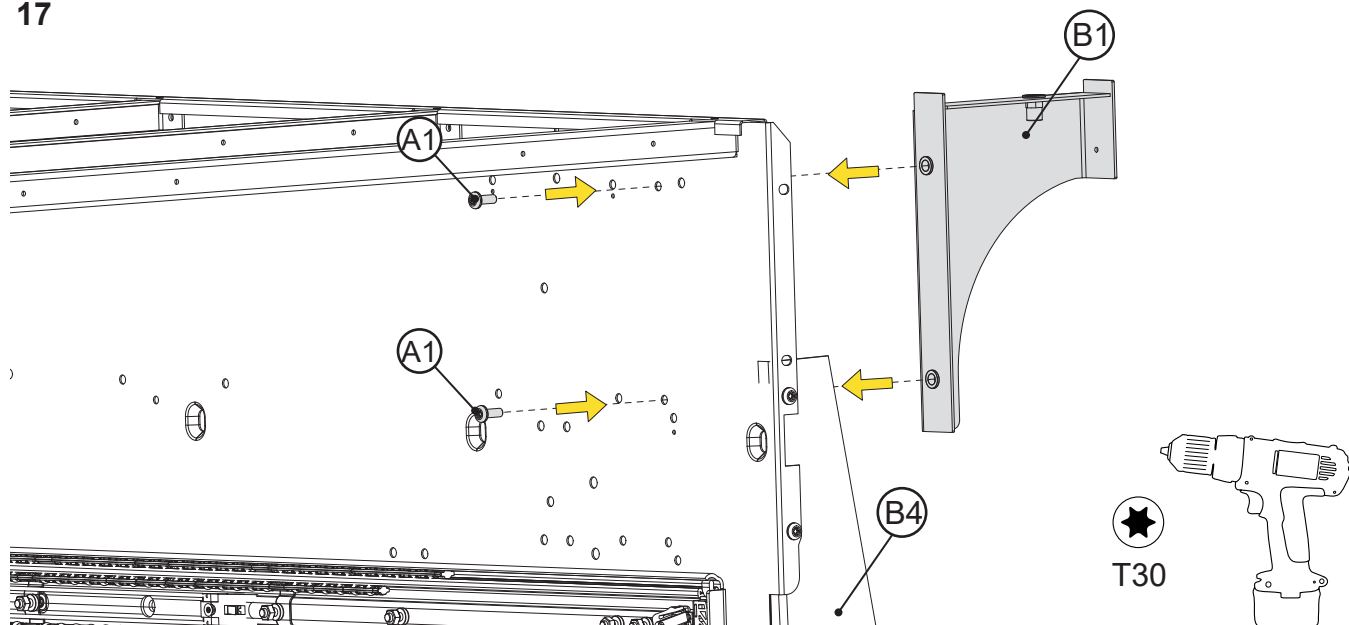


18

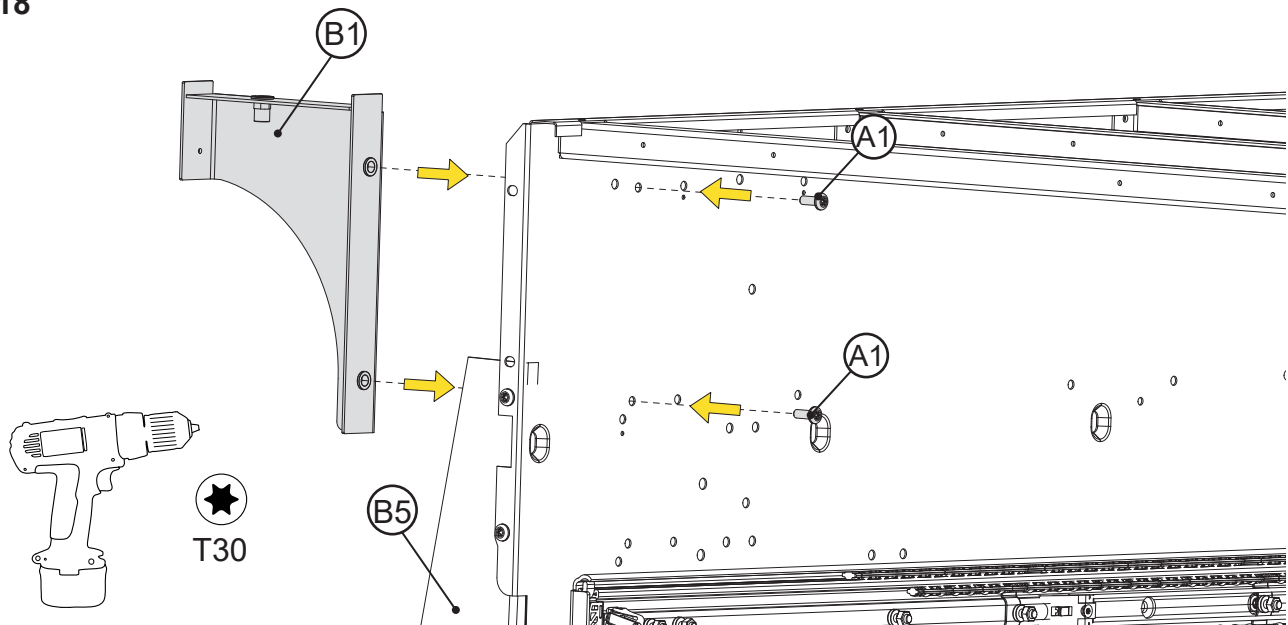


19

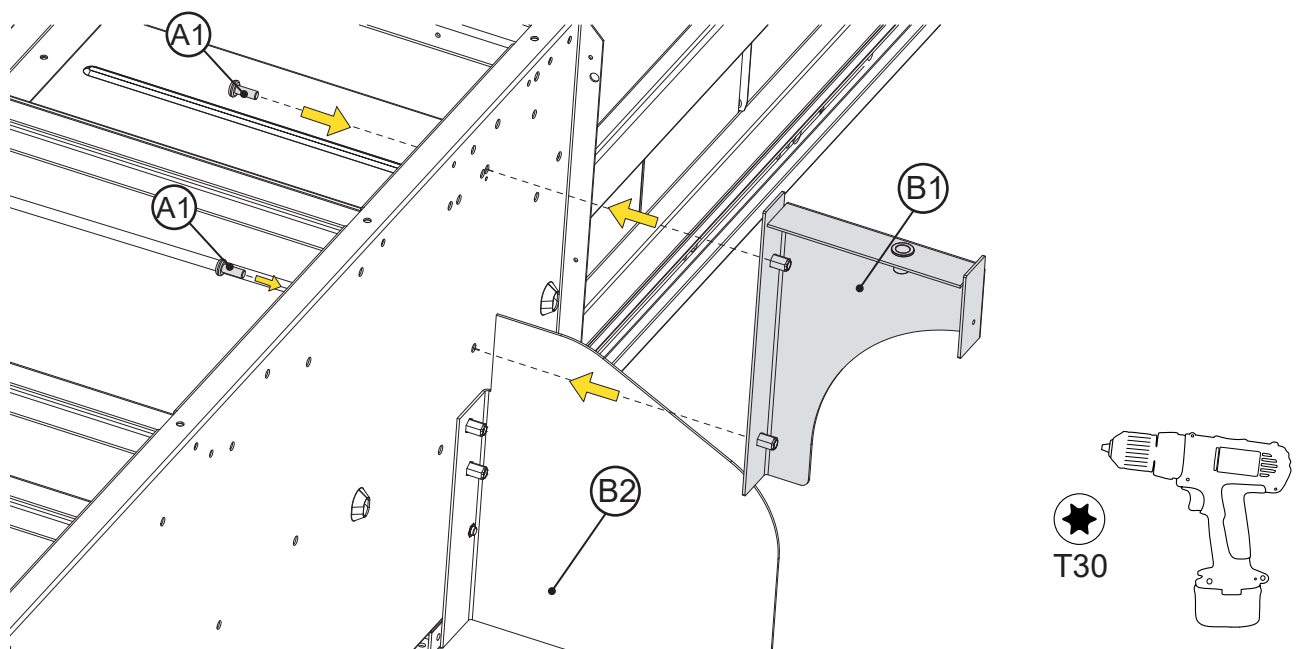


20

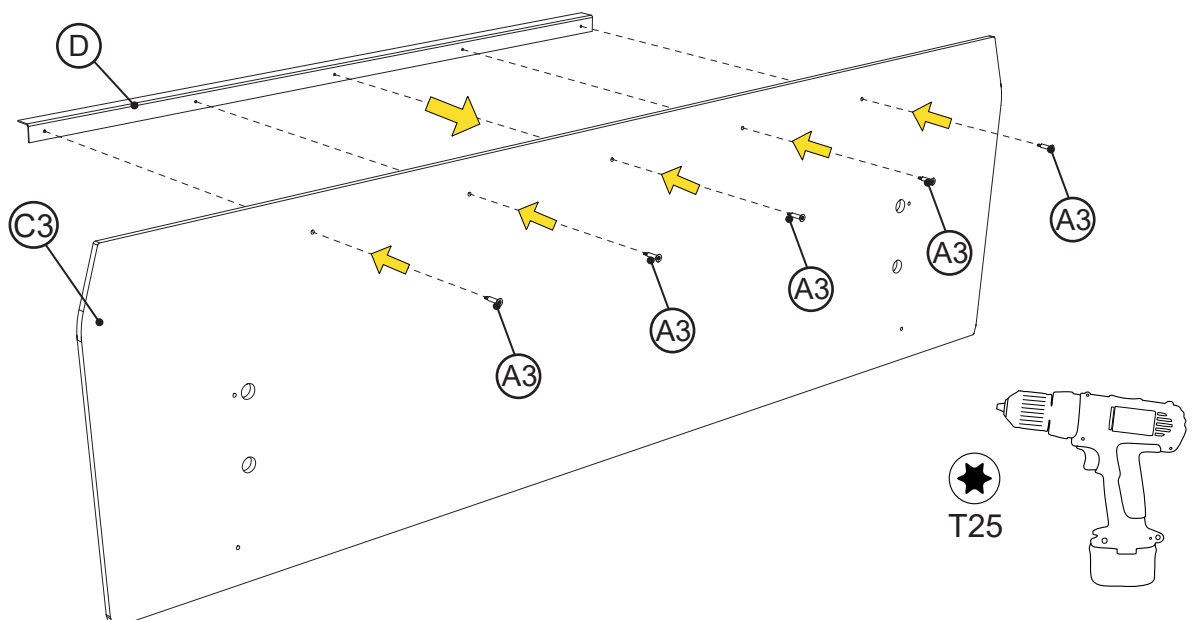


21

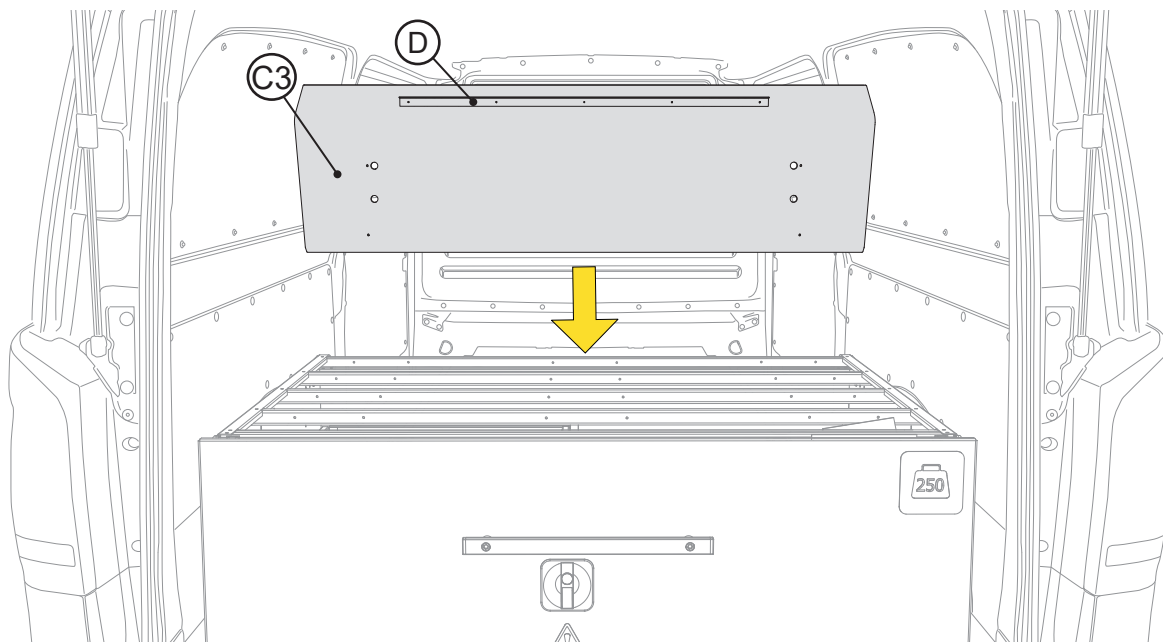


22

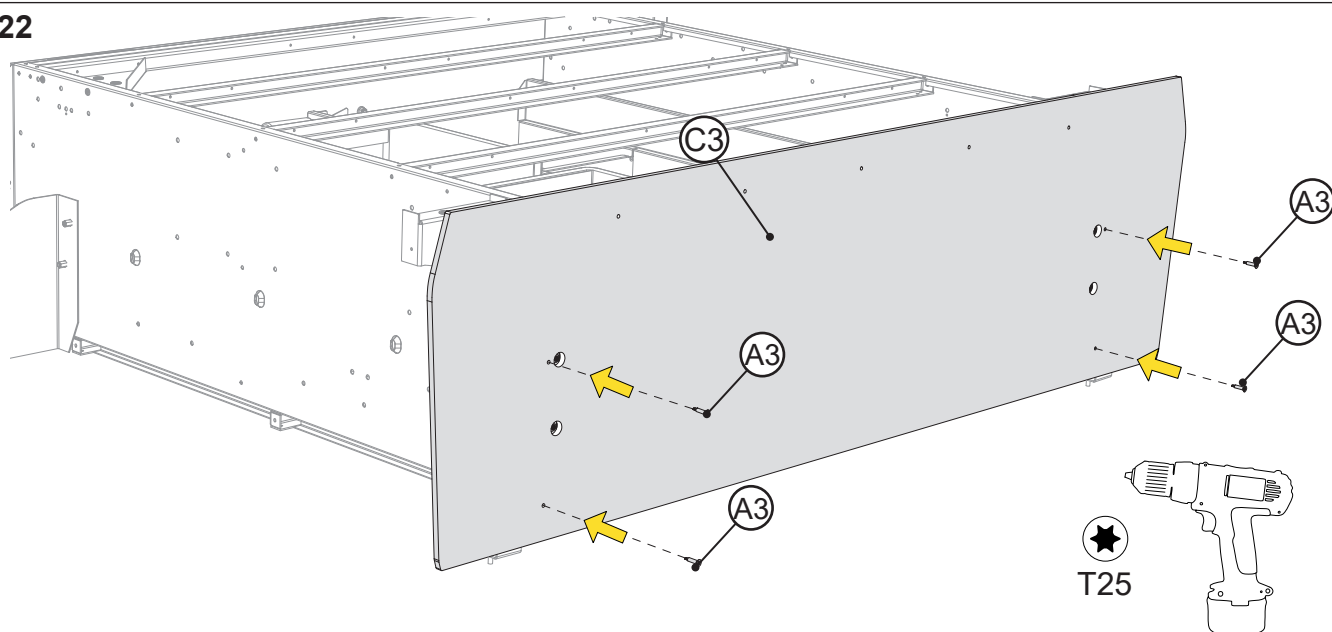


23

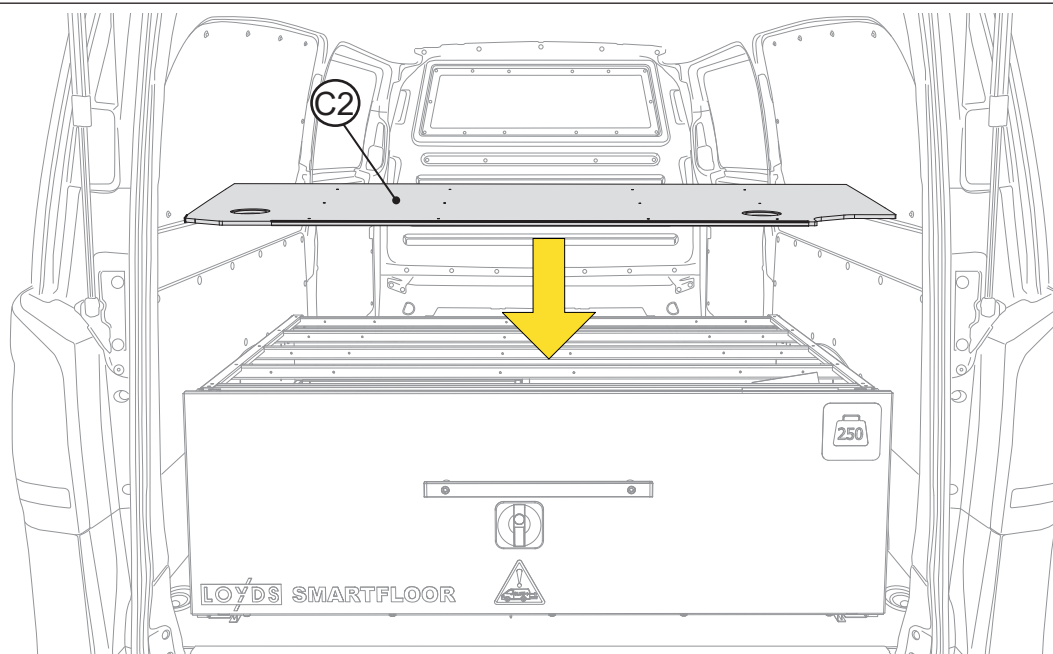


24

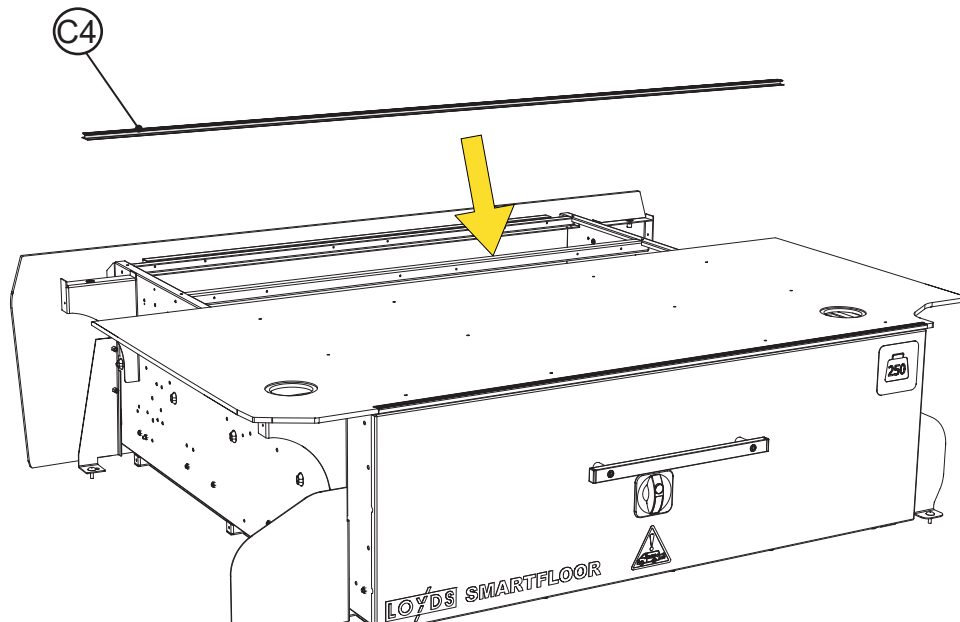



25

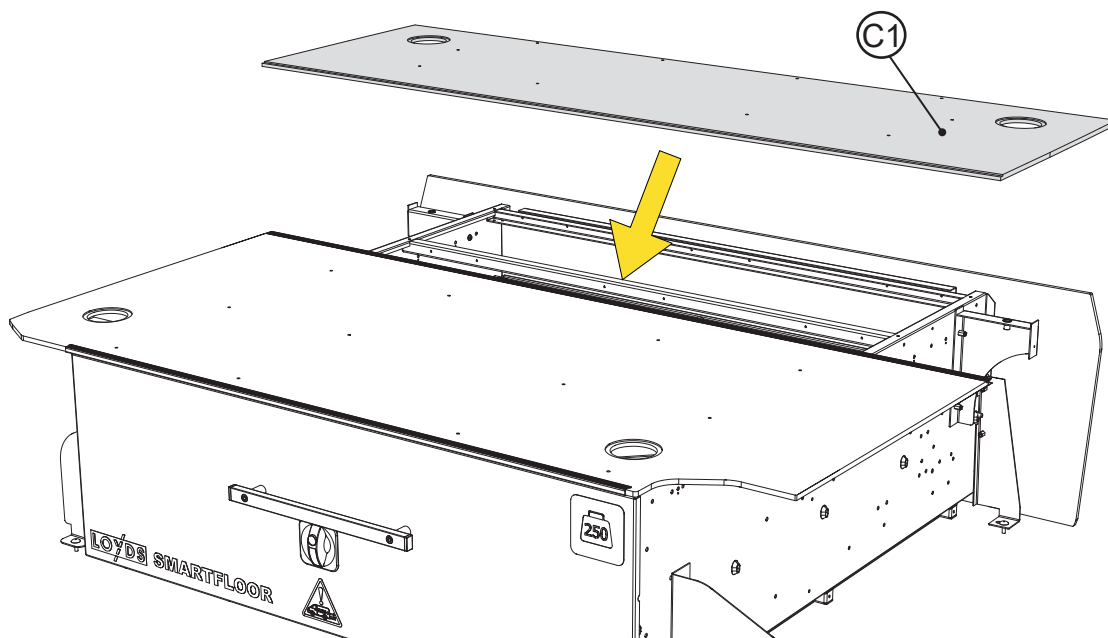

26

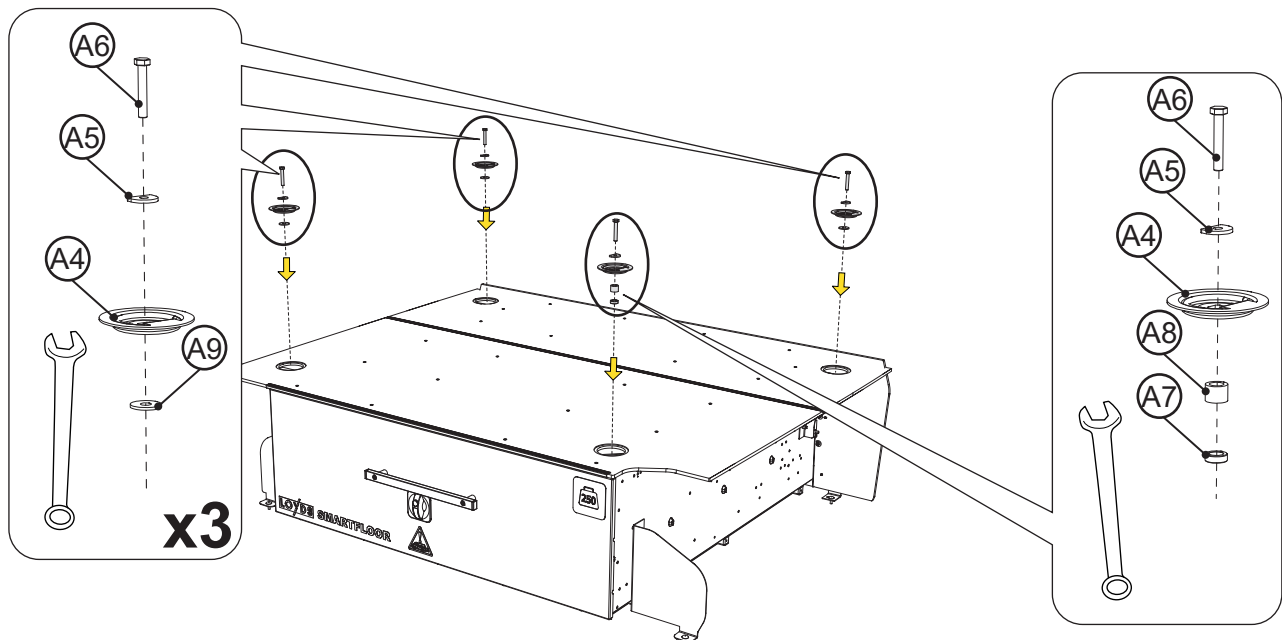

27

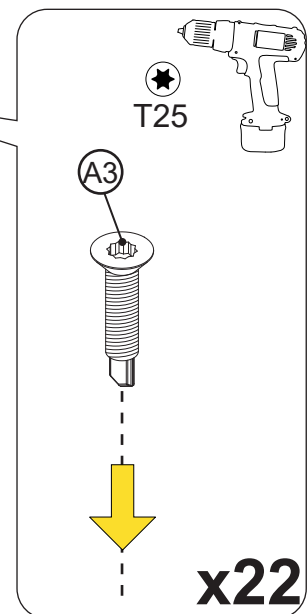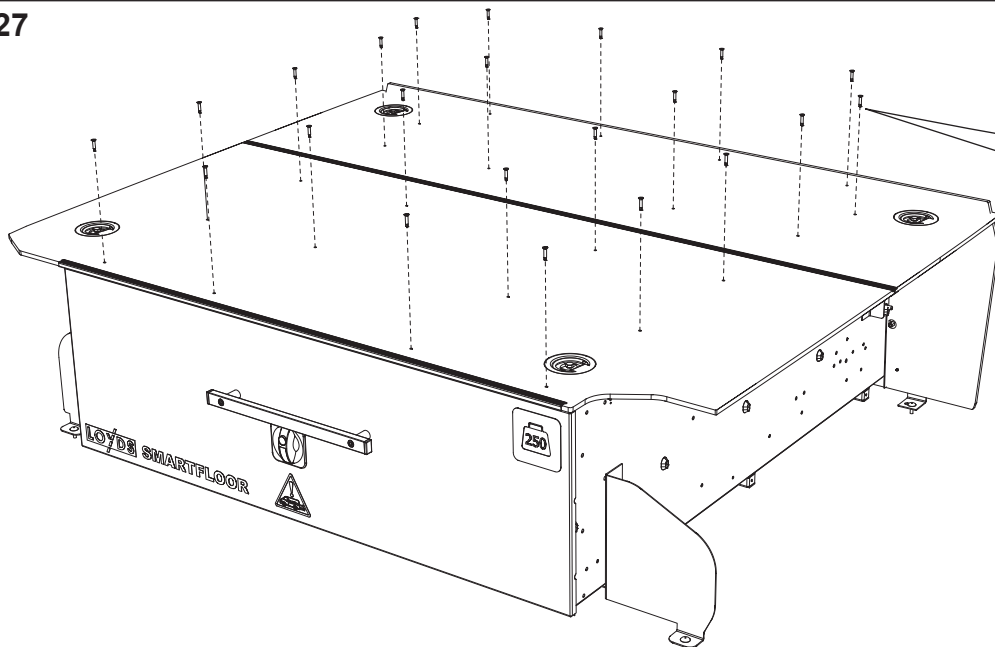

28

