


Mercedes eVito Tourer
Smartfloor Complete Module

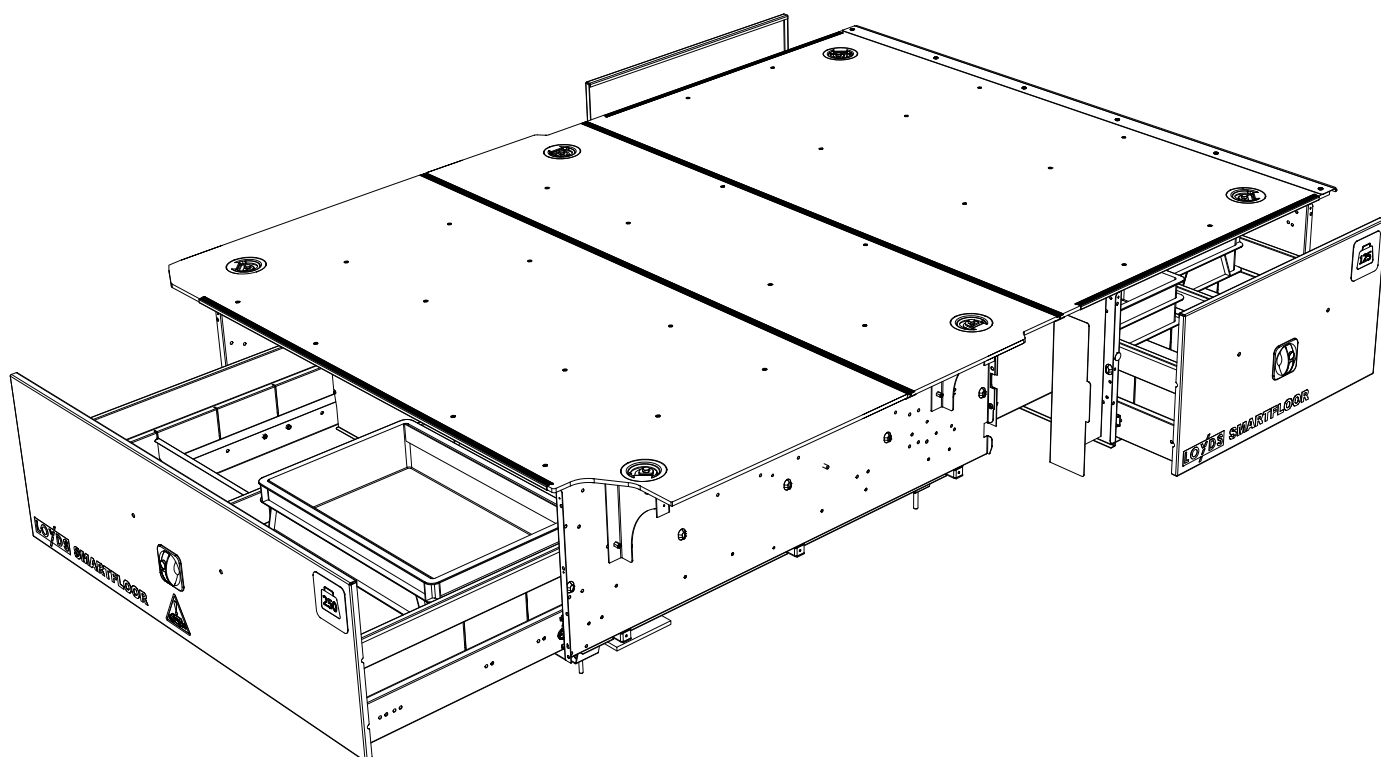

Installation Manual

Manual 15024190_B






Loyds Industri AS - 2024-01-25




Revision Record						
Rev nr	Date	Page	Picture	Update	New	Deleted steps
A	2023-05-11				X	
B	2024-01-25	9,11,12,13	1,5,7,11	Floor illustrations		



Use colors when printing this installation manual. / Ved utskrift, bruk farger.

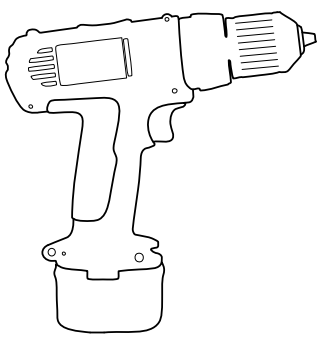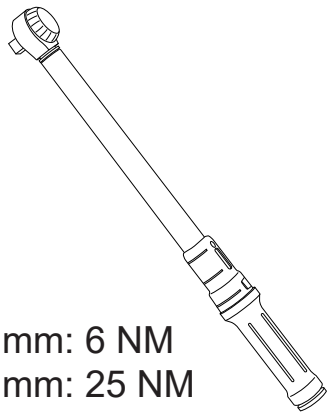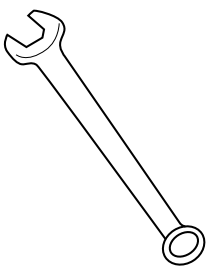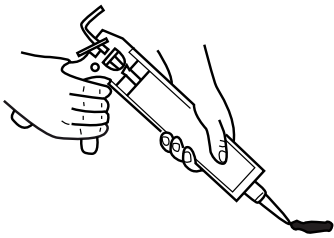
Tools		
	 6 mm: 6 NM 8 mm: 25 NM	 13 mm
 T25 T30 T40	 PH2	 6 mm
		

15023546 Kit Complete Vito E-tourer 2SLD SF2020

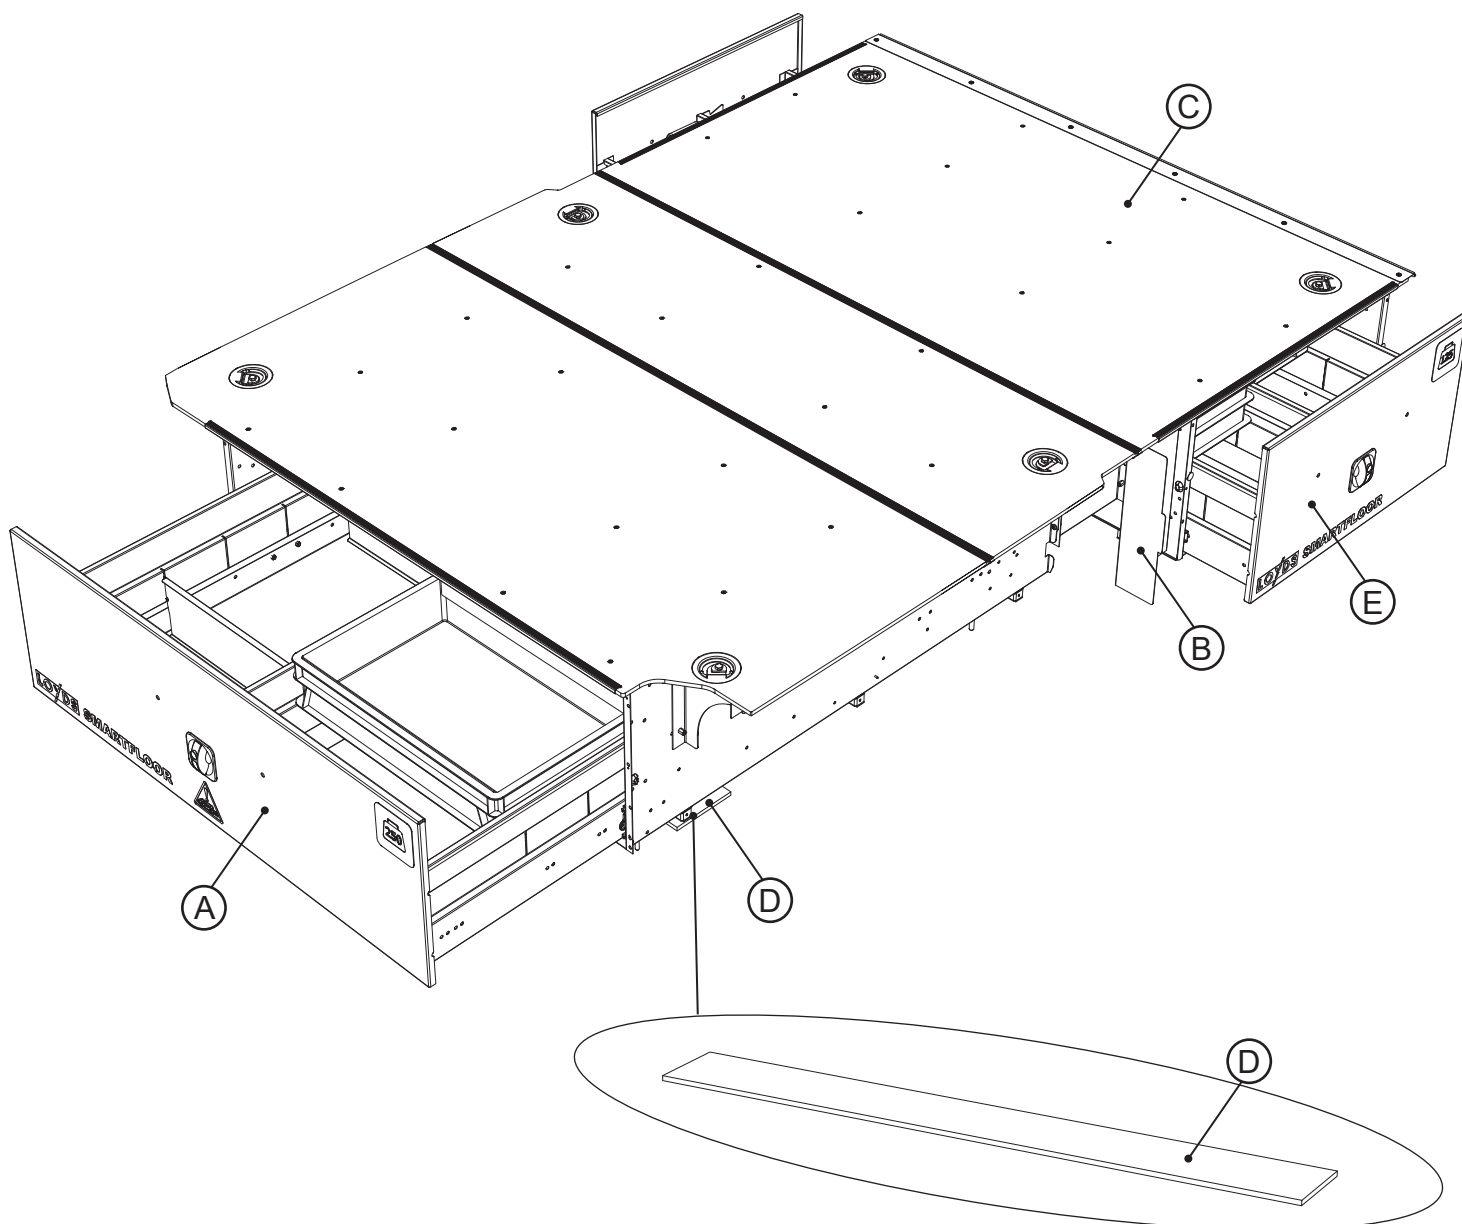


Number	Quantity	Part Number	Definition
A	1	15022501	Rear Drawer RD W1140 L1200
B	1	15023537	Steelbracket Set Vito ET SF2020
C	1	15023545	Floor Kit Vito ET SF2020
D	1	15023534	Wooden Spacer 9mm 1180x150mm
E	1	15022217	FD2 Front Drawer W600 L750 Assembled

15023537 Steelbracket Set Vito ET SF2020

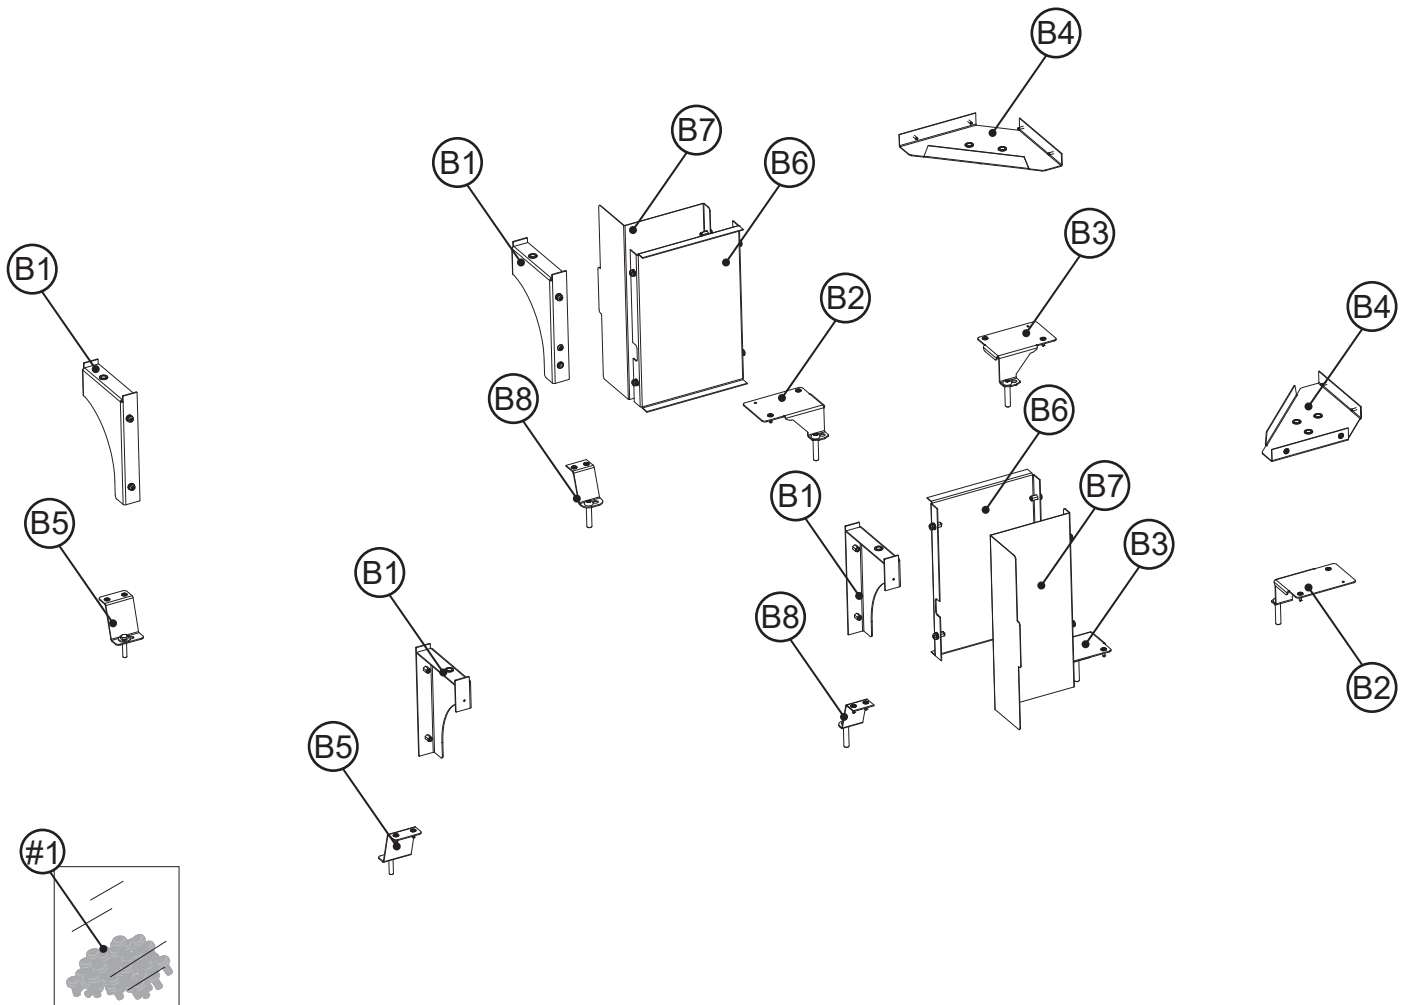


Number	Quantity	Part Number	Definition
B1	4	15018461	Bracket Latchcup Side M8 SF 2020 ASSY
B2	2	15023523	Bracket Frame-fix Front Right Vito ET SF2020
B3	2	15023526	Bracket Frame-fix Front Left Vito ET SF2020
B4	2	15018460	Bracket Latch Inner 8mm ASSY
B5	2	15023525	Bracket Frame-fix Rear Vito ET SF2020
B6	2	15023516	Bracket FD RD Vito ET A2 SF2020 ASSY
B7	2	15023528	Cover Rear SLD Vito ET SF2020 ASSY
B8	1	15023524	Bracket Frame-fix Middle Vito ET SF2020
#1	1	15023535	Fitting Kit Steelbracket Set Vito ET SF2020

15023545 Floor Kit Vito ET SF2020

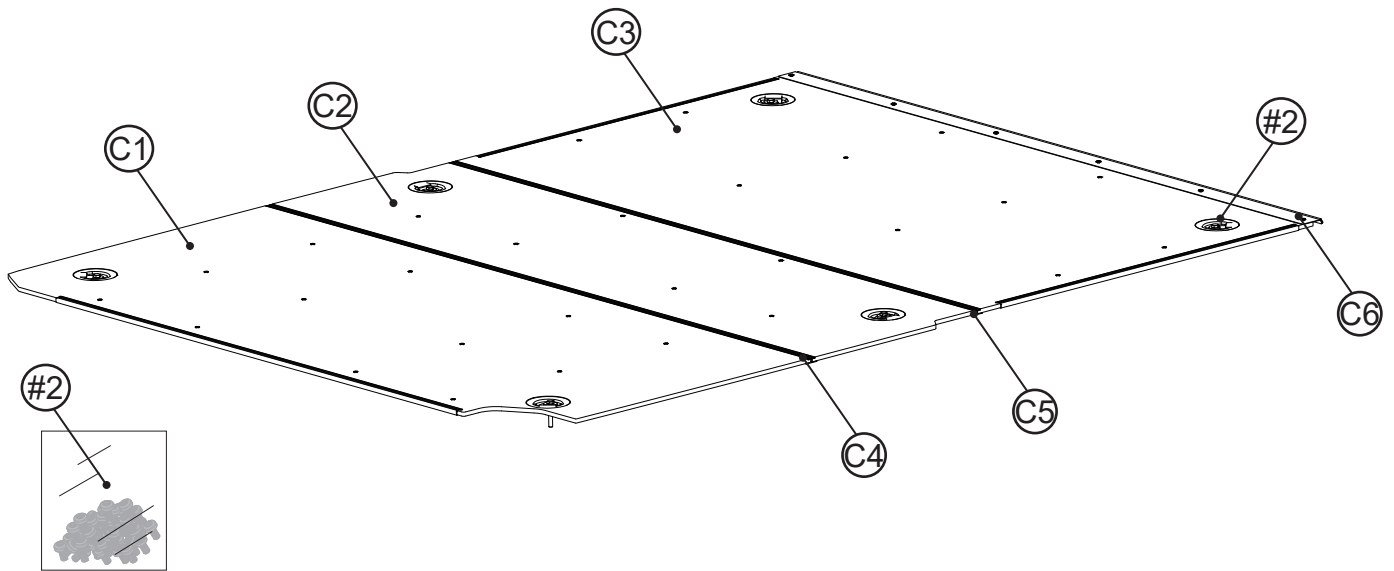


Number	Quantity	Part Number	Definition
C1	1	15023540	Floor Rear Vito ET SF2020 SF2020 Assy
C2	1	15023530	Floor Middle Vito ET SF2020
C3	1	15023541	Floor Front Vito ET SF2020 Assy
C4	1	15023542	H-profile 9mm L=1659
C5	1	15023543	H-profile 9mm L=1604
C6	1	15023517	Floor Extend Bracket Vito ET SF2020
#2	1	15023544	Fitting Kit Floor Set Vito ET SF2020

15010236 Handle Assy

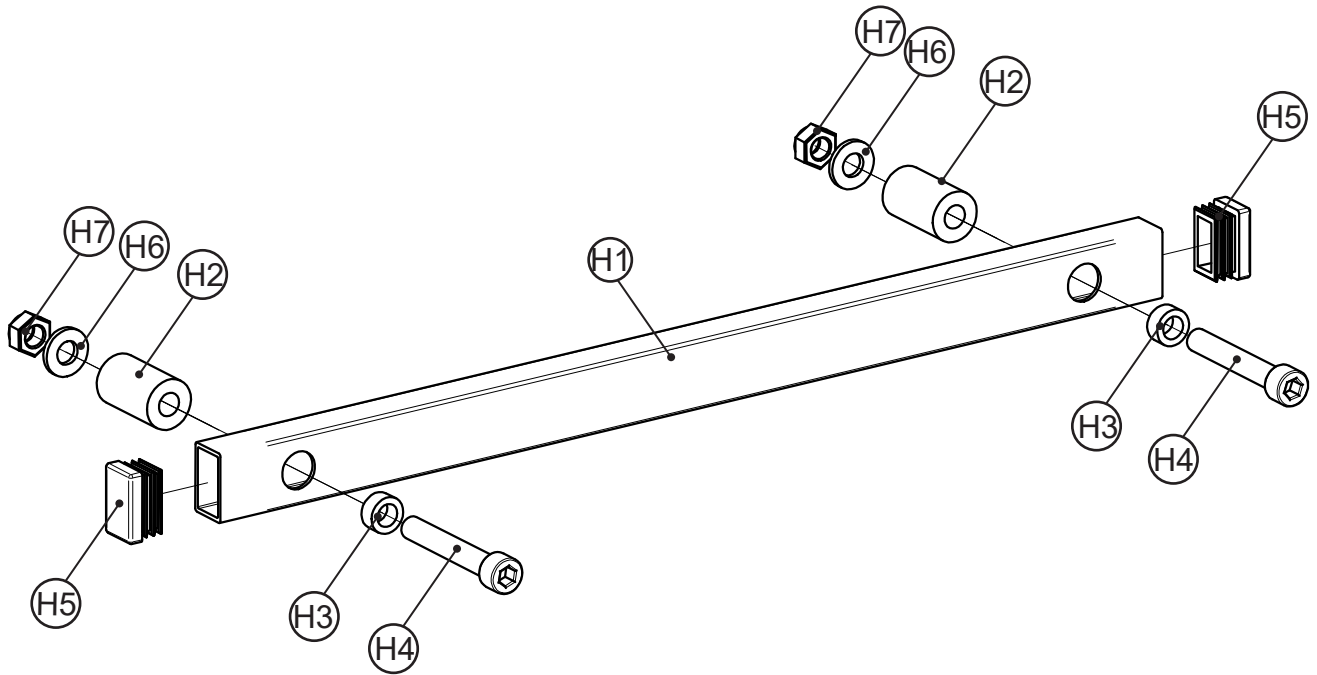


Number		Quantity	Part Number	Definition
H	H1	1	15009441	Handle Tube 25x15x286
	H2	2	15009442	Spacer Ø8,3x18x30 Nylon Black
	H3	2	15009443	Spacer Ø8,1x13x6mm Galv
	H4	2	15009444	Screw M8x50 Cylinderh Hex
	H5	2	15009438	End sleeve Black
	H6	2	8,4x17x2	M8 Washer, DIN 125
	H7	2	8 NMU	Mutter M8 Nyloc DIN985

#1 15023535 Fitting Kit Steelbracket Set Vito ET SF2020

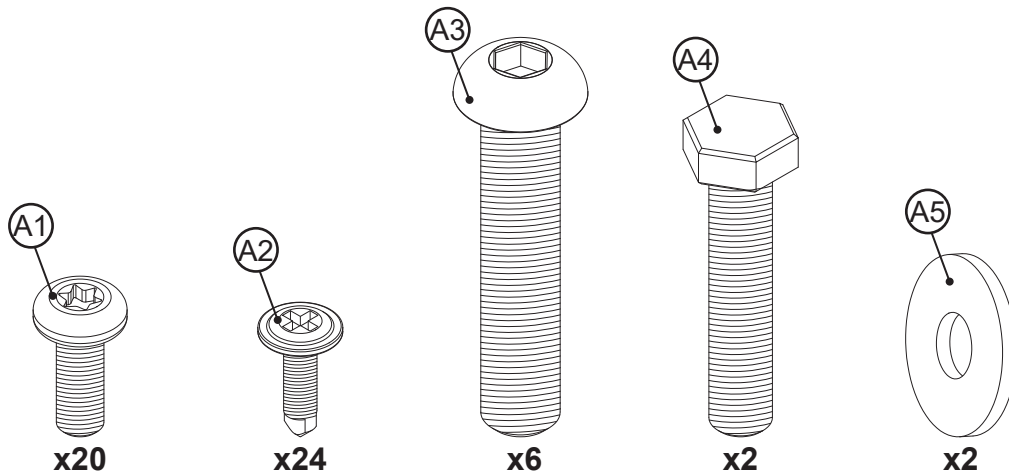


A1	15003551 M6x16 TX30 pan (DIN 7985)
A2	4,2x16 FLS Platescrew selfdrilling E45759 Black
A3	15001595 M10x50 Panh UNB Black
A4	8x40 6KS M8x40mm Bolt, DIN 933, sort
A5	15004714 Washer 8,4x23x2mm DIN 9021 Black, ElZn+Cr3

#2 15023544 Fitting Kit Floor Set Vito ET SF2020

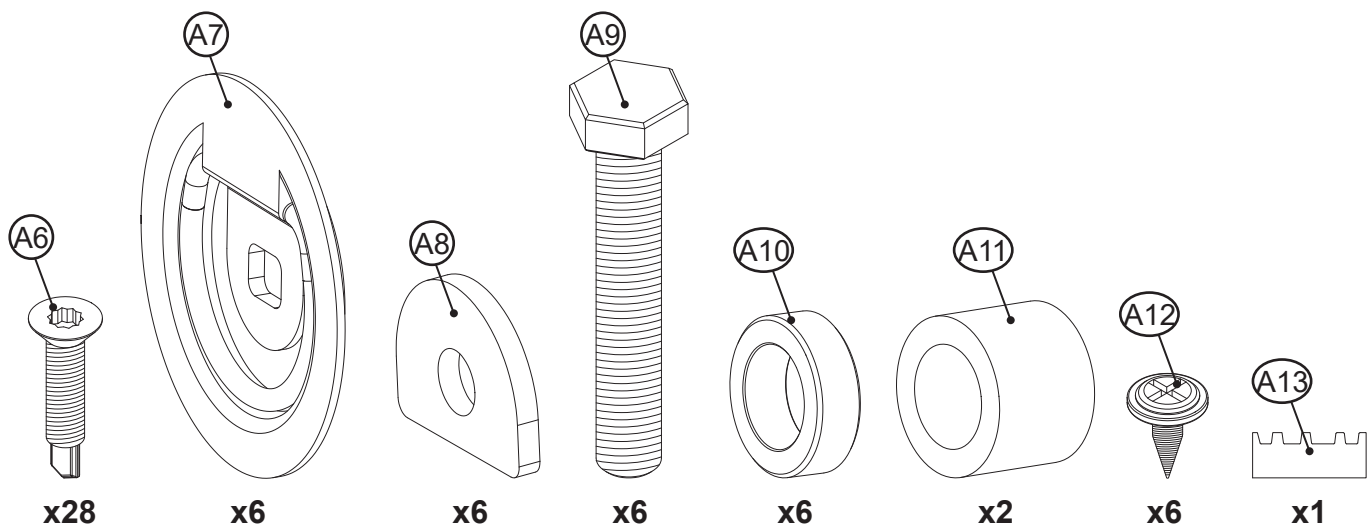


A6	15016947 Screw 4,8x25 Selfdrill Counters Torx Elz
A7	15005497 Latch Cup Black Ø90 Ø12x15 1000Kp
A8	15005884 Washer Latchcup for Ø8
A9	15004713 M8x50 screw, 6K DIN 933 Black, ElZn+Cr3
A10	13x20x6,4 Spacer, U-709
A11	15001584 Distansehylse D20 d13 h15
A12	4,2x13 S Screw 4,2x13 Flathead Needle Black
A13	36.721004 Rubber Profile L1600mm


1

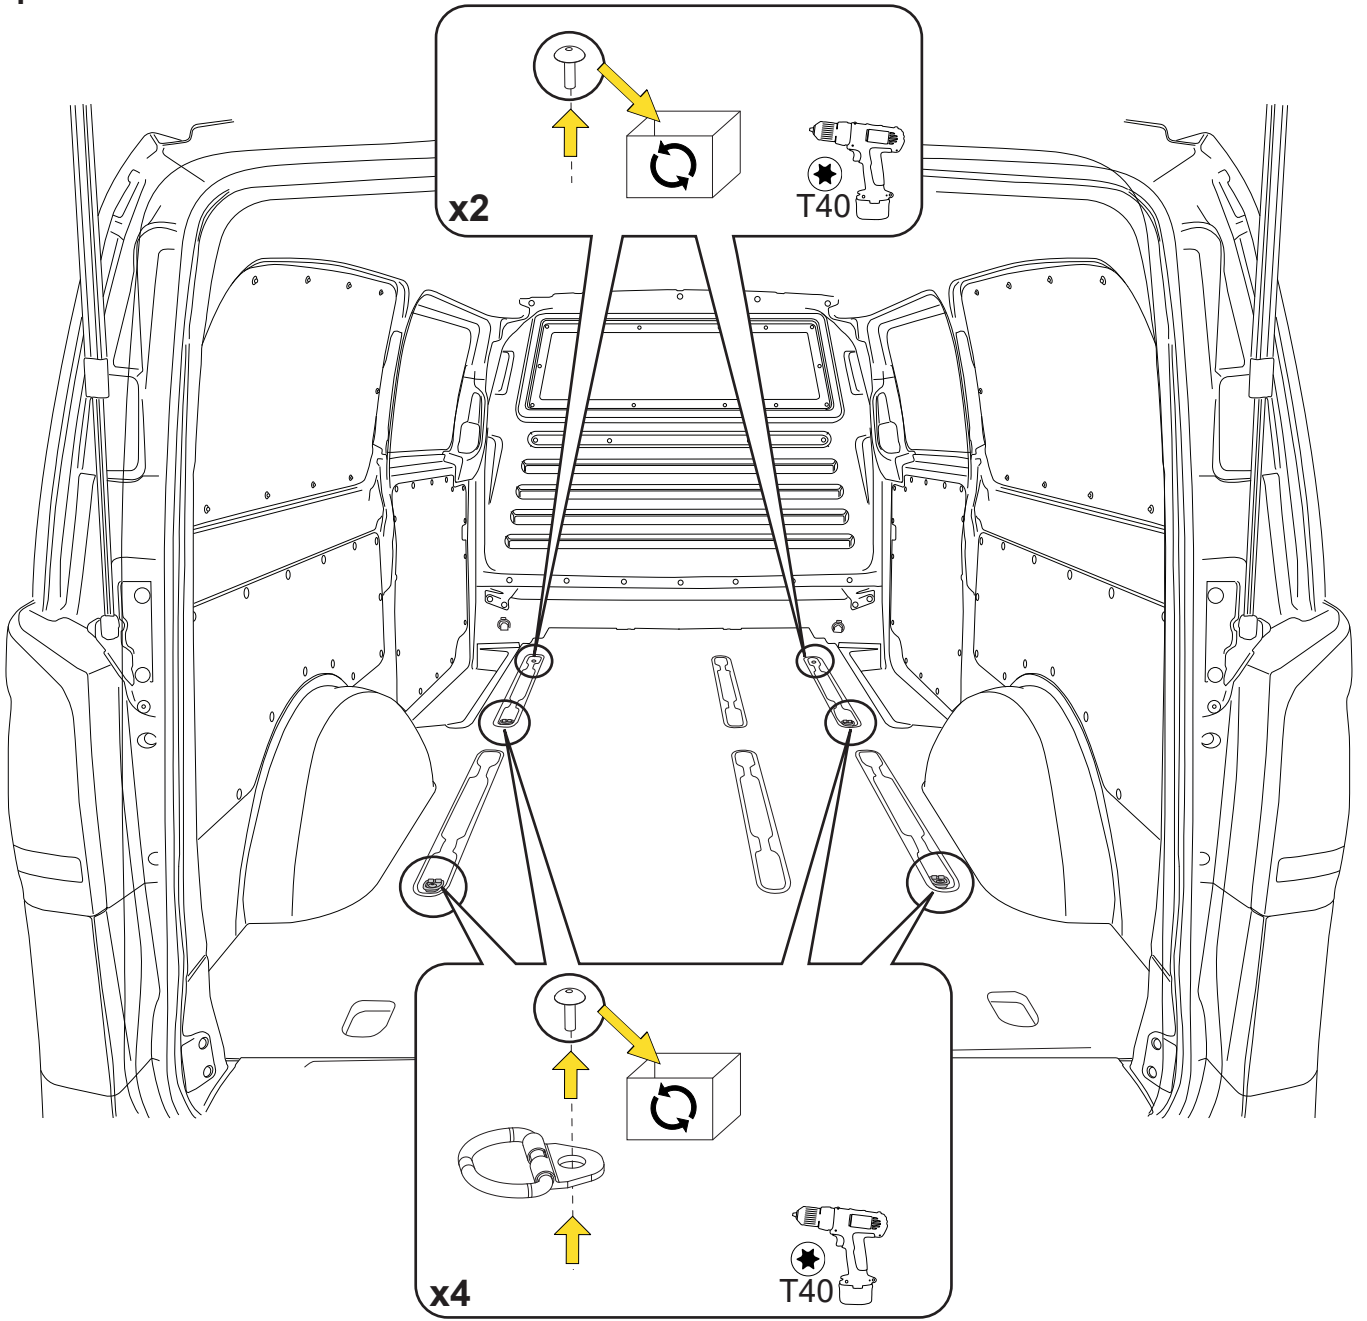



2

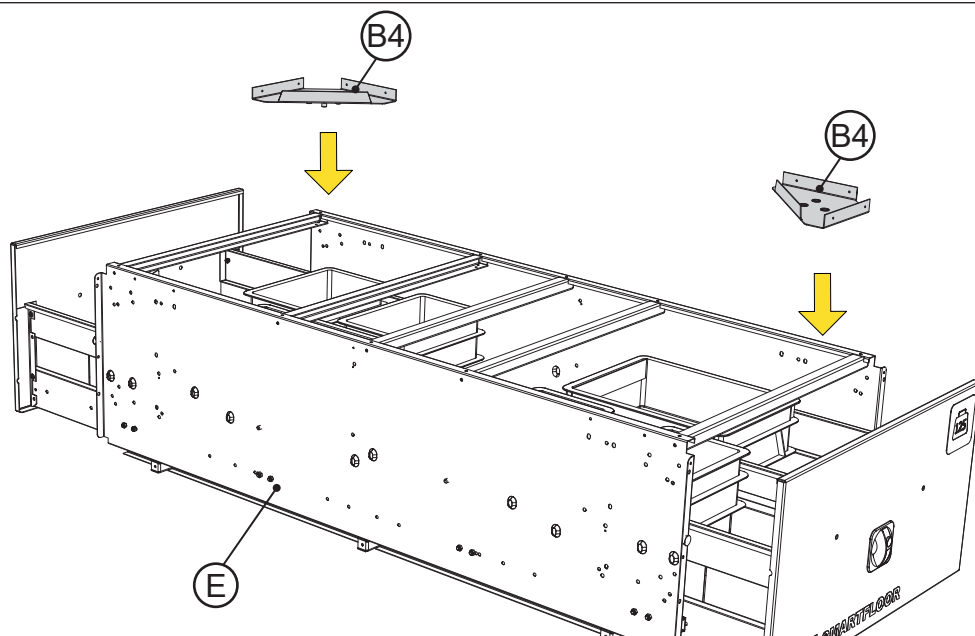


3

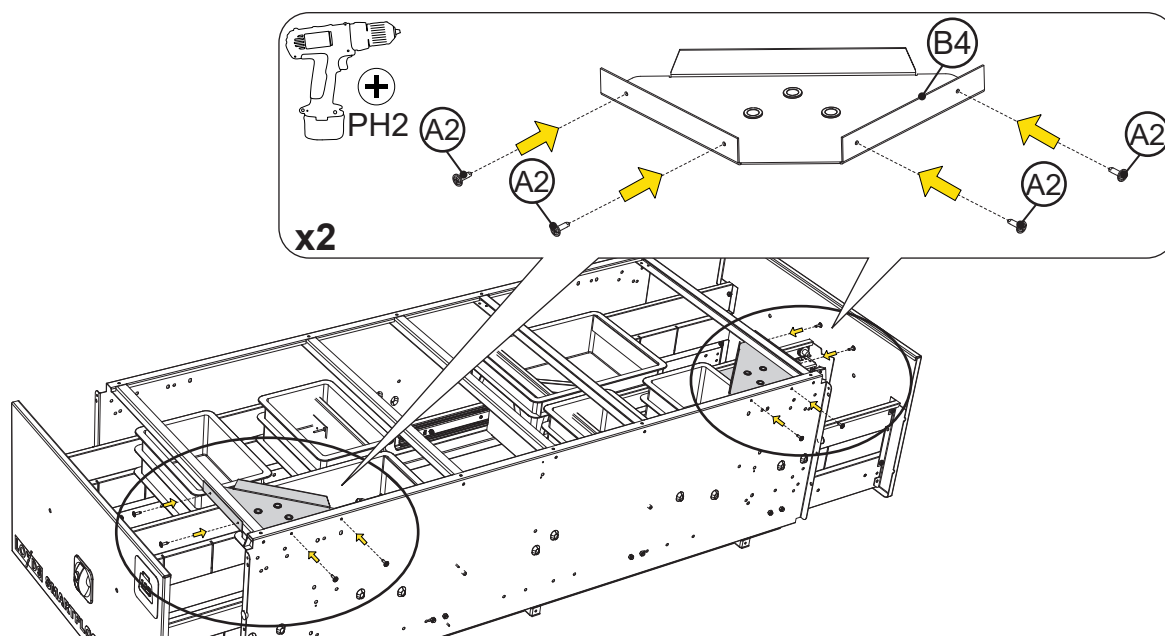


4

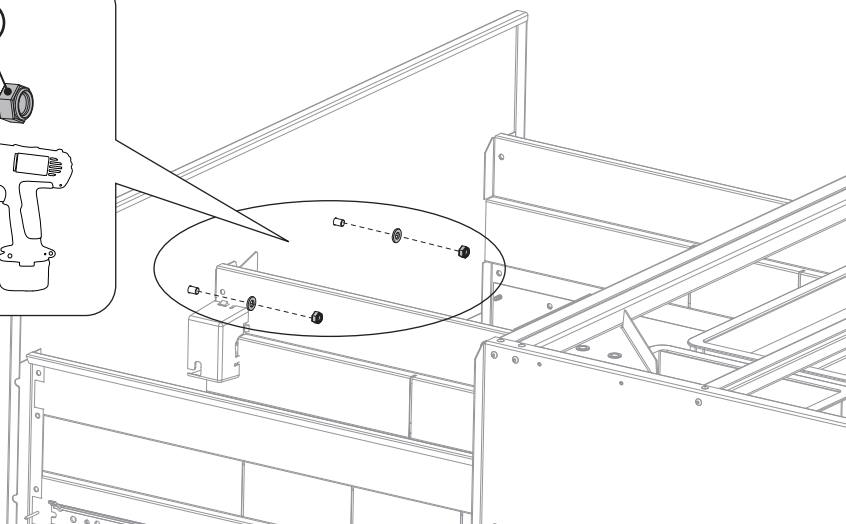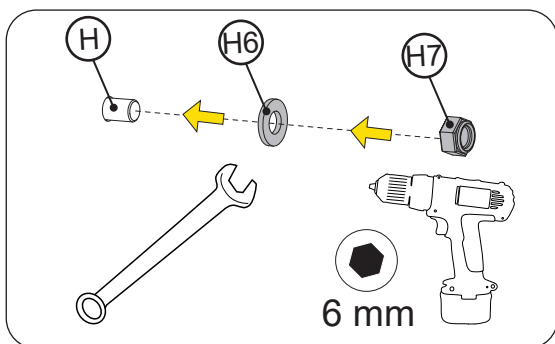


x3

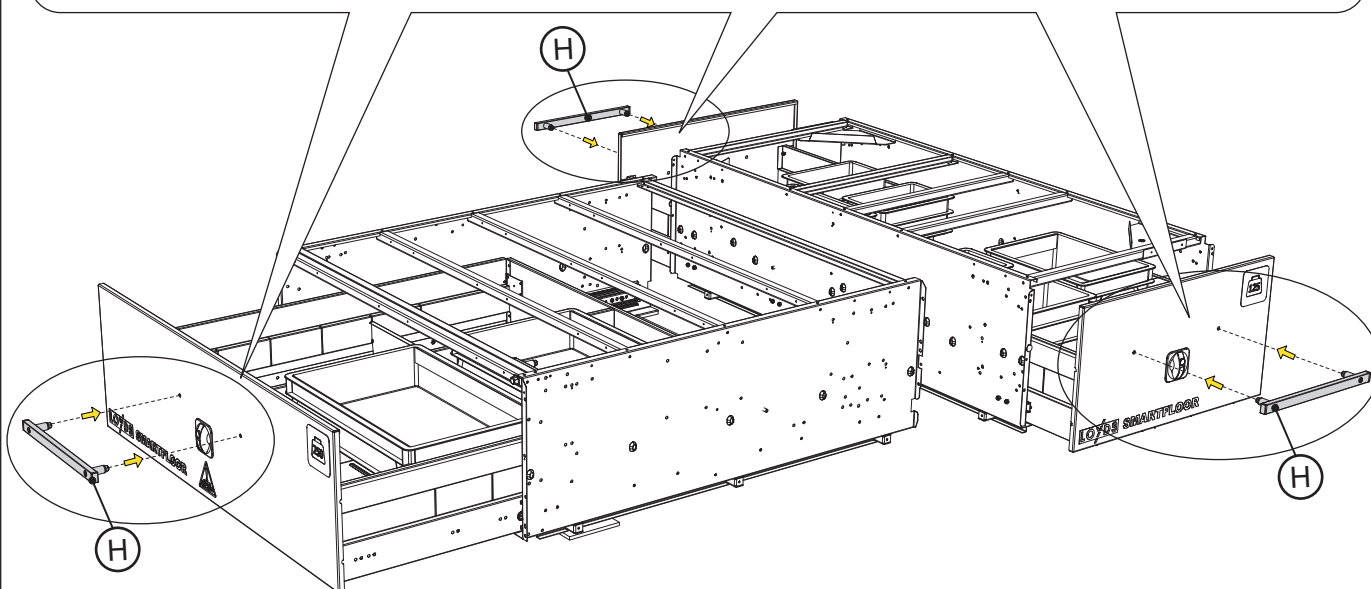


5




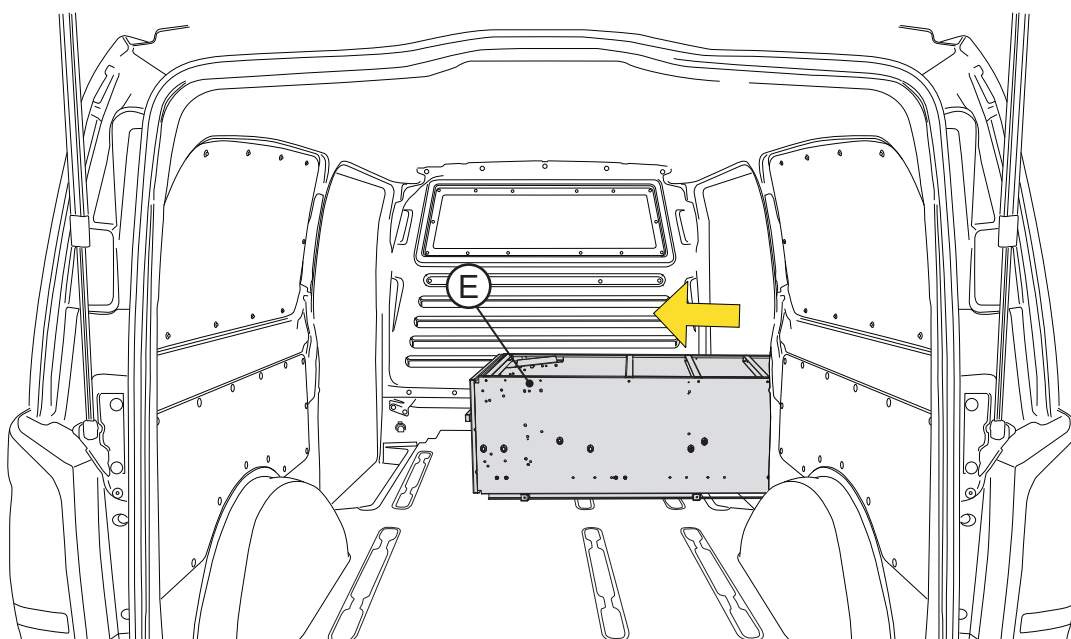


6

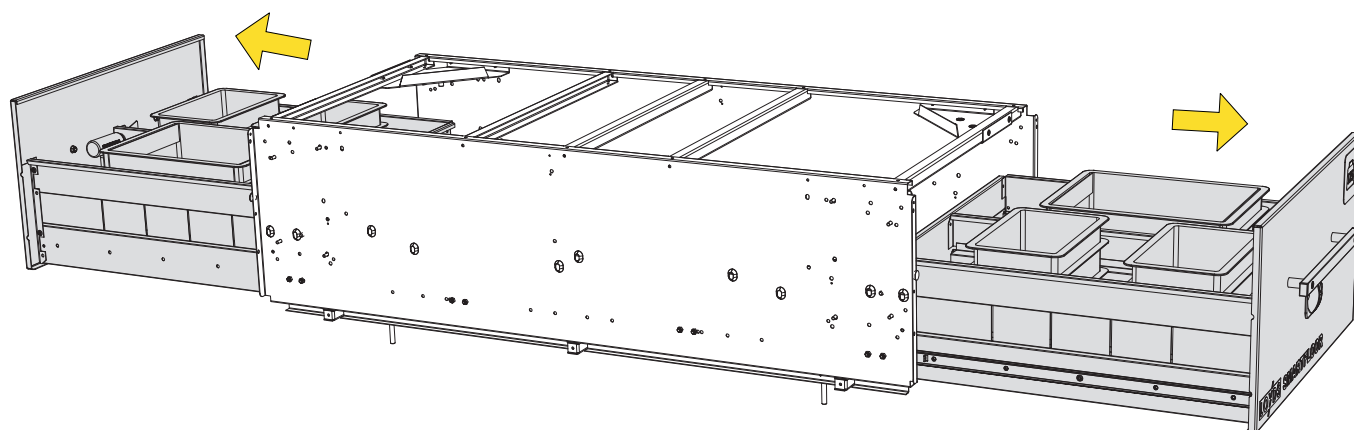


7

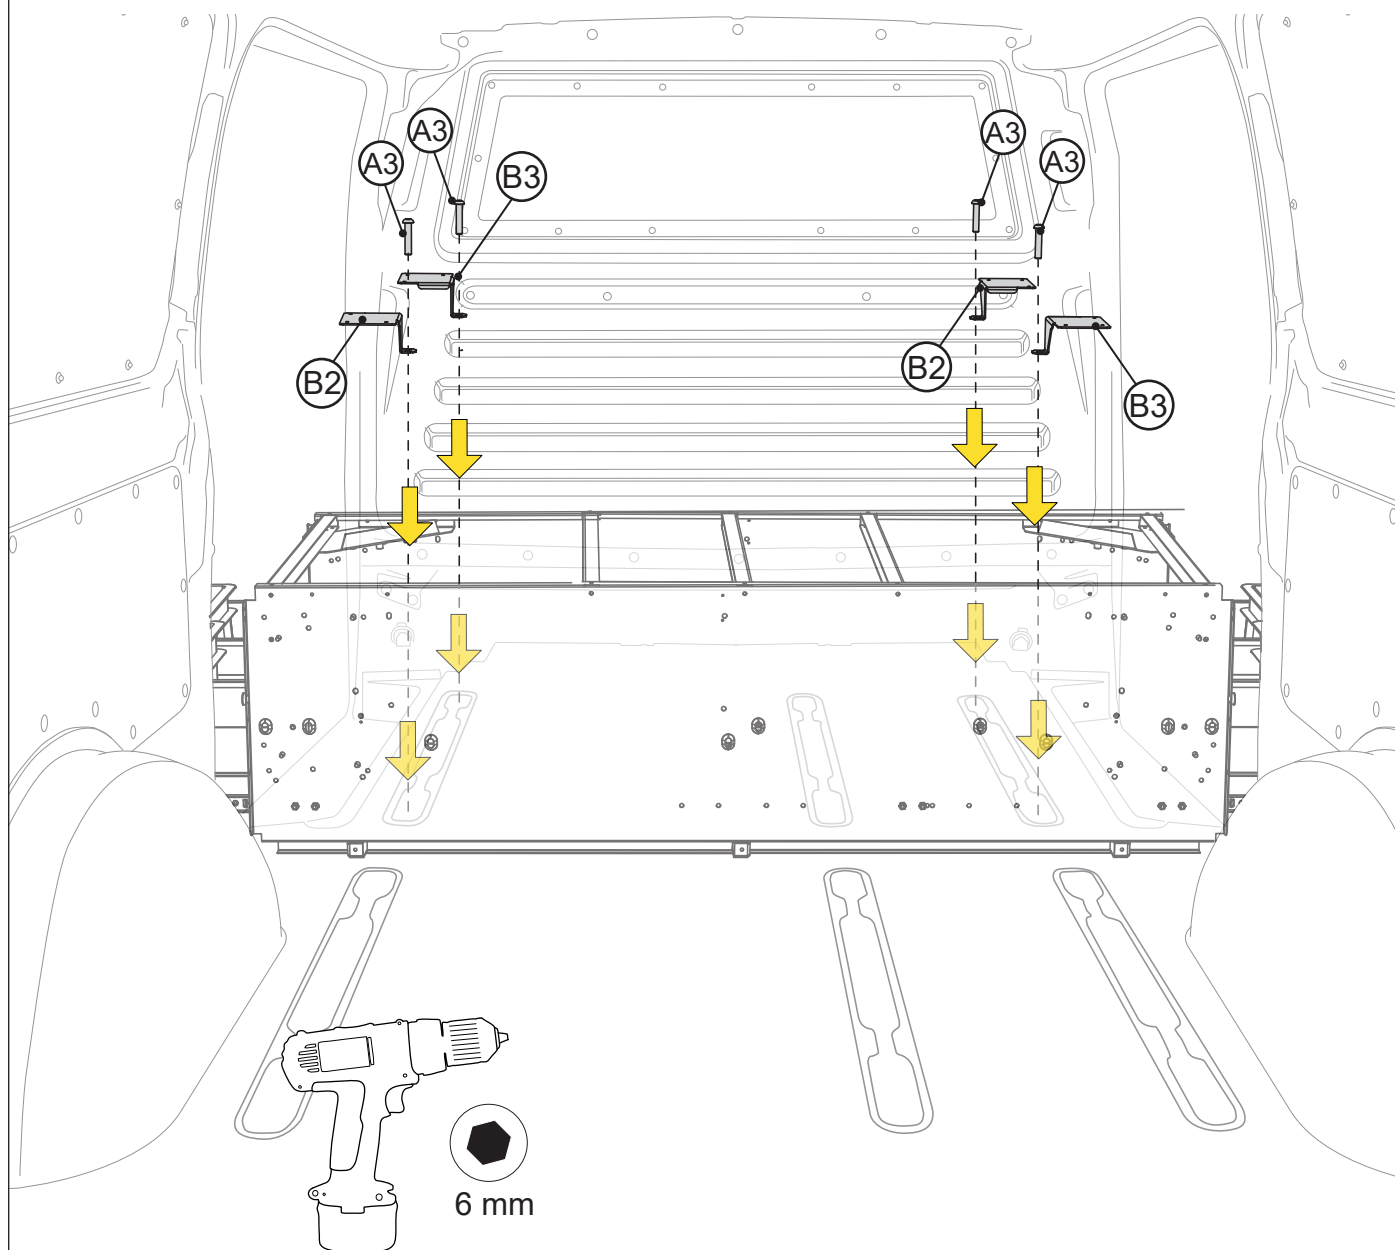


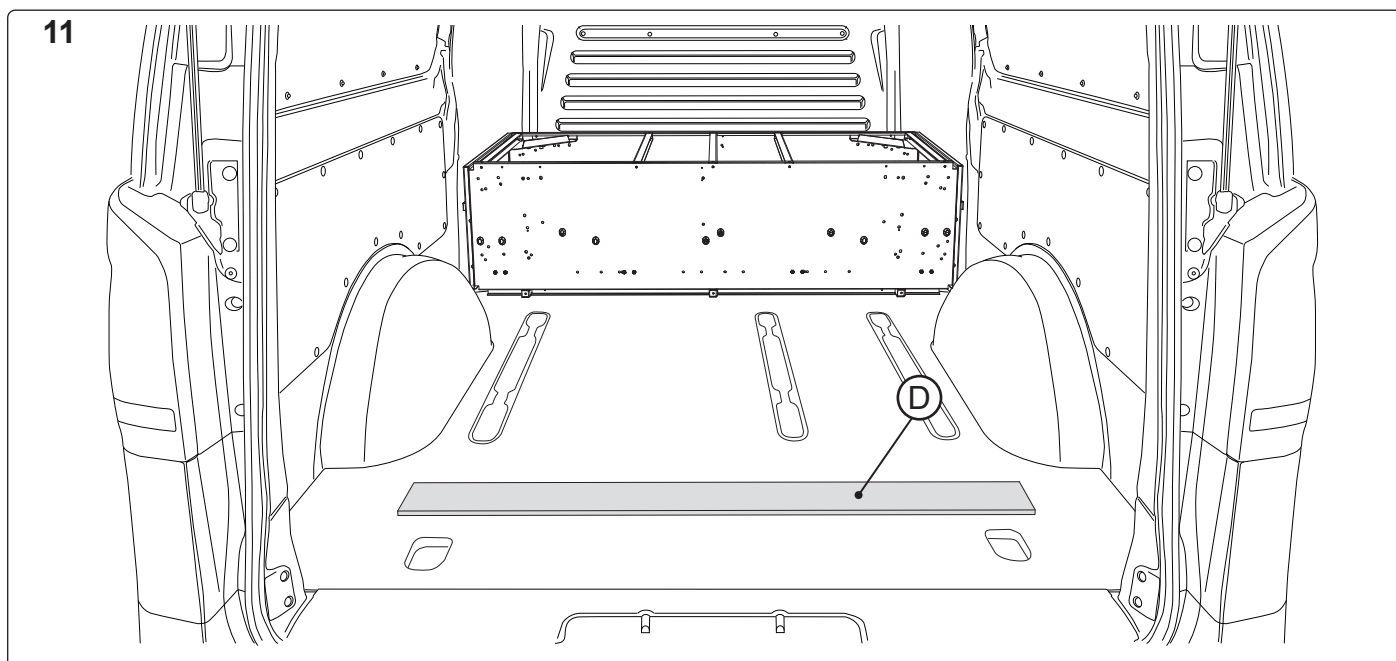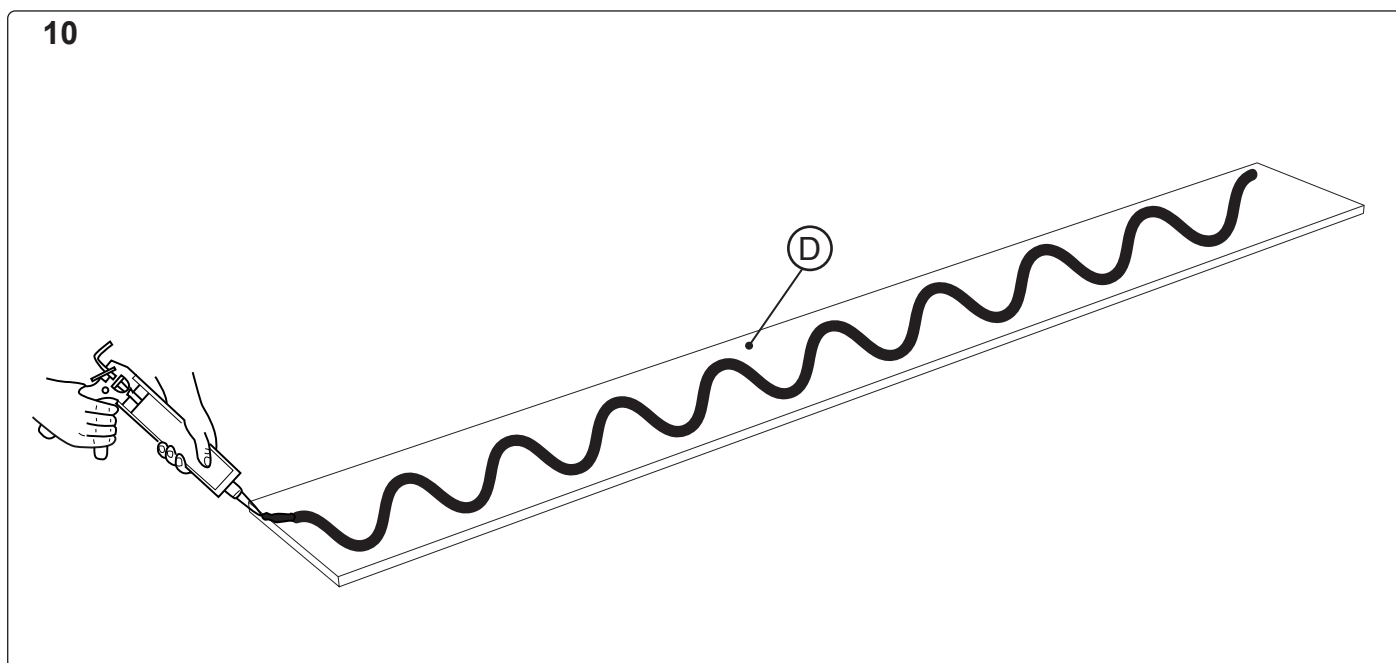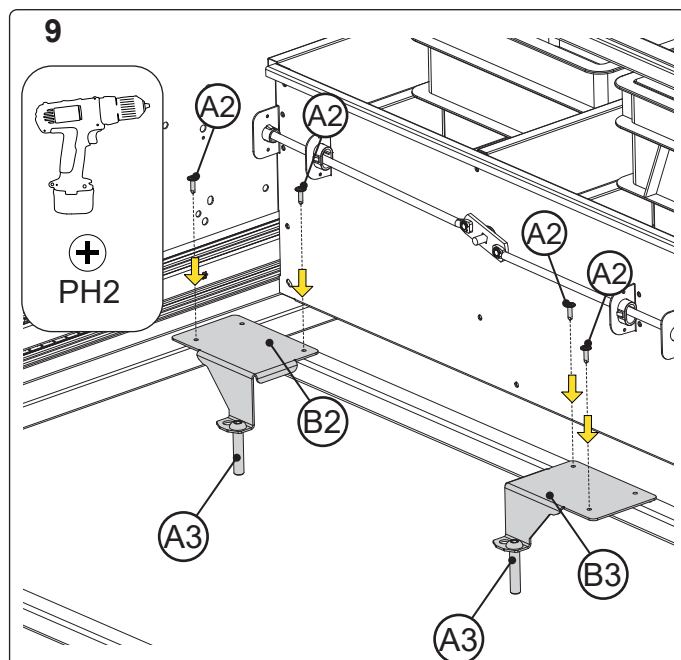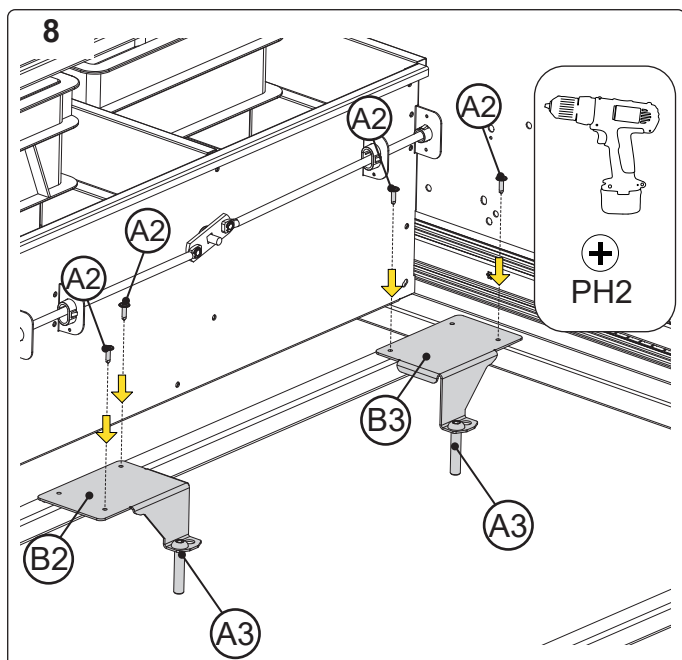

12

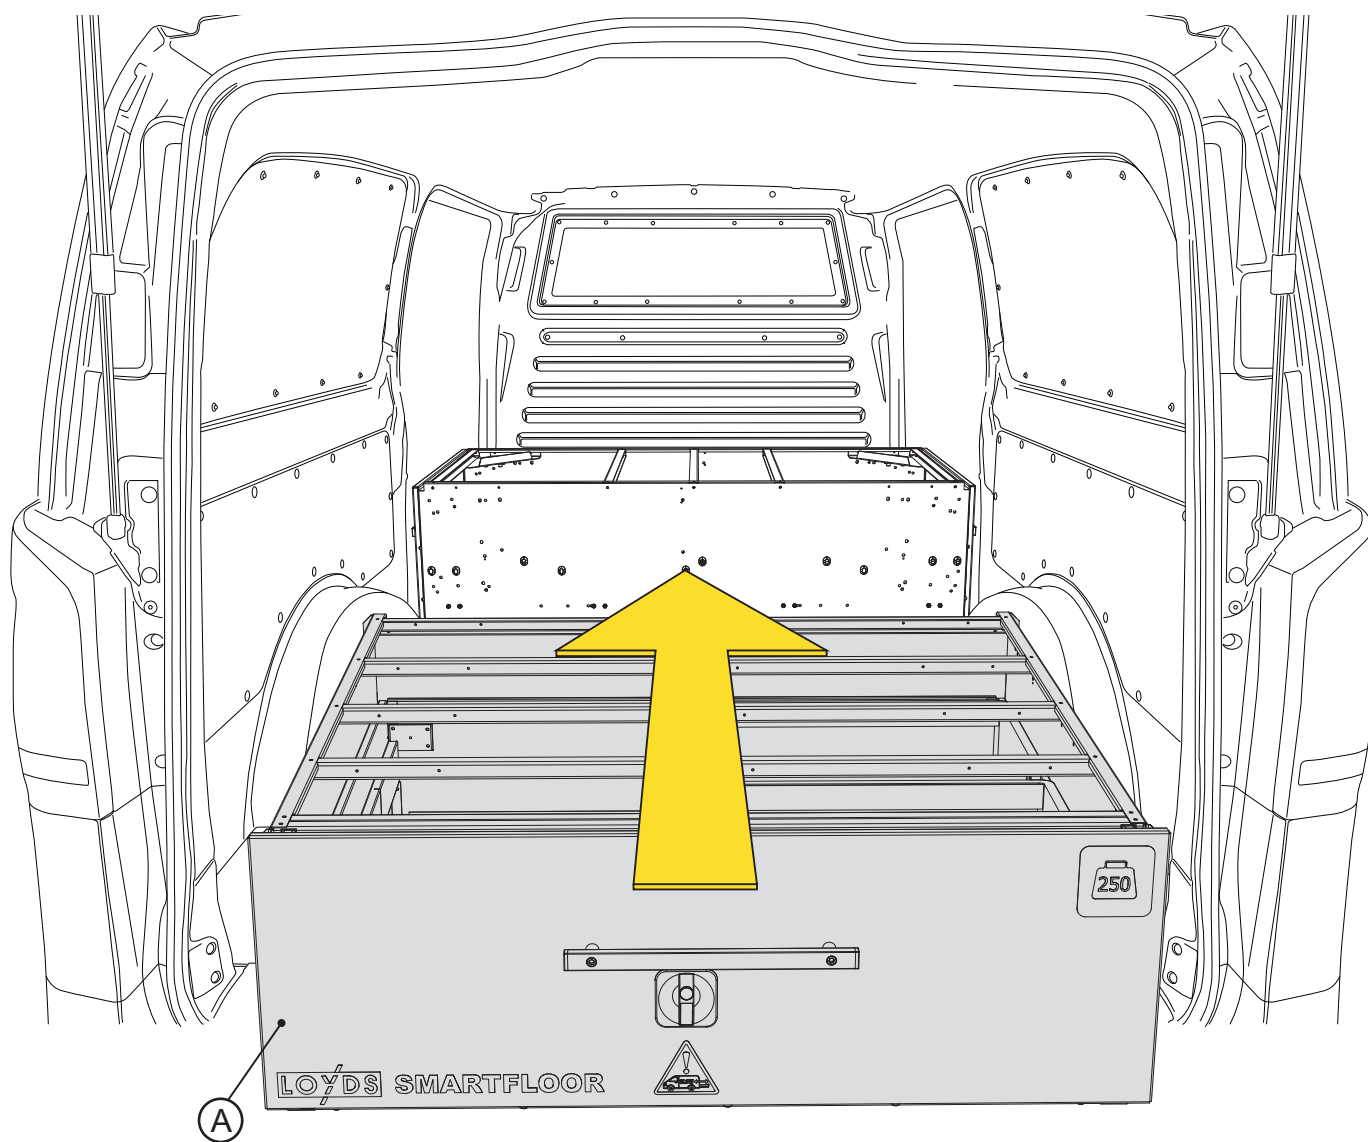


13

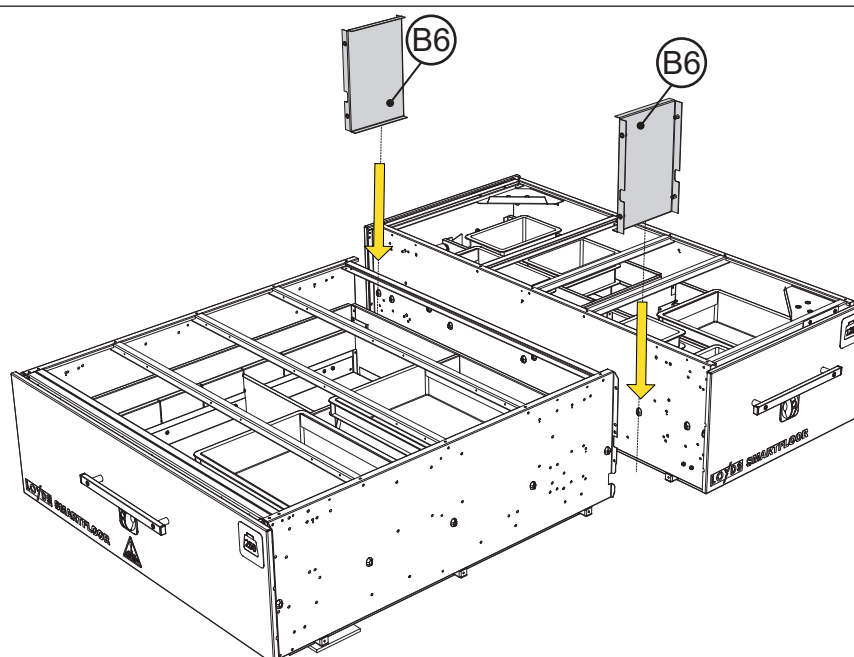





14

14

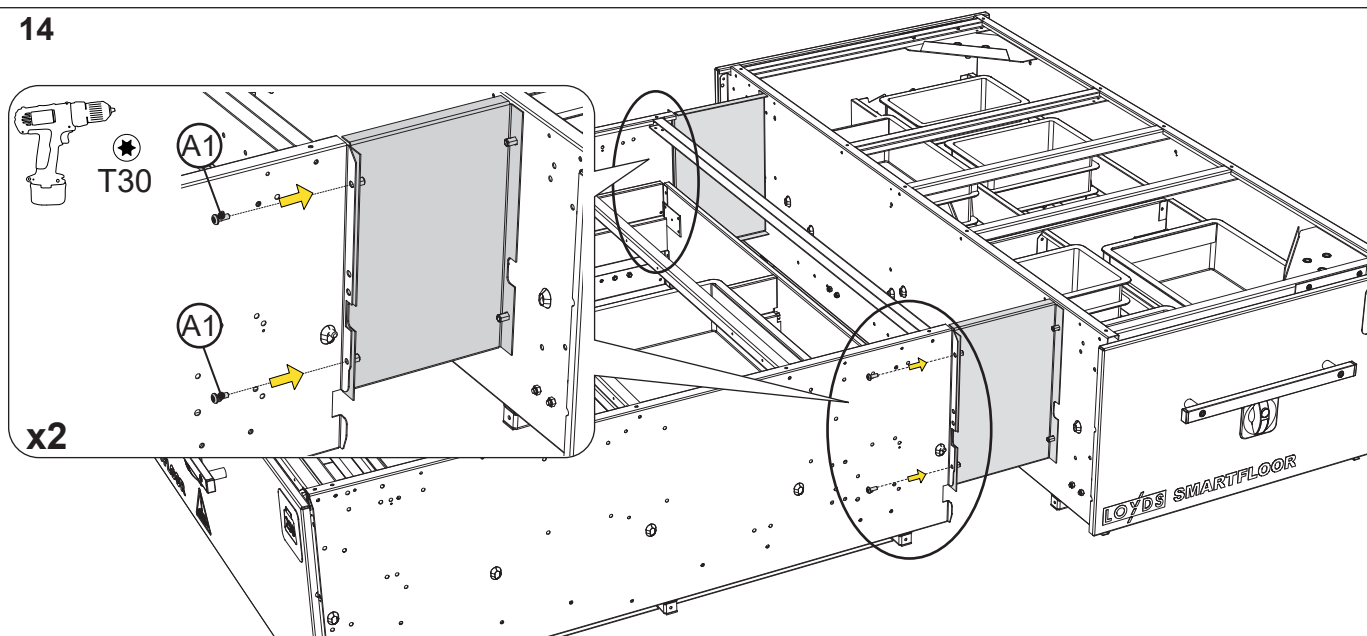


15

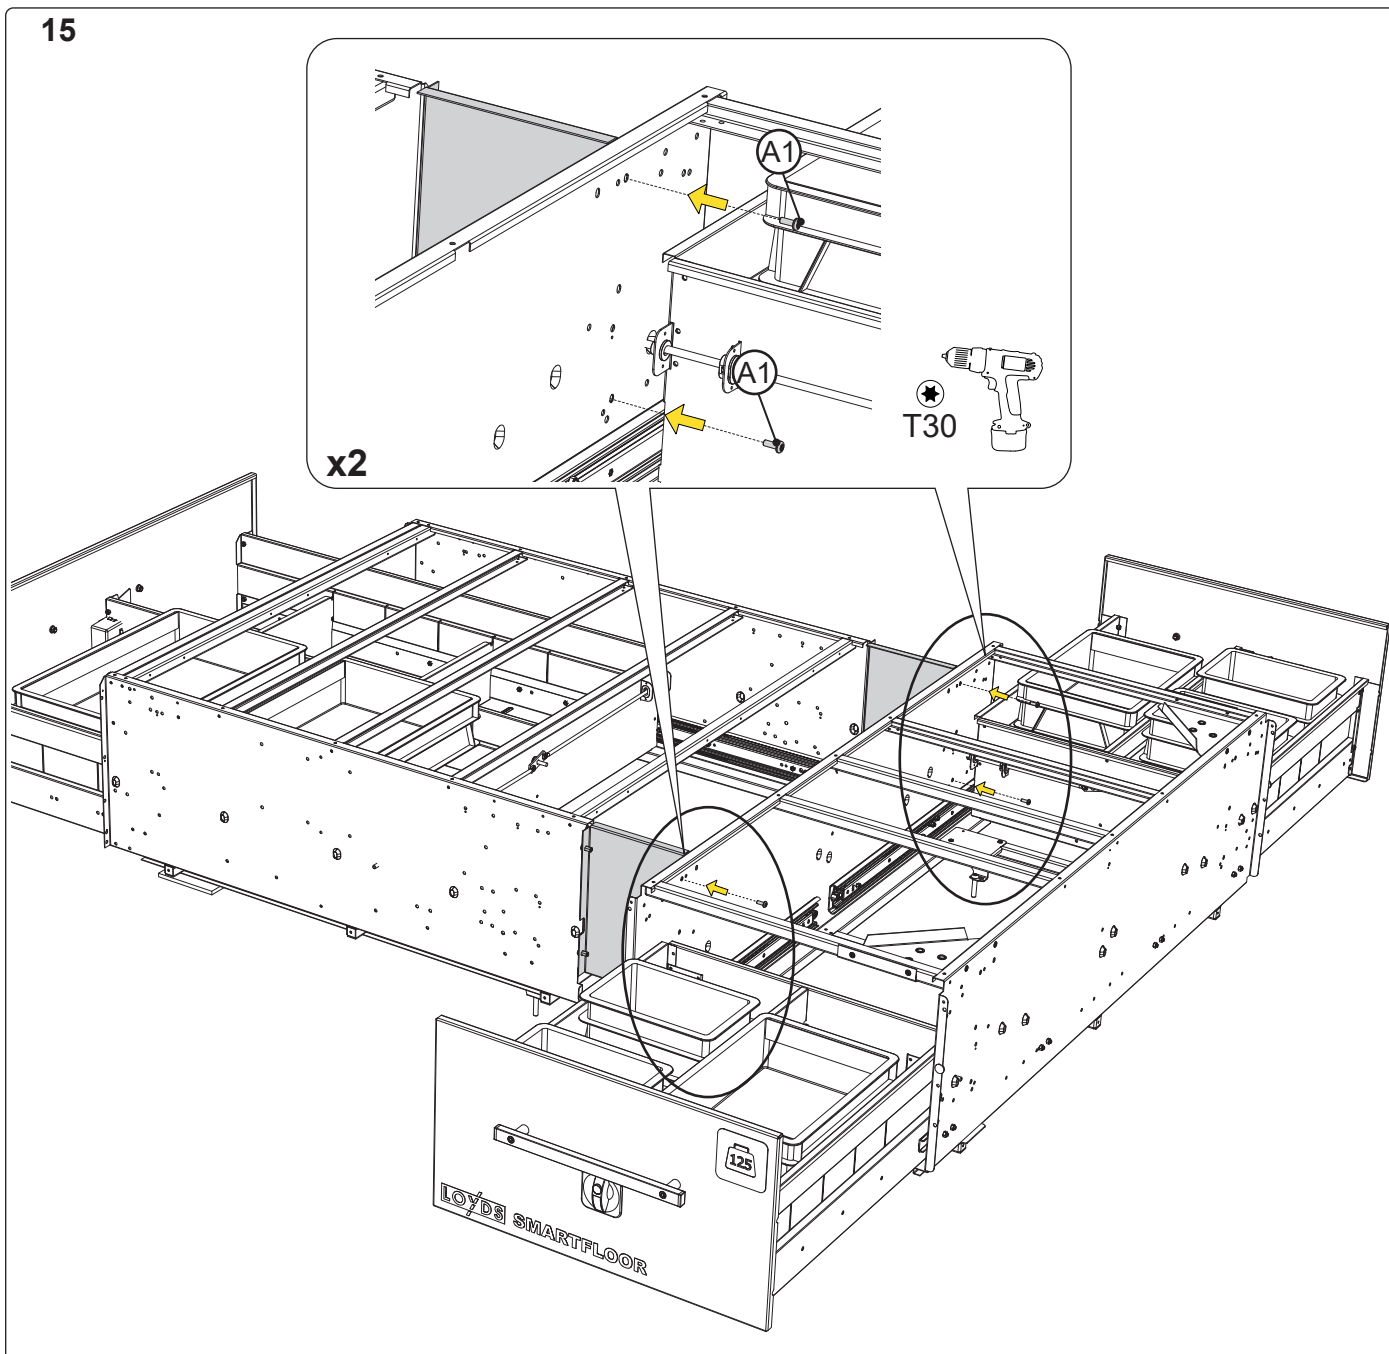


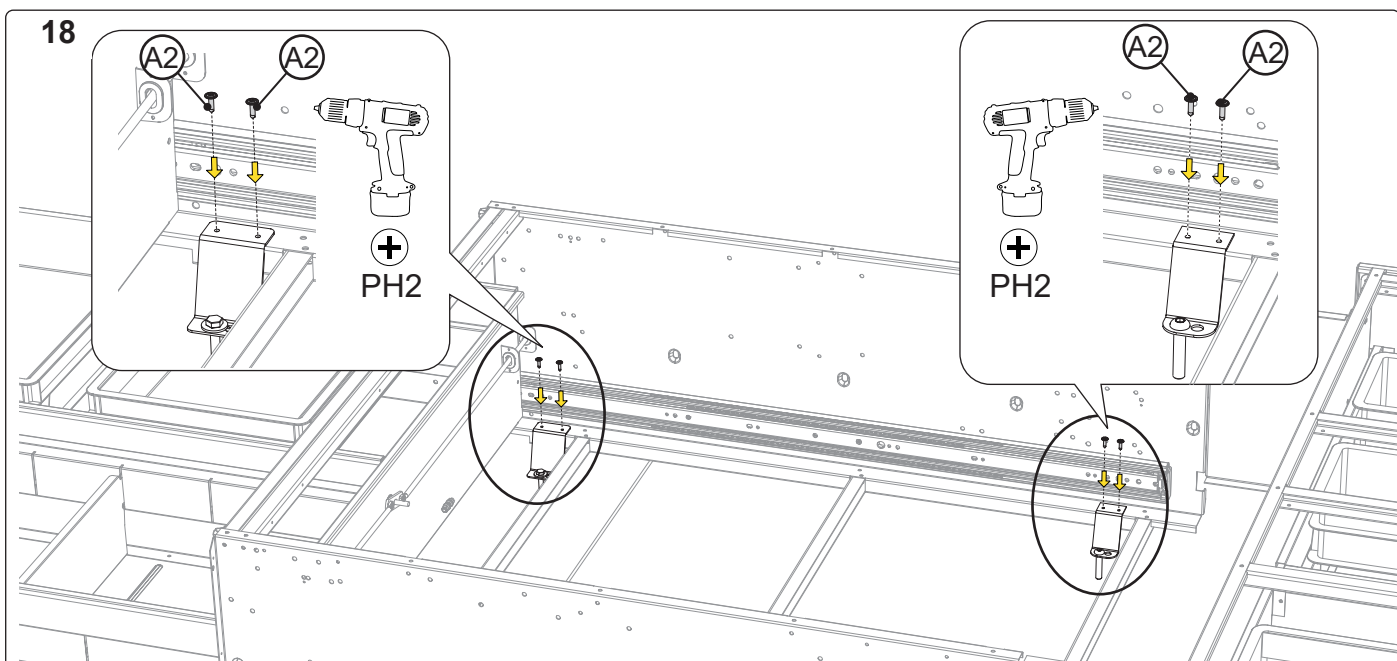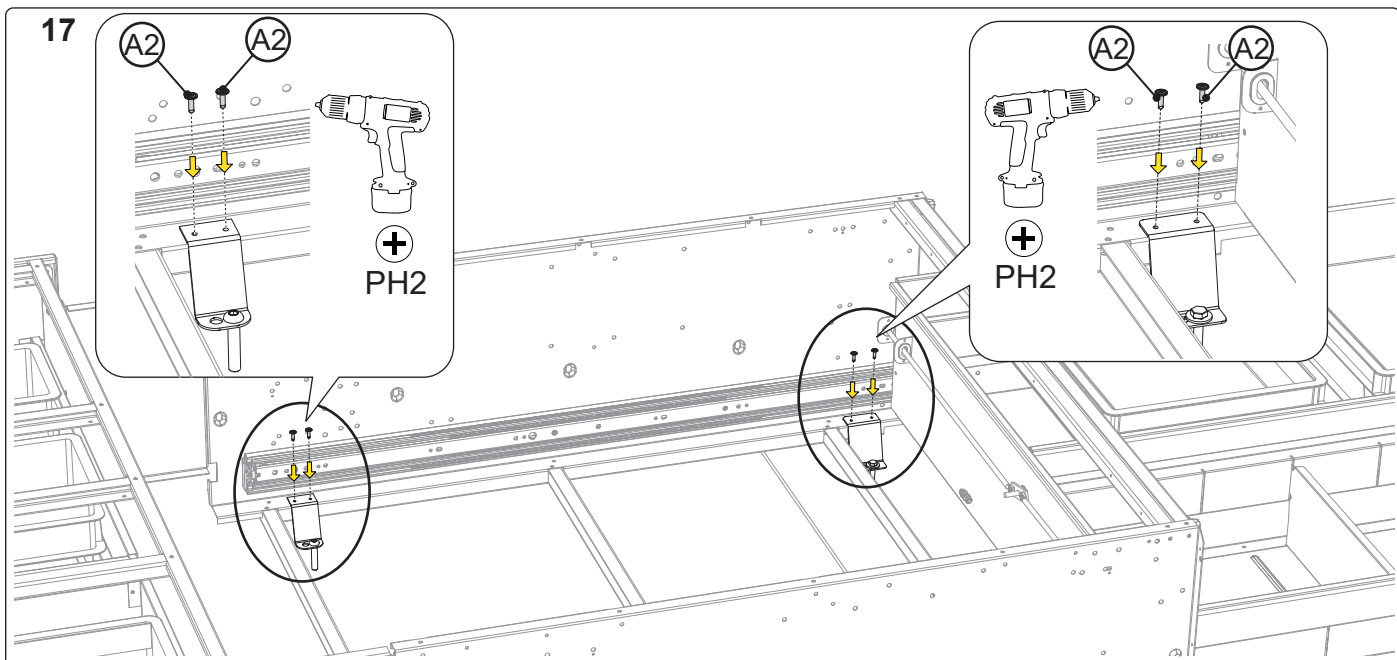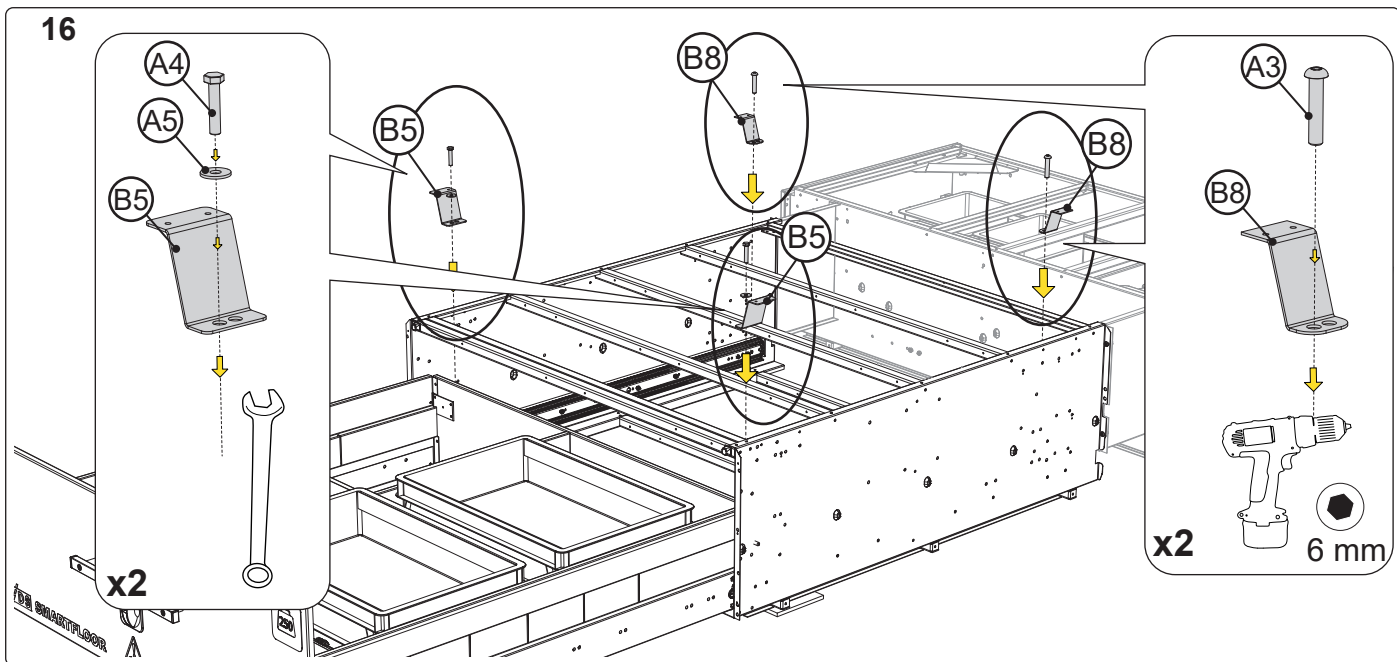


19

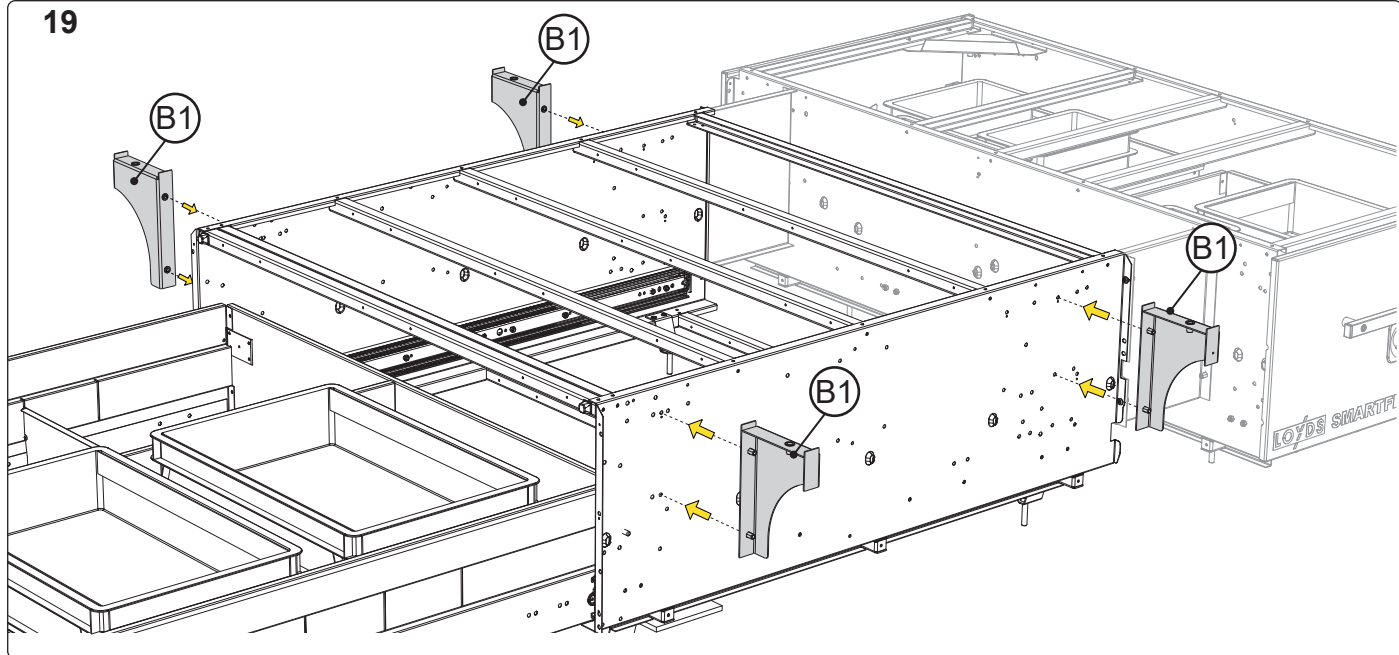


20

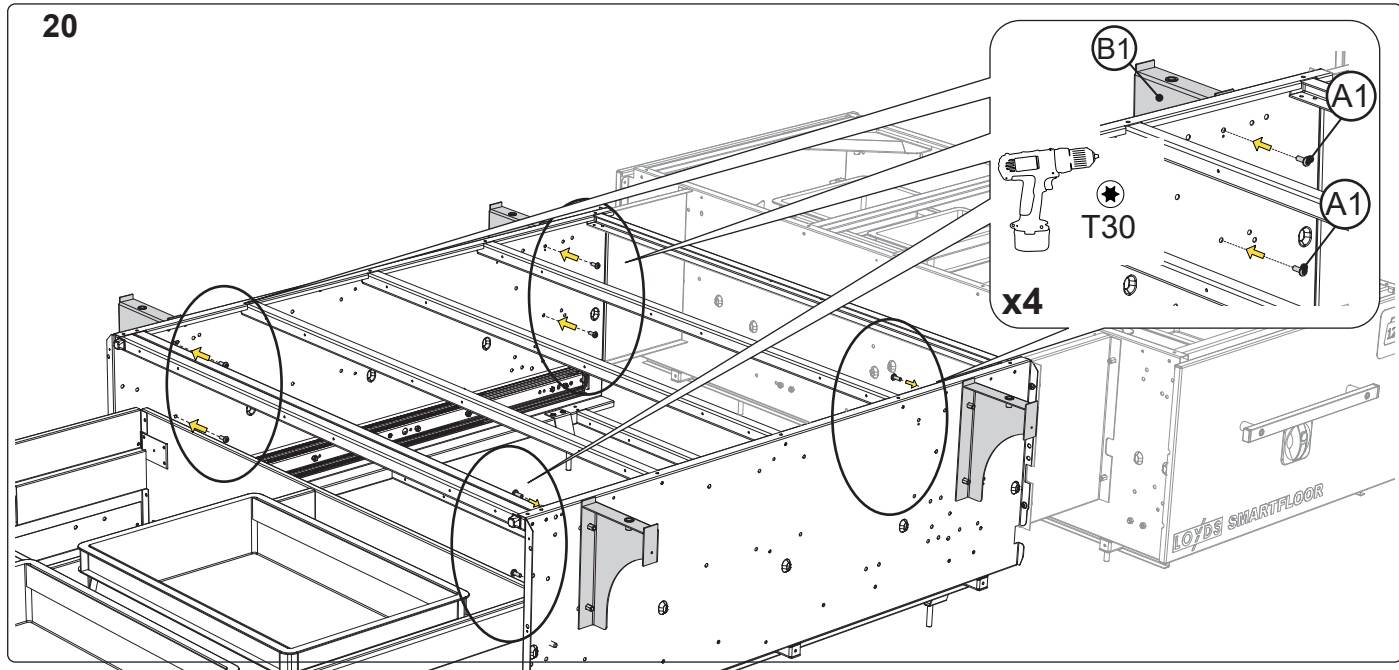


21

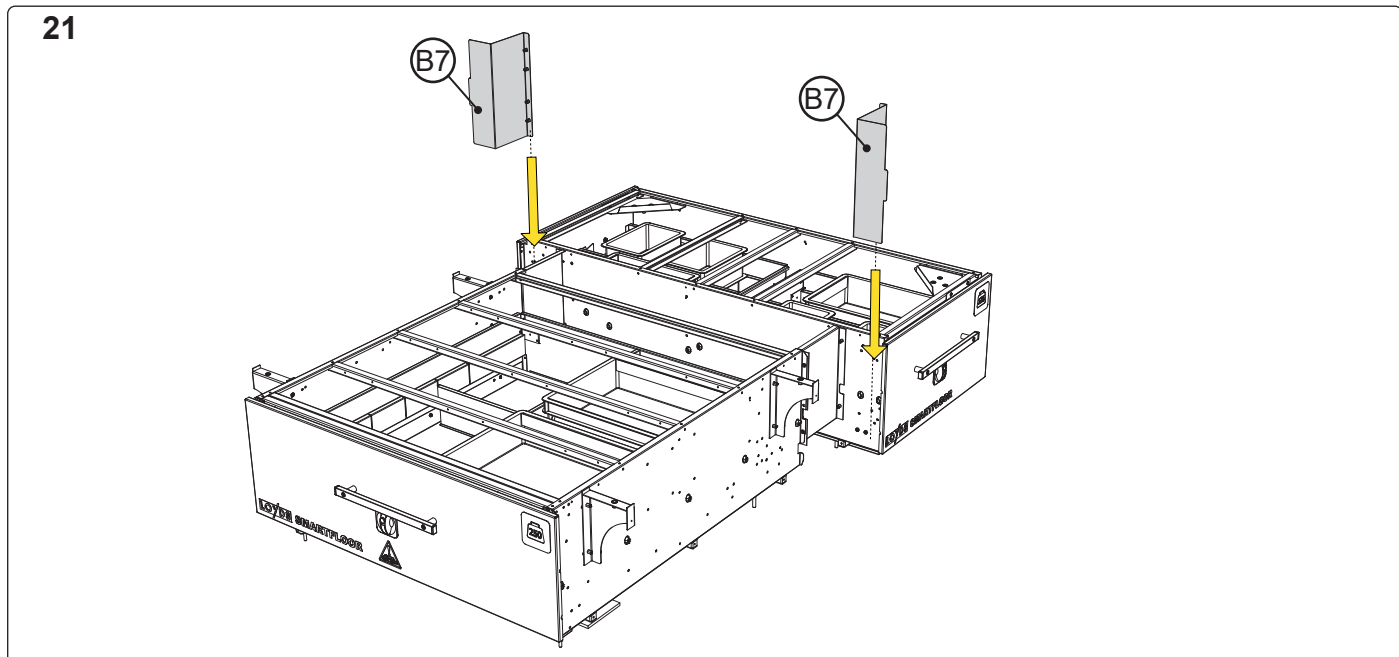


22

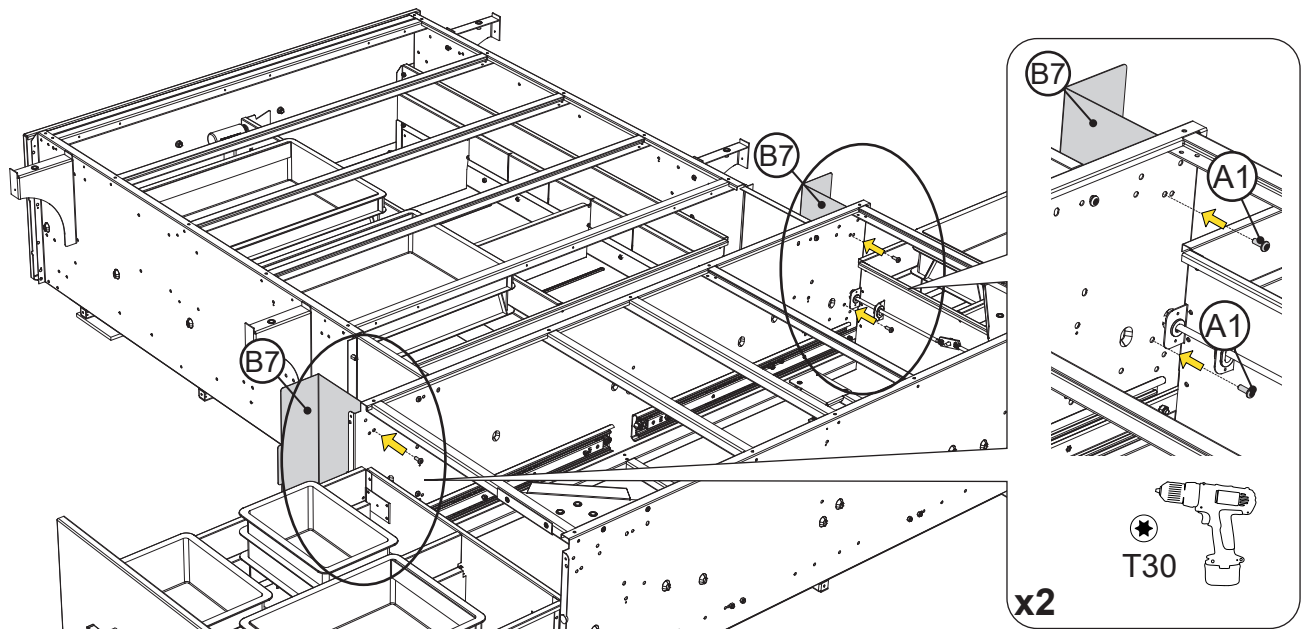


23

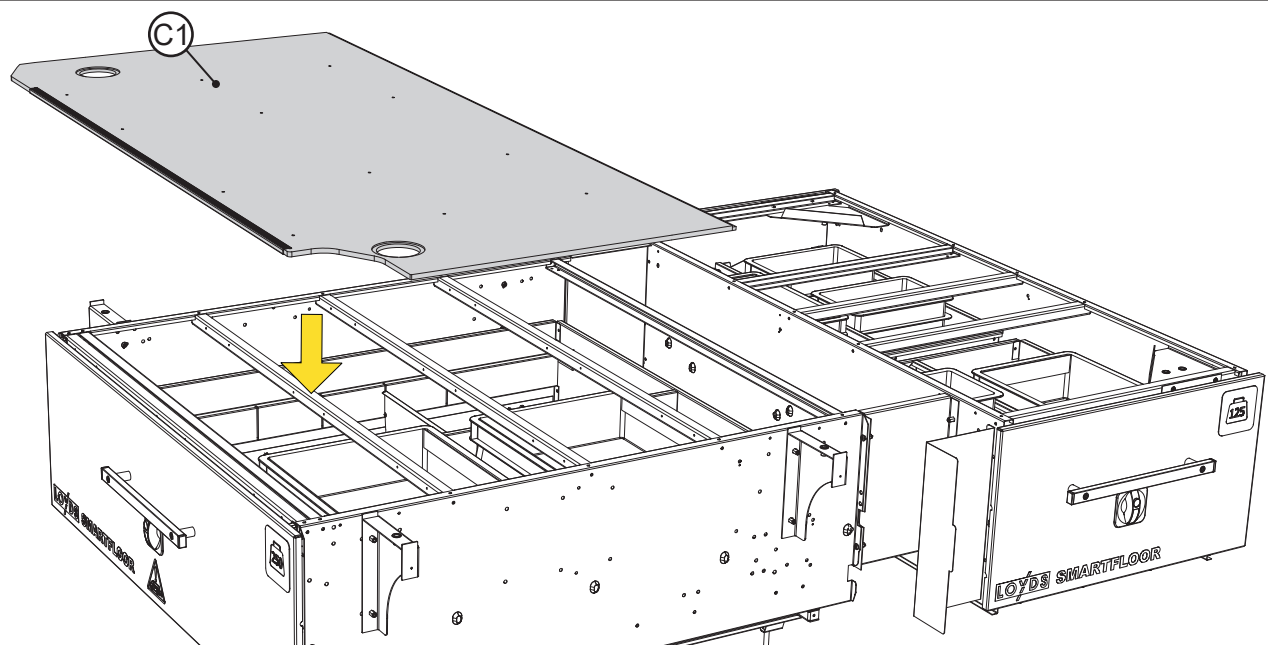


24

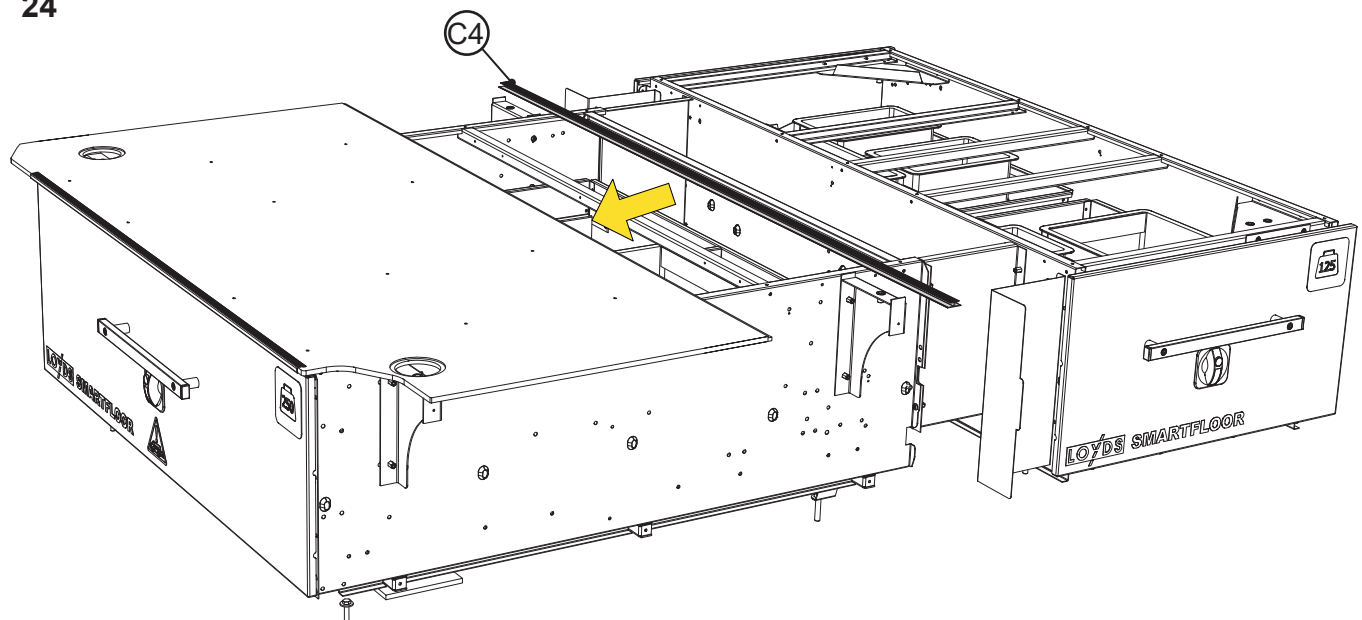


25

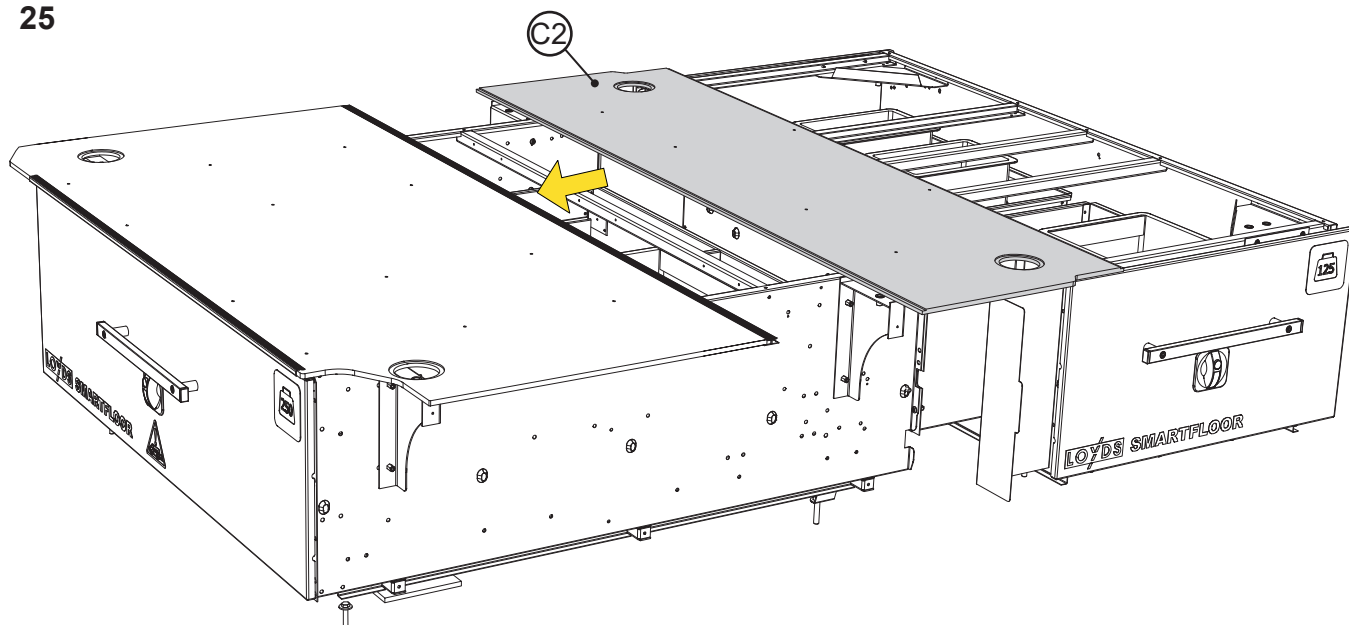


26

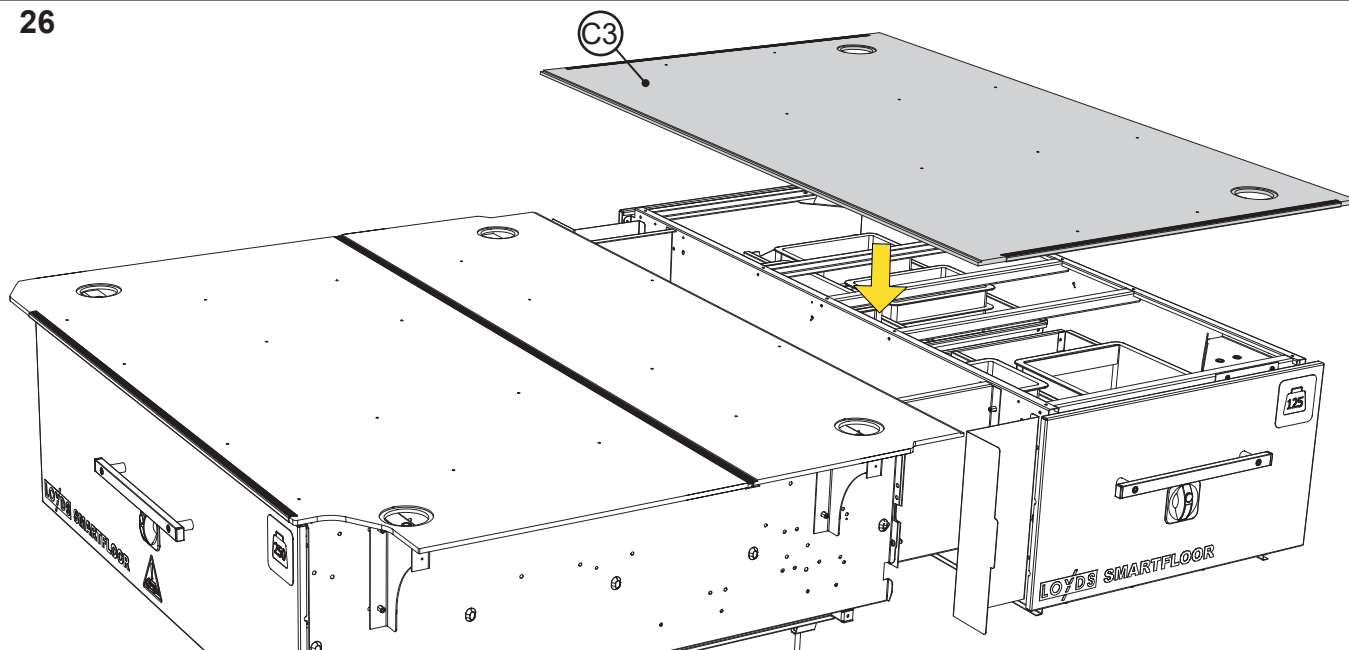


27

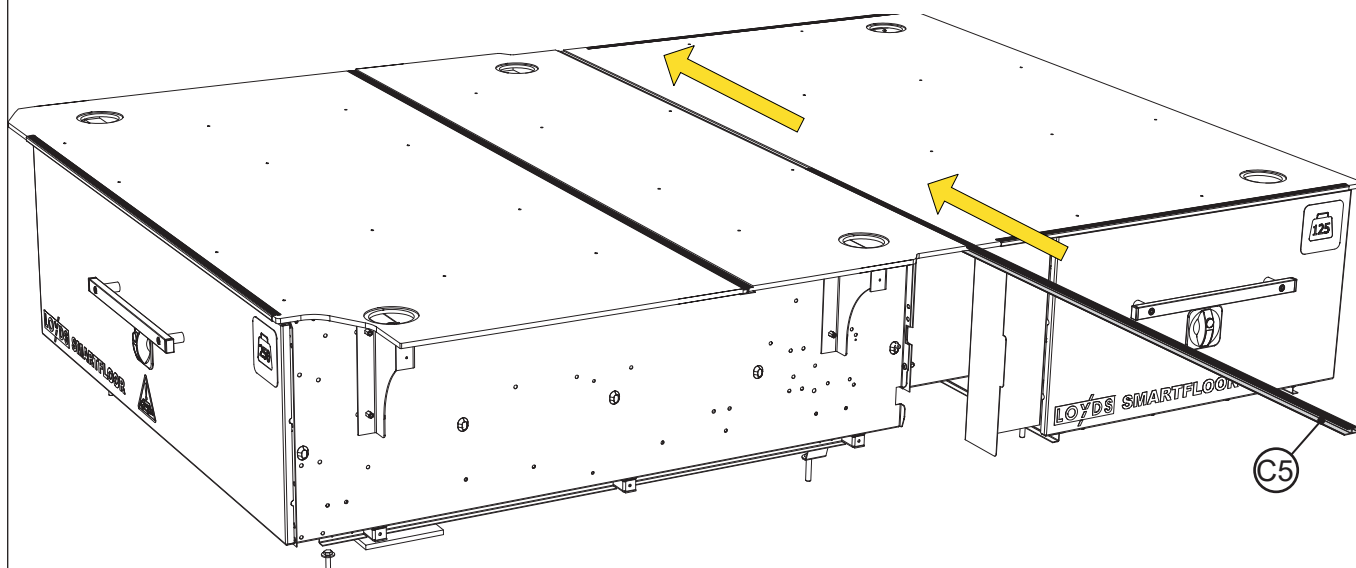


28

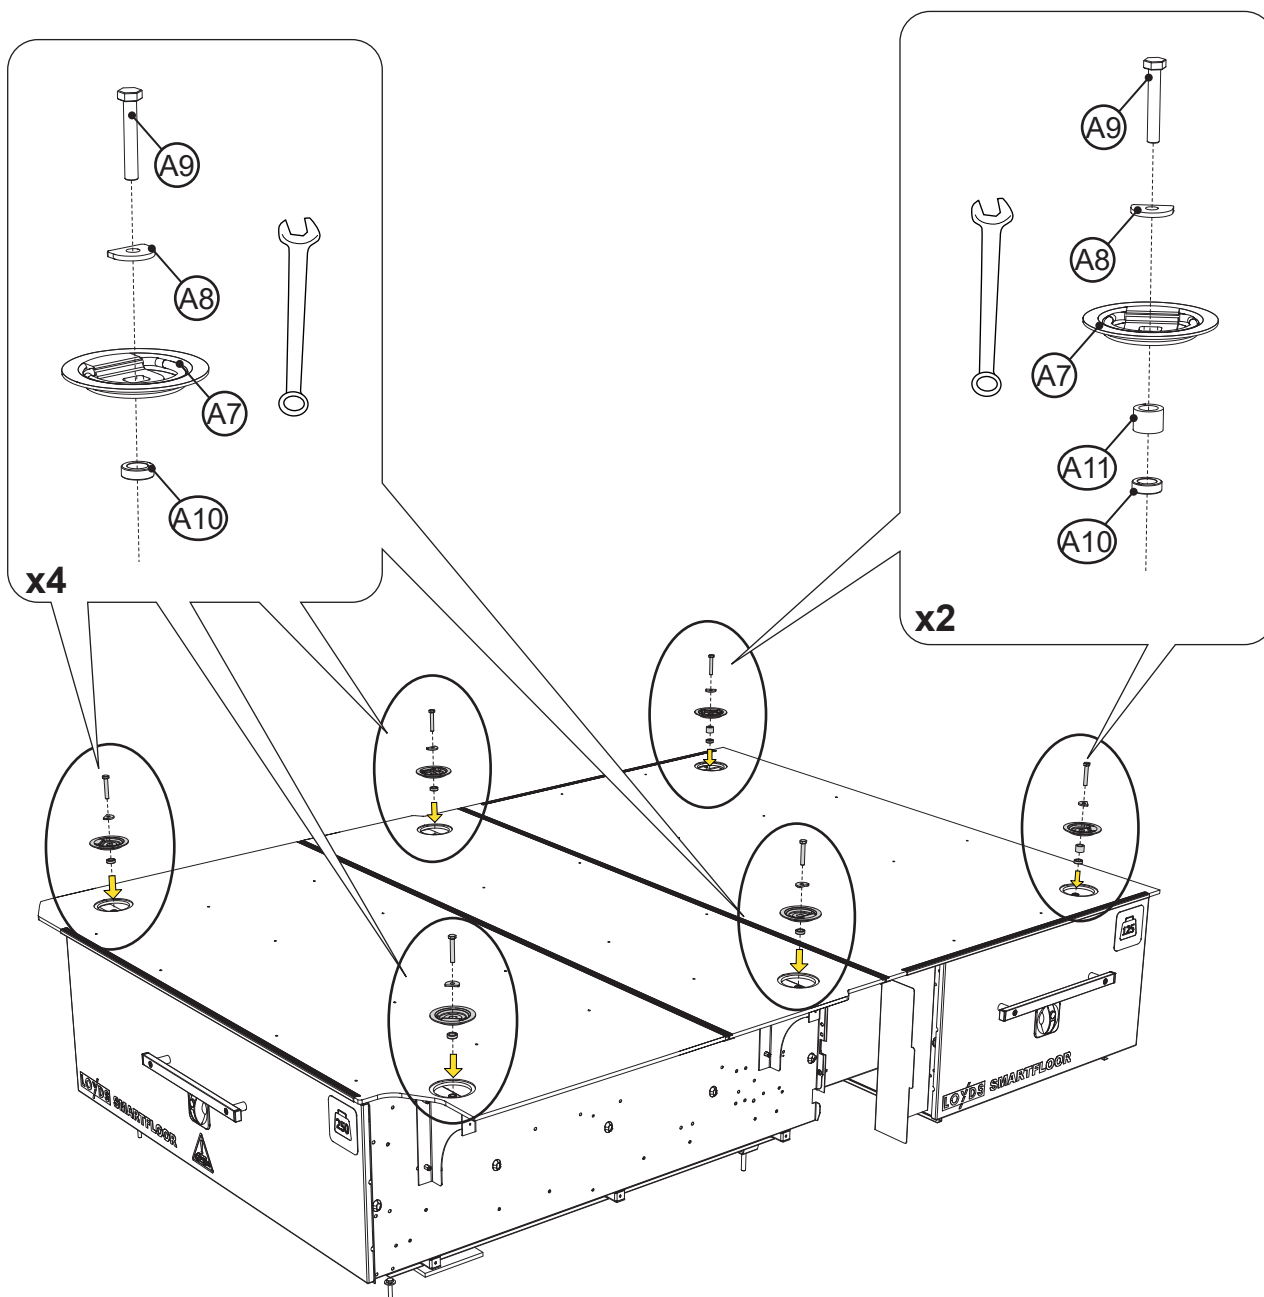



29

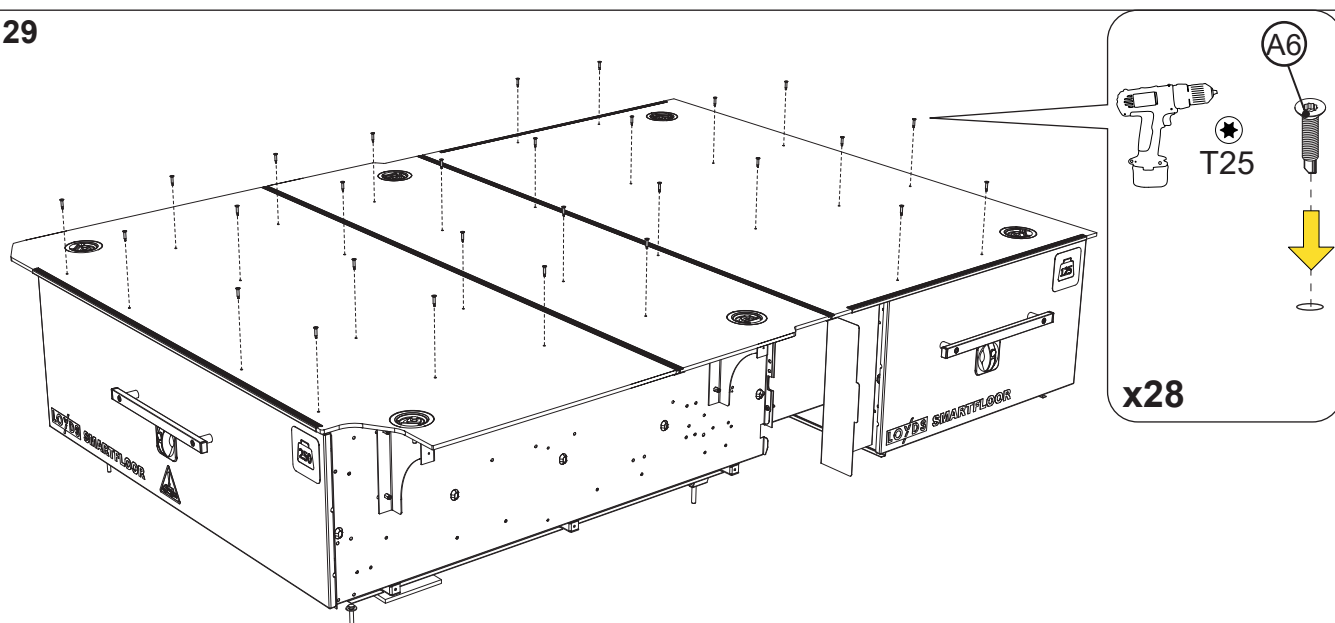


30

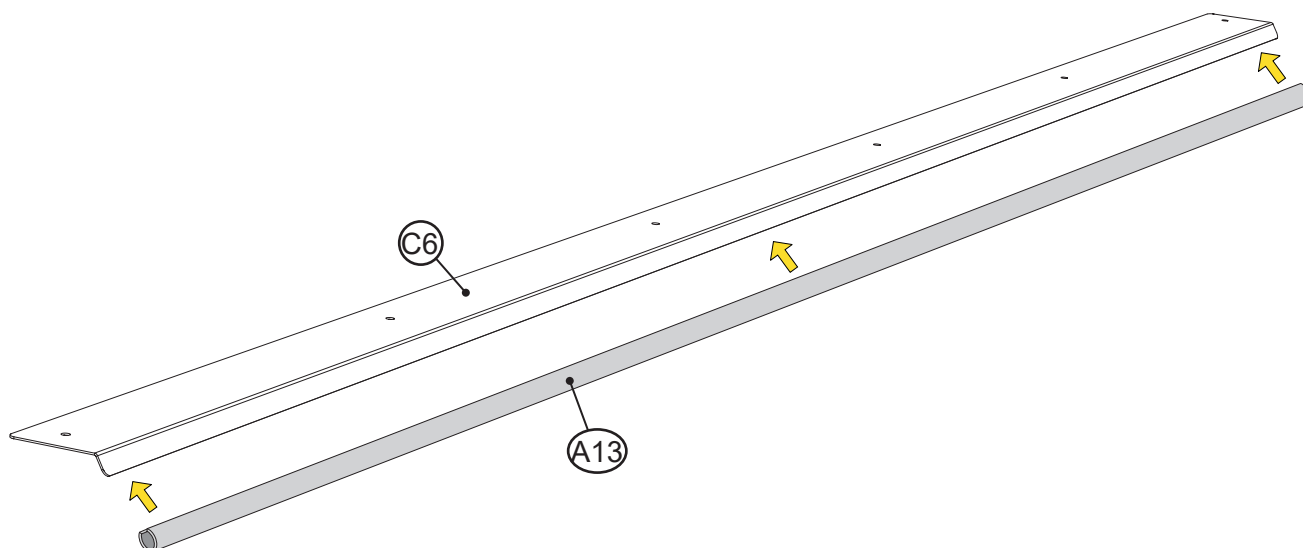

31

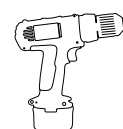
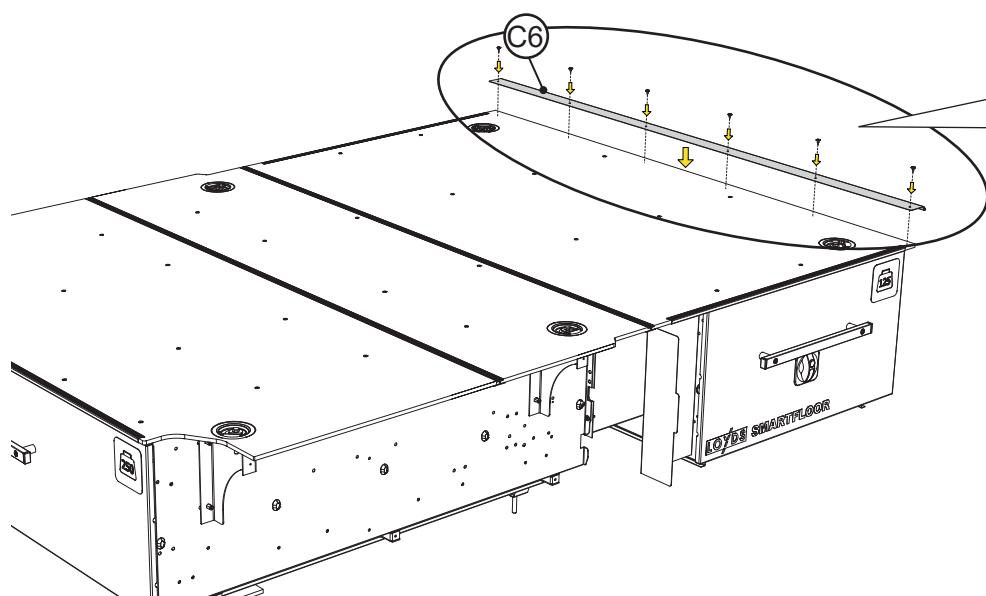


⊕
PH2

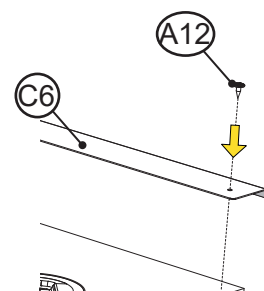

x6

32

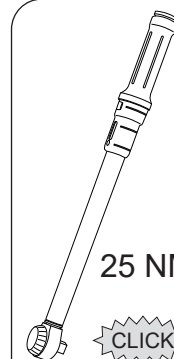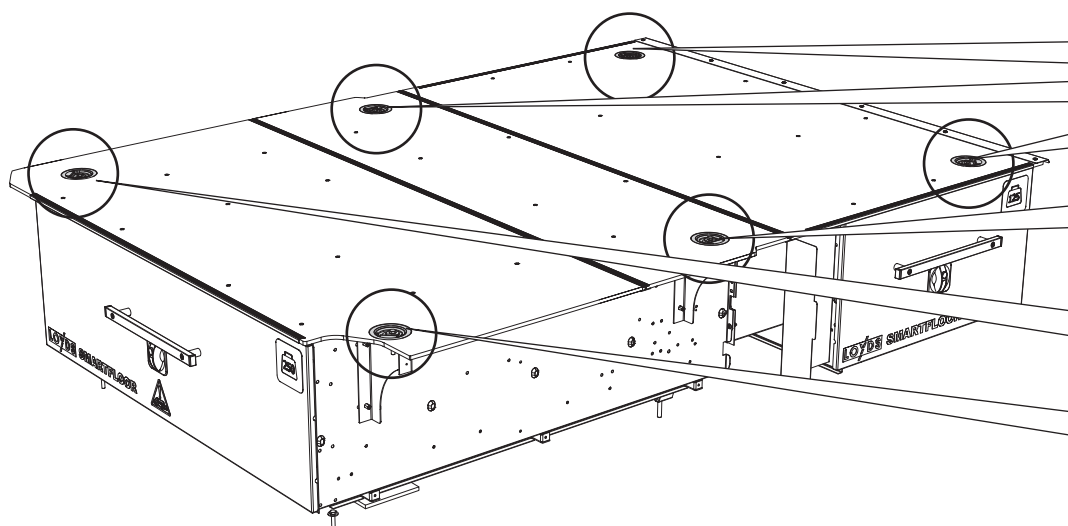

25 NM

CLICK

x6