


Mercedes Vito E-tourer
Smartfloor Front Module Drawer

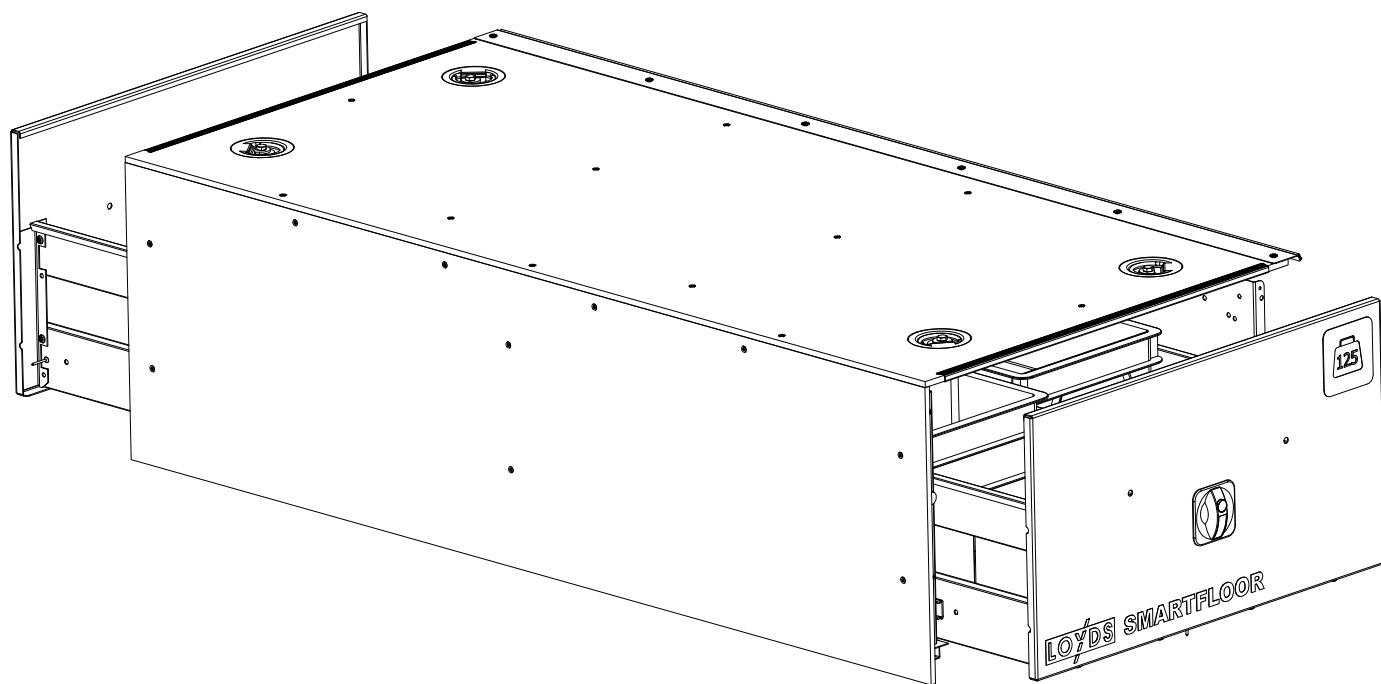

Installation Manual

Manual 15024191_B





Loyds Industri AS - 2024-01-25




Revision Record						
Rev nr	Date	Page	Picture	Update	New	Deleted steps
A	2023-05-22				X	
B	2024-01-25	9,10,11	1,5,7	Floor illustrations		



Use colors when printing this installation manual. / Ved utskrift, bruk farger.

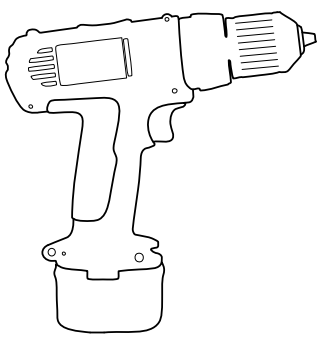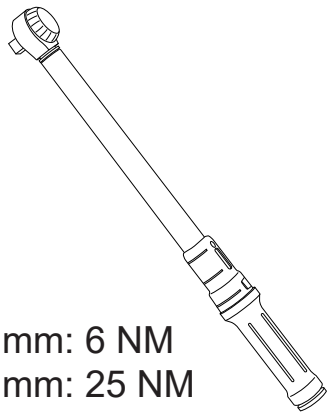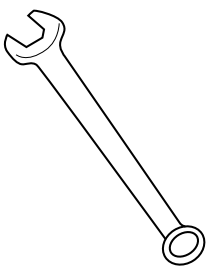
Tools		
	 6 mm: 6 NM 8 mm: 25 NM	 13 mm
 T25 T30 T40	 PH2	 6 mm

15023560 Front Module Drawer Vito E-tourer 2SLD SF2020

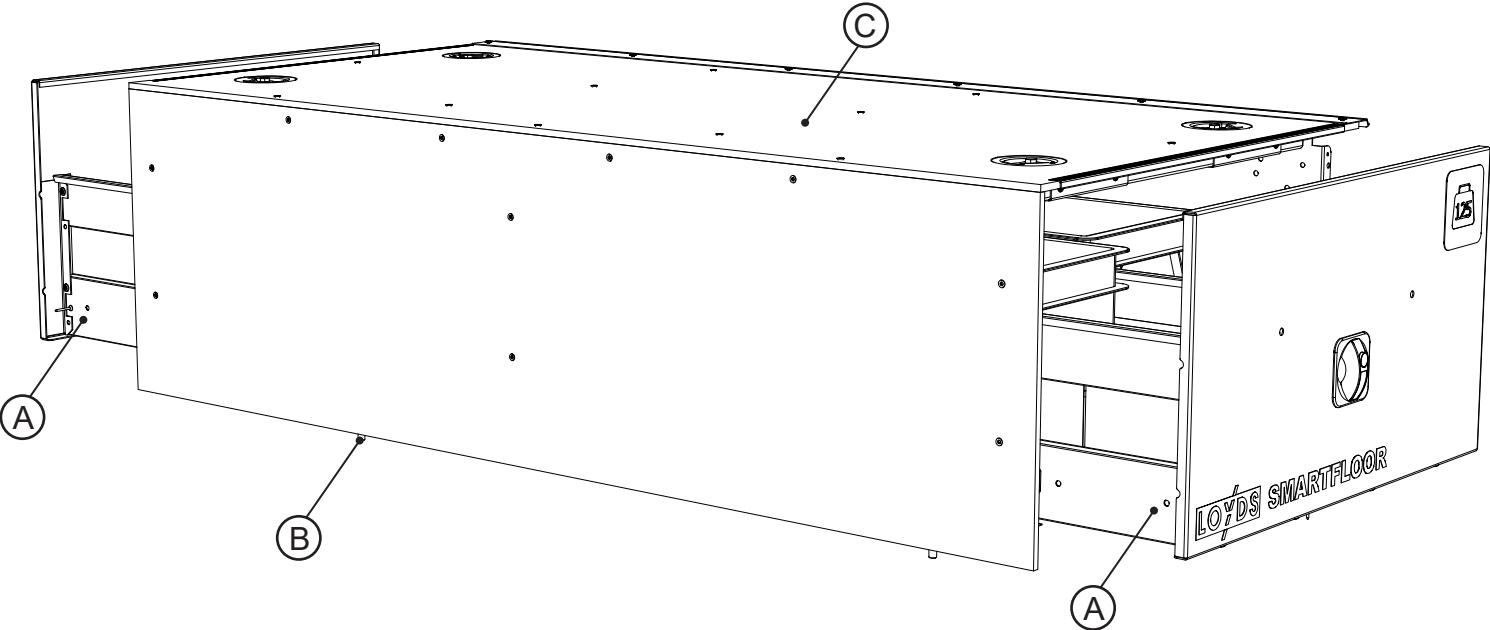


Number	Quantity	Part Number	Definition
A	1	15022217	FD2 Front Drawer W600 L750 Assembled
B	1	15023562	Steelbracket Set Front Mod Drawer Vito ET SF2020
C	1	15023559	Floor Kit Front Mod Drawer Vito ET SF2020

15023537 Steelbracket Set Vito ET SF2020

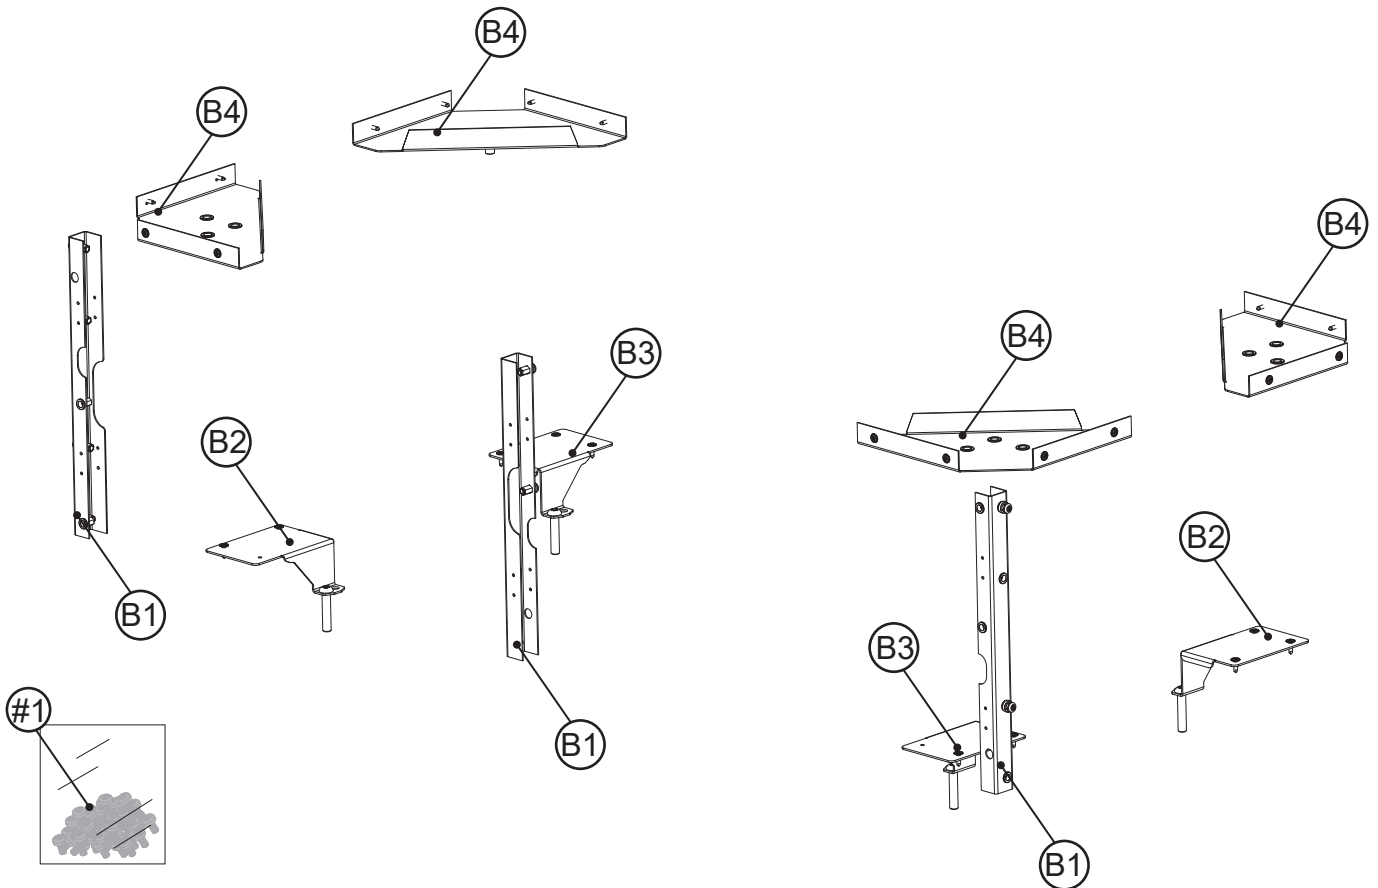


Number	Quantity	Part Number	Definition
B1	3	15021201	Bracket Vertical Floor Front Mod Drawer 2020 ASSY
B2	2	15023523	Bracket Frame-fix Front Right Vito ET SF2020
B3	2	15023526	Bracket Frame-fix Front Left Vito ET SF2020
B4	4	15018460	Bracket Latch Inner 8mm ASSY
#1	1	15023563	Fitting Kit Steelbracket Set Front Mod Drawer Vito ET SF2020

15023559 Floor Kit Front MOD Drawer Vito ET SF2020

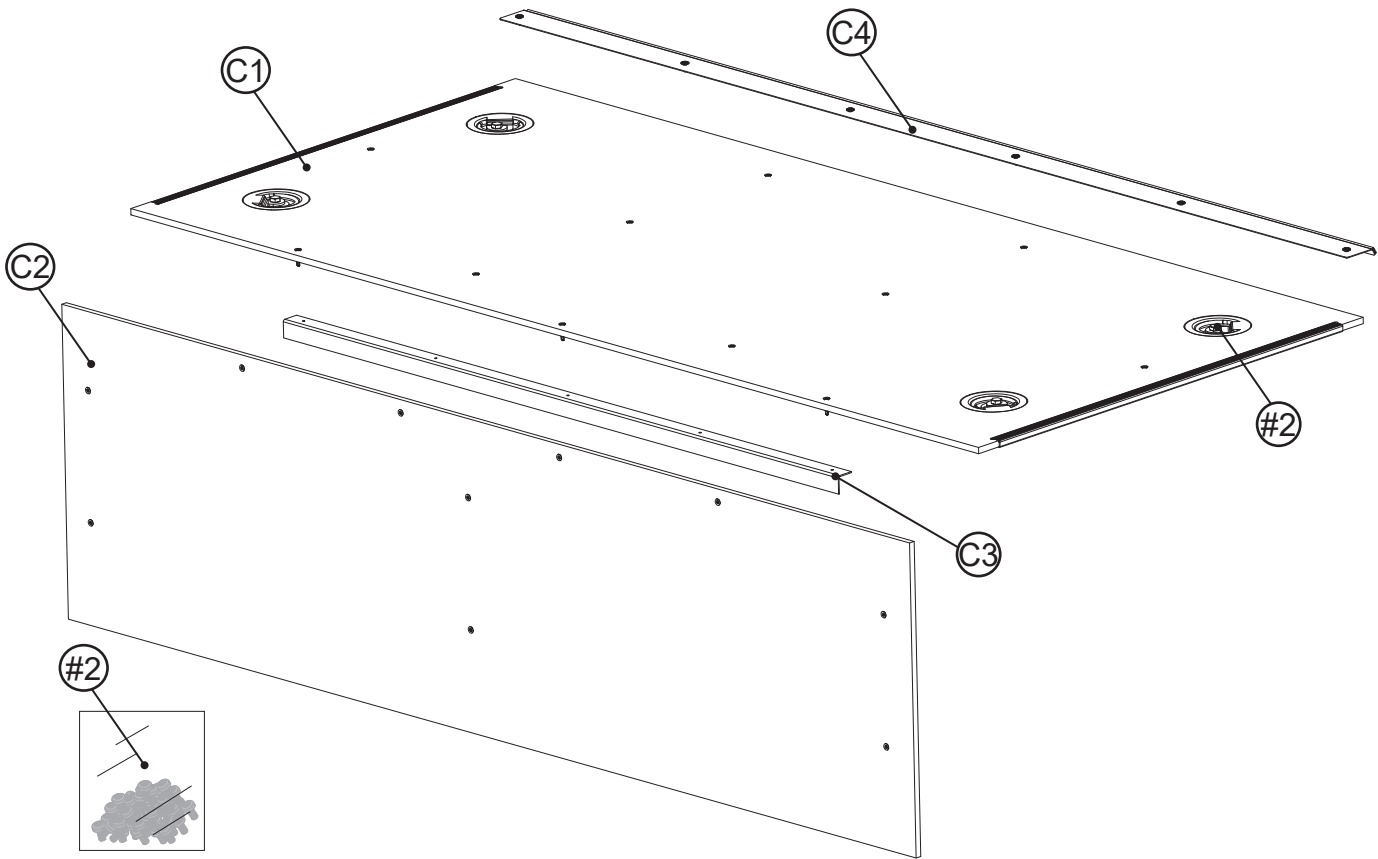


Number	Quantity	Part Number	Definition
C1	1	15023569	Floor Front FD Front Mod Drawer Vito ET SF2020 ASSY
C3	1	15023565	Floor Vertical Front Mod Drawer Vito ET SF2020
C3	1	15021265	Angle Vertical Floor Half Mod Drawer
C4	1	15023517	Floor Extend Bracket Vito ET SF2020
#2	1	15023561	Fitting Kit Floor Set Front Mod Drawer Vito ET SF2020

15010236 Handle Assy

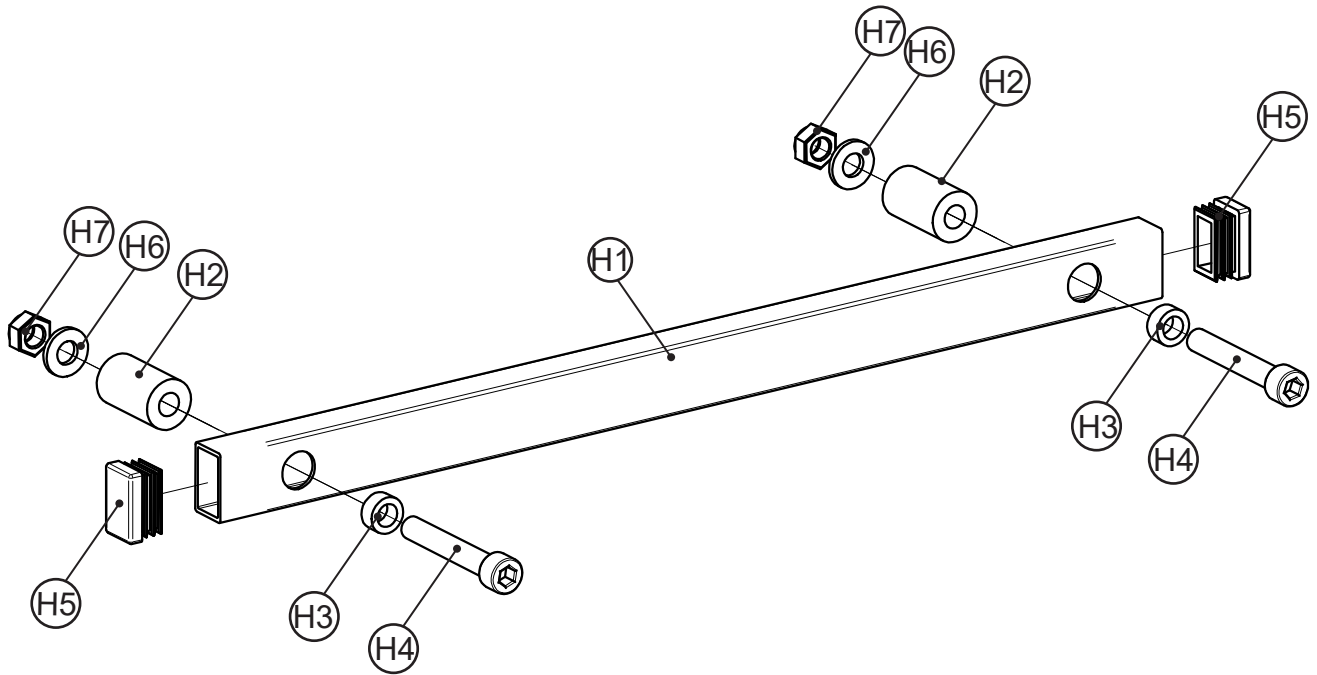


Number		Quantity	Part Number	Definition
H	H1	1	15009441	Handle Tube 25x15x286
	H2	2	15009442	Spacer Ø8,3x18x30 Nylon Black
	H3	2	15009443	Spacer Ø8,1x13x6mm Galv
	H4	2	15009444	Screw M8x50 Cylinderh Hex
	H5	2	15009438	End sleeve Black
	H6	2	8,4x17x2	M8 Washer, DIN 125
	H7	2	8 NMU	Mutter M8 Nyloc DIN985

#1 15023563 Fitting Kit Steelbracket Set Vito ET SF2020



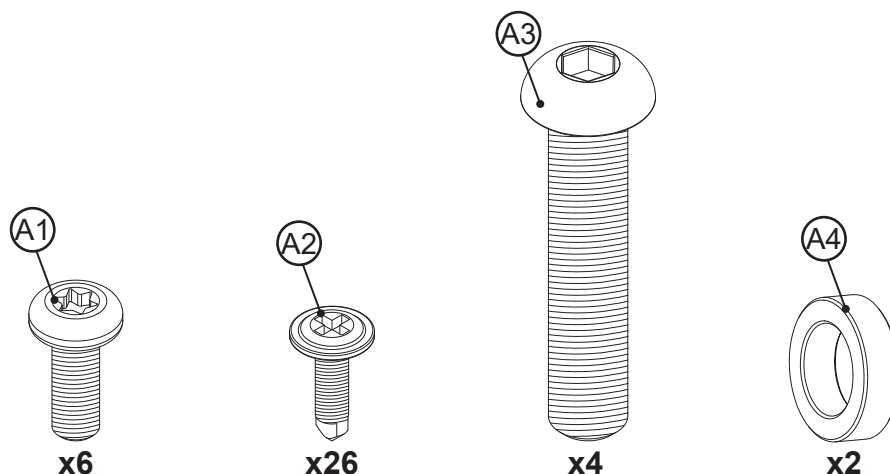


A1	15003551 M6x16 TX30 pan (DIN 7985)
A2	4,2x16 FLS Platescrew selfdrilling E45759 Black
A3	15001595 M10x50 Panh UNB Black
A4	15012998 Spacer 9x14x4 Steel Elz


#2 15023544 Fitting Kit Floor Set Vito ET SF2020

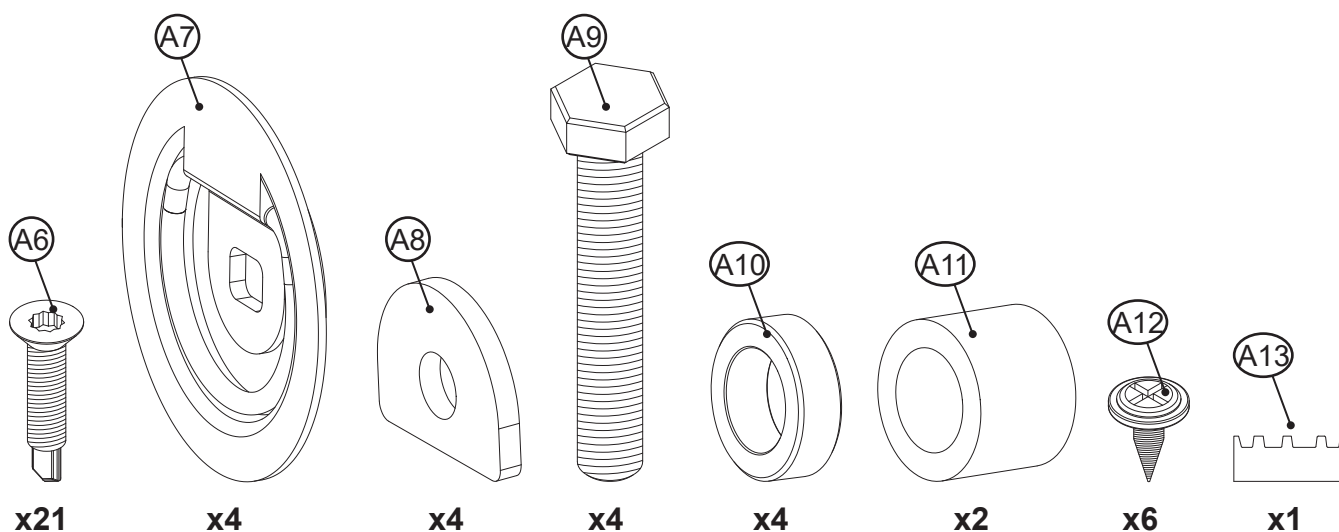


A6	15016947 Screw 4,8x25 Selfdrill Counters Torx Elz
A7	15005497 Latch Cup Black Ø90 Ø12x15 1000Kp
A8	15005884 Washer Latchcup for Ø8
A9	15004713 M8x50 screw, 6K DIN 933 Black, ElZn+Cr3
A10	13x20x6,4 Spacer, U-709
A11	15001584 Distansehylse D20 d13 h15
A12	4,2x13 S Screw 4,2x13 Flathead Needle Black
A13	36.721004 Rubber Profile L1600mm

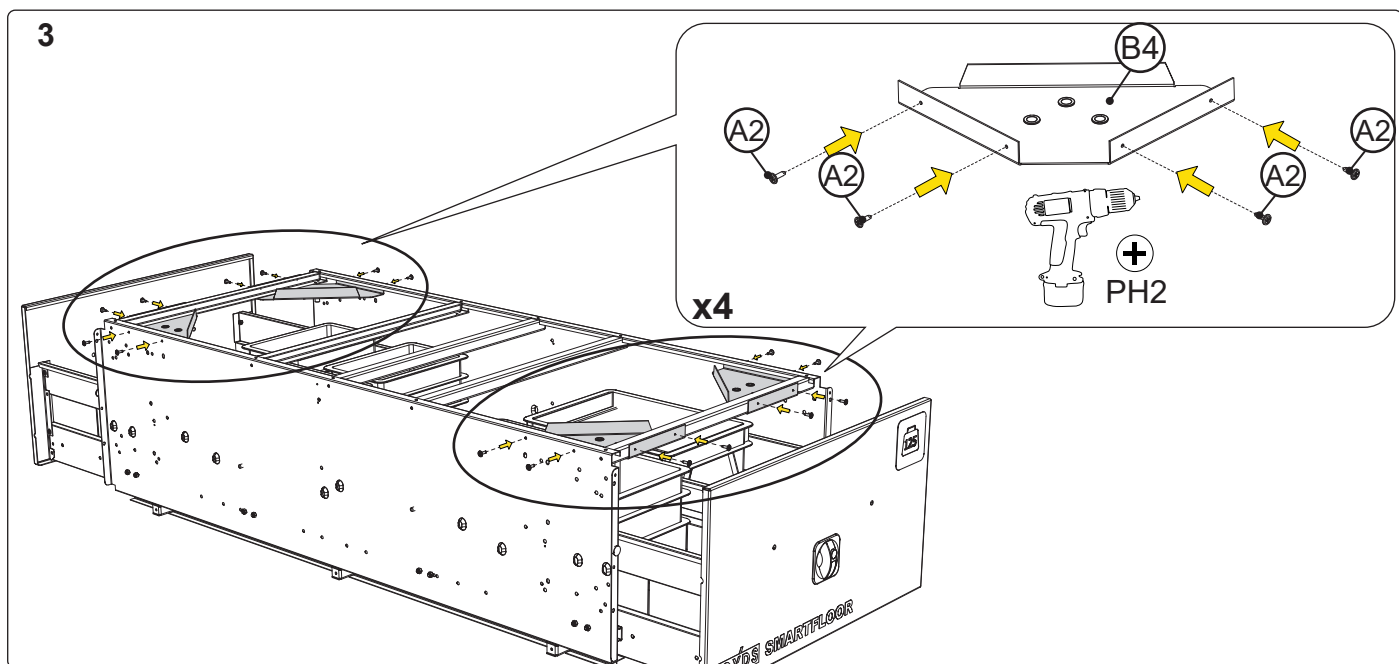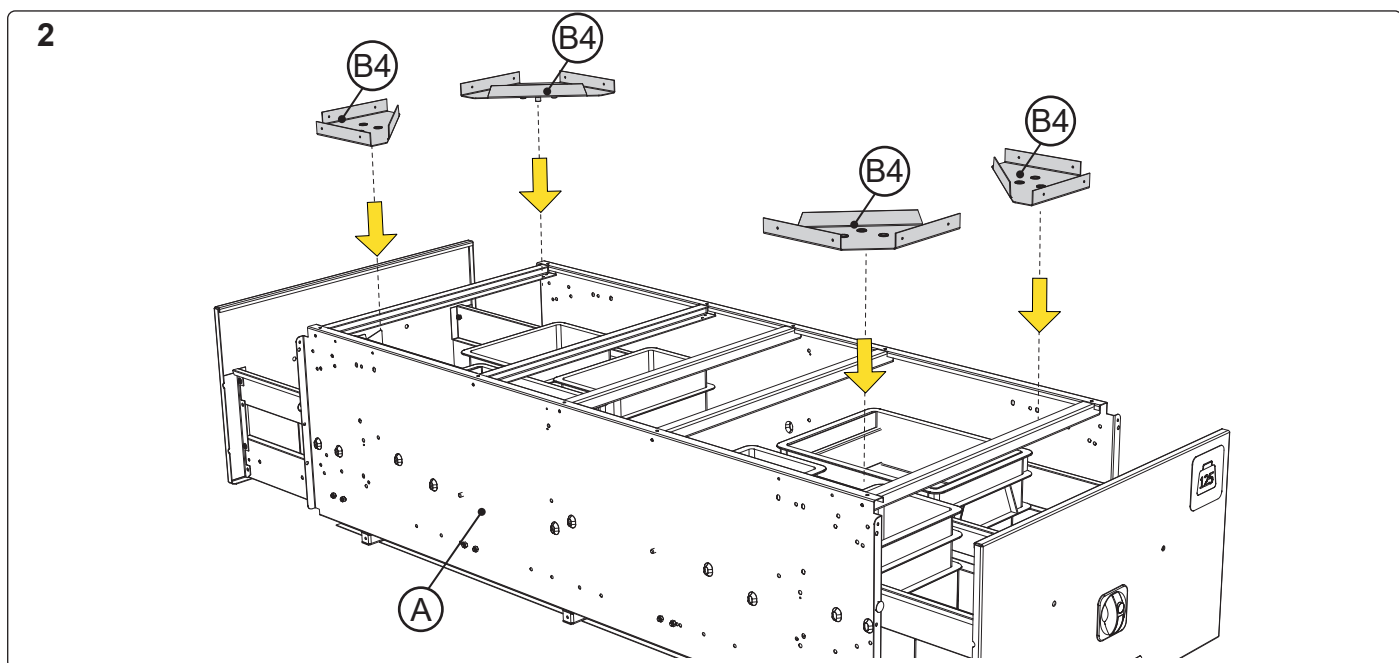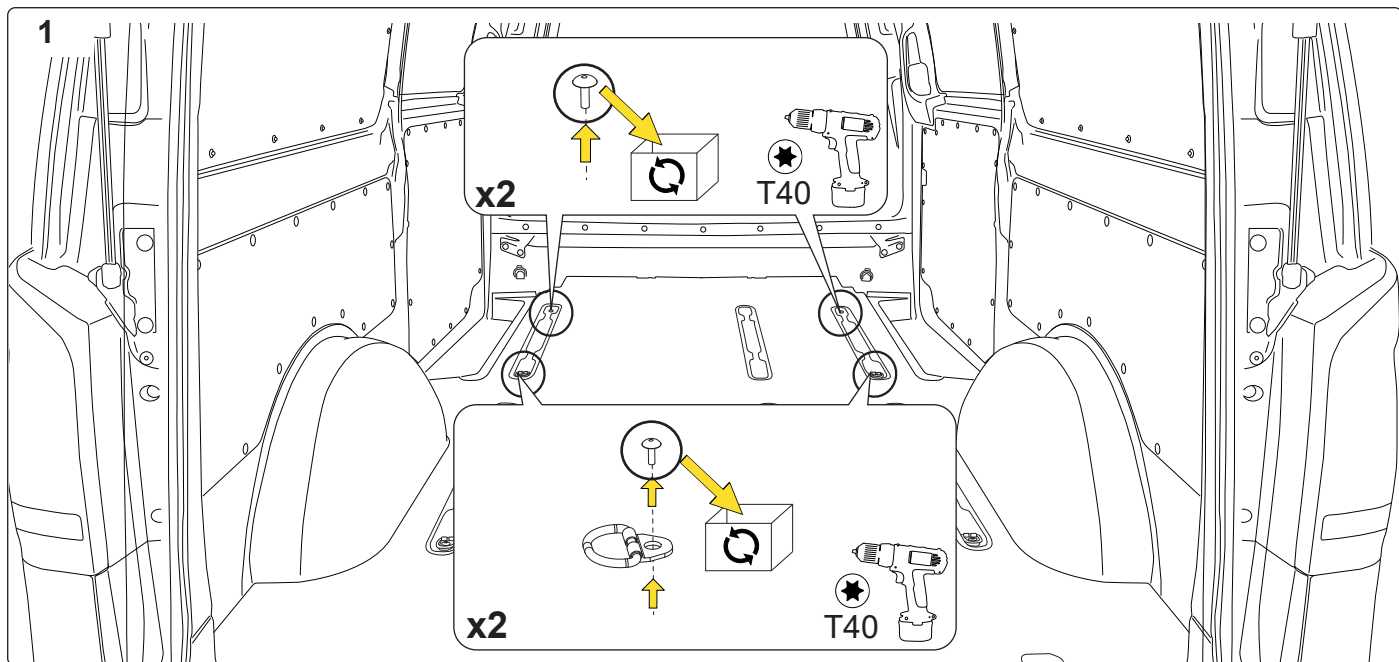


4

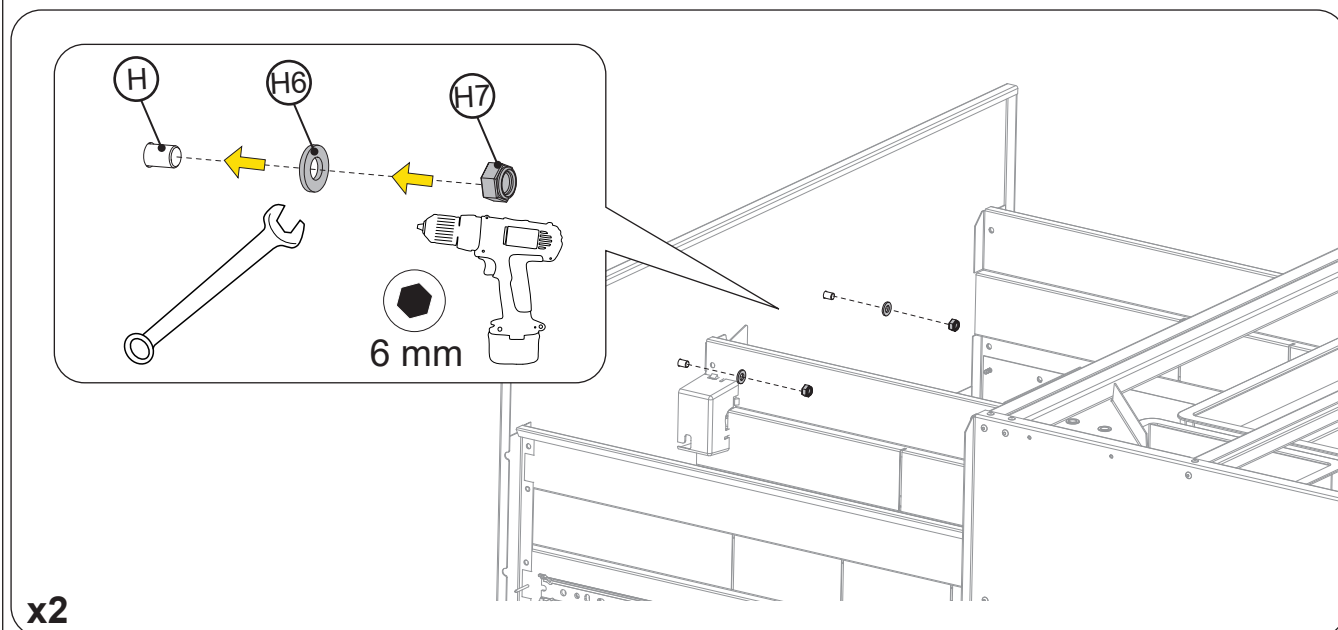


x2

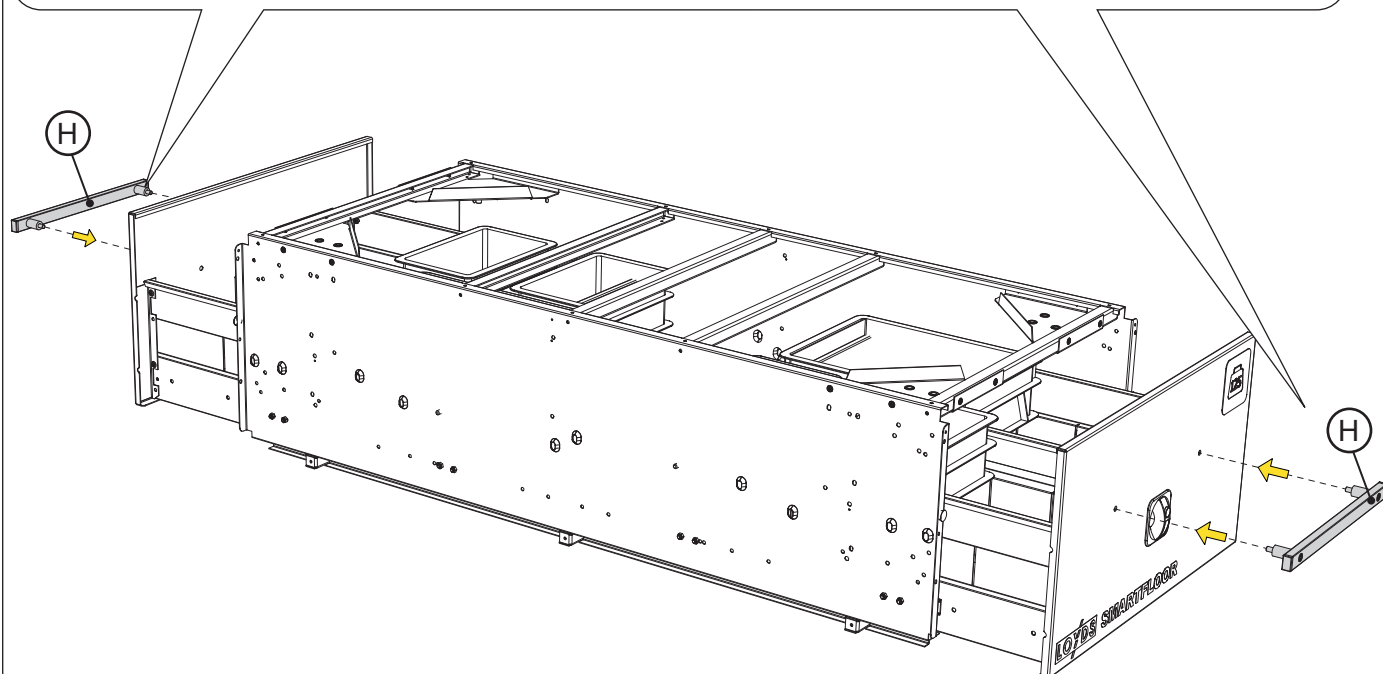


5

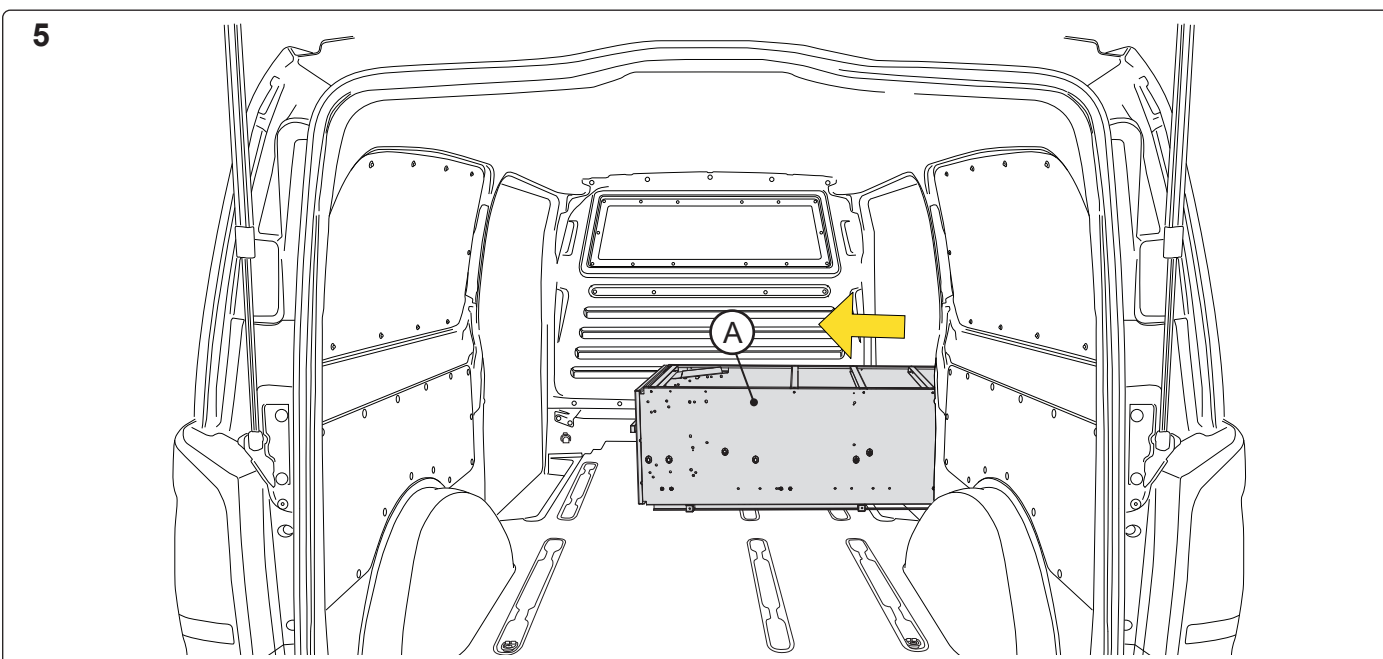



6

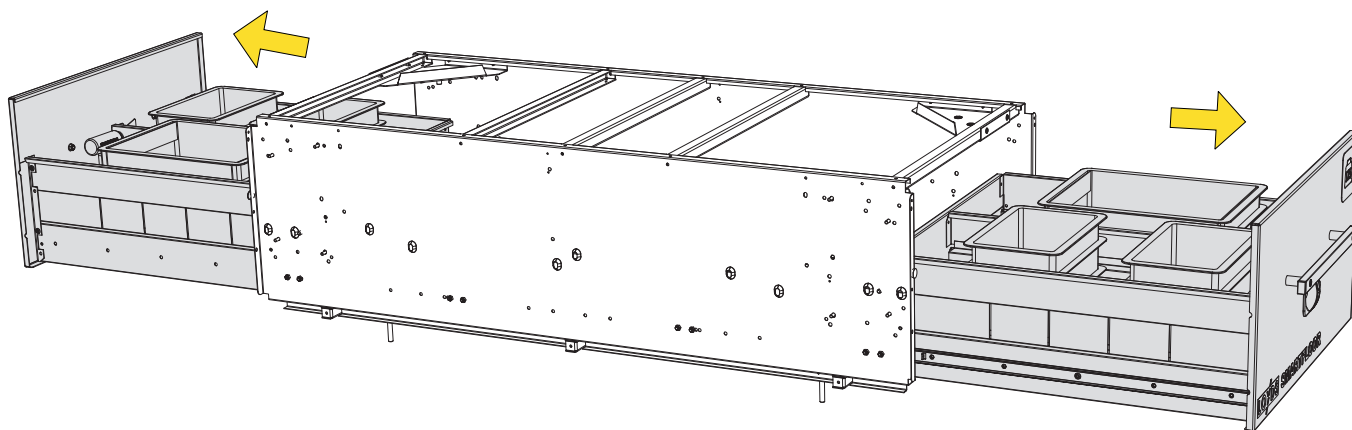

7

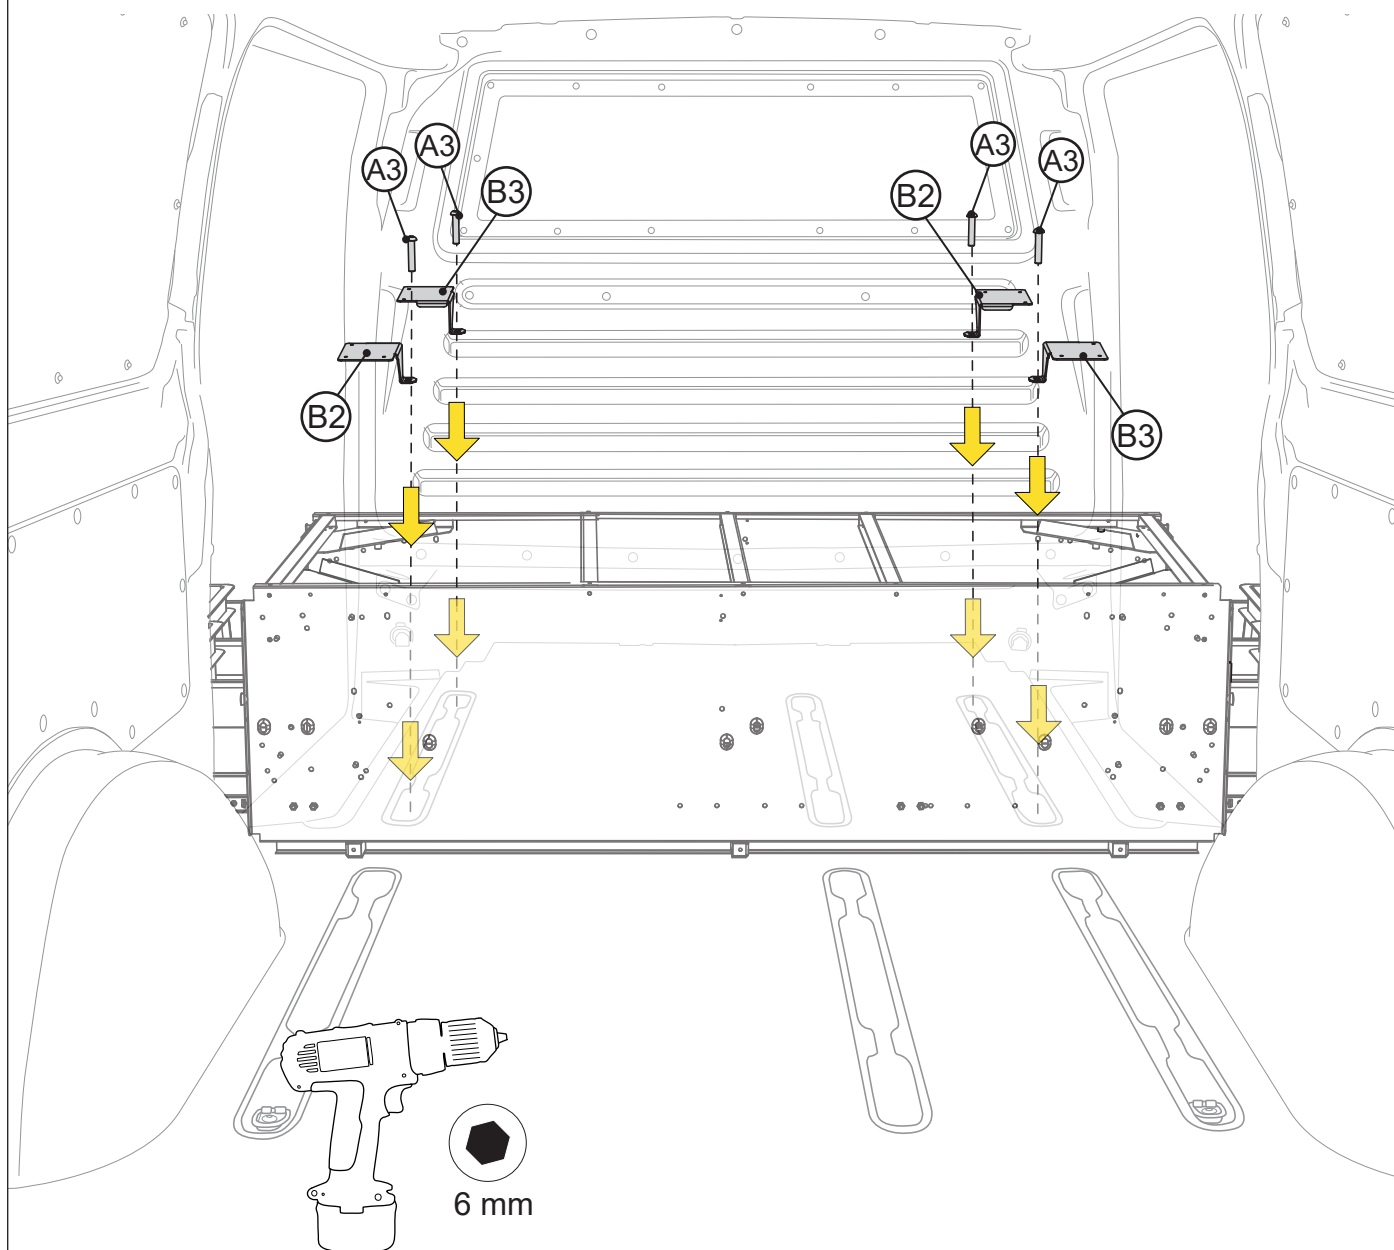



8

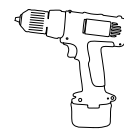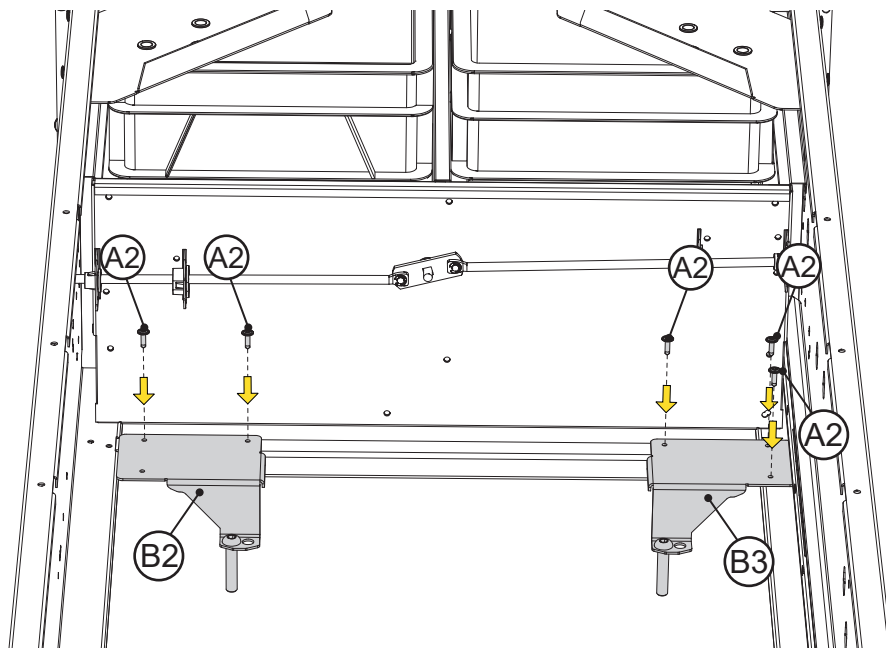

+

PH2


9

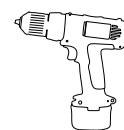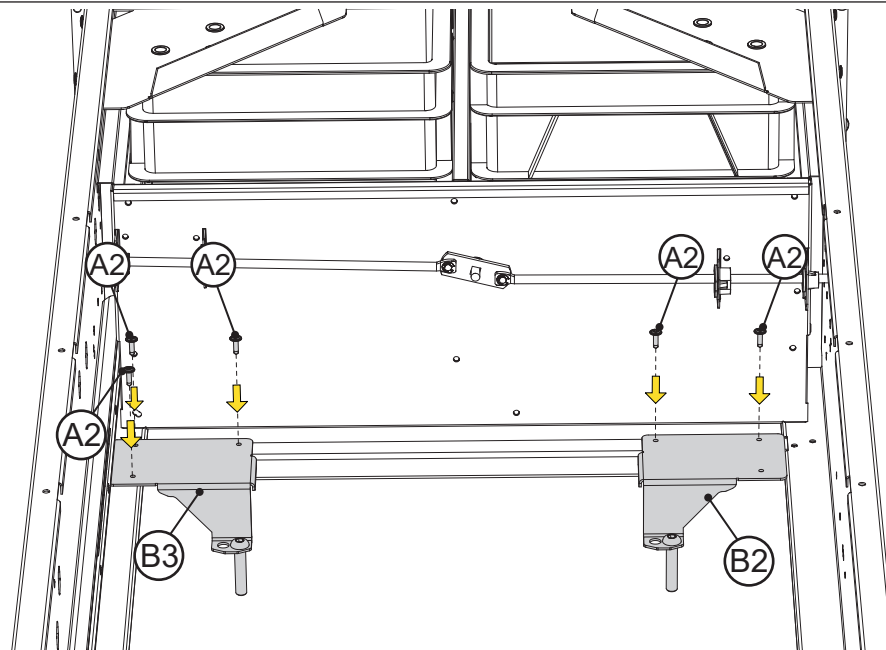


+

PH2


10

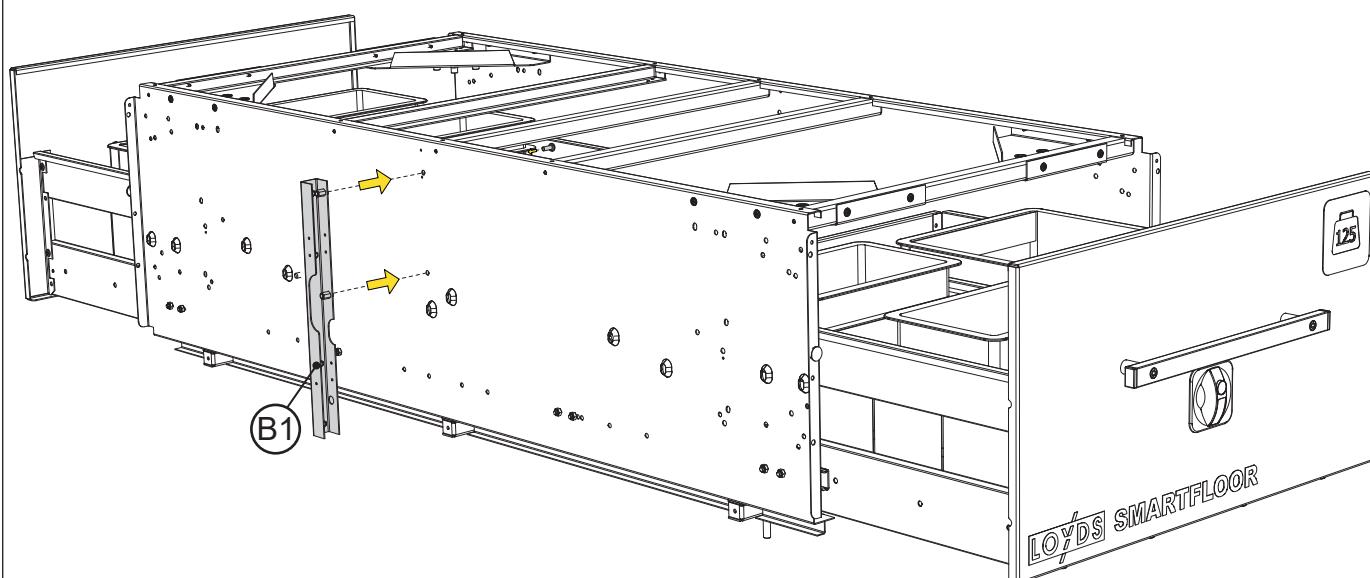


11

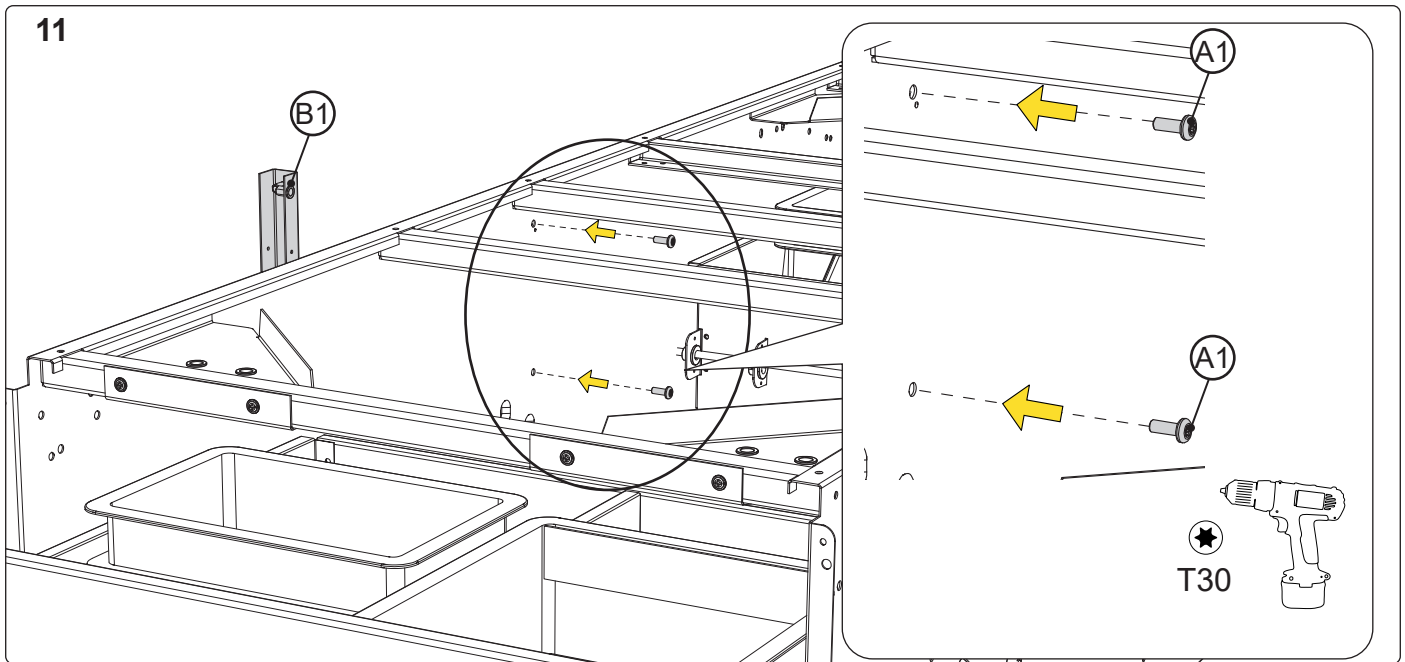


12

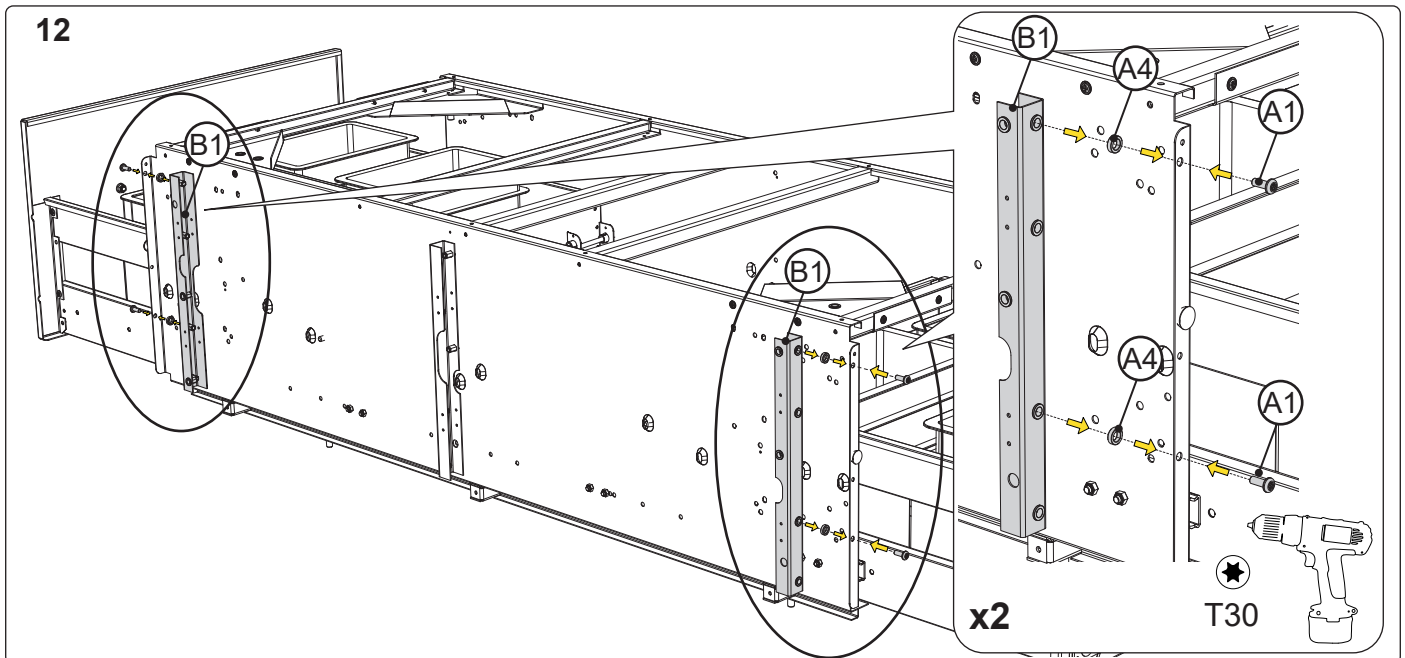


13

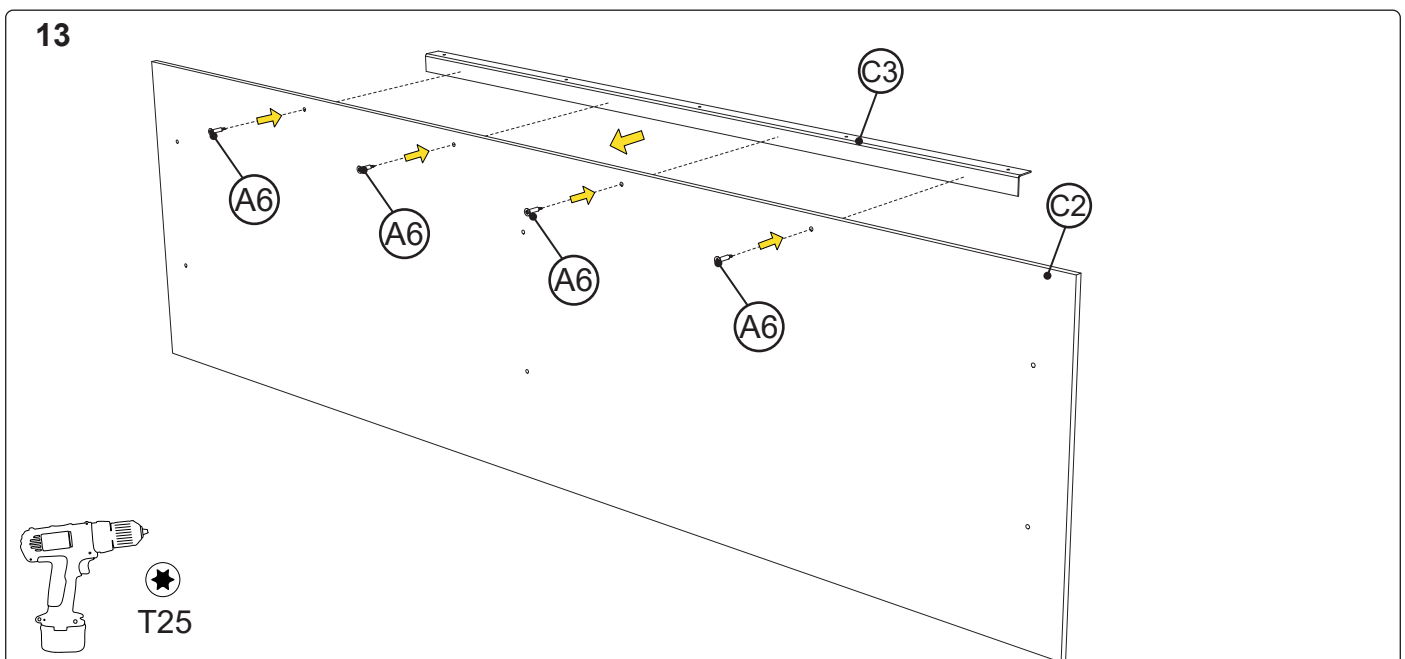


16

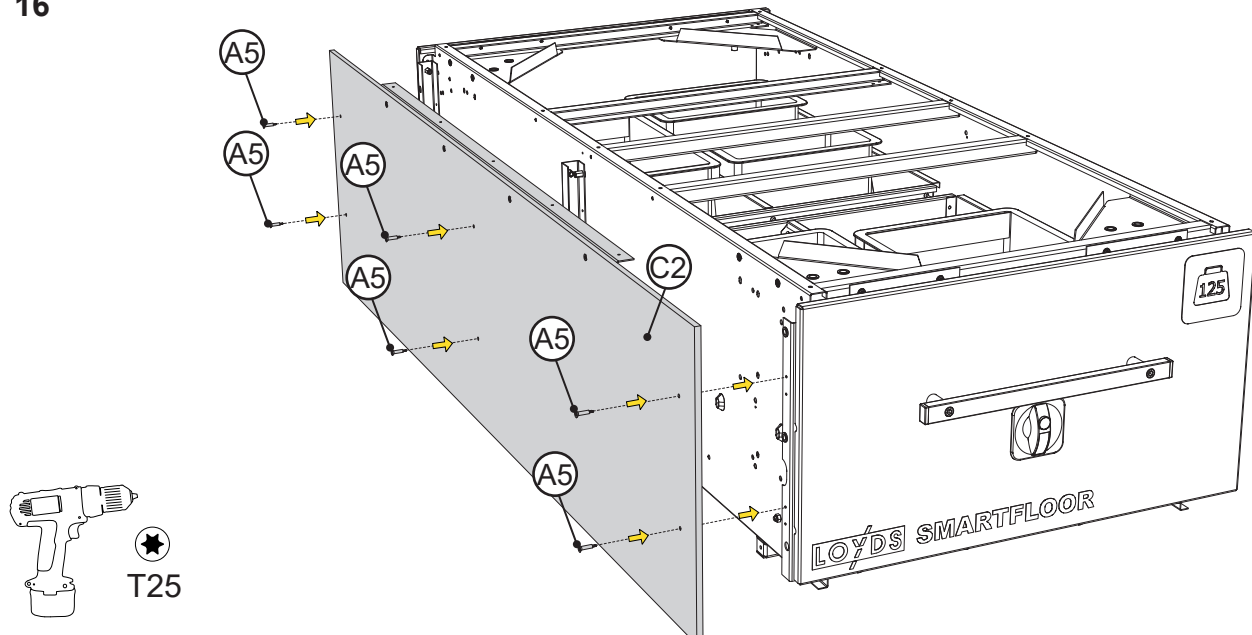



15

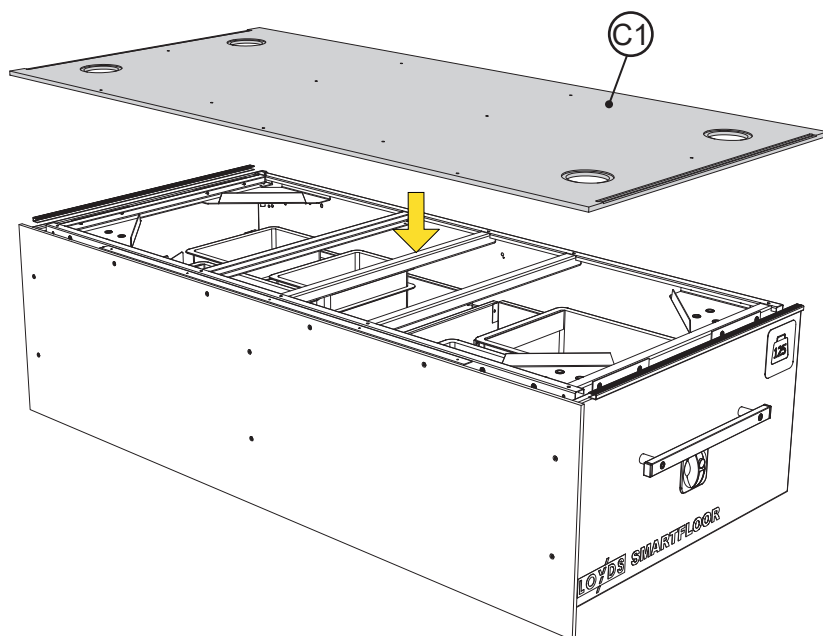

14

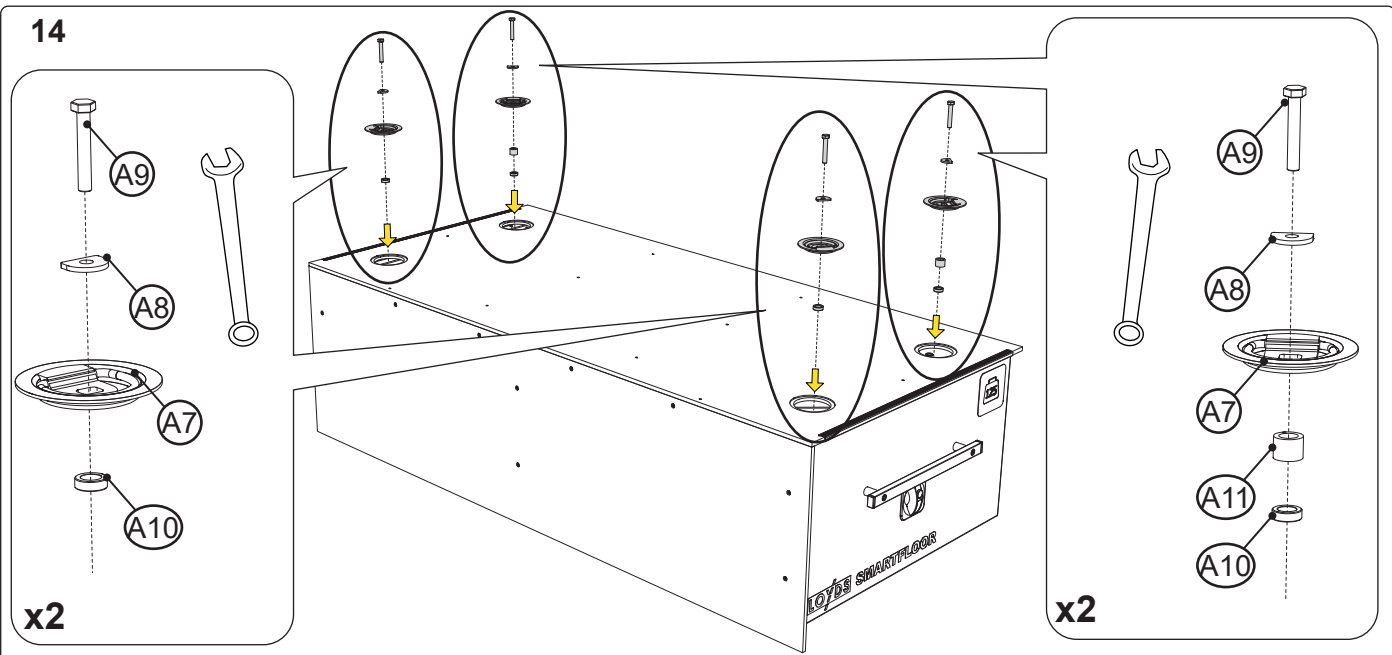


17

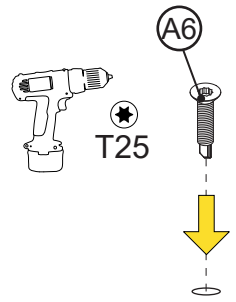
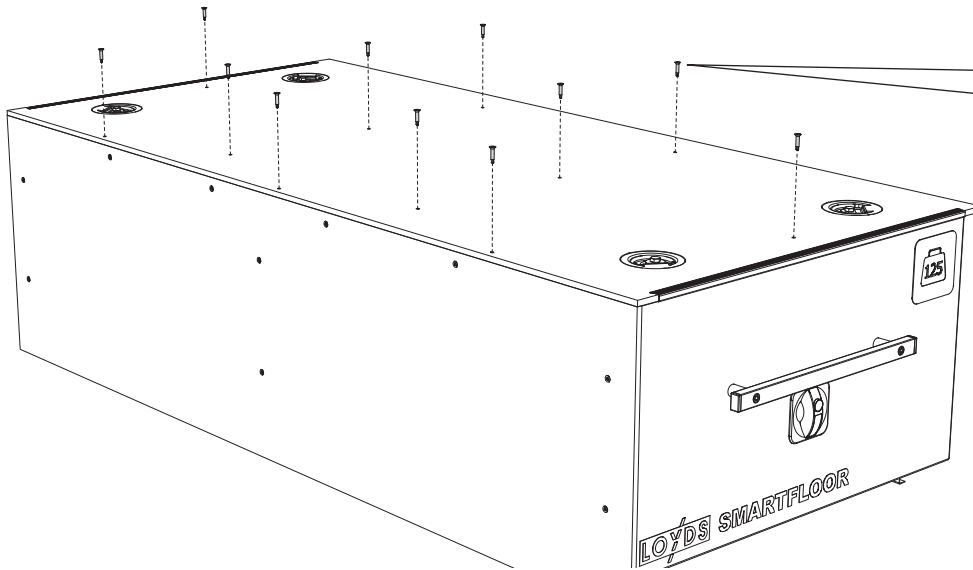


x11

18

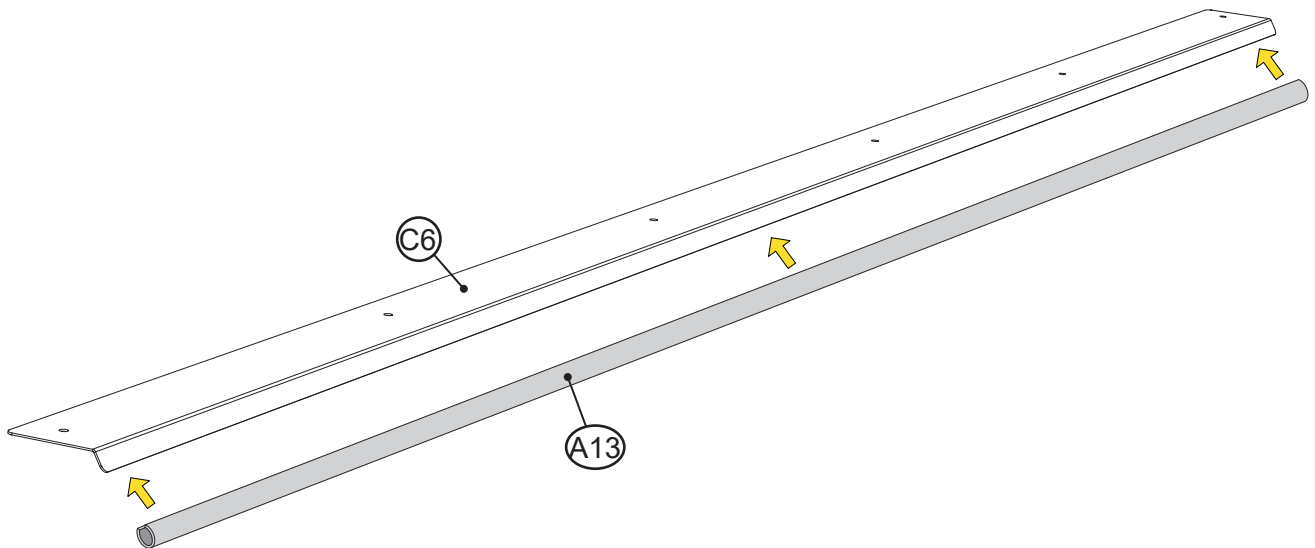

19

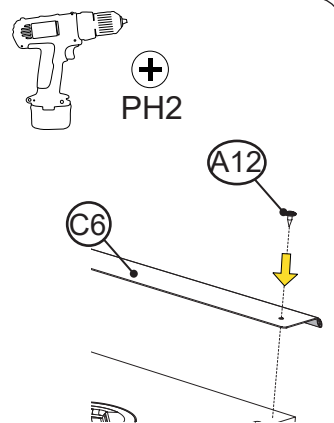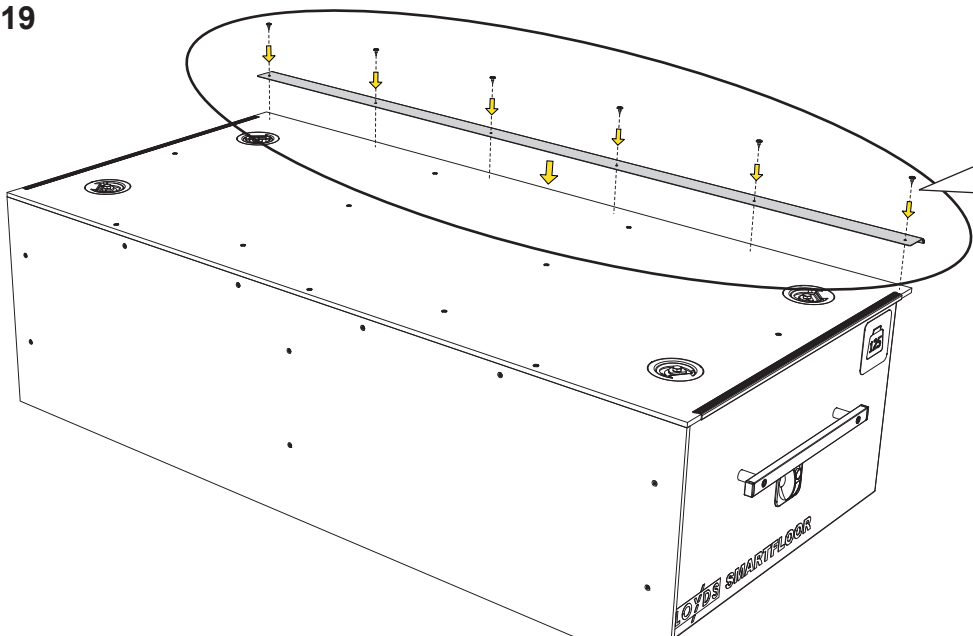

x6

