


VW Caddy 5

Smartfloor Kit Complete Short (W350) 2SLD

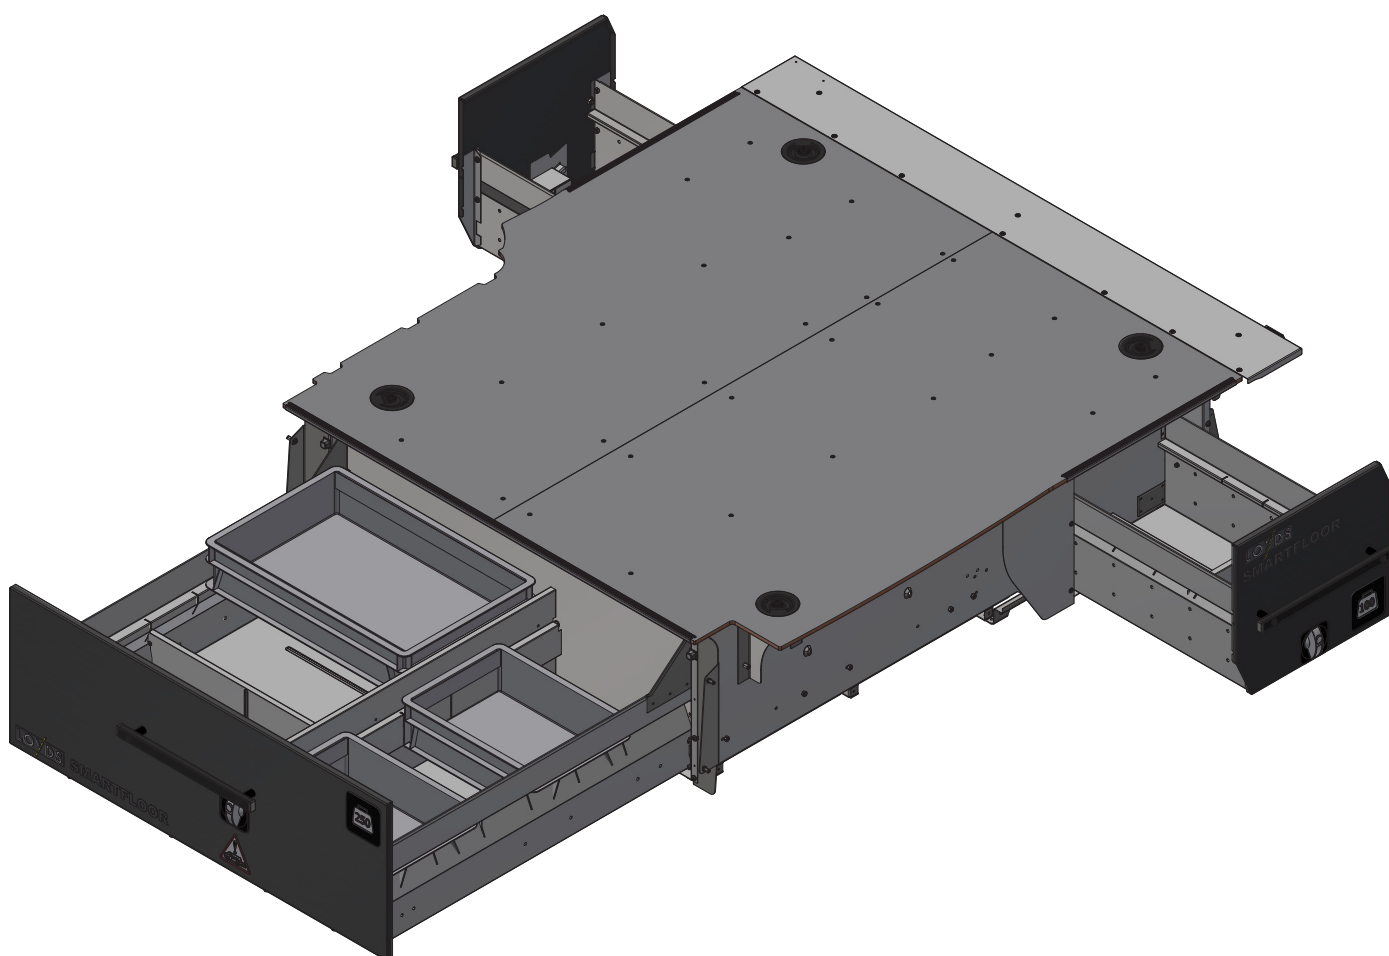

Installation Manual 15028927_A


Loyds Industri AS - 2026-03-17

LOYDS


Revision Record

Rev nr	Date	Page	Picture	Update	New	Deleted steps
A	2026-03-17				X	


Tools

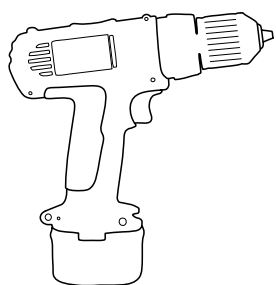

TX20
TX25
TX30



PH2





6 mm




6 mm 



6 mm: 6 NM
8 mm: 25 NM

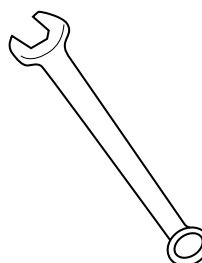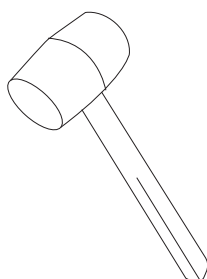

10 mm
13 mm

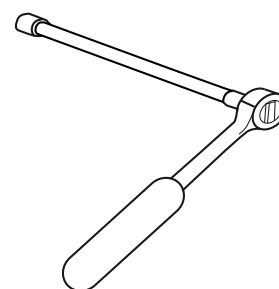


10 mm
13 mm




Use colors when printing this installation manual. / Ved utskrift, bruk farger.

15020670 Kit Complete SF Caddy Short W350 2020 2SLD No

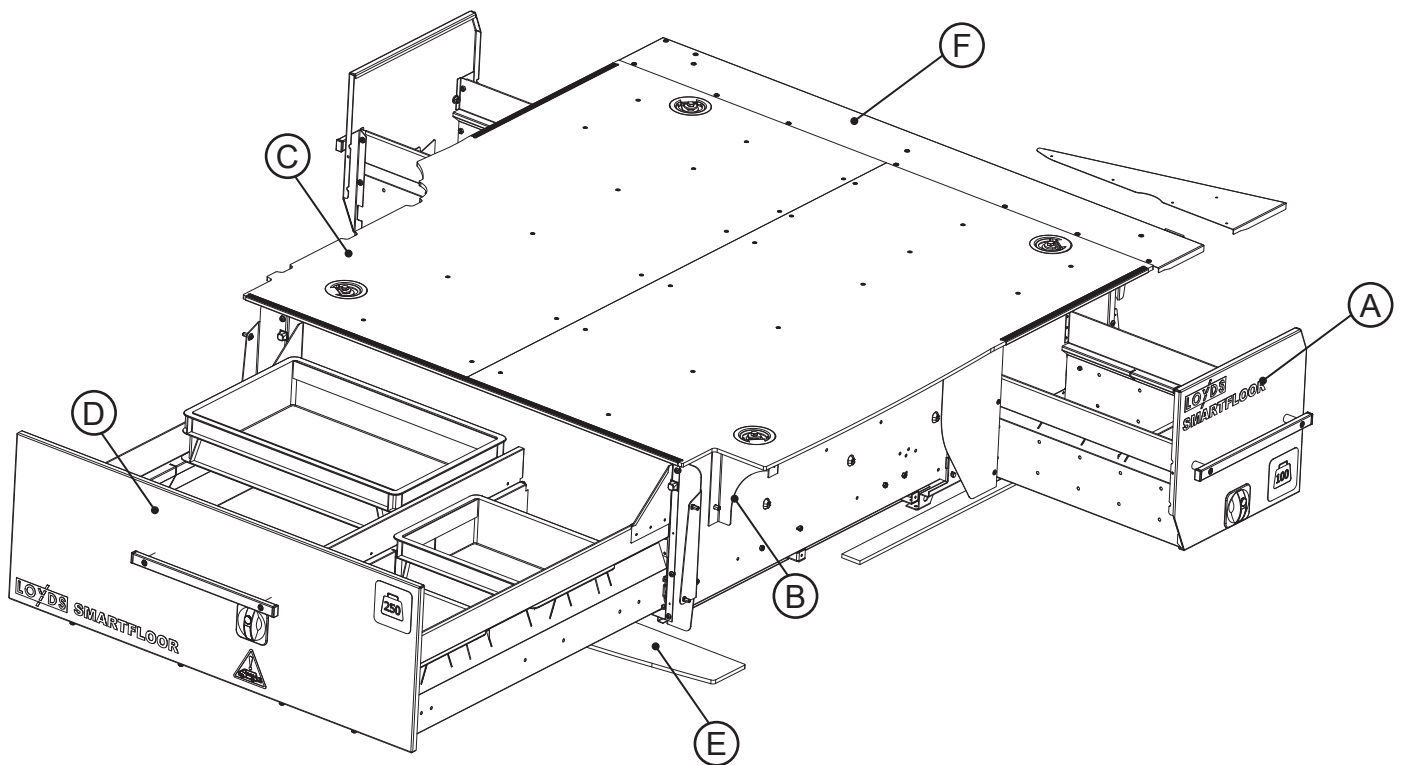


Number	Quantity	Part Number	Definition
A	1	15029460	Front Drawer FD2 W350 600 ASSY
B	1	15020673	Steelbracket Set W35 Caddy 5 Short
C	1	15020666	Floor Set SF W35 Caddy 5 Short
D	1	15029481	RD Drawer W1000xL900 ASSY
E	1	15020657	Floor Spacer Set SF Caddy 5
F	1	15020613	Floor Extender Kit SF Caddy 5 Se

15020673 Steelbracket Set W35 Caddy 5 Short

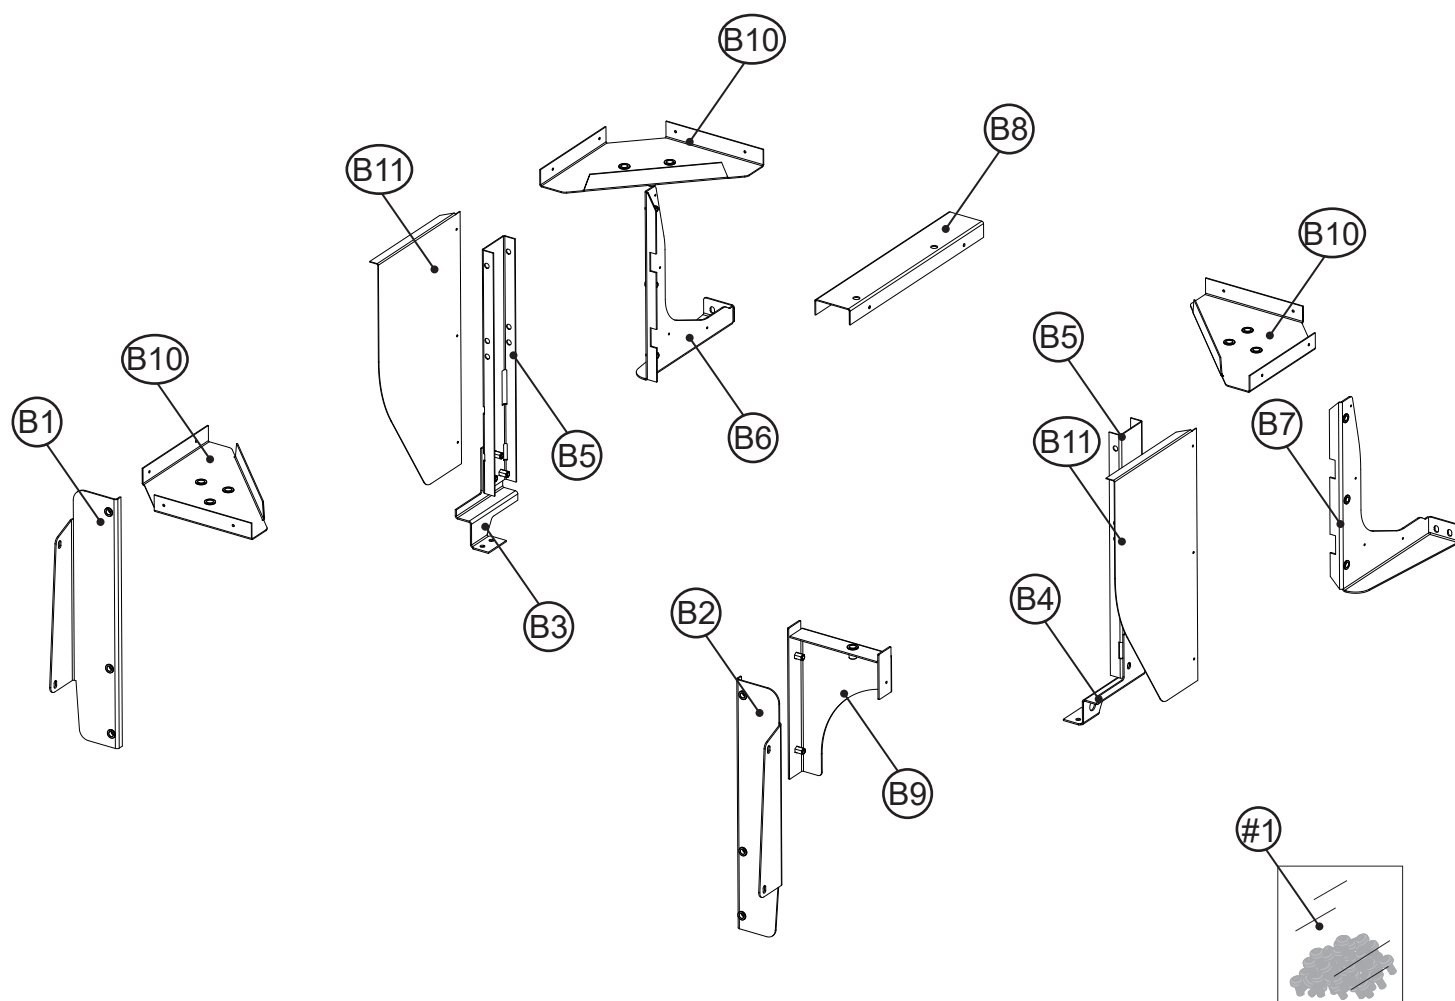


Number	Quantity	Part Number	Definition
B1	1	15018465	Bracket Rear Left SF Caddy ASSY
B2	1	15018464	Bracket Rear Right SF Caddy ASSY
B3	1	15018452	Bracket Middle Left SF Caddy Short
B4	1	15018459	Bracket Middle Right SF Caddy Short
B5	2	15018462	Bracket Distance FD RD Caddy Short ASSY
B6	1	15020084	Bracket Front Left XSep SF Caddy 2020 ASSY
B7	1	15020083	Bracket Front Right XSep SF Caddy 2020 ASSY
B8	1	15020664	Bracket L&R Floor Front Connection W350
B9	1	15018461	Bracket Latchcup Side M8 SF 2020 ASSY
B10	3	15018460	Bracket Latch Inner 8mm ASSY
B11	2	15018455	Cover SLD Rear SF Caddy
#1	1	15020015	Fitting Kit Steelbracket Set Caddy Short 2020

15020666 Floor Set SF W35 Caddy 5 Short

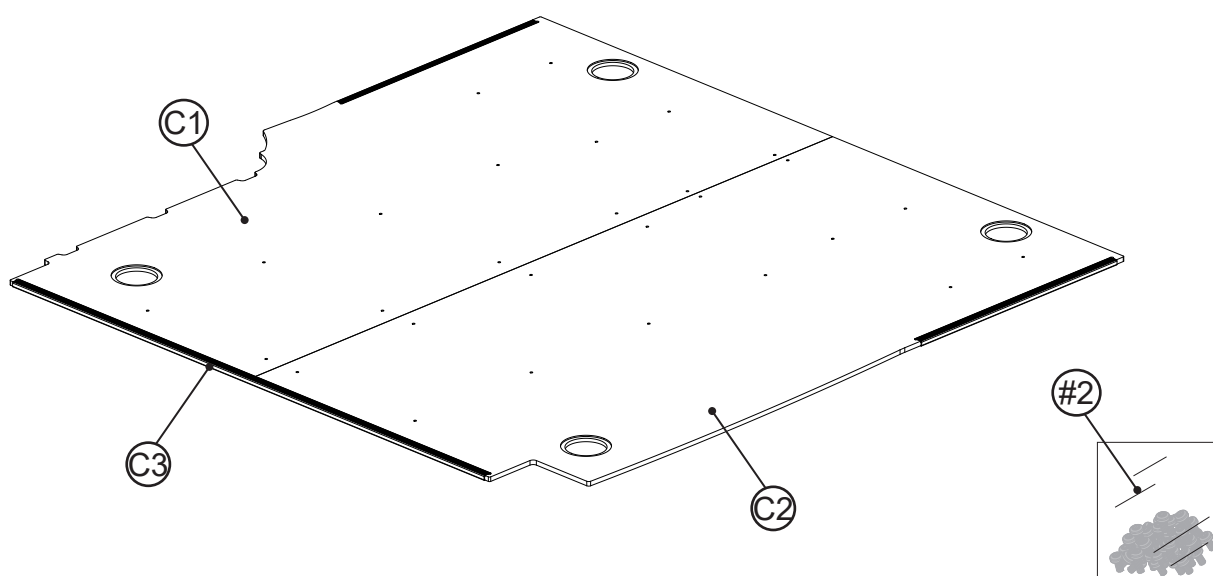


Number	Quantity	Part Number	Definition
C1	1	15020667	Floor Left SF W35 Caddy 5 Short ASSY
C2	1	15020668	Floor Right SF W35 Caddy 5 Short ASSY
C3	1	15020017	U-Profile 9mm L=1197
#2	1	15020665	Fitting Kit Floor Set SF W35 Caddy 5 Short

15020657 Floor Spacer Set SF Caddy 5

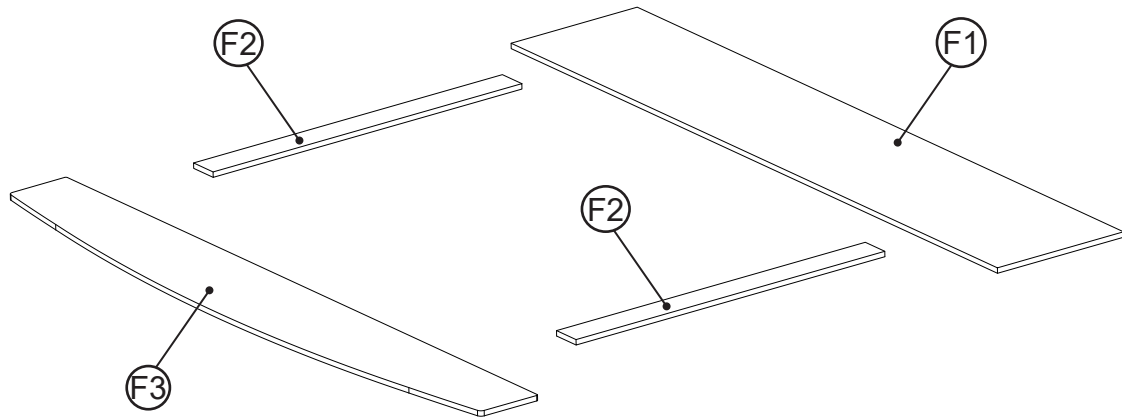


Number	Quantity	Part Number	Definition
F1	1	15020656	Wooden Spacer SF 9mm Front Caddy 5
F2	2	15020639	Wooden Spacer 600x50x9mm
F3	1	15020638	Wooden Spacer SF 9mm Rear Caddy 5

15020613 Floor Extender Kit SF Caddy 5

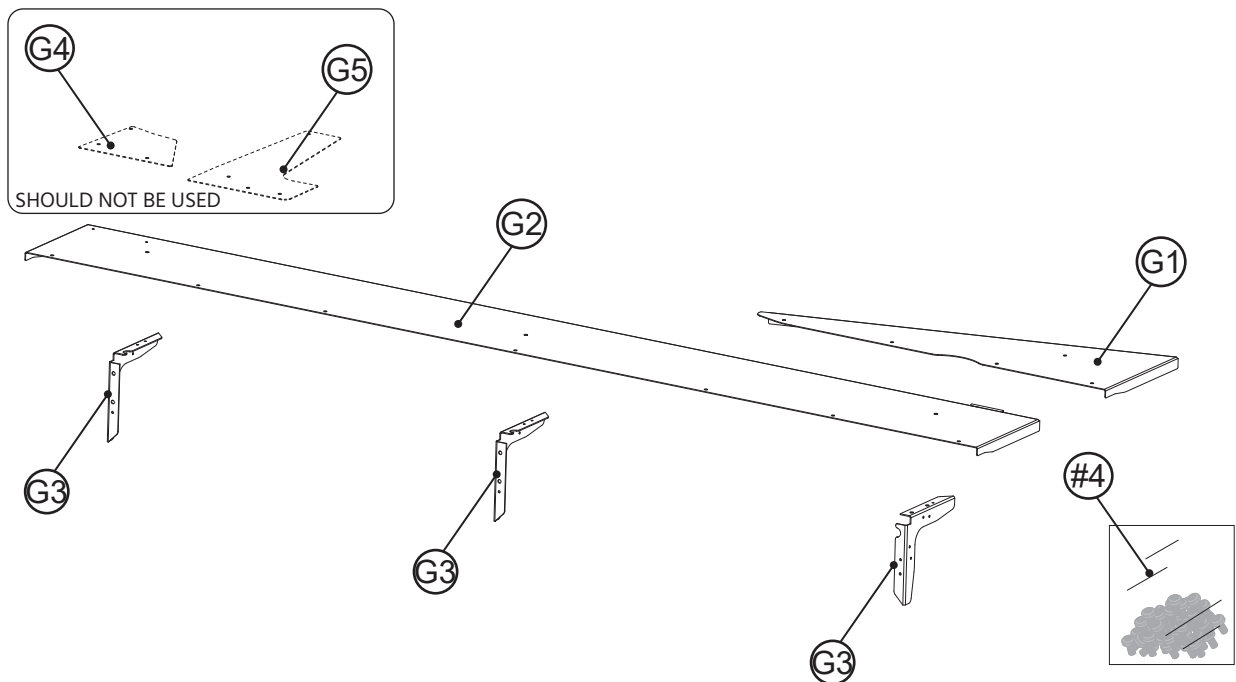


Number	Quantity	Part Number	Definition
G1	1	15020612	Floor Extend SF Asy Loyds Sep Caddy 5
G2	1	15020093	Floor Extend Orig Sep Caddy 5 2021 2SLD
G3	3	15020092	Bracket Floor Extend 120mm
G4	1	15018470	Bracket Extend Orig Sep Caddy 1SLD Add
G5	1	15020614	Bracket Extend Loyds Sep Caddy 5 1SLD
#4	1	15020611	Fitting Kit Floor Extend Set Caddy 5

15010236 Handle Assy

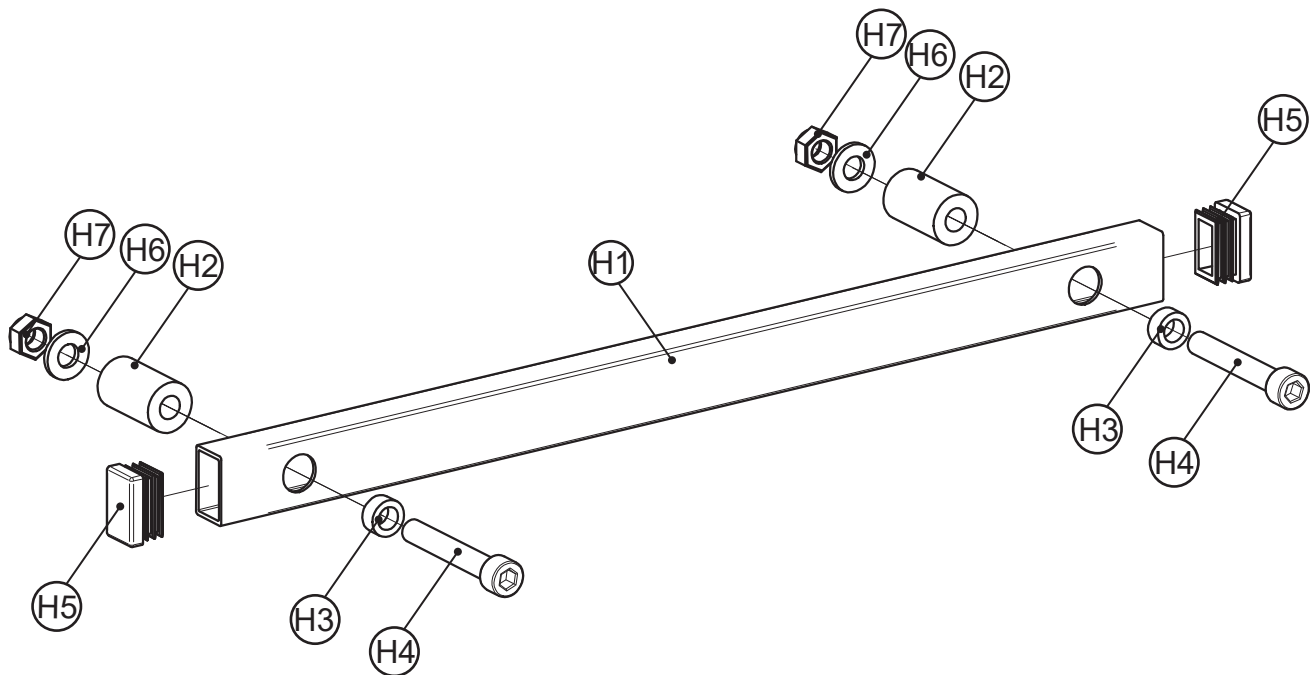


Number		Quantity	Part Number	Definition
H	H1	2	15009441	Handle Tube 25x15x286
	H2	2	15009443	Spacer Ø8,3x18x30 Nylon Black
	H3	2	15009443	Spacer Ø8,1x13x6mm Galv
	H4	2	15009444	Screw M8x50 Cylinderh Hex
	H5	2	15009438	End sleeve Black
	H6	2	8,4x17x2	M8 Washer, DIN 125
	H7	2	8 NMU	Mutter M8 Nyloc DIN985

#1 15020015 Fitting Kit Steelbracket Set Caddy Short 2020

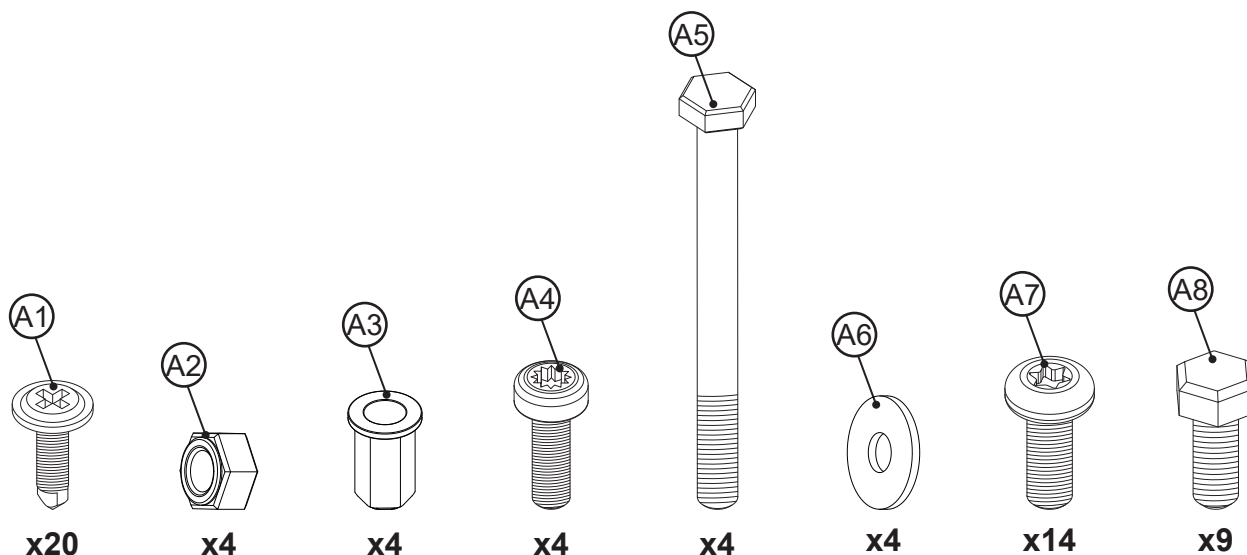


A1	4,2x16 FLS Platescrew selfdrilling E45759 Black
A2	6 NMU M6 Self locking nut, DIN 985-8
A3	15005027 M5 Popnut Hex-body
A4	15004443 M5x16 TX20 pan (DIN 7985)
A5	6x70 6K delgjenget Skrue elzn
A6	5,3x15x1,2 Stoppskive, syrefast
A7	15003551 M6x16 TX30 pan (DIN 7985)
A8	6x16 6k M6 Bolt, DIN 933

#2 15020665 Fitting Kit Floor Set SF W35 Caddy 5 Short

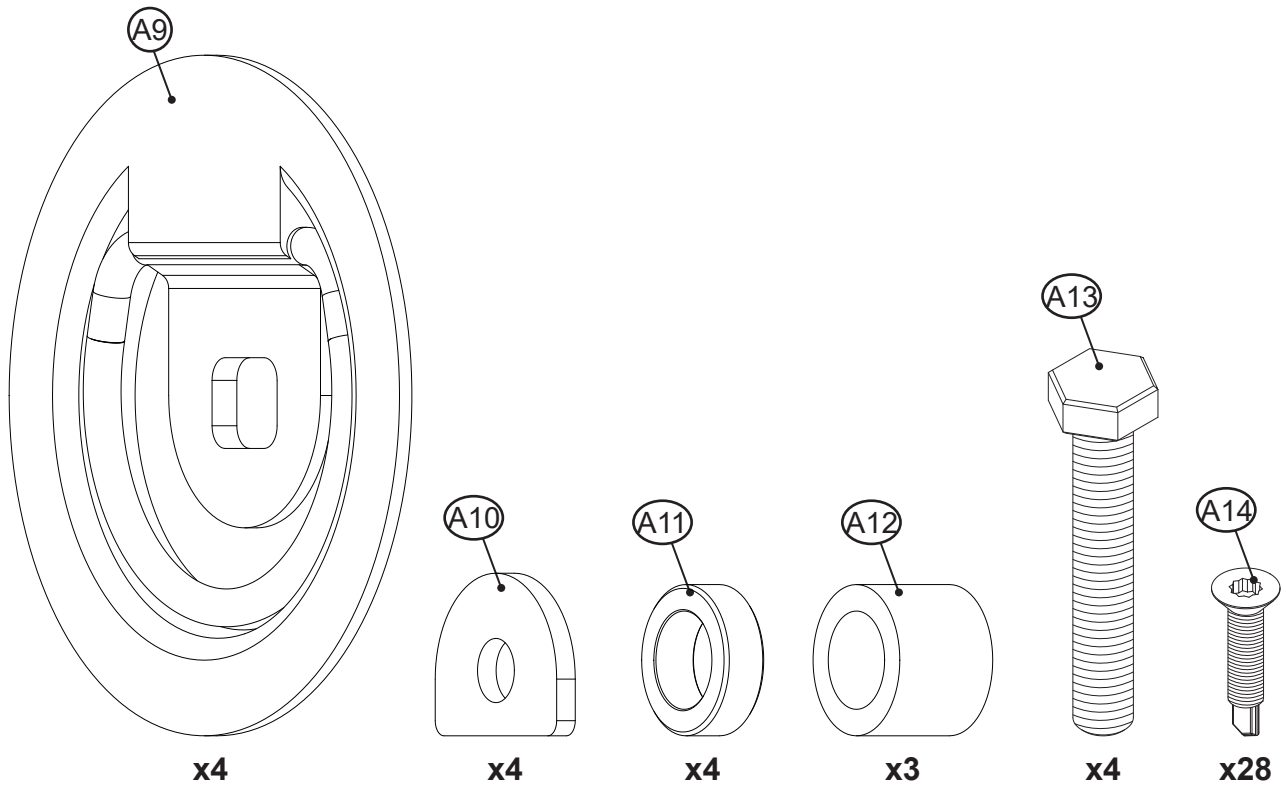


A9	15005497 Latch Cup Black Ø90 Ø12x15 1000Kp
A10	15005884 Washer Latchcup for Ø8
A11	13x20x6,4 Spacer, U-709
A12	15001584 Distansehylse D20 d13 h15
A13	15004713 M8x50 screw, 6K DIN 933 Black, ElZn+Cr3
A14	15016947 Screw 4,8x25 Selfdrill Counters Torx Elz

1

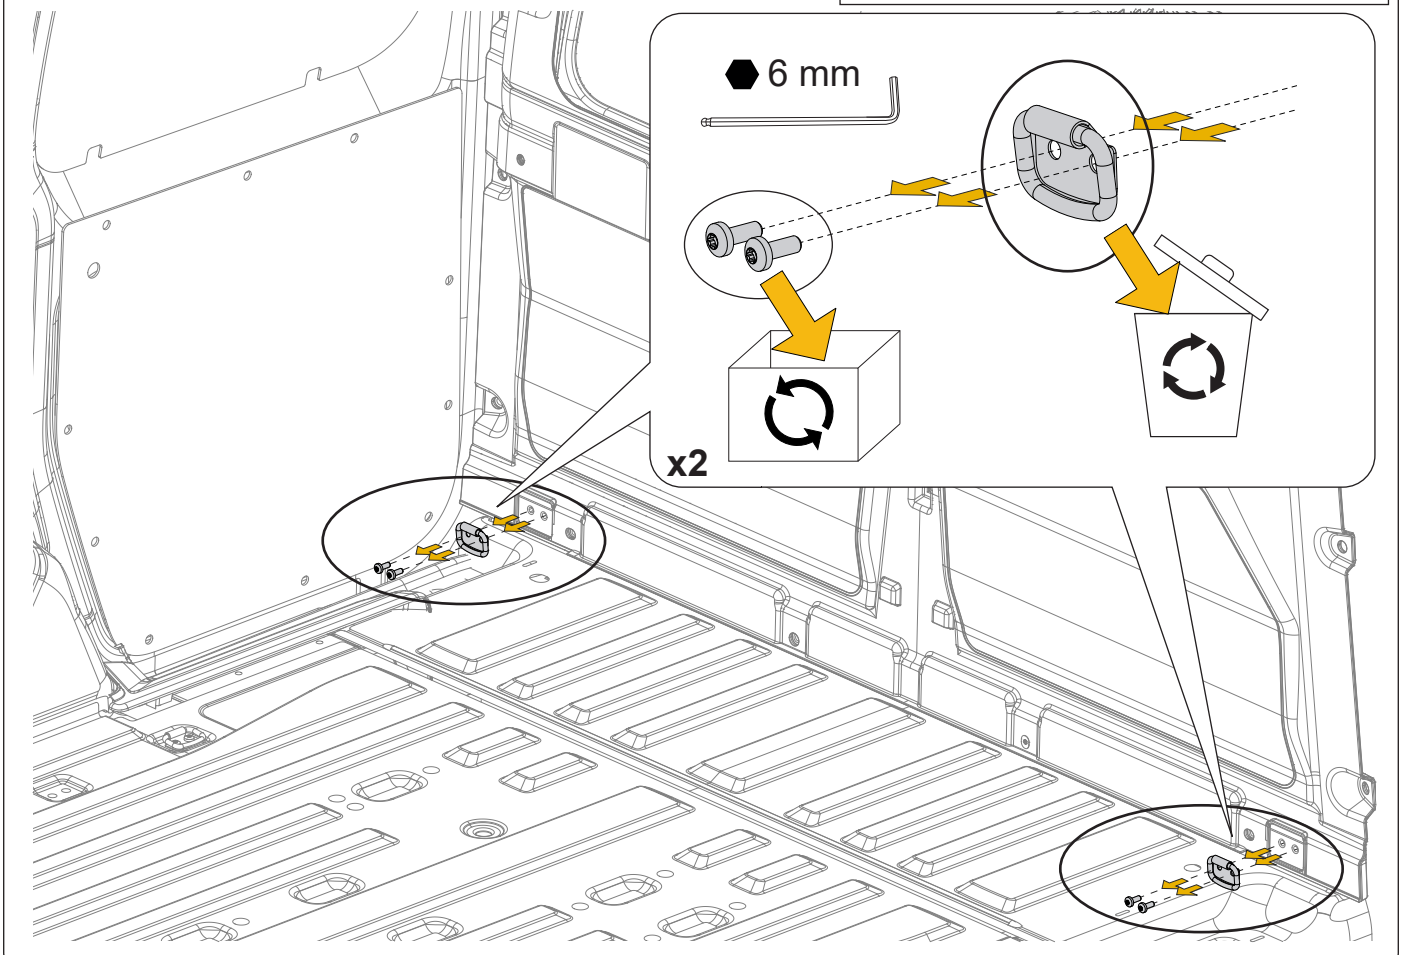
FOR CARS **WITHOUT** WOODEN FLOOR

2

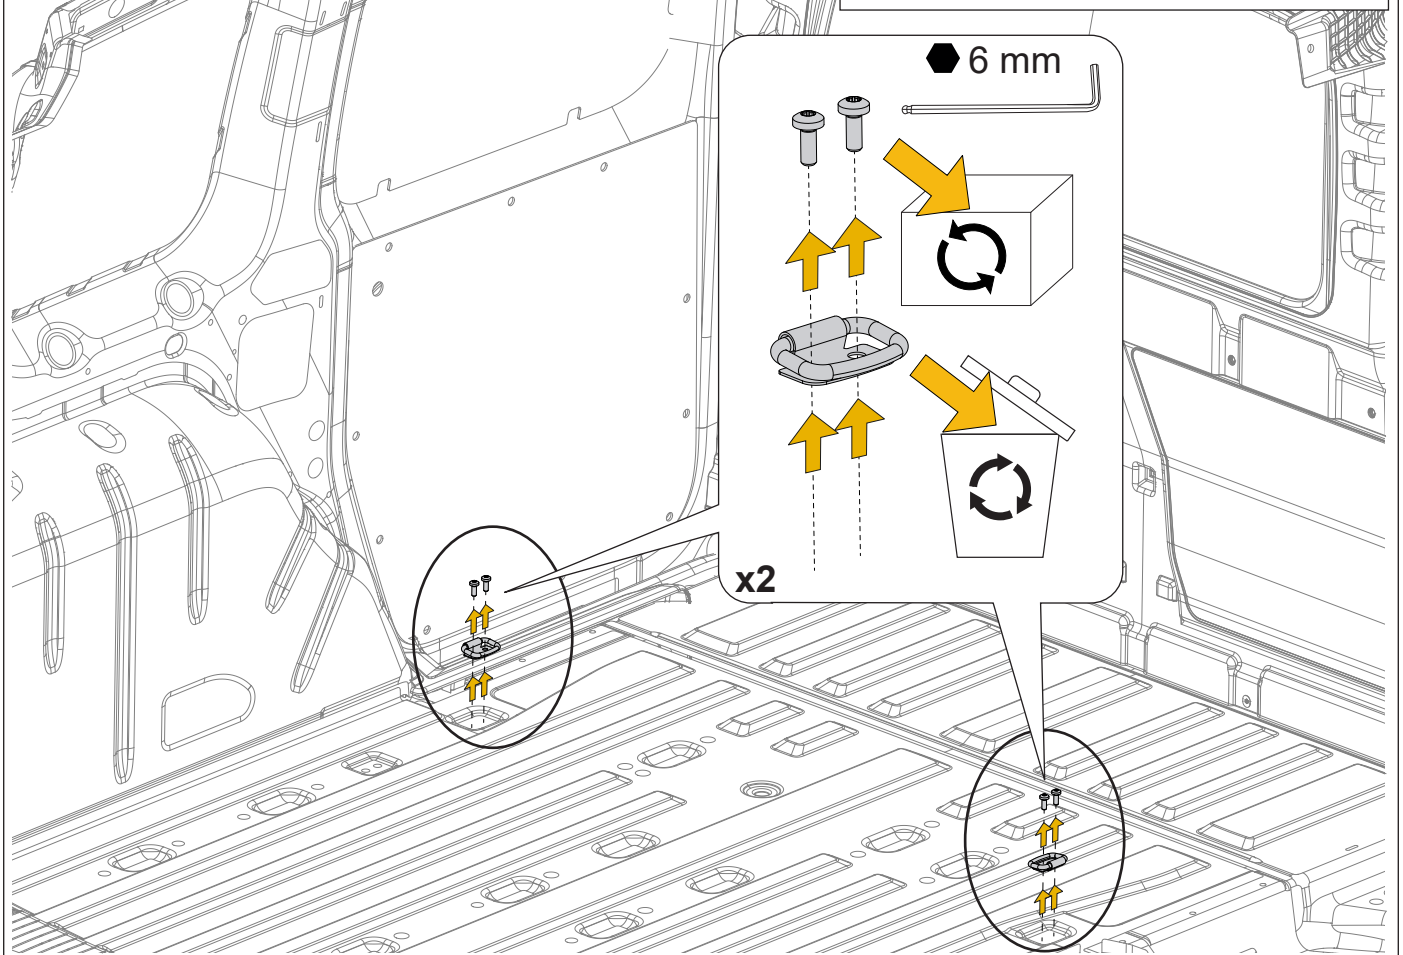FOR CARS **WITHOUT** WOODEN FLOOR


3

FOR CARS **WITHOUT** WOODEN FLOOR

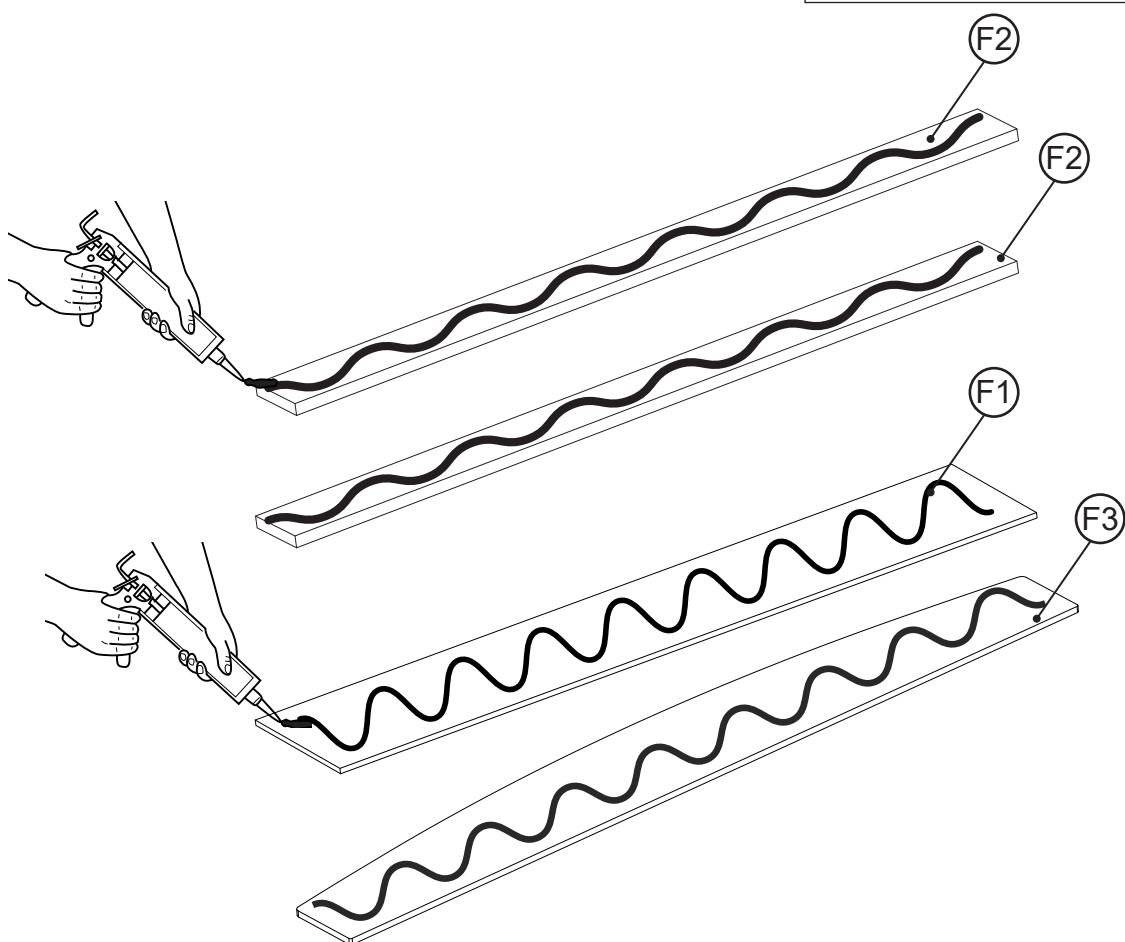


4


FOR CARS **WITHOUT** WOODEN FLOOR

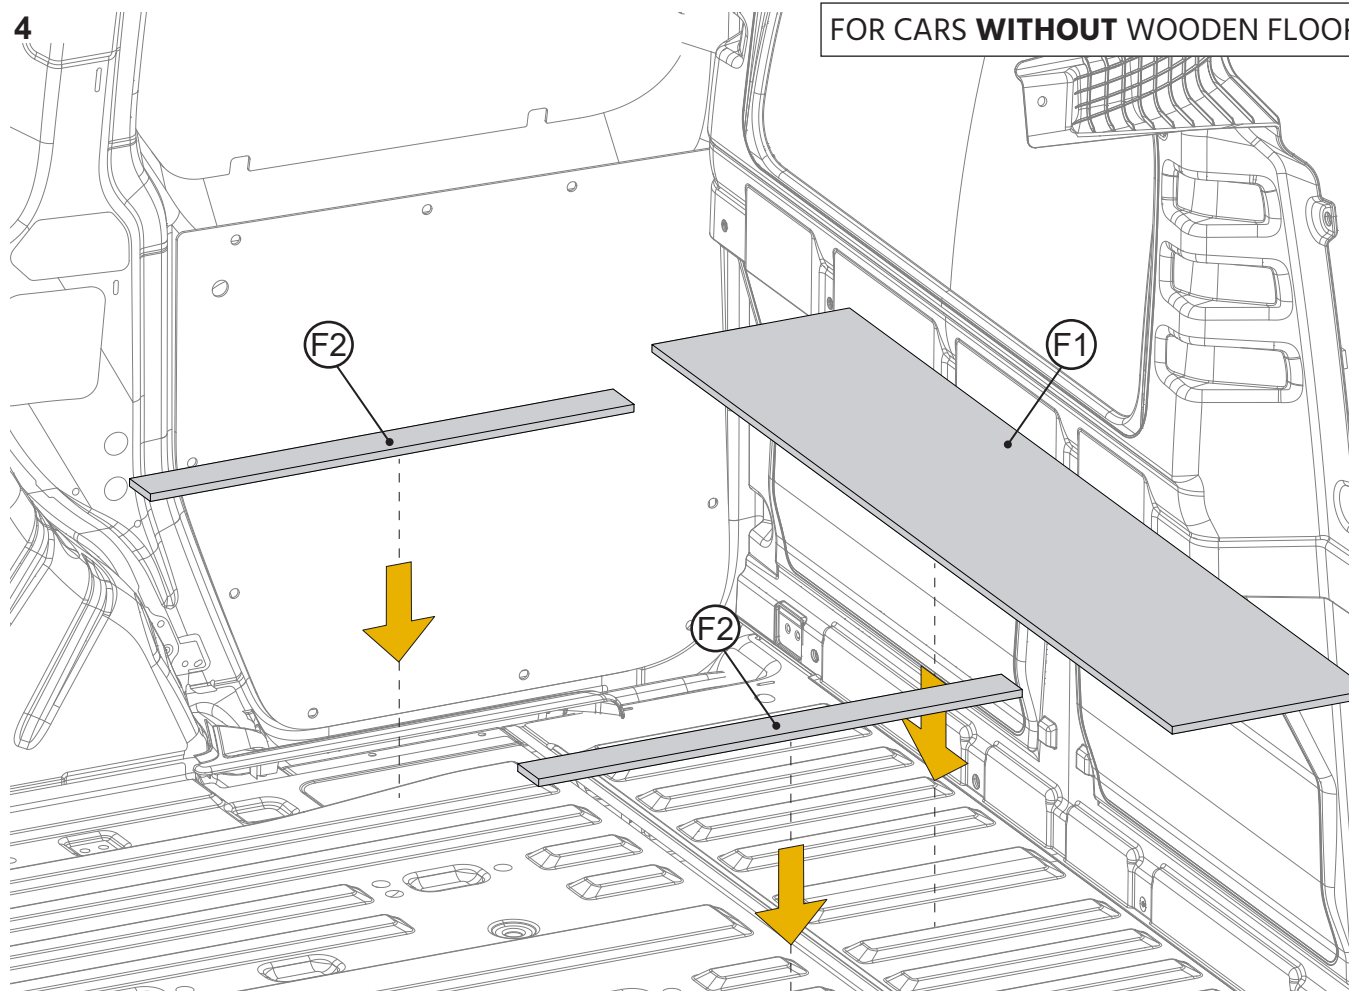


5

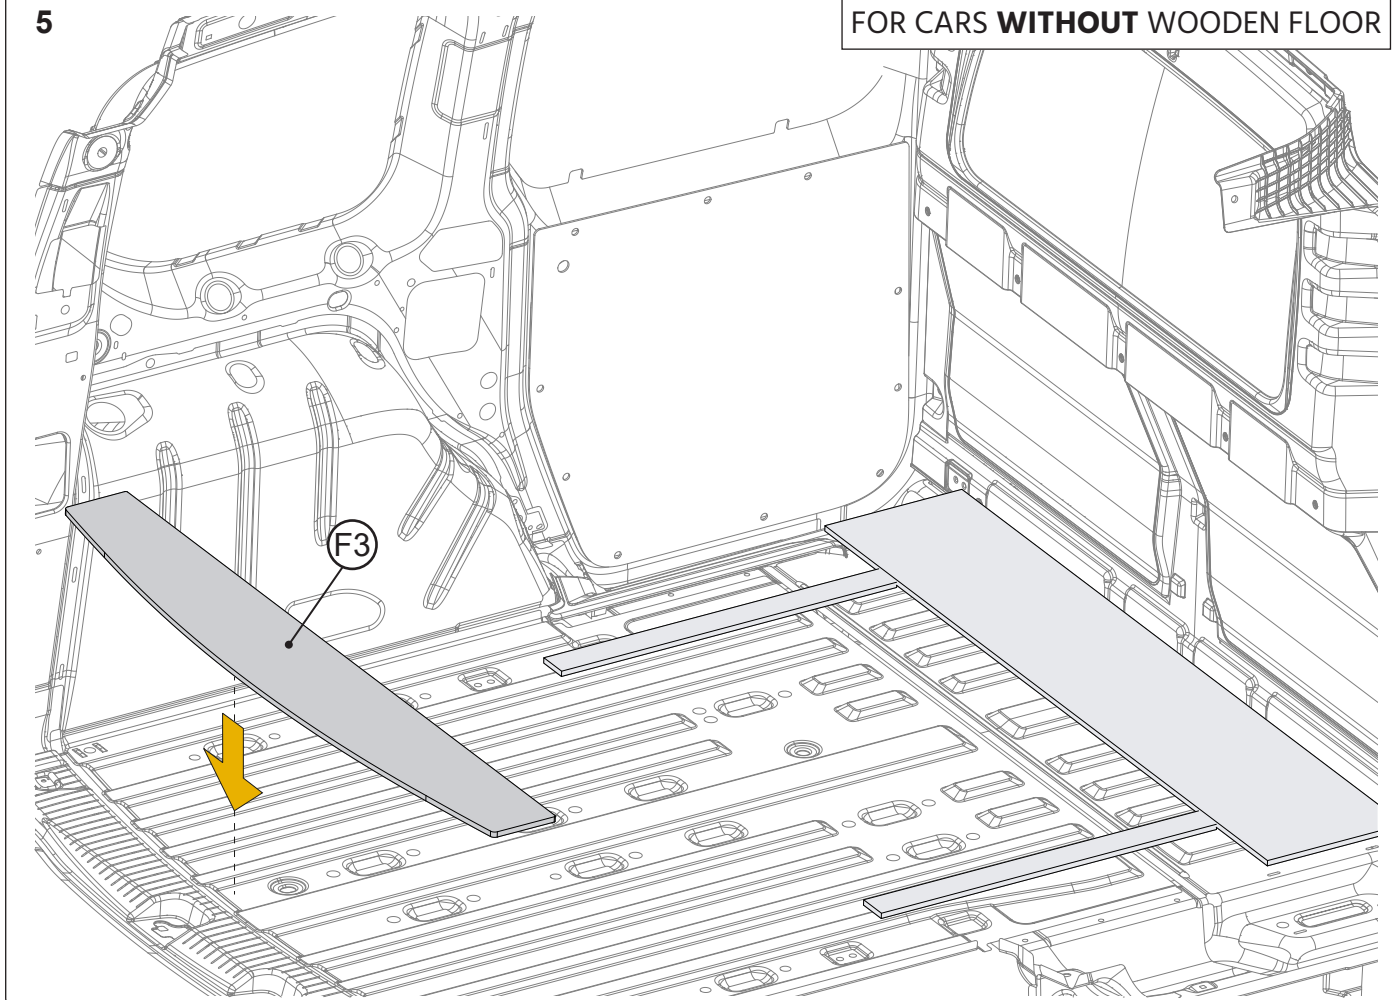FOR CARS **WITHOUT** WOODEN FLOOR


6

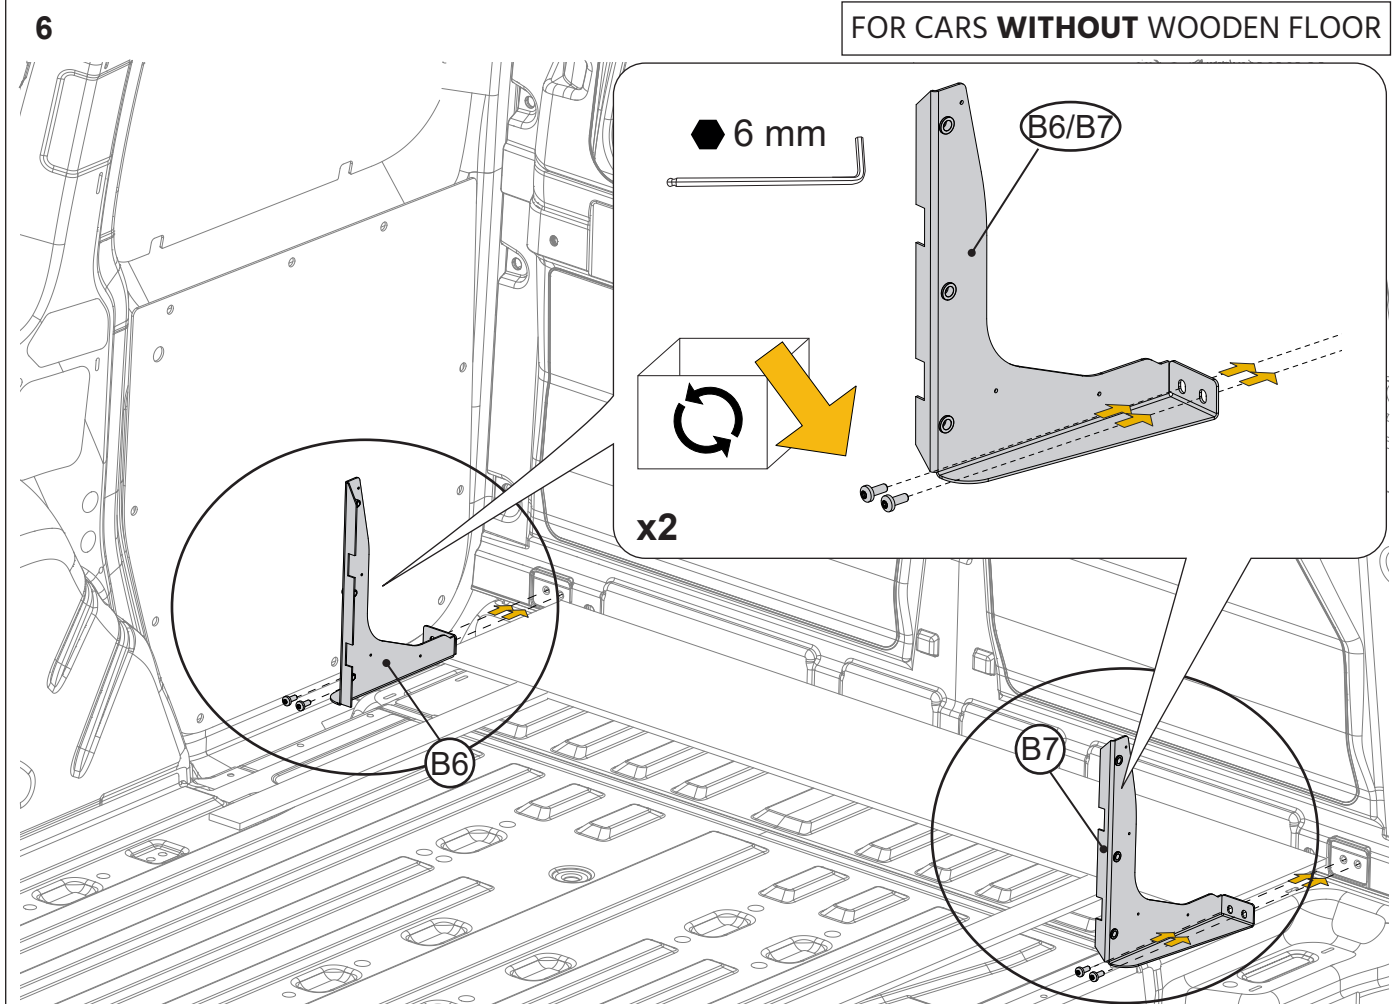FOR CARS **WITHOUT** WOODEN FLOOR

7

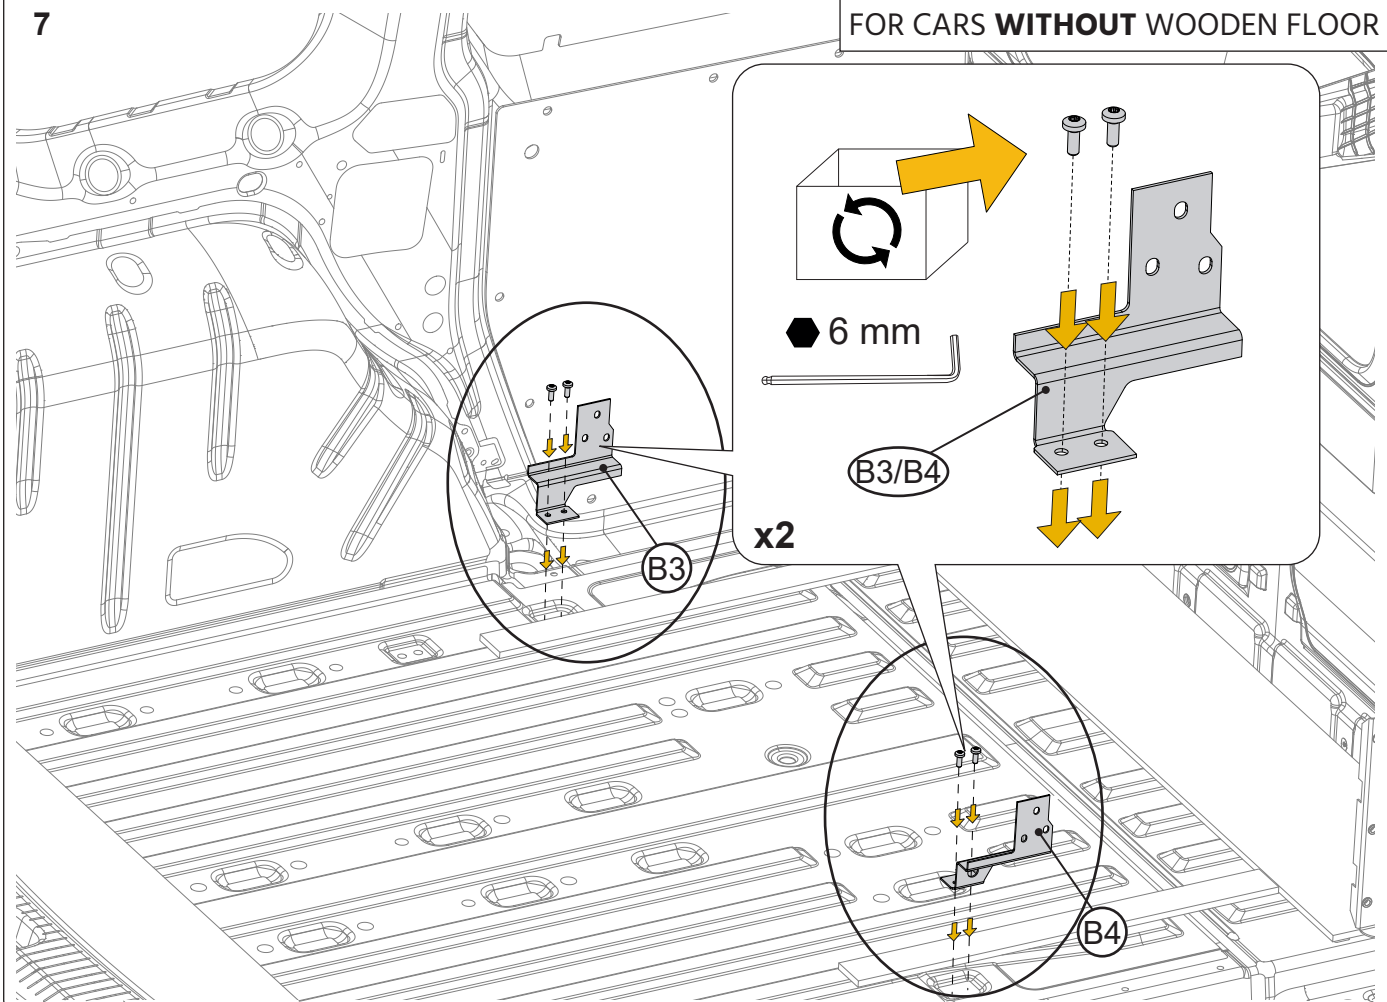
FOR CARS **WITHOUT** WOODEN FLOOR

8

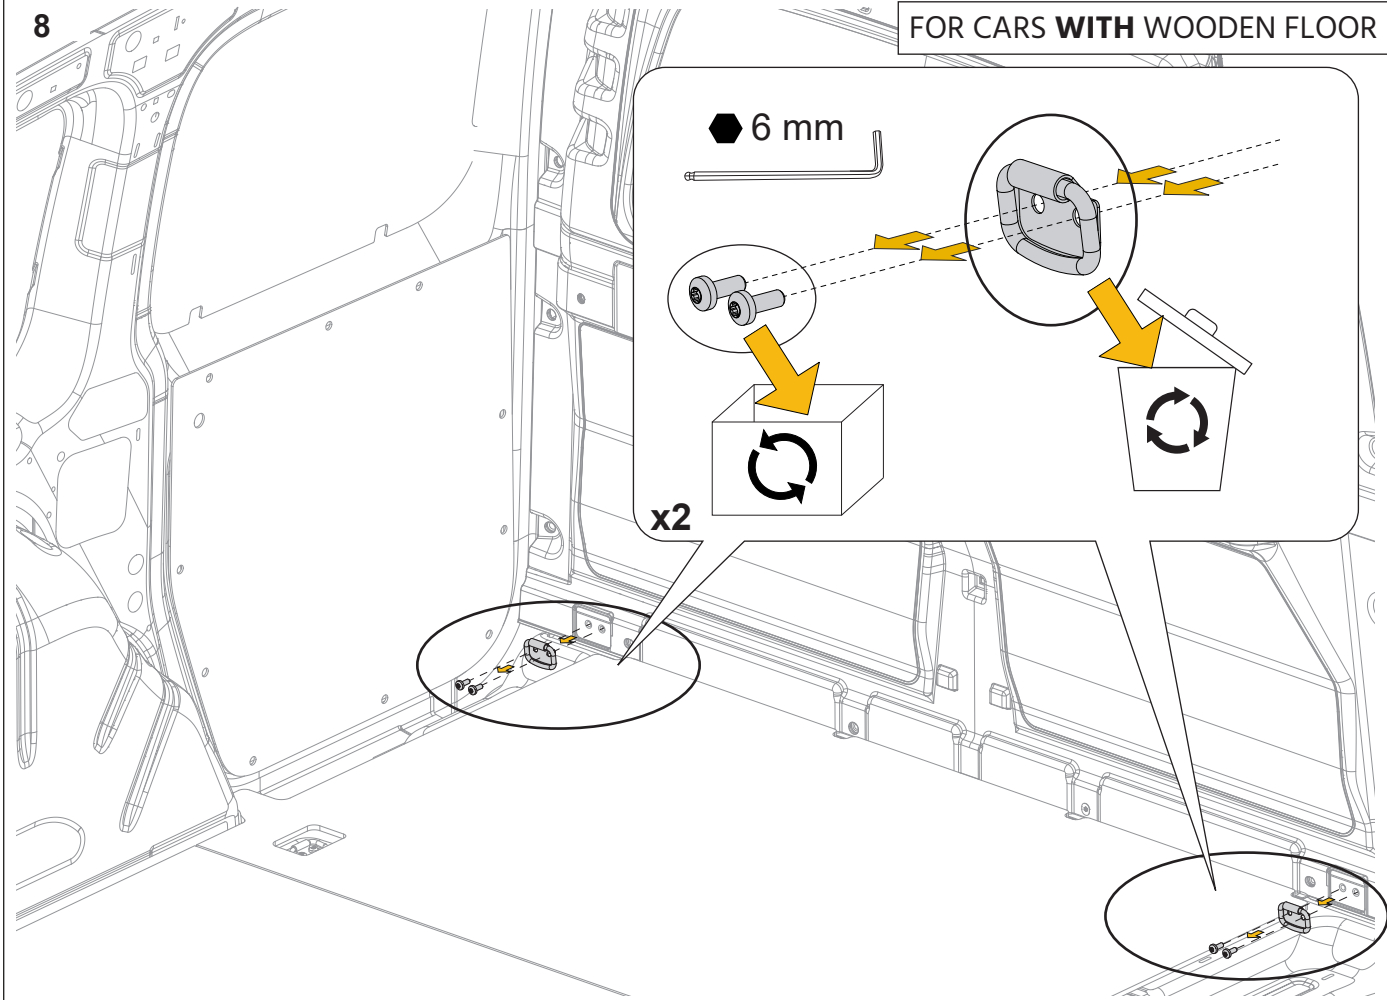FOR CARS **WITH** WOODEN FLOOR


9

FOR CARS **WITH** WOODEN FLOOR

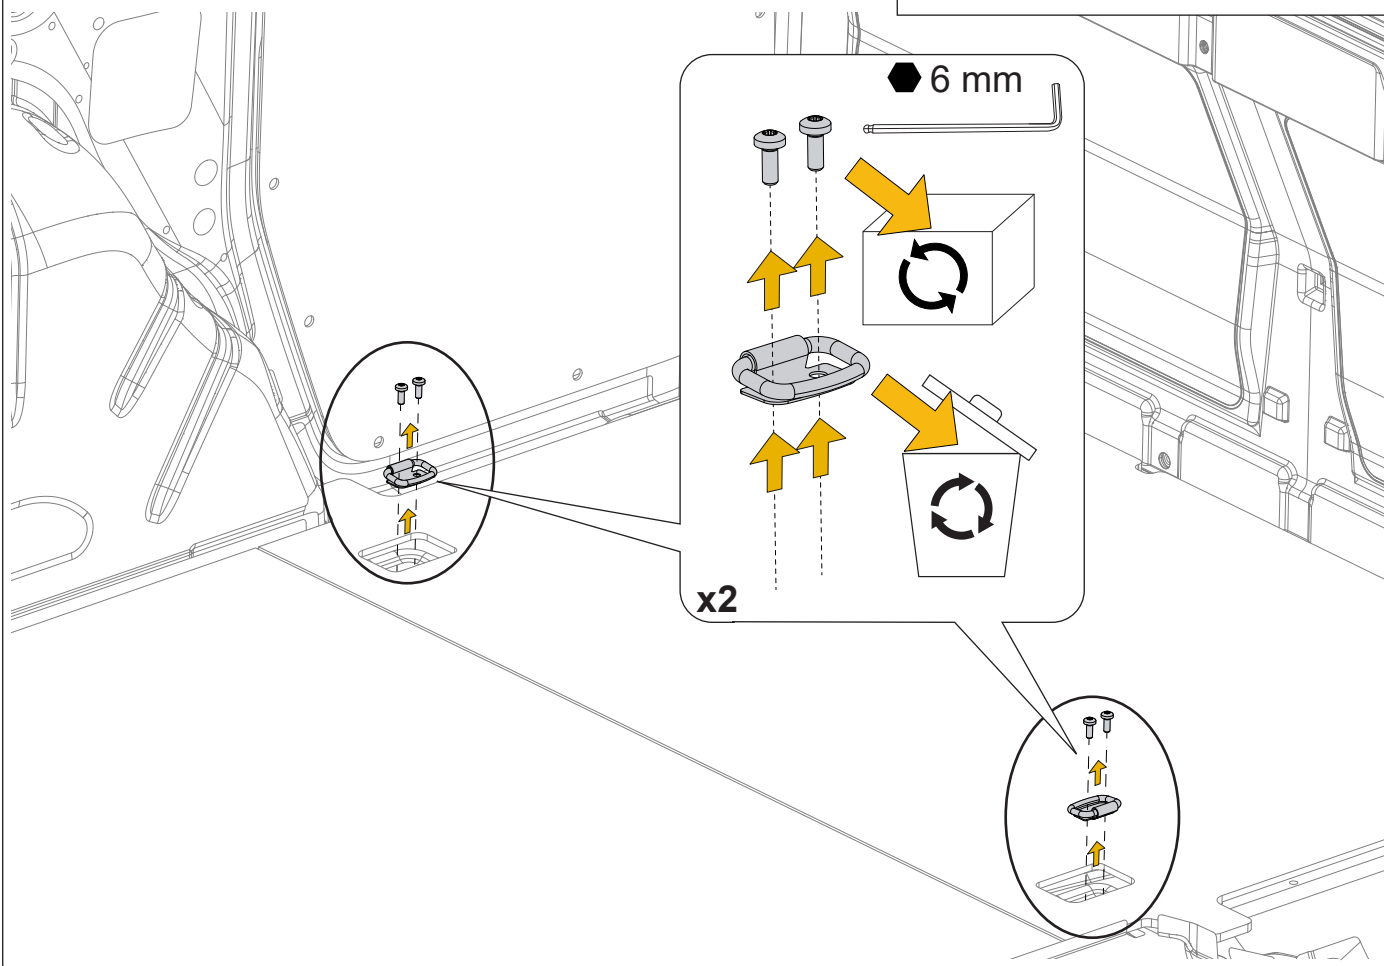


10

FOR CARS **WITH** WOODEN FLOOR

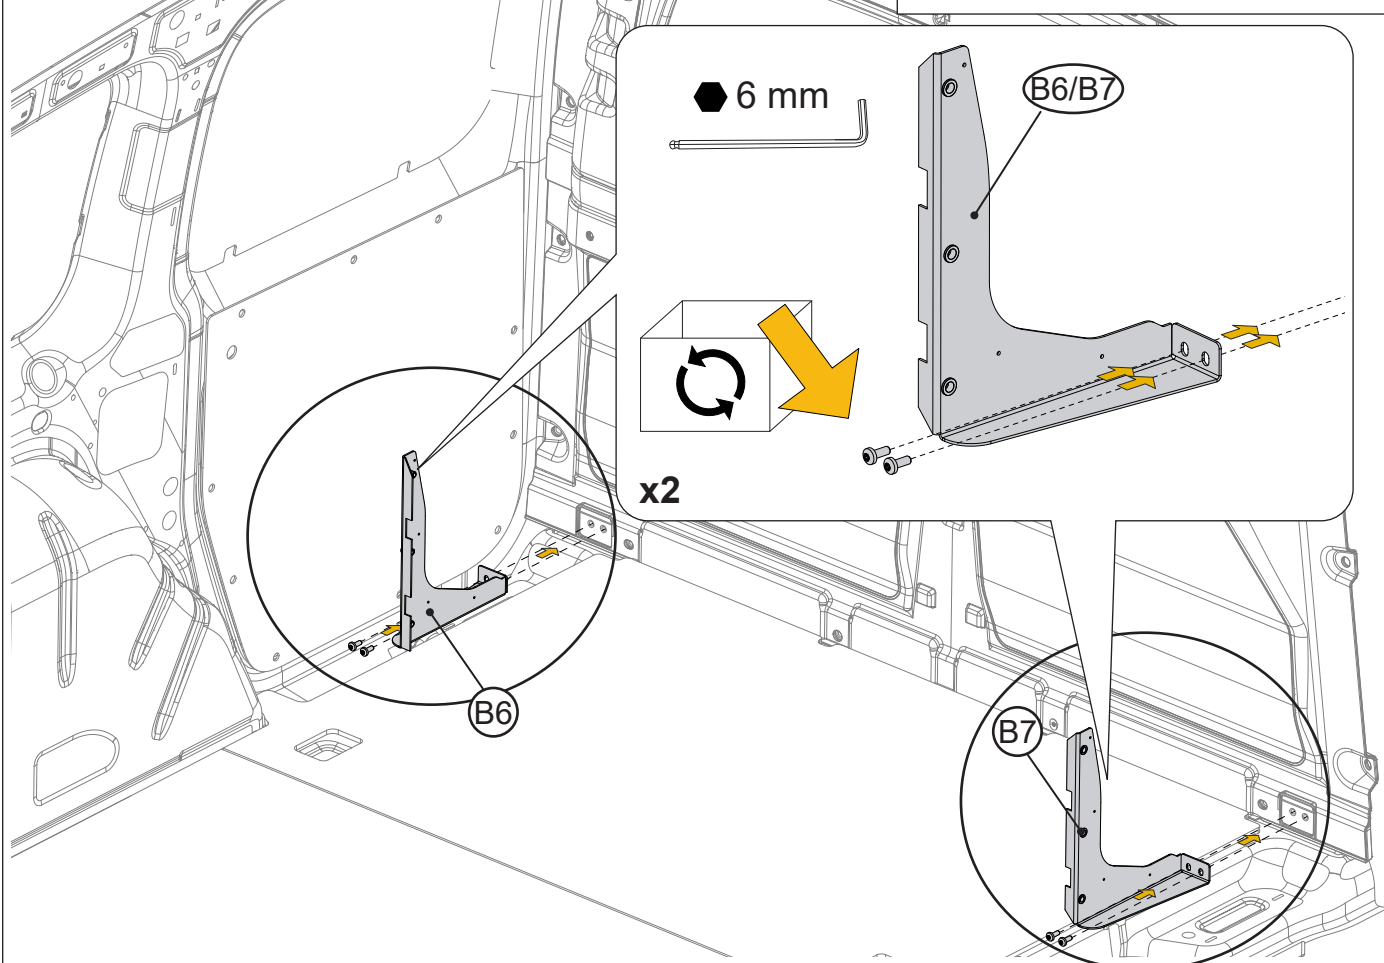


11


FOR CARS **WITH** WOODEN FLOOR

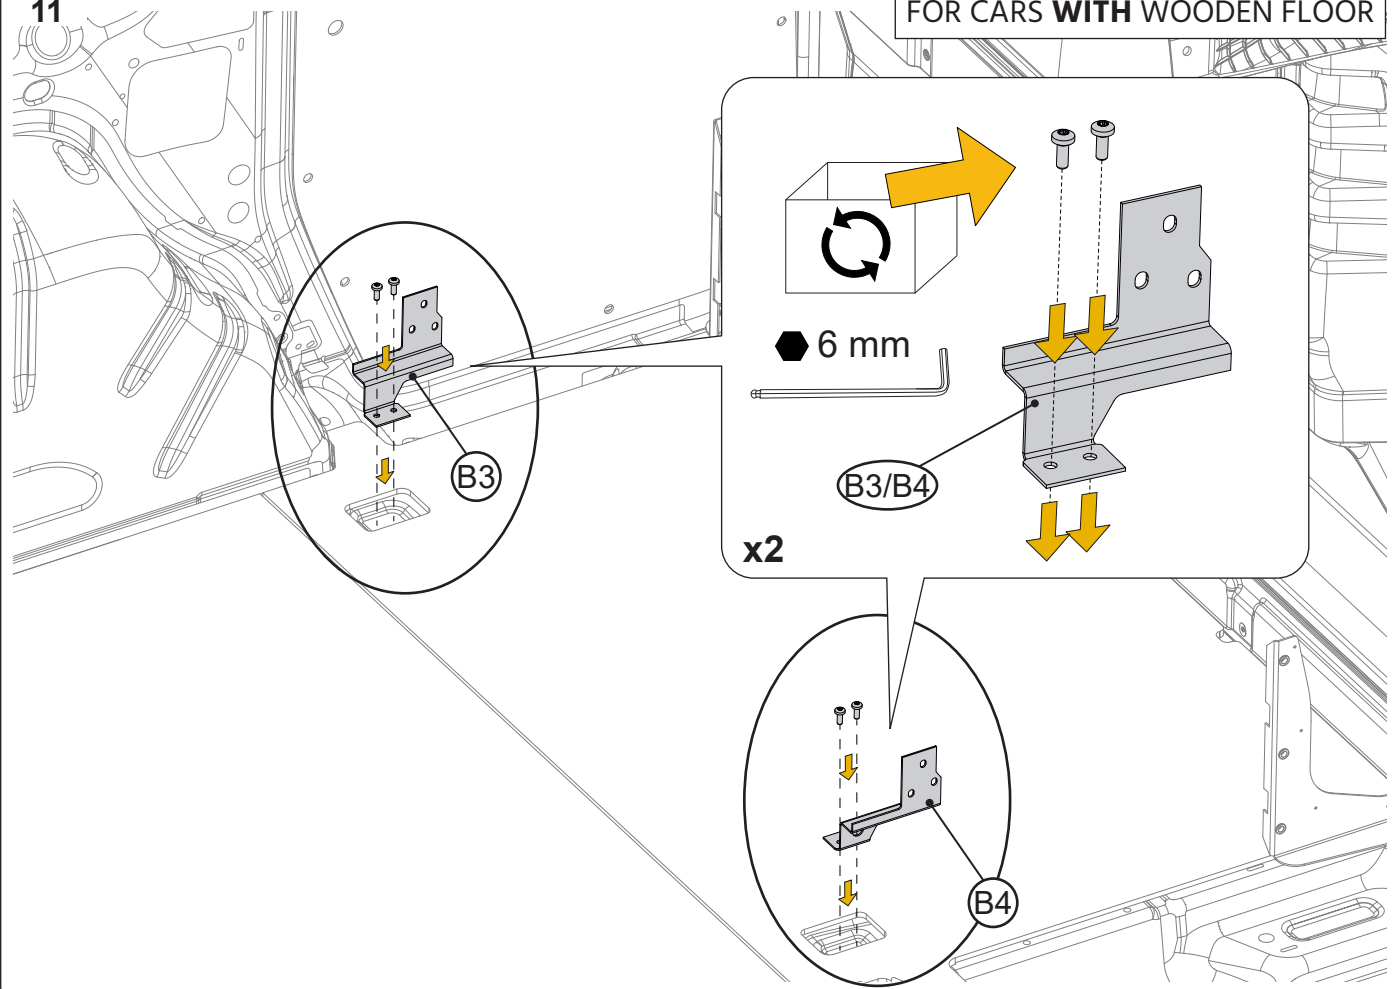


12

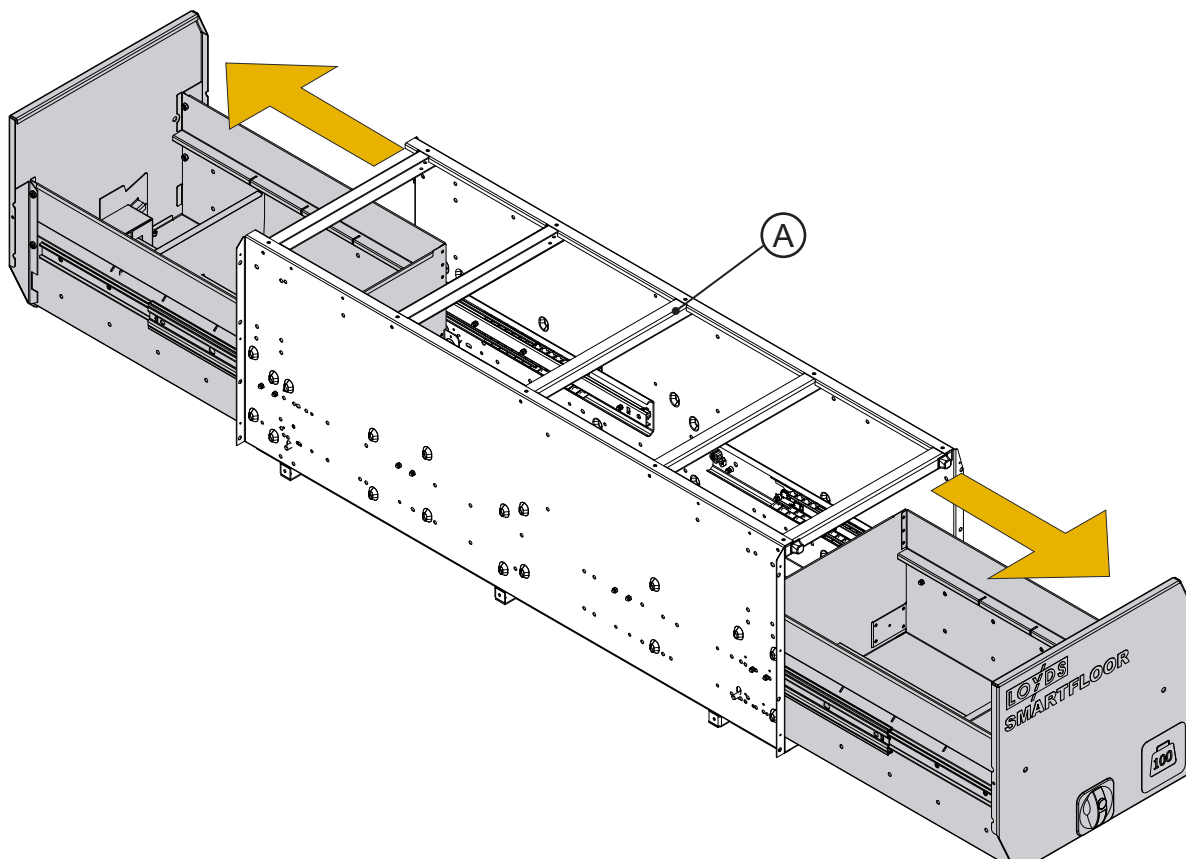



13

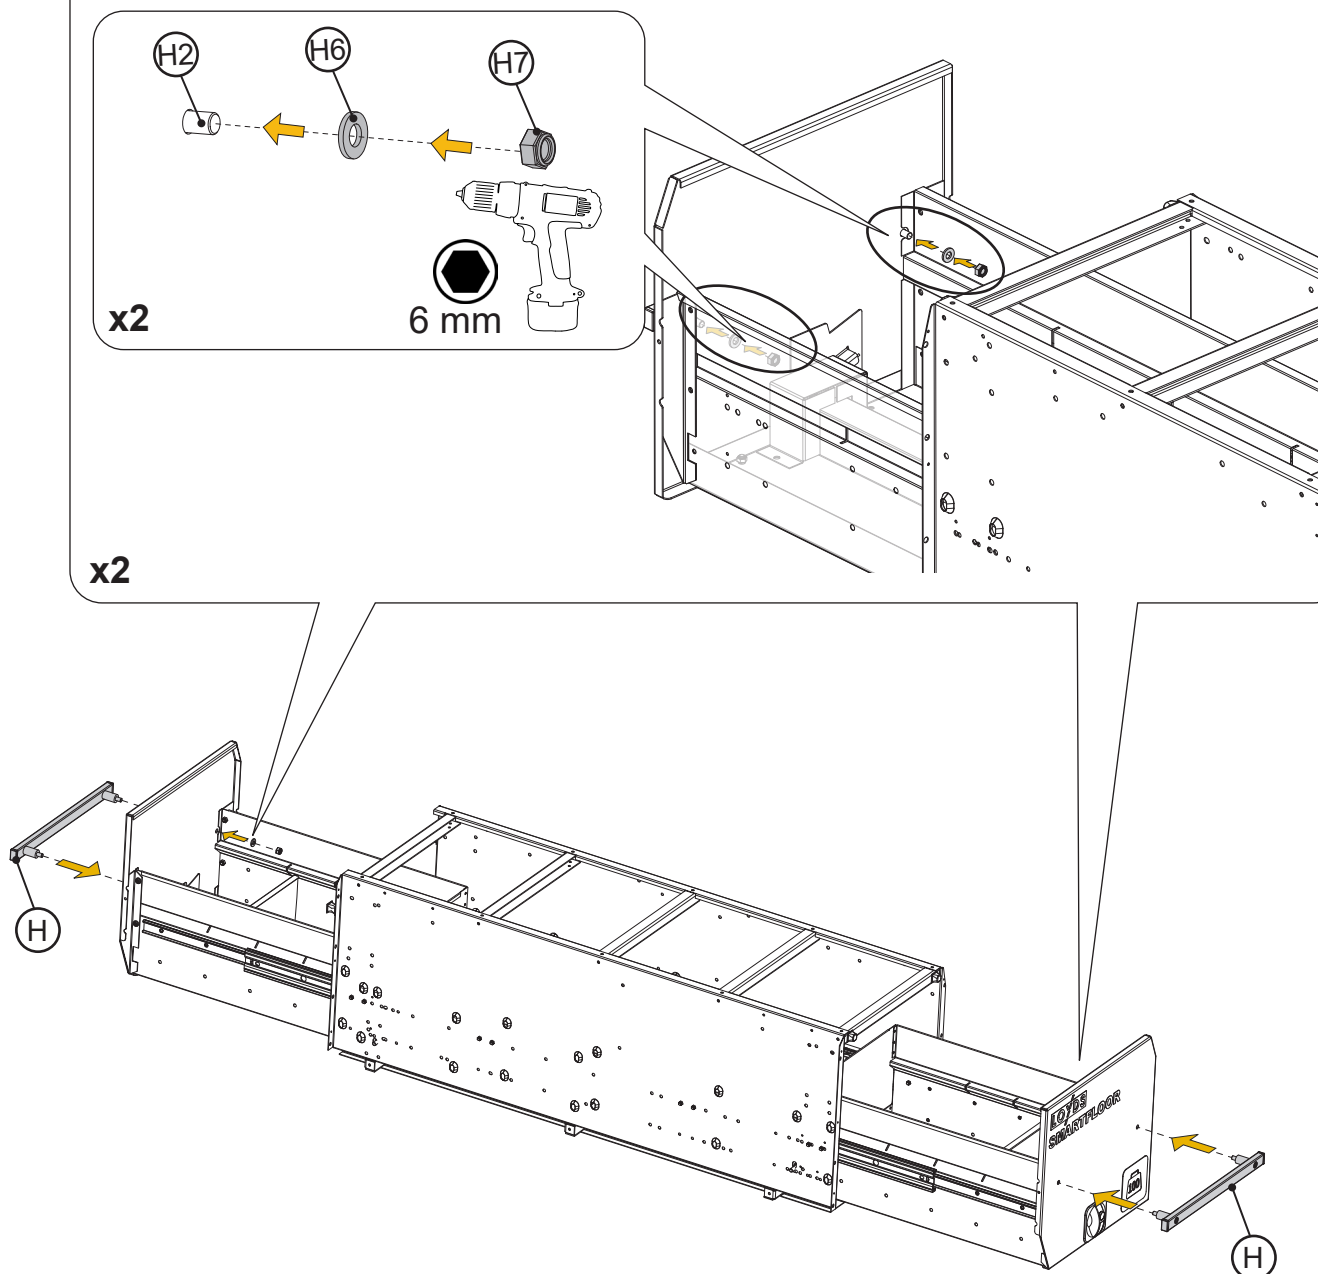


14

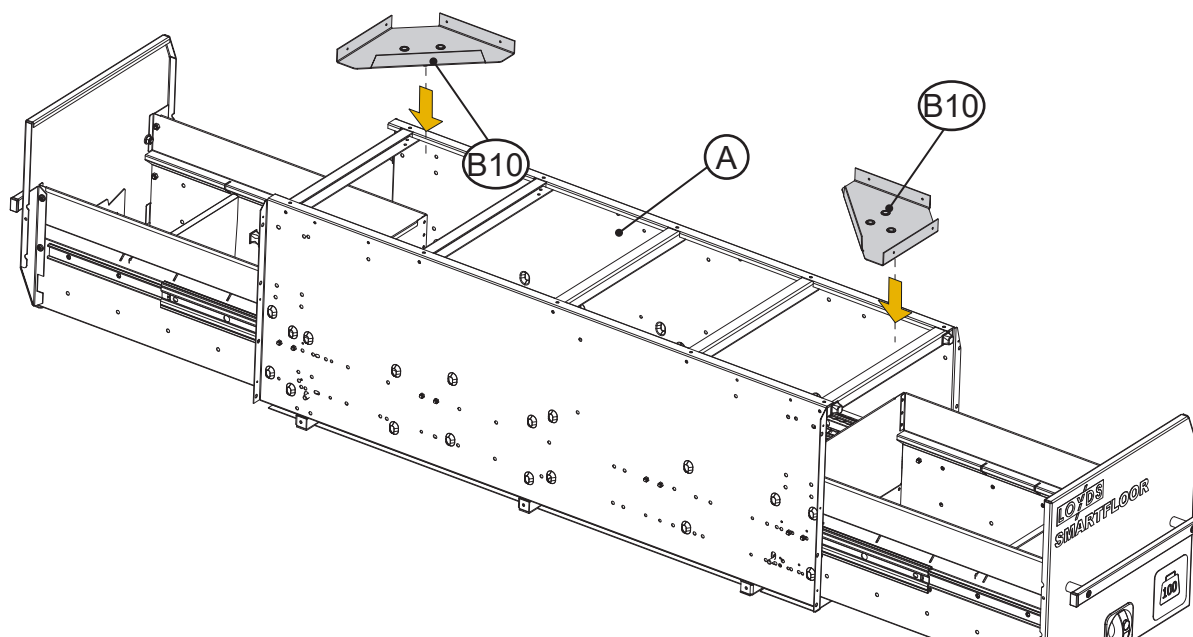


15

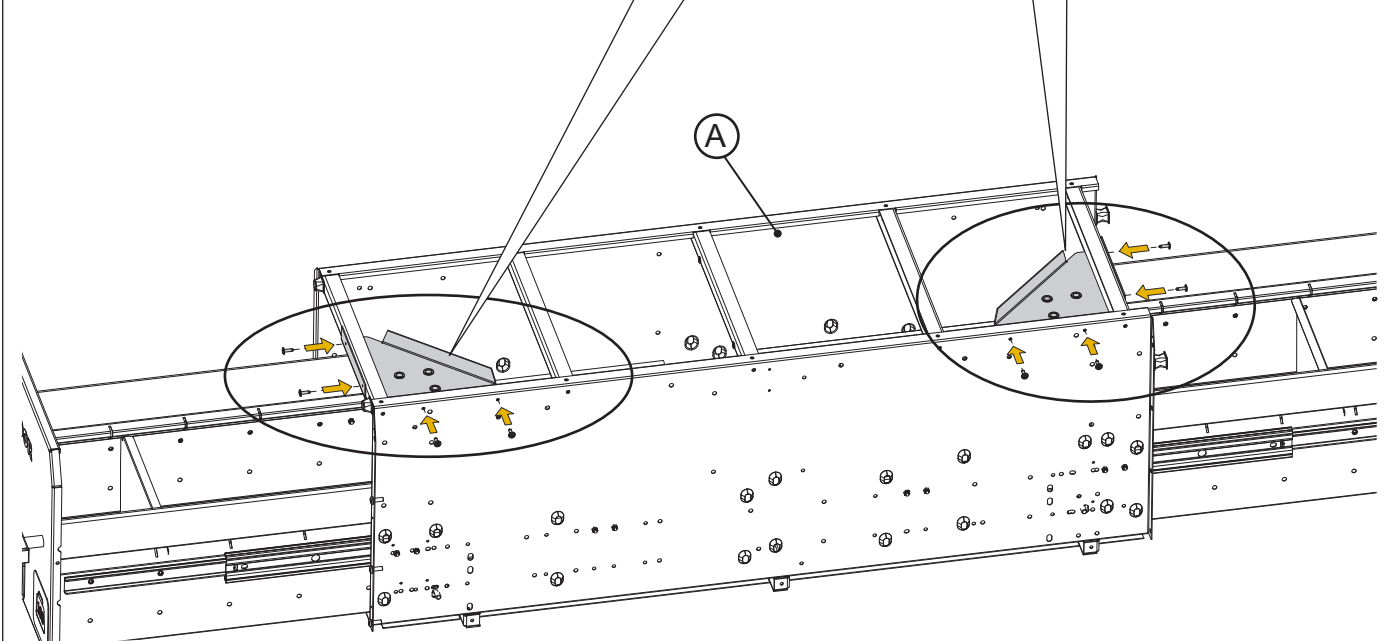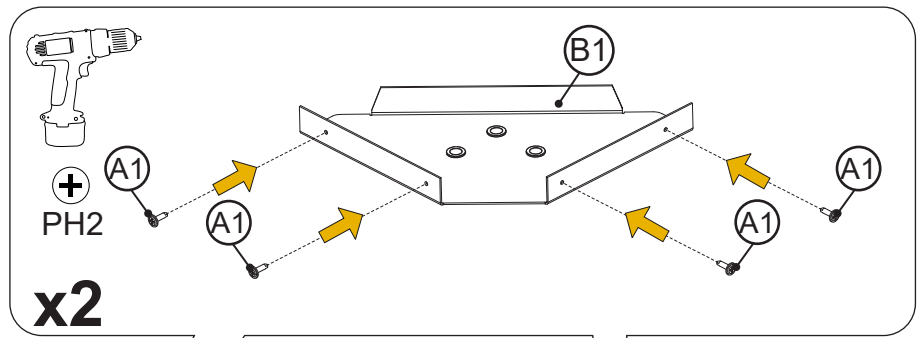


16

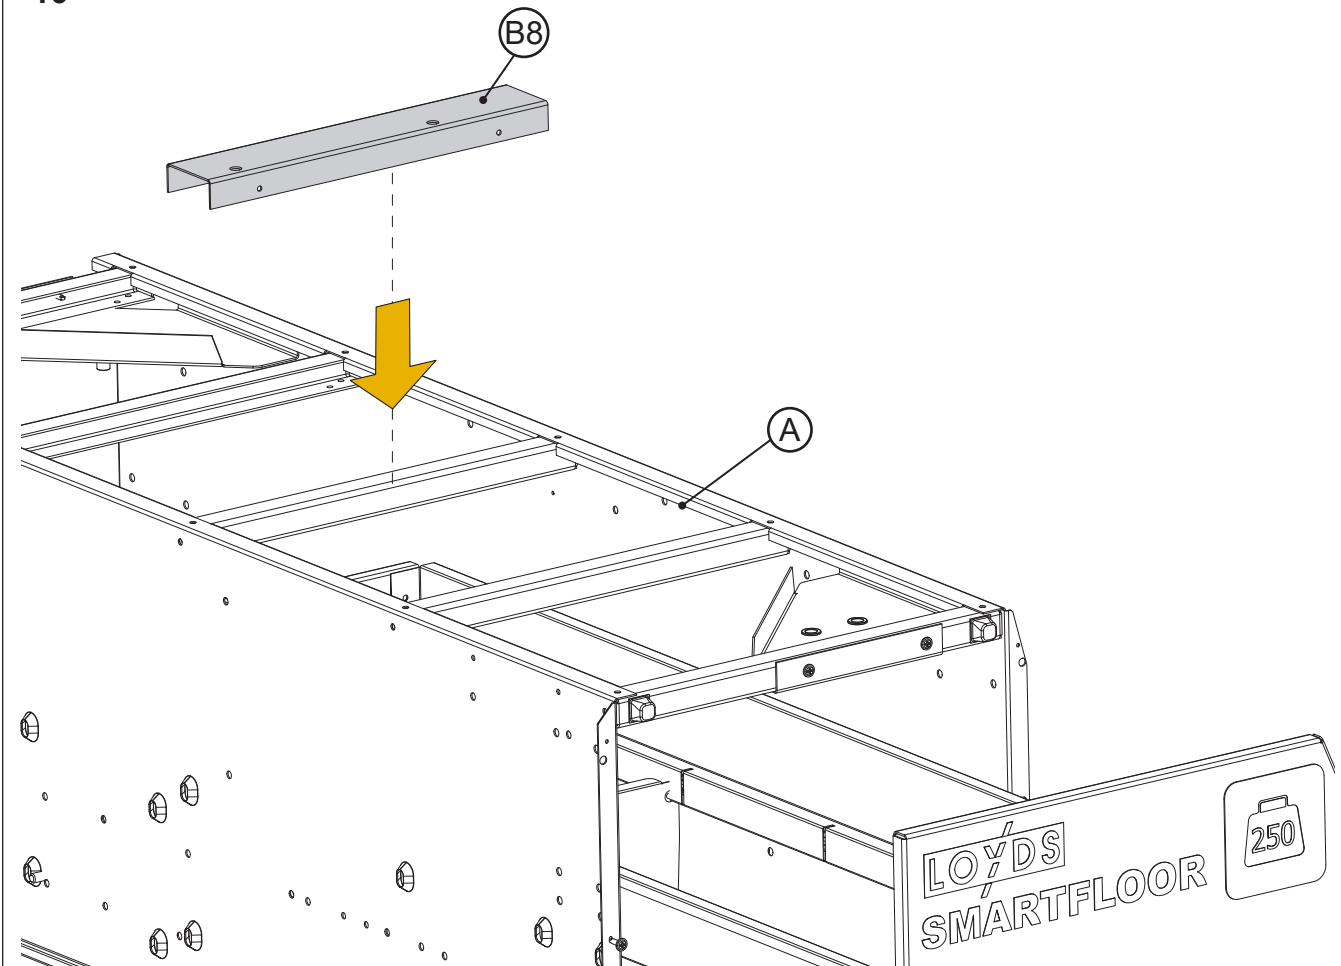


17

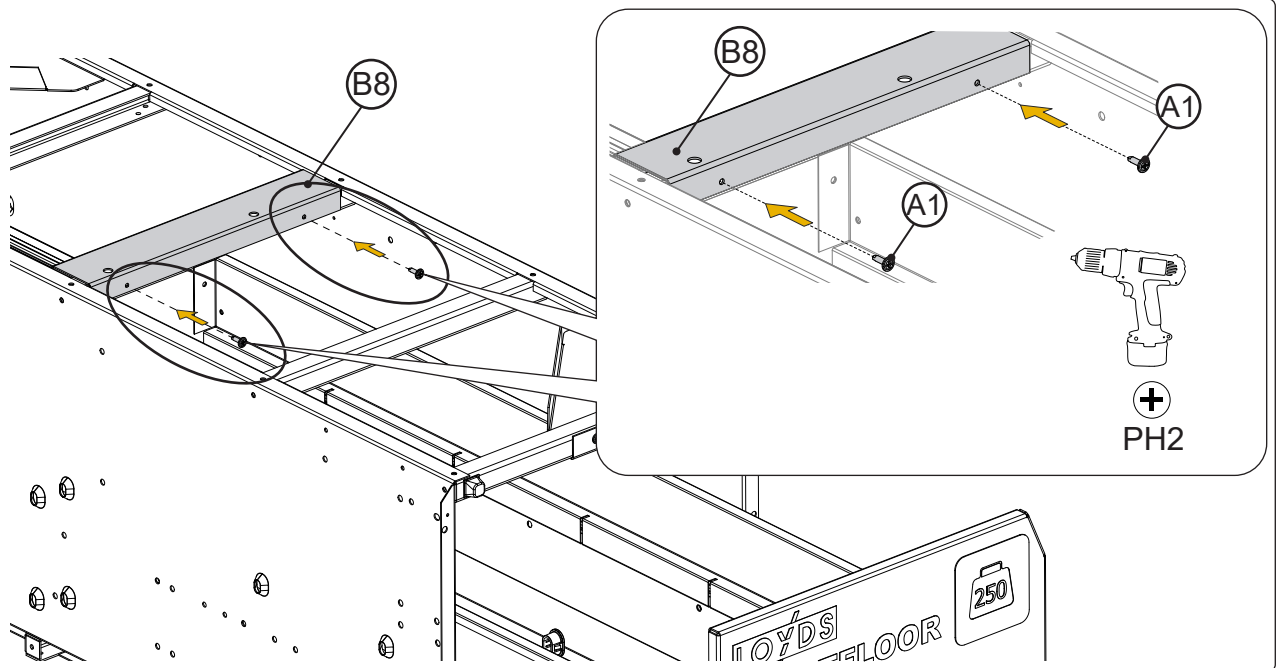


18

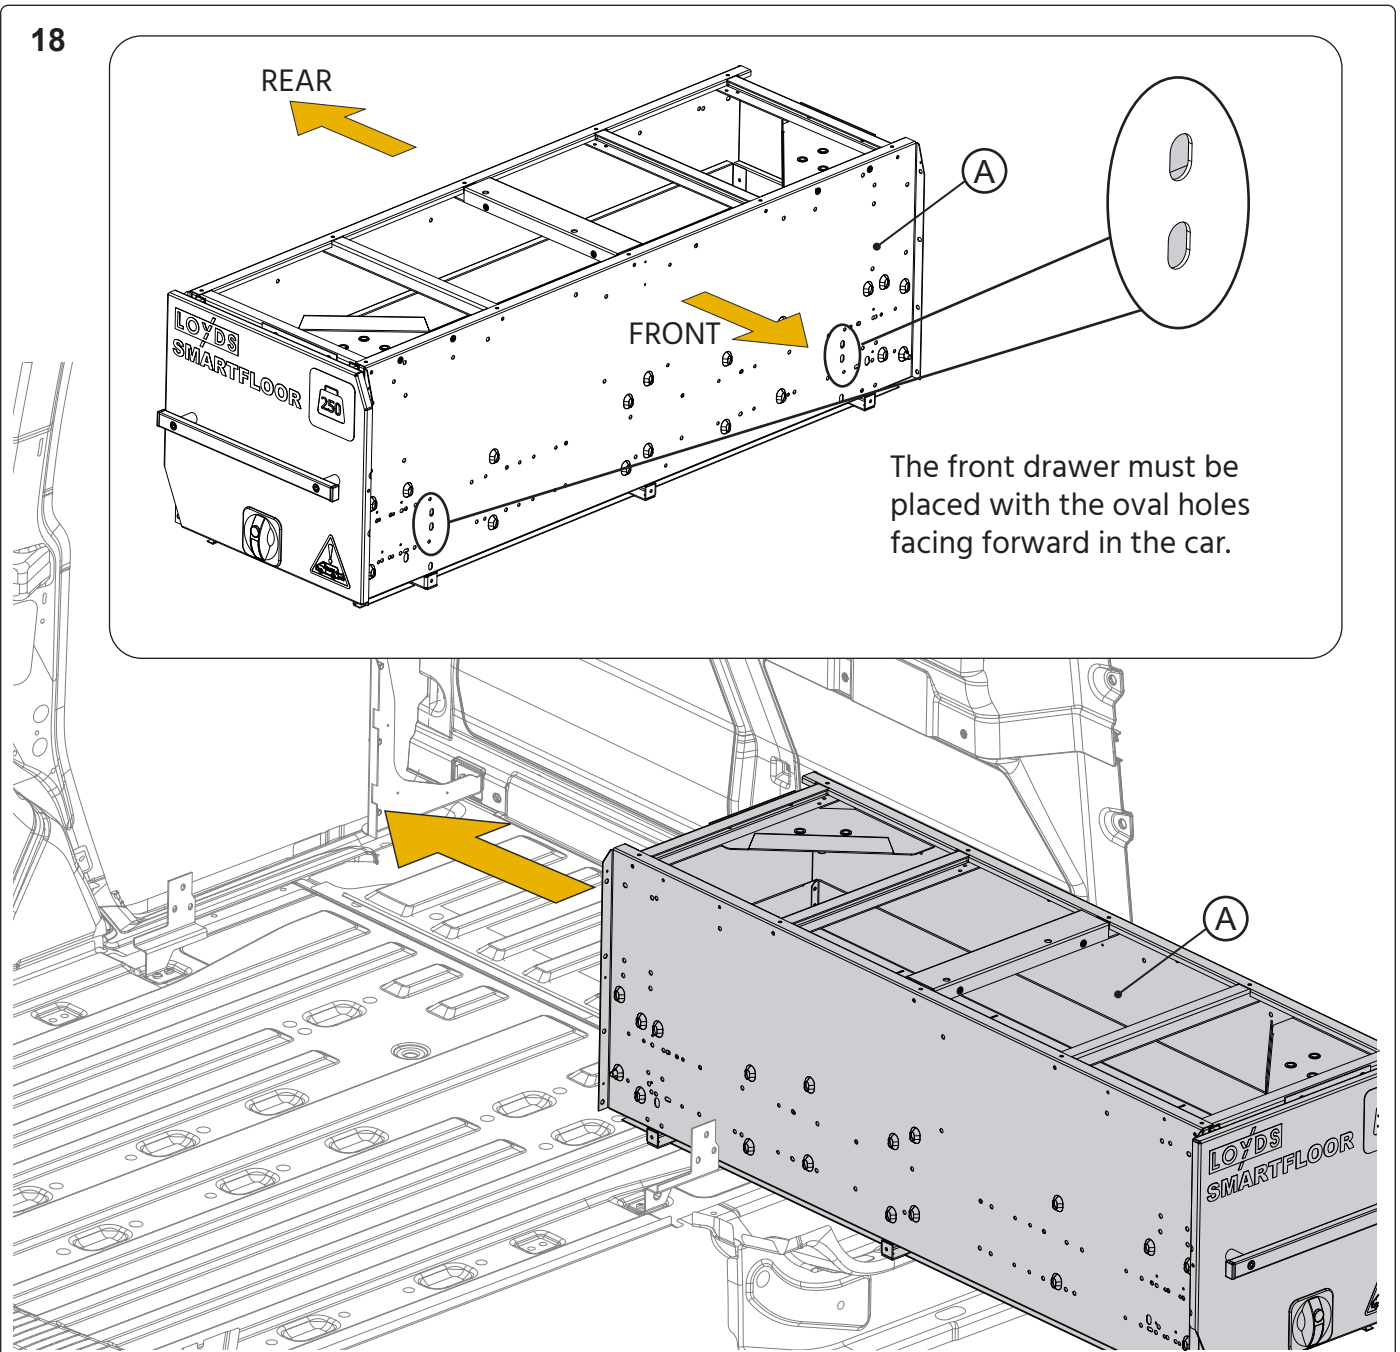

19

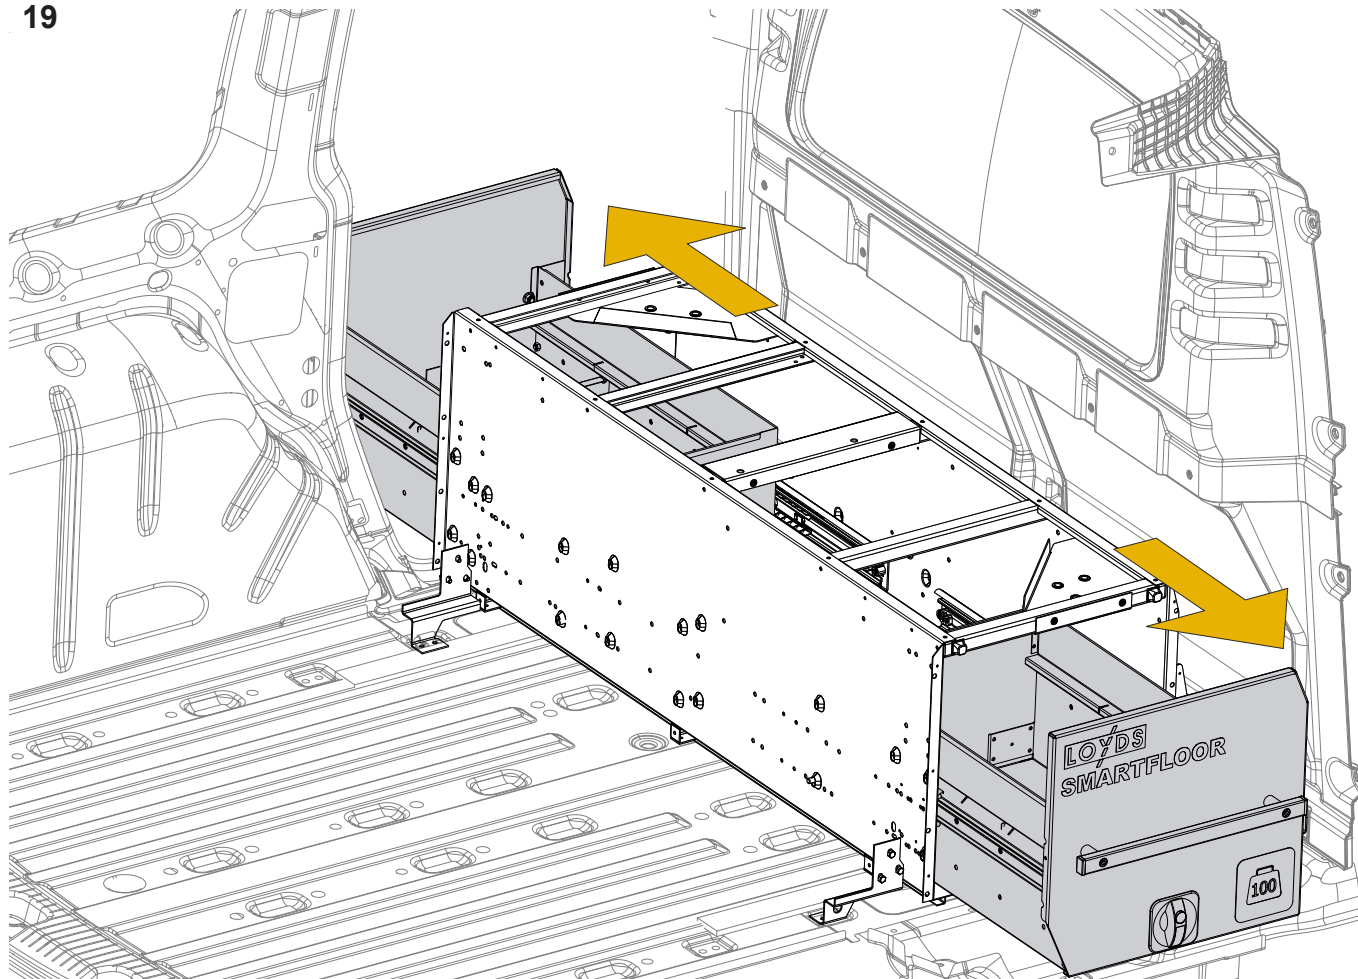


20

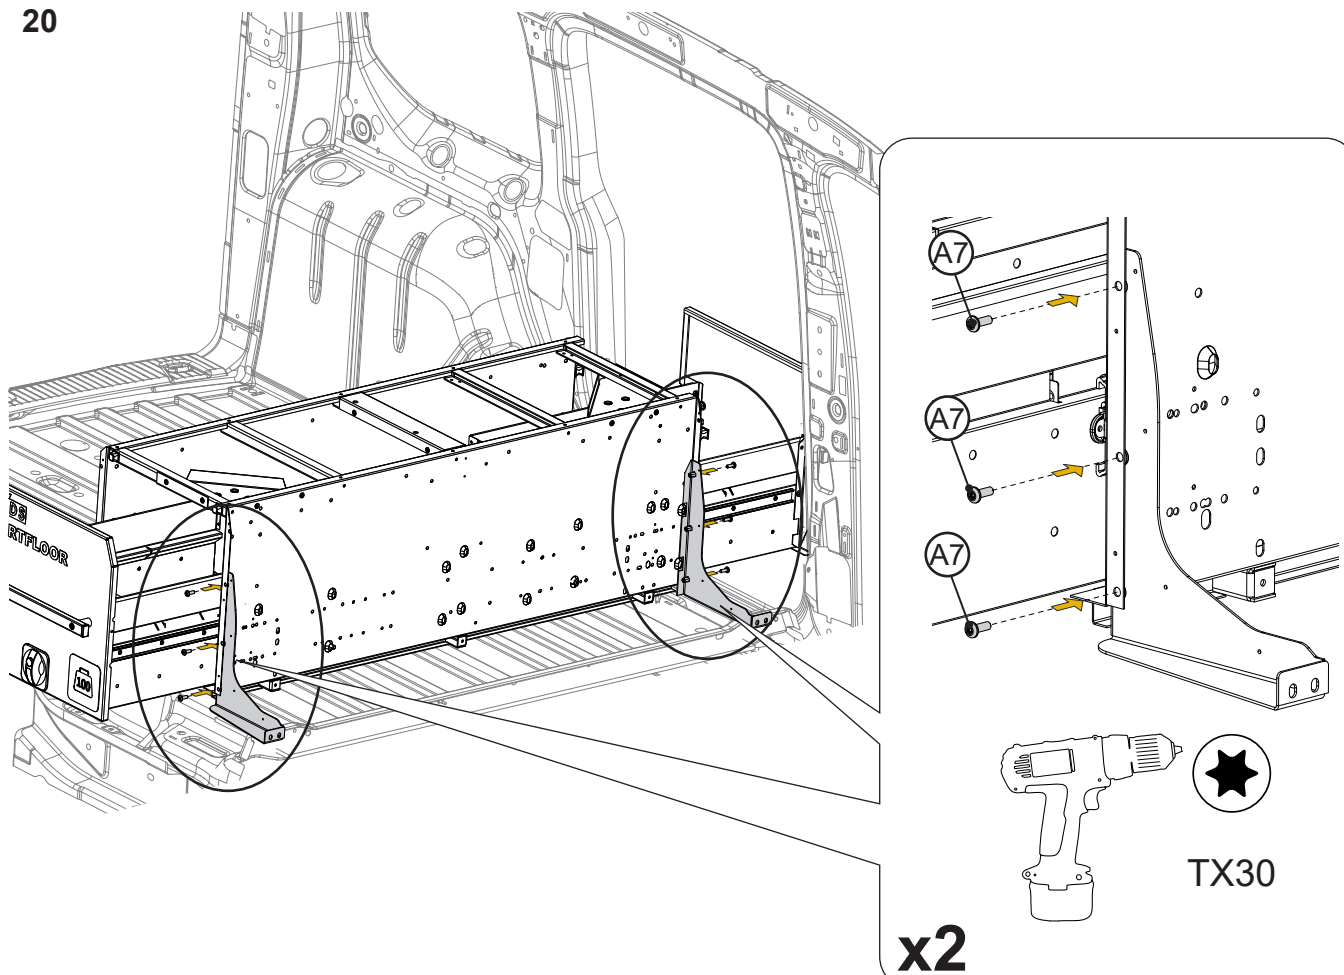


21

FOR **ORIGINAL** AND **PREFERENCE** SEPARATOR

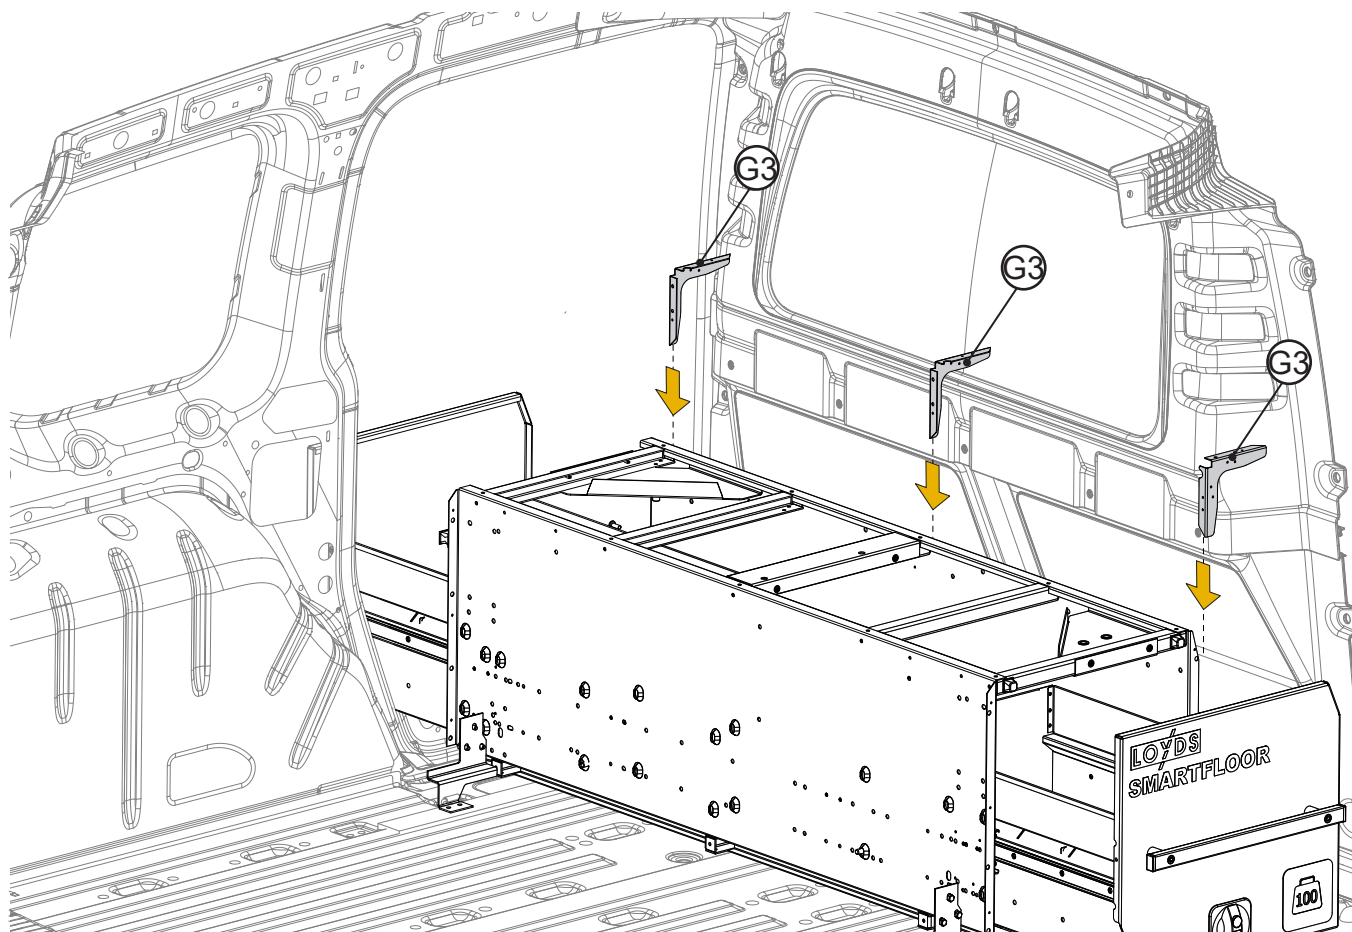


22

FOR **ORIGINAL** AND **PREFERENCE** SEPARATOR

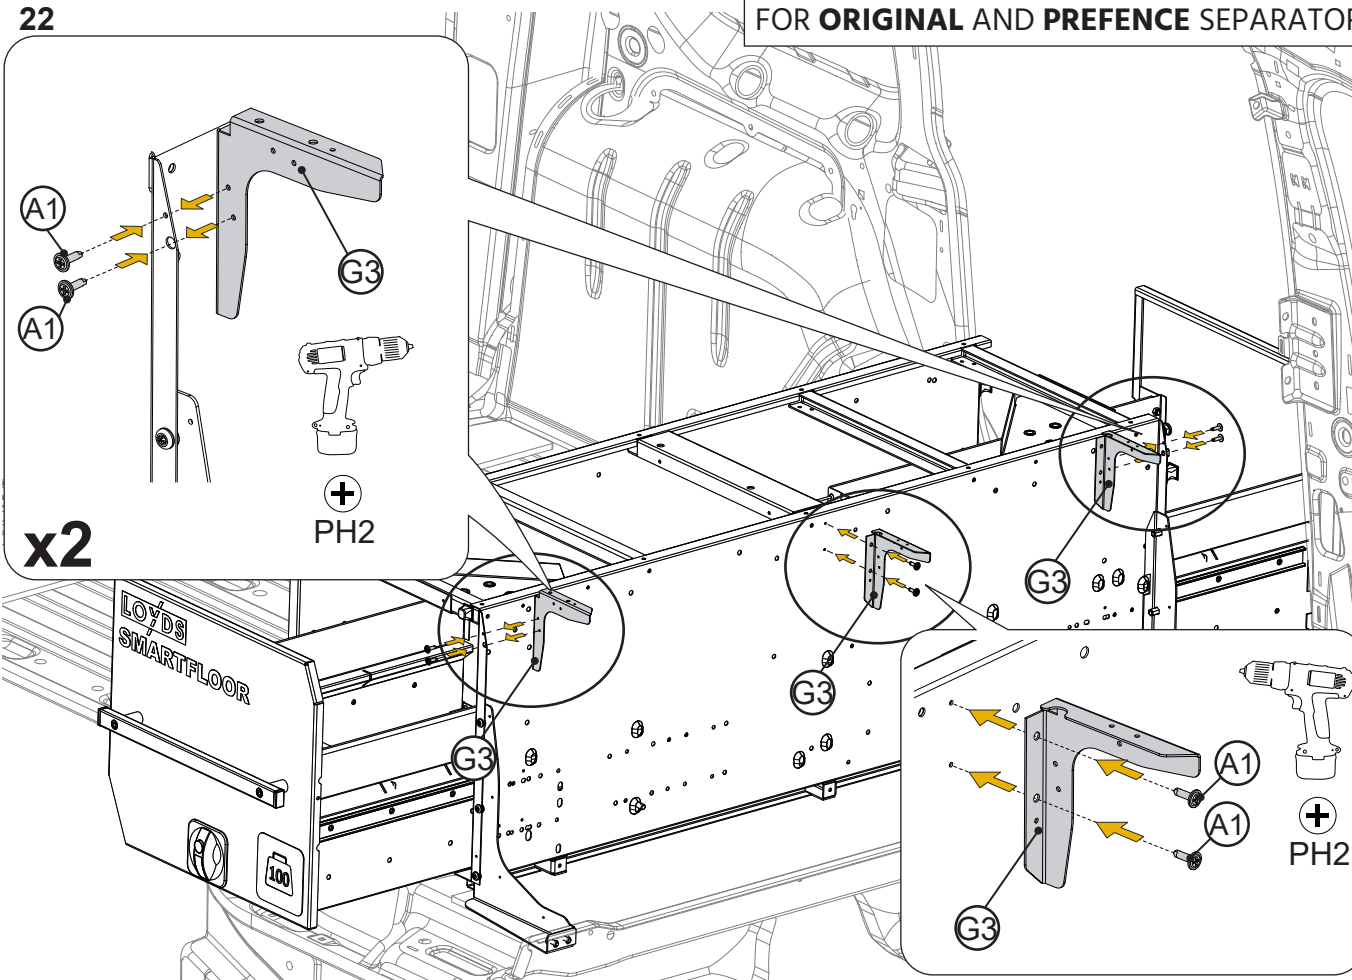


23

FOR LOYDS SEPARATOR

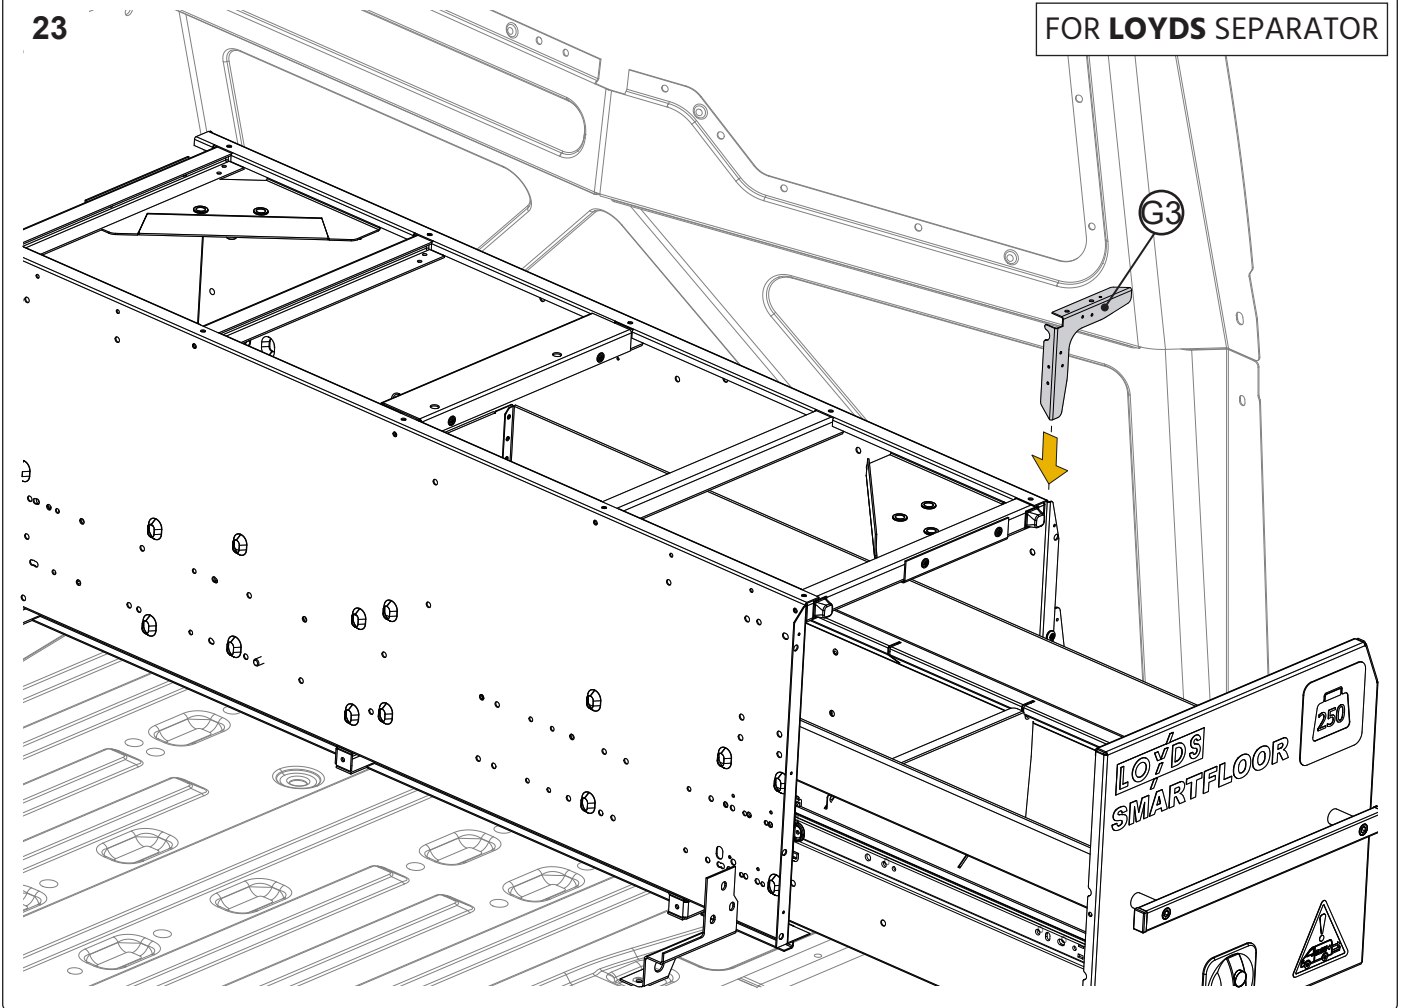


24


FOR LOYDS SEPARATOR

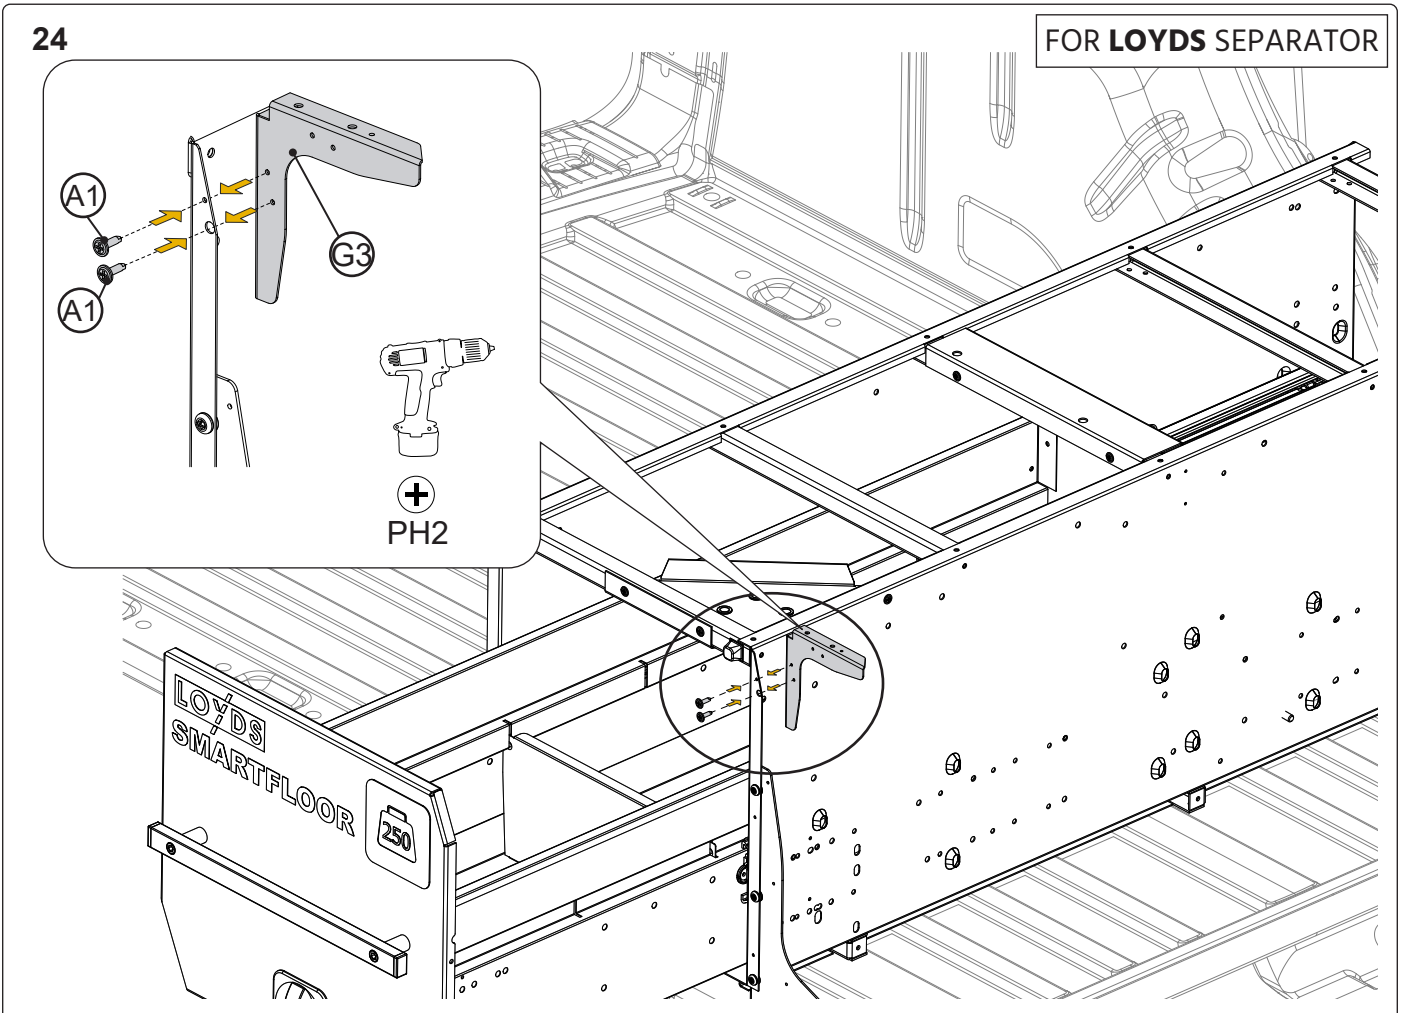


25

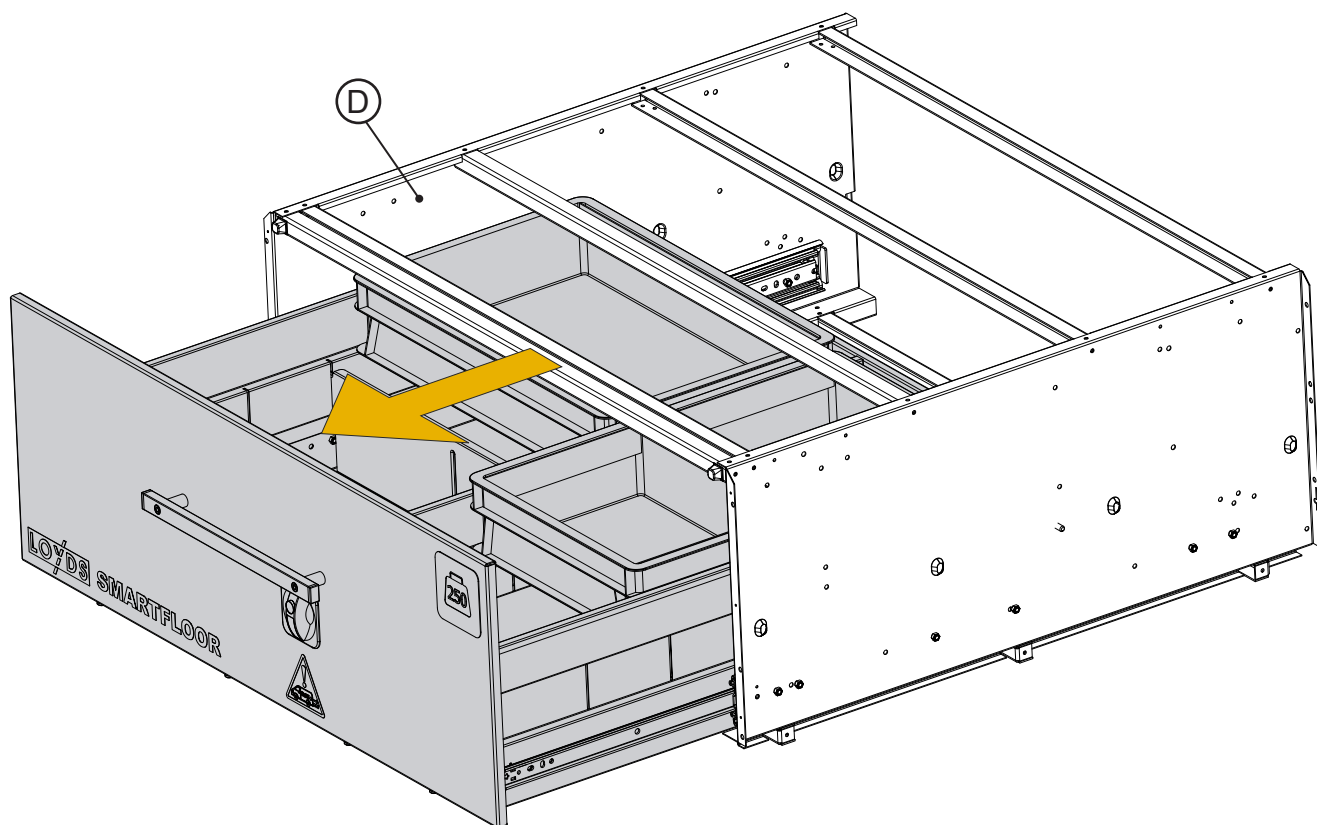


26

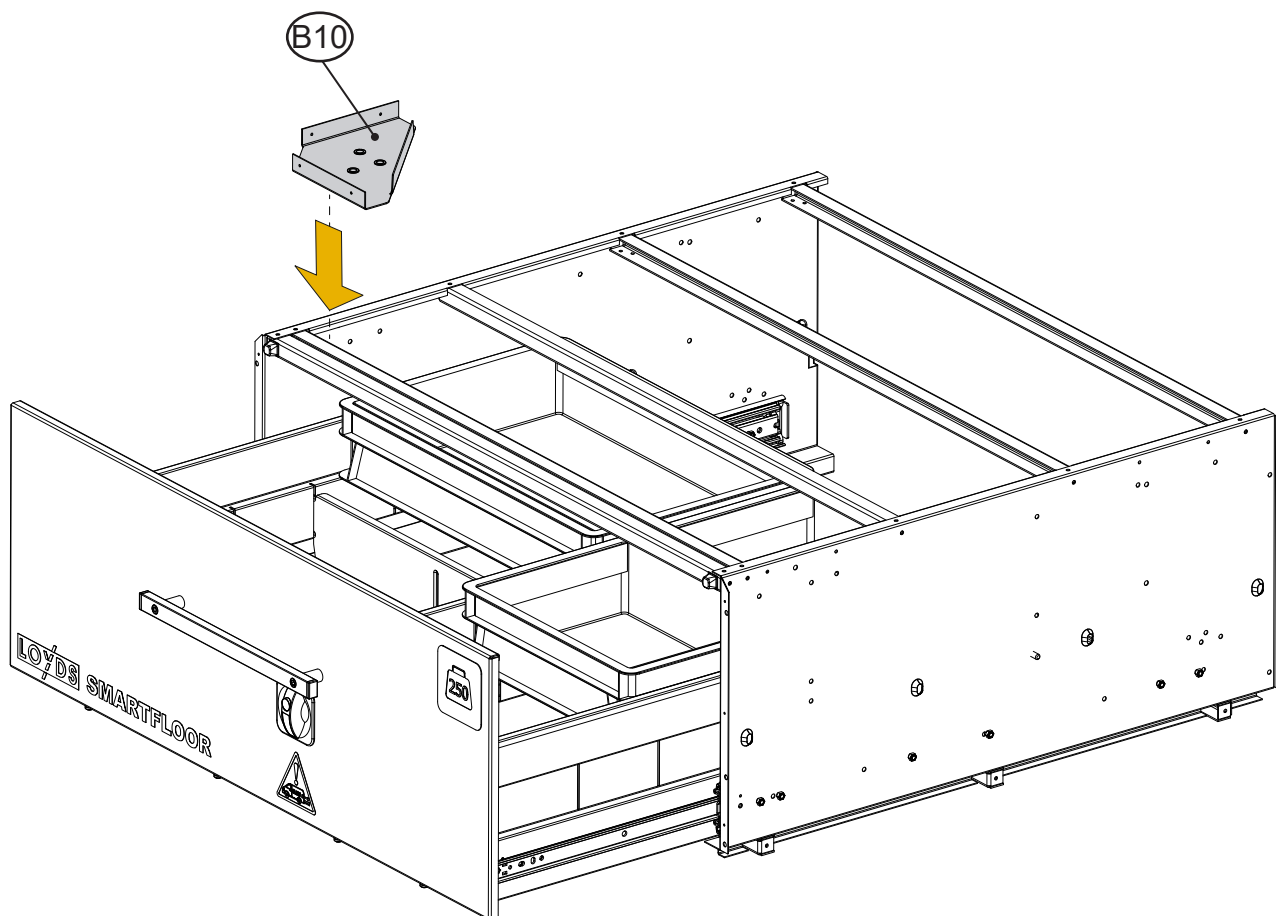


27

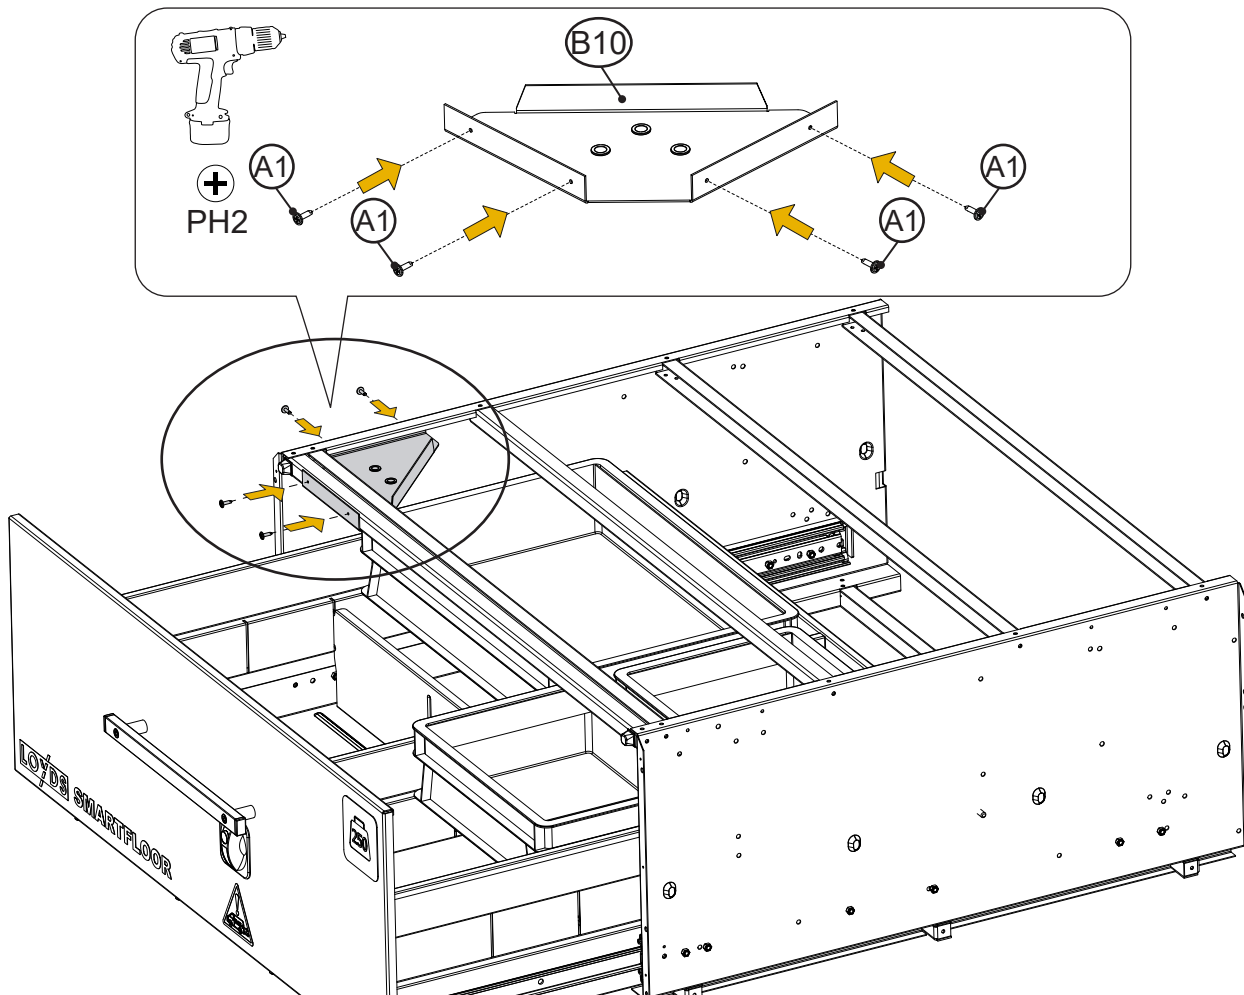


28

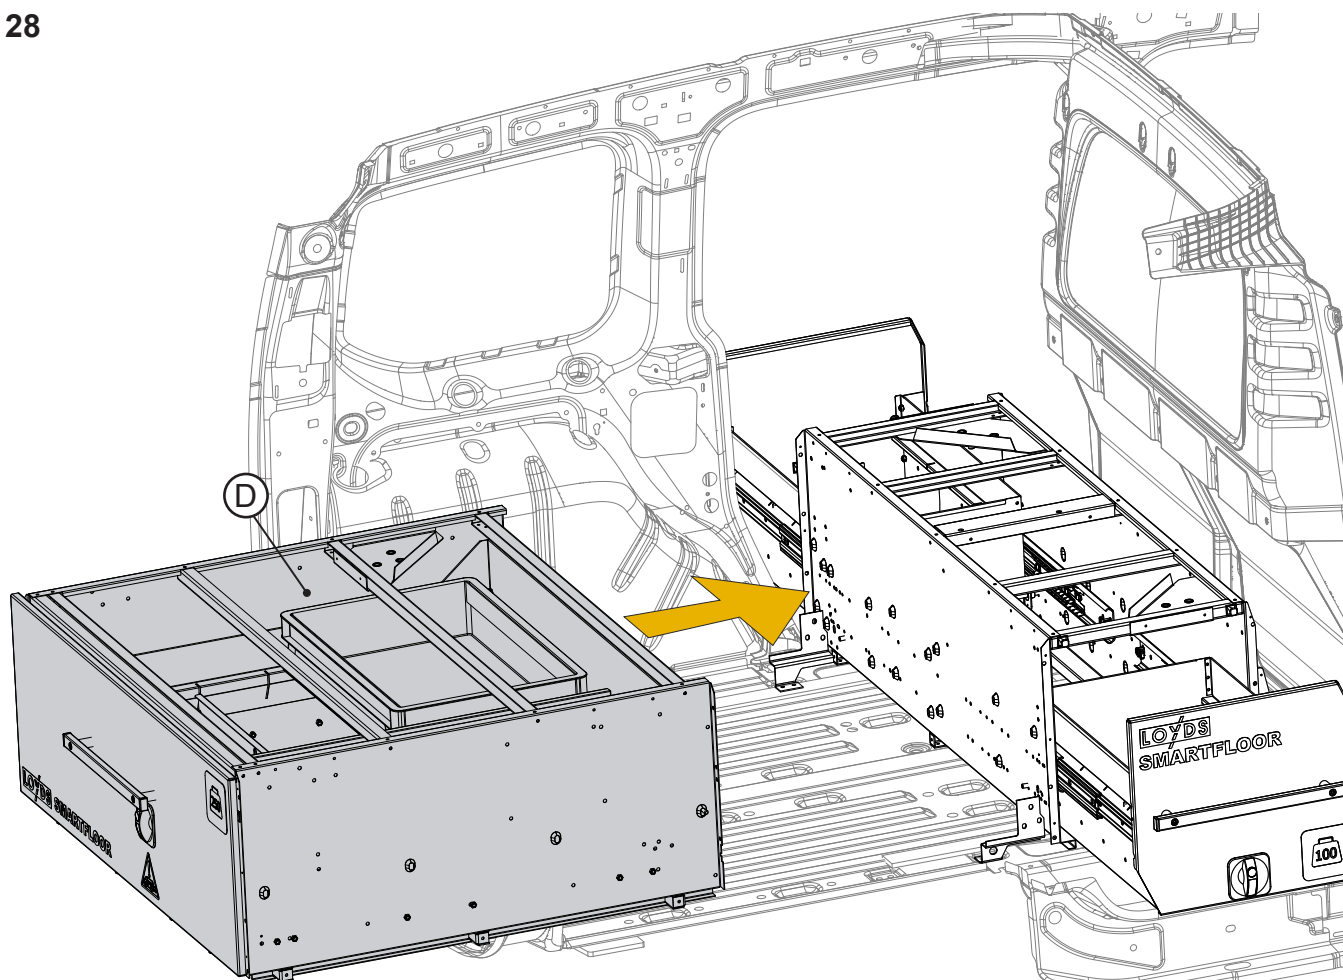


29

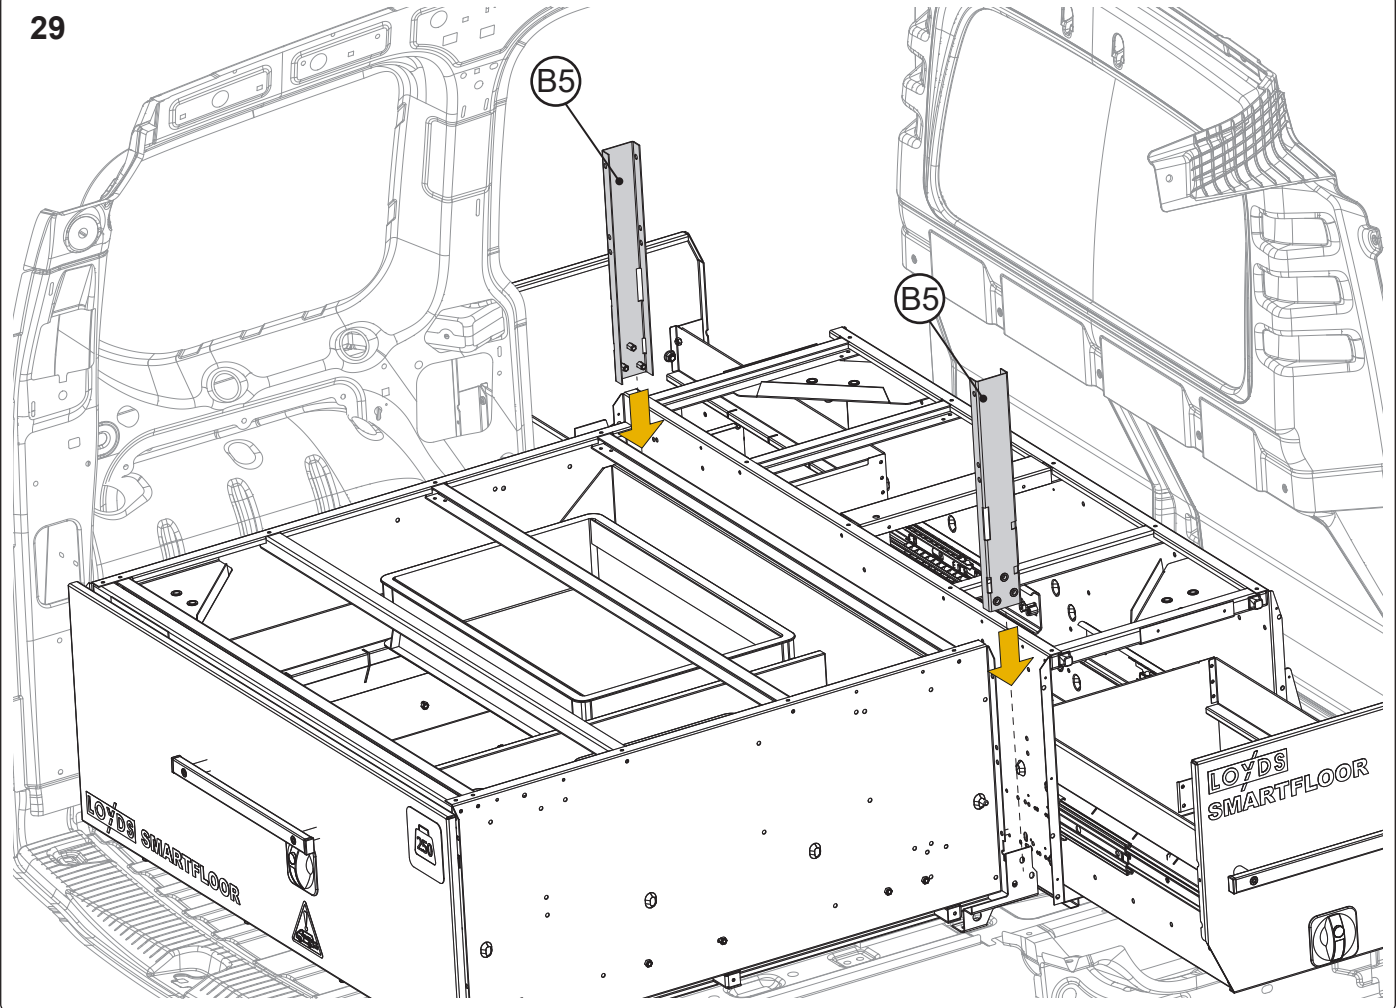


30

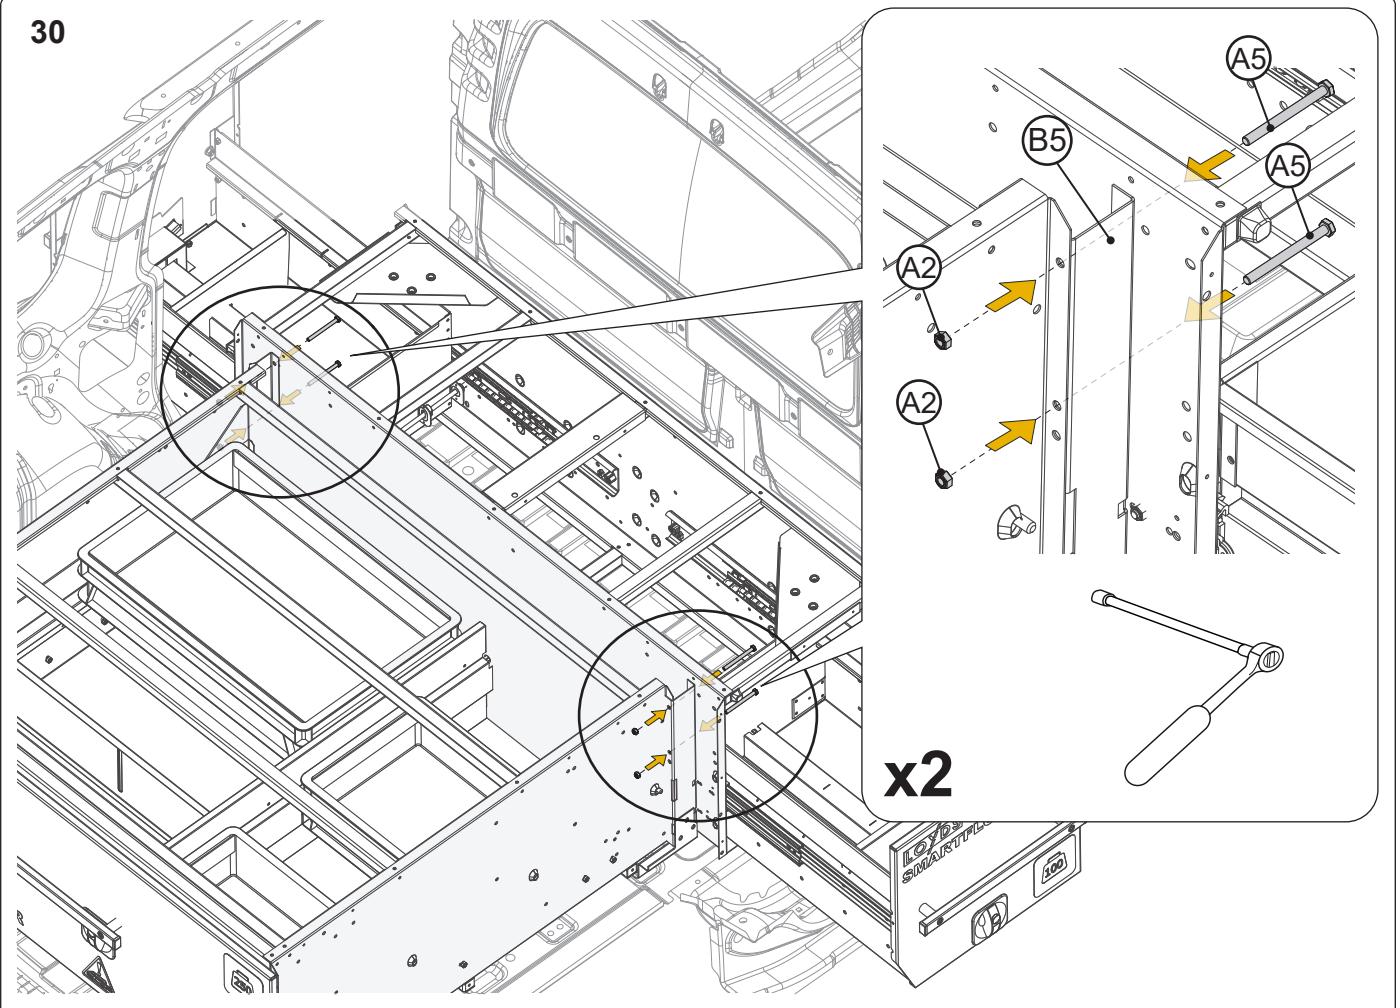


31

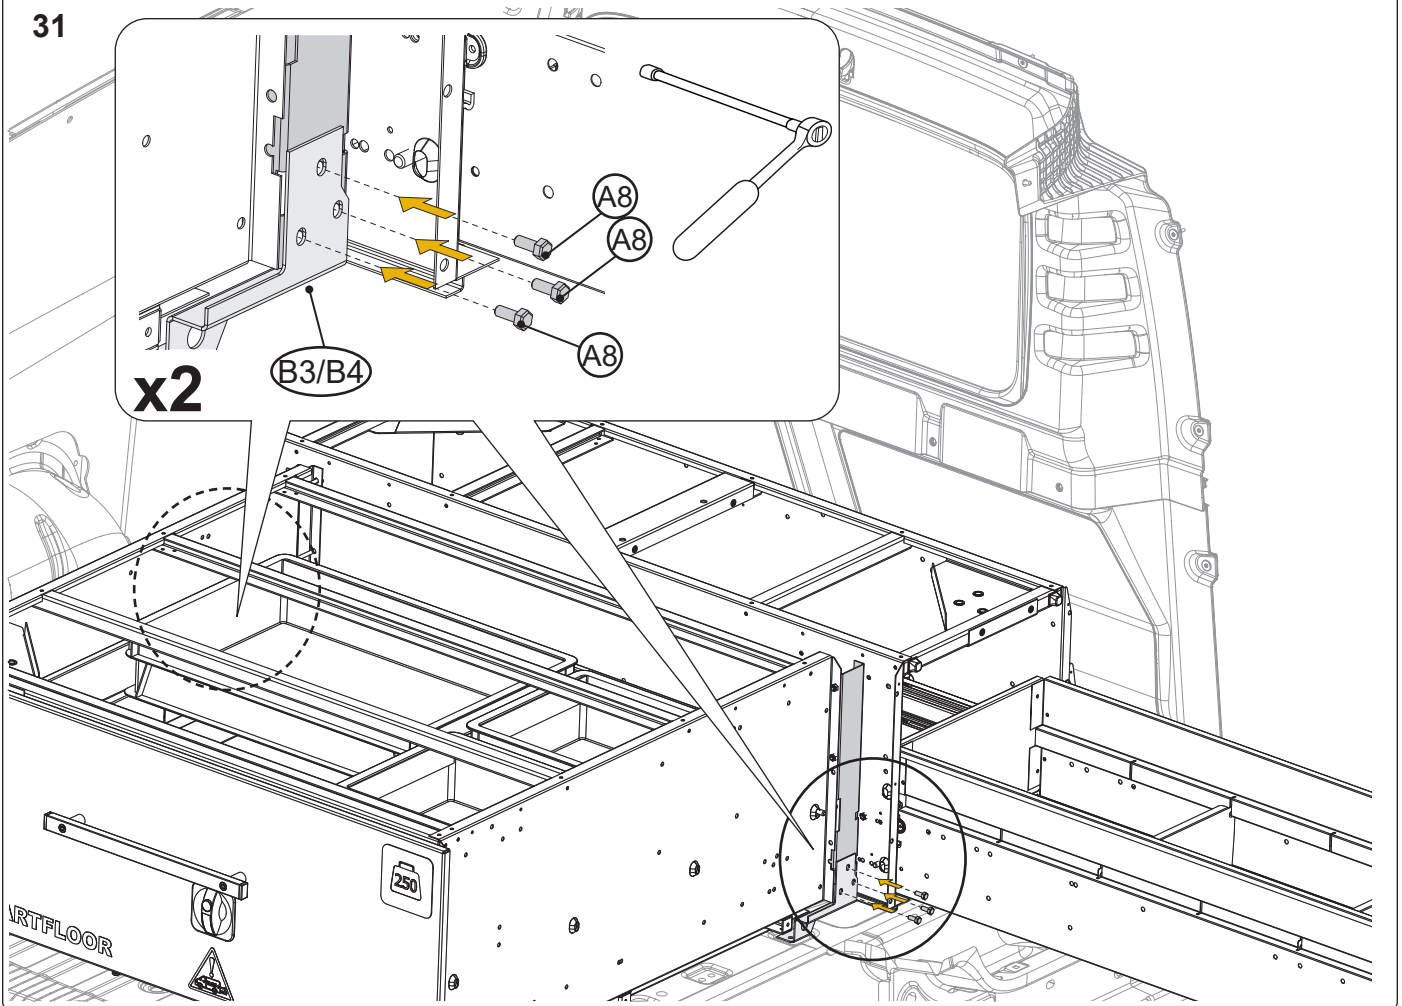


32

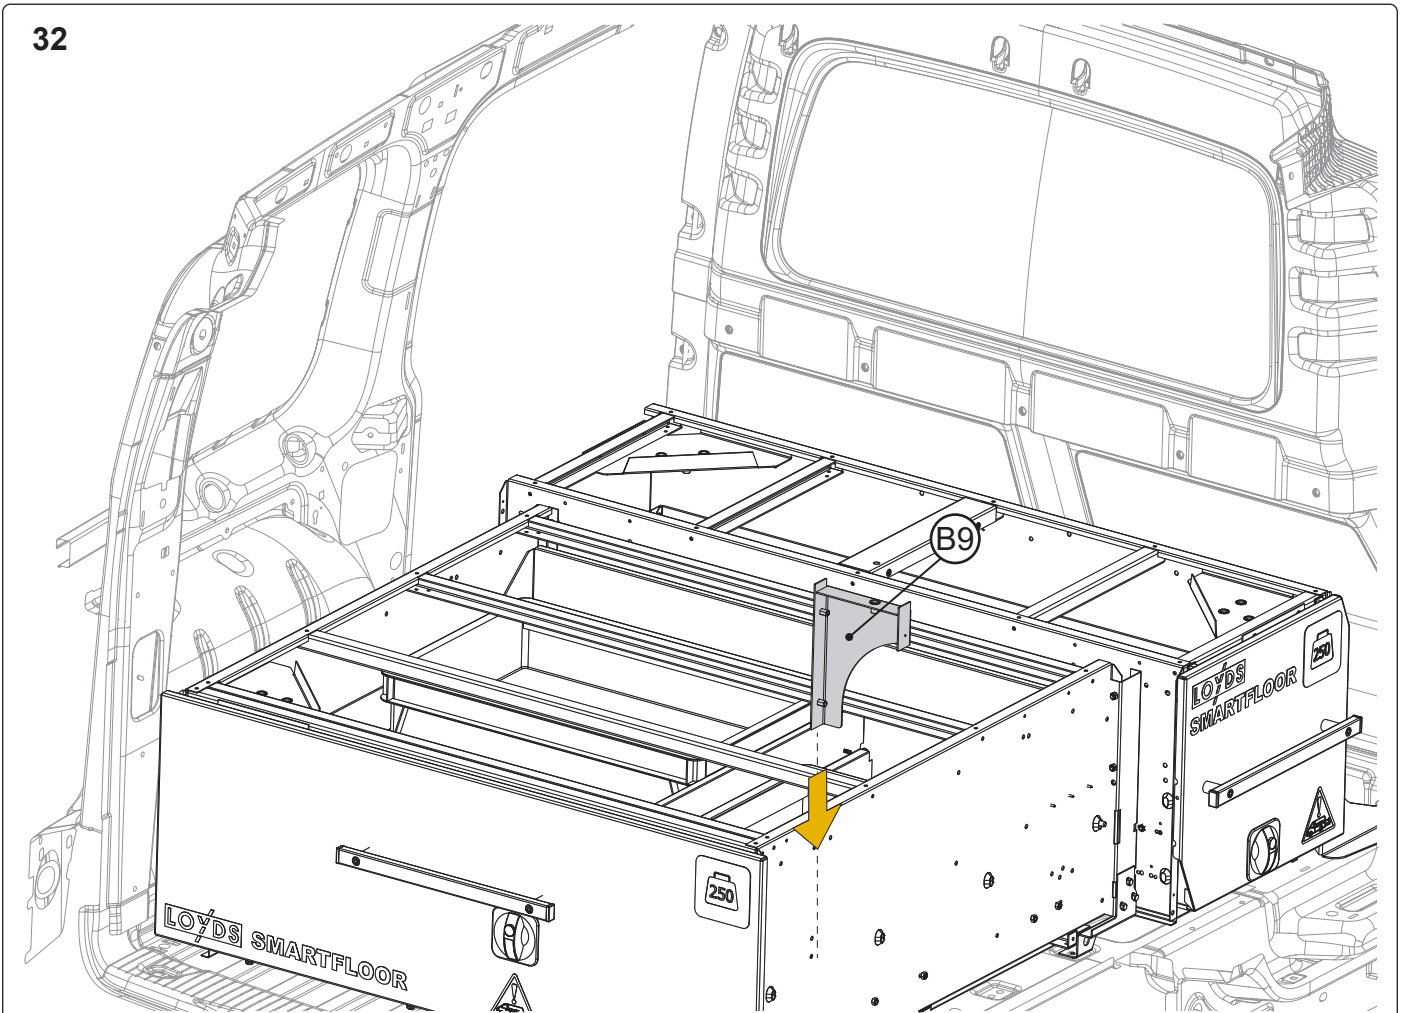


33

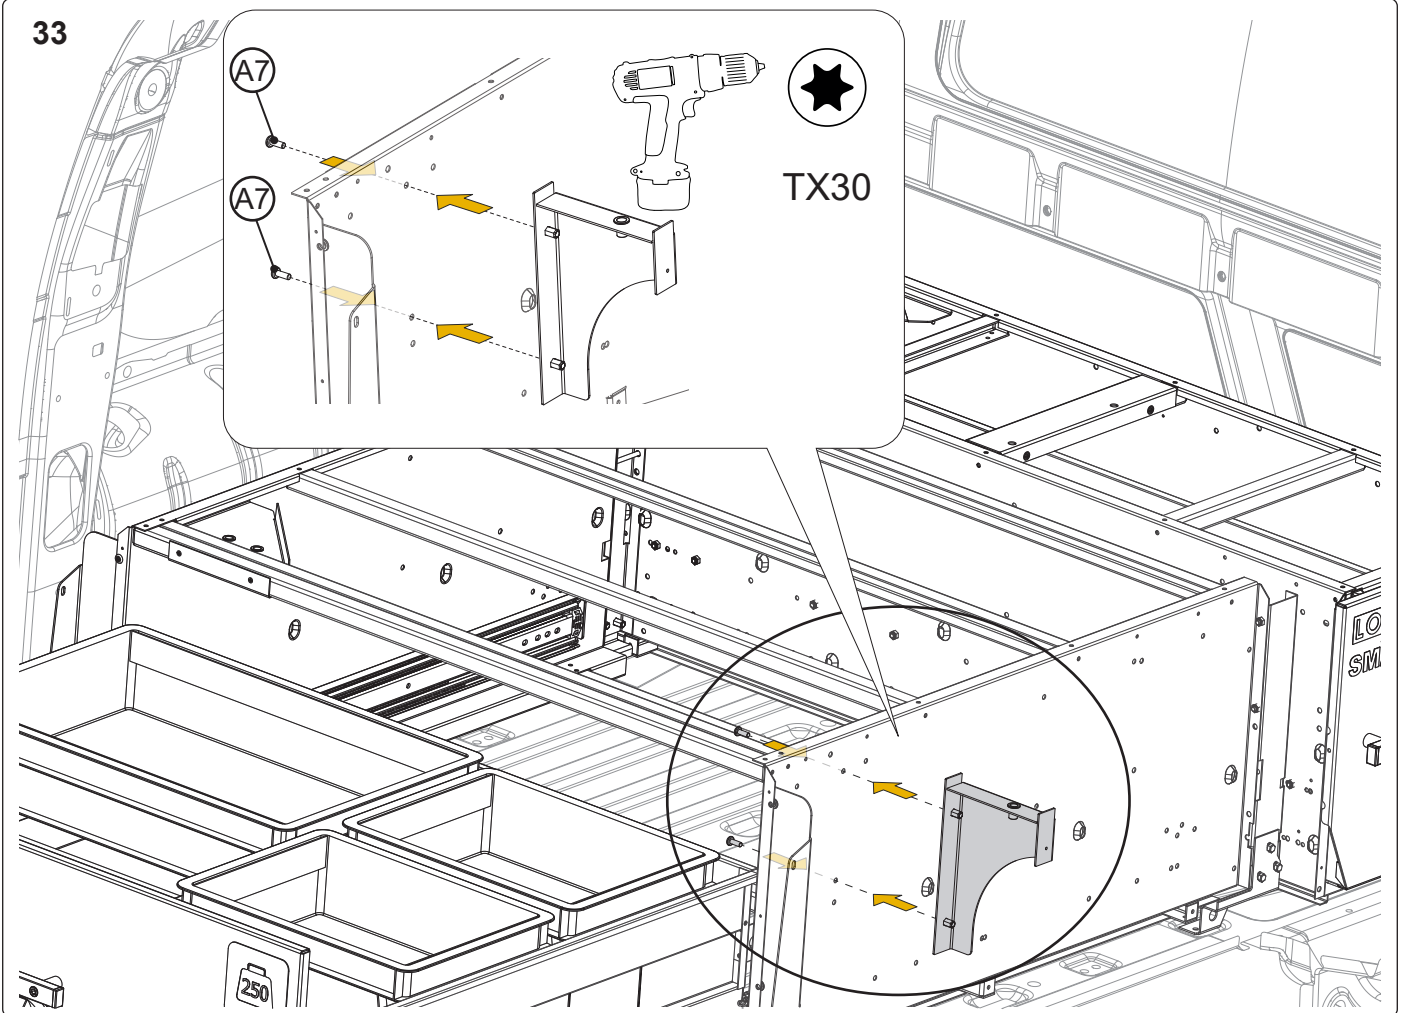


34

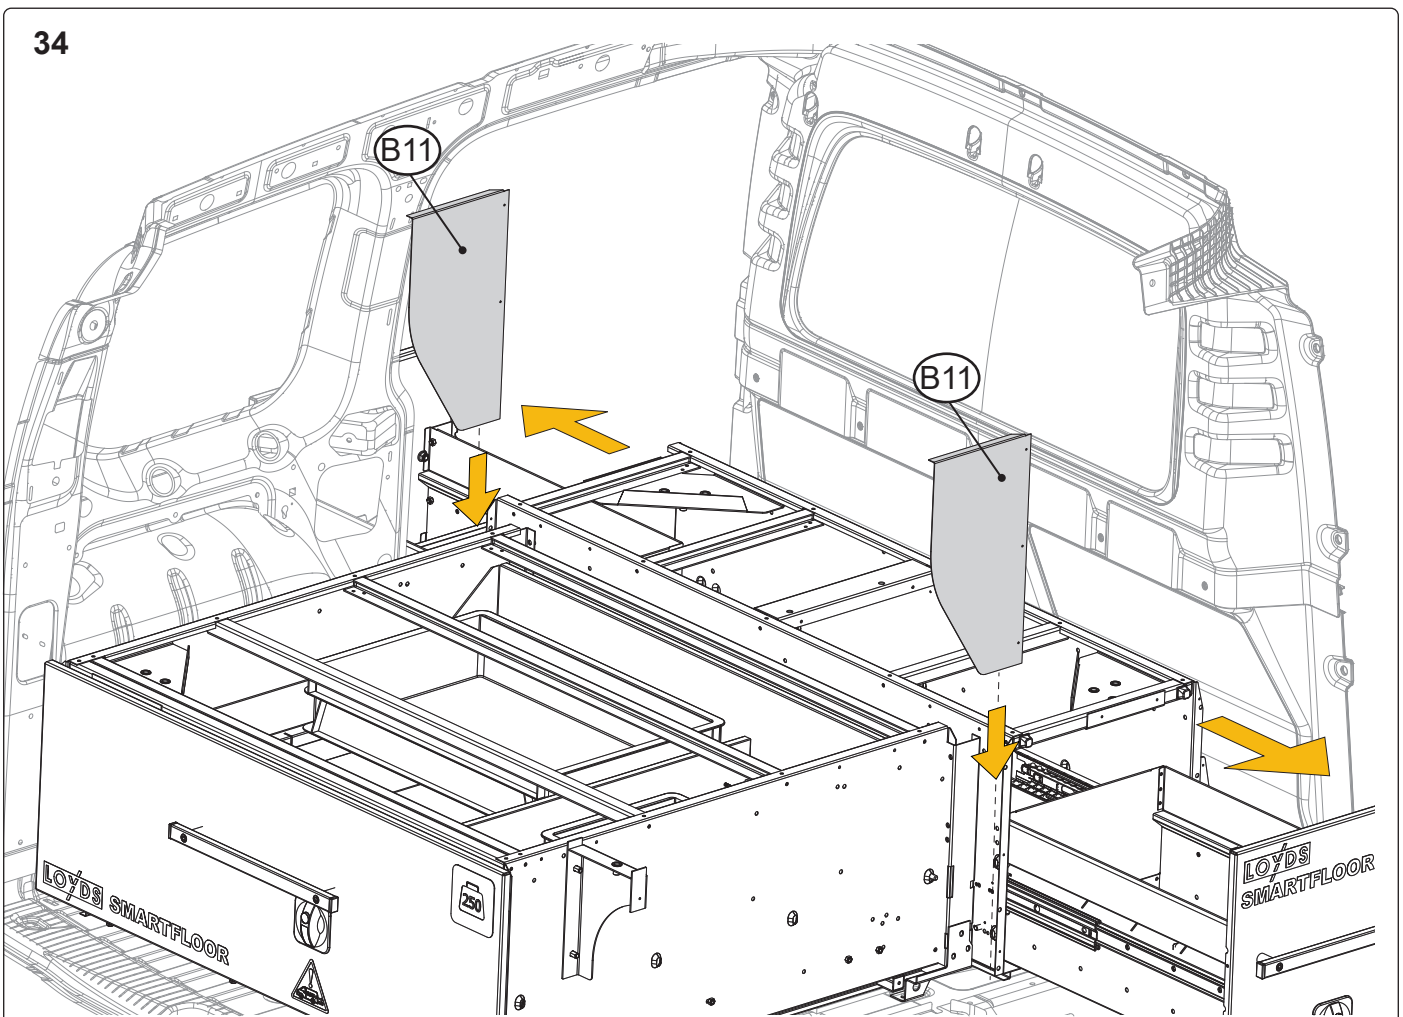


35

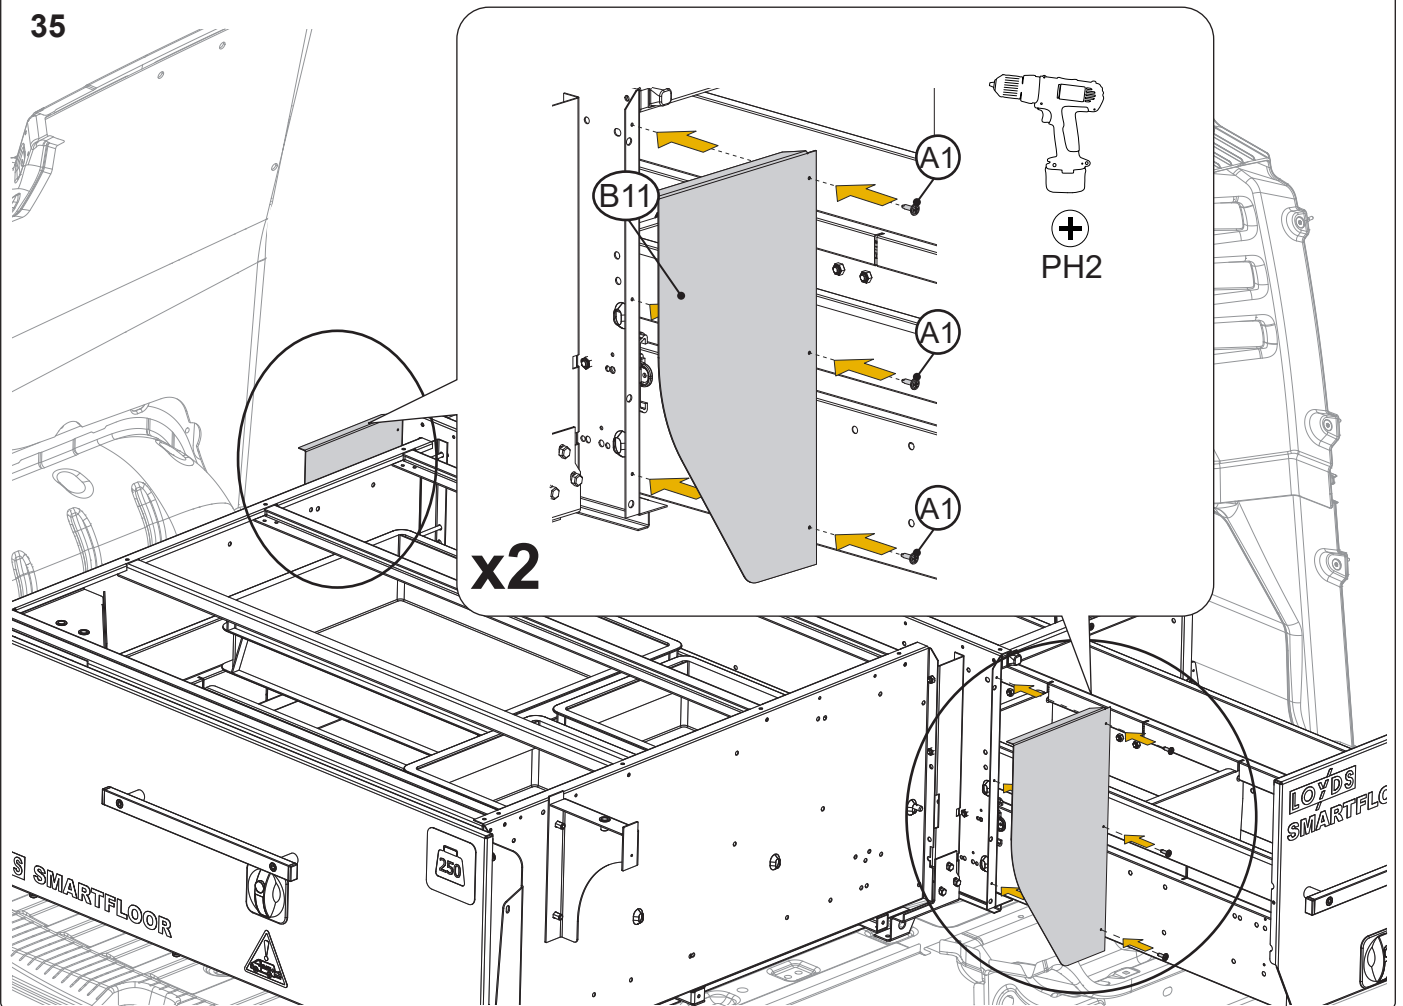


36

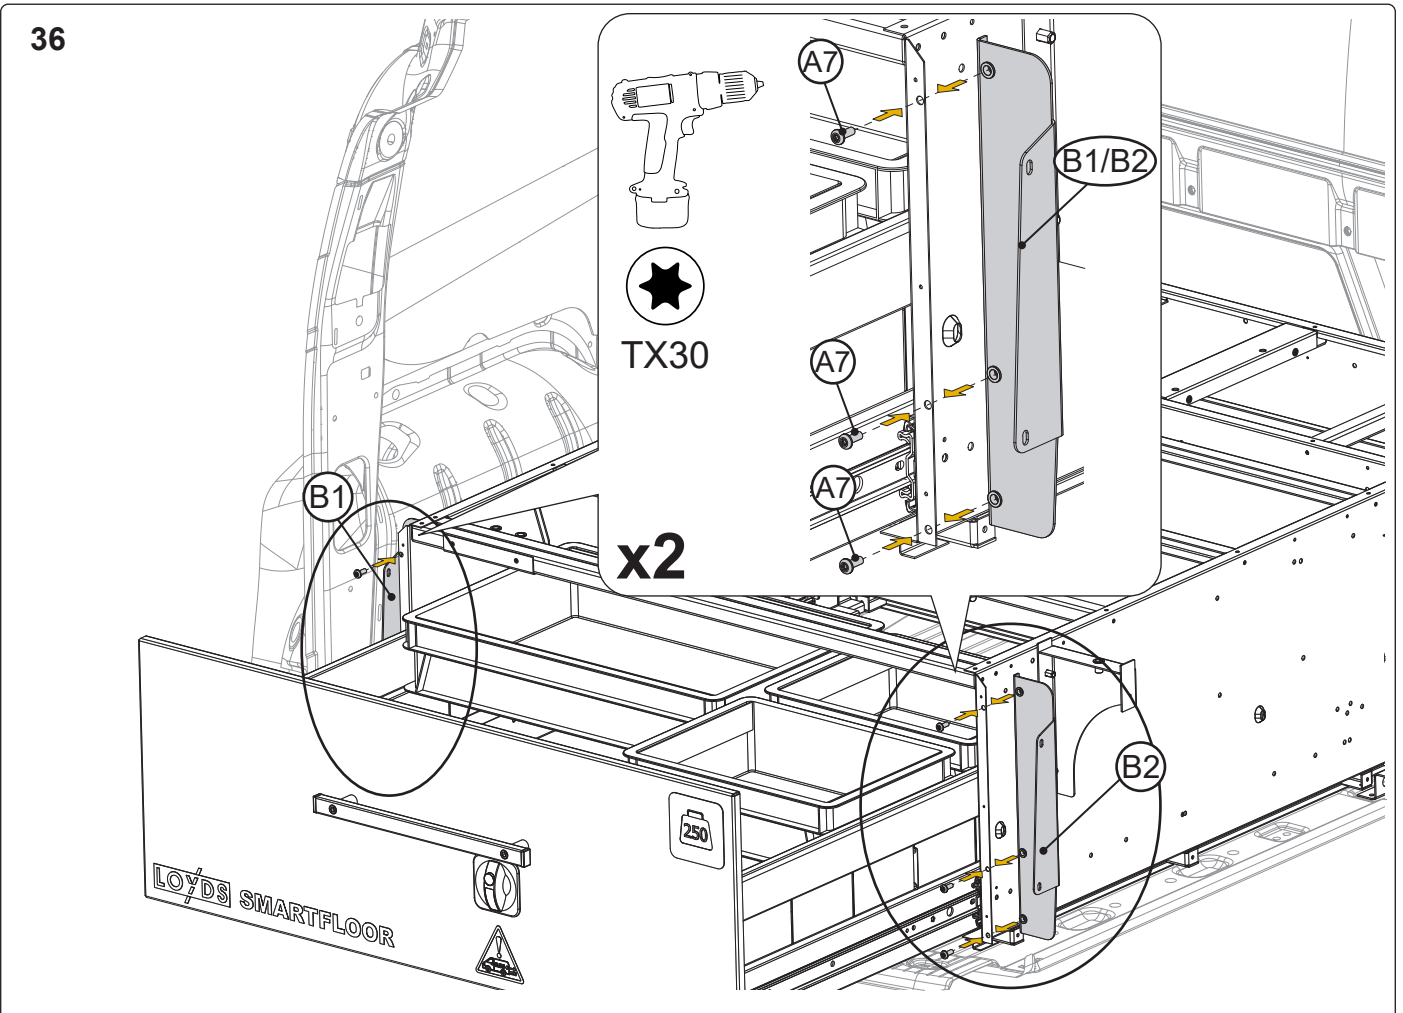


37

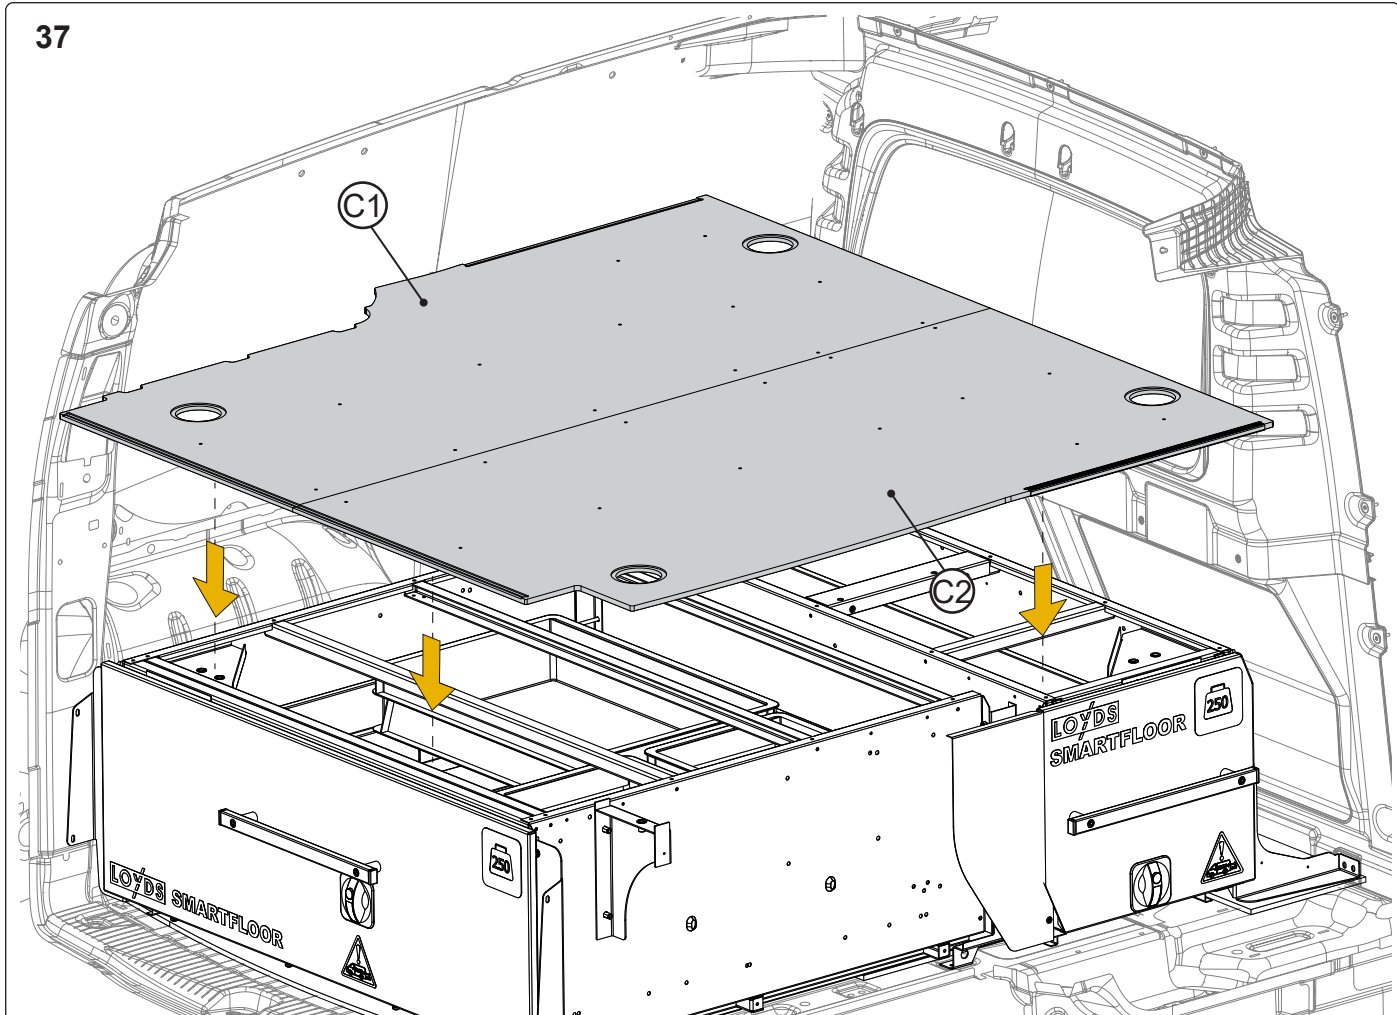


38

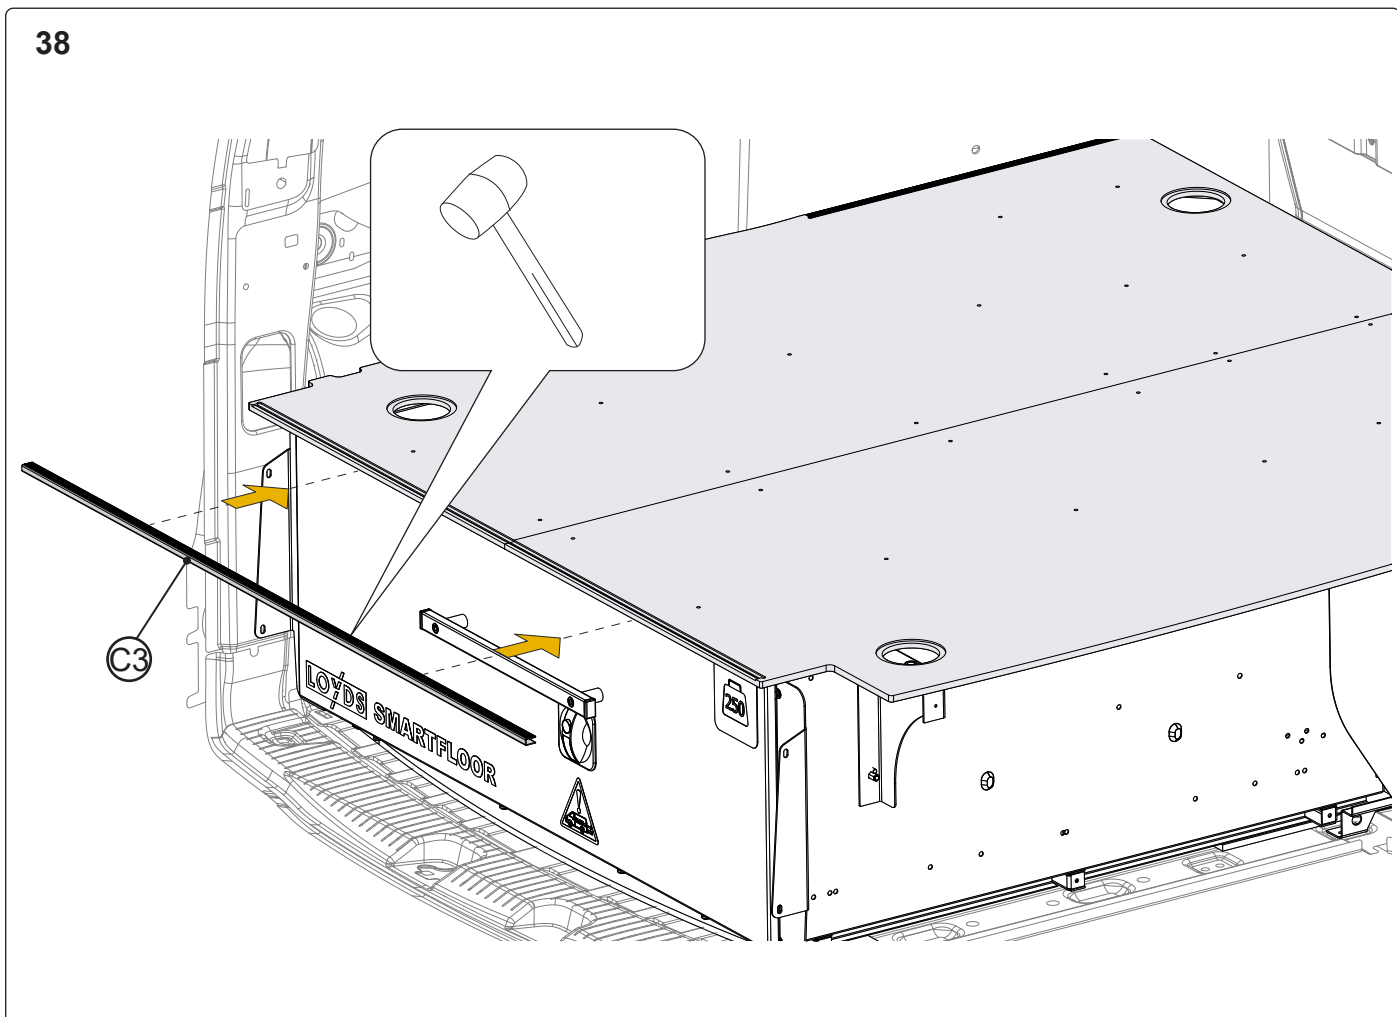


39

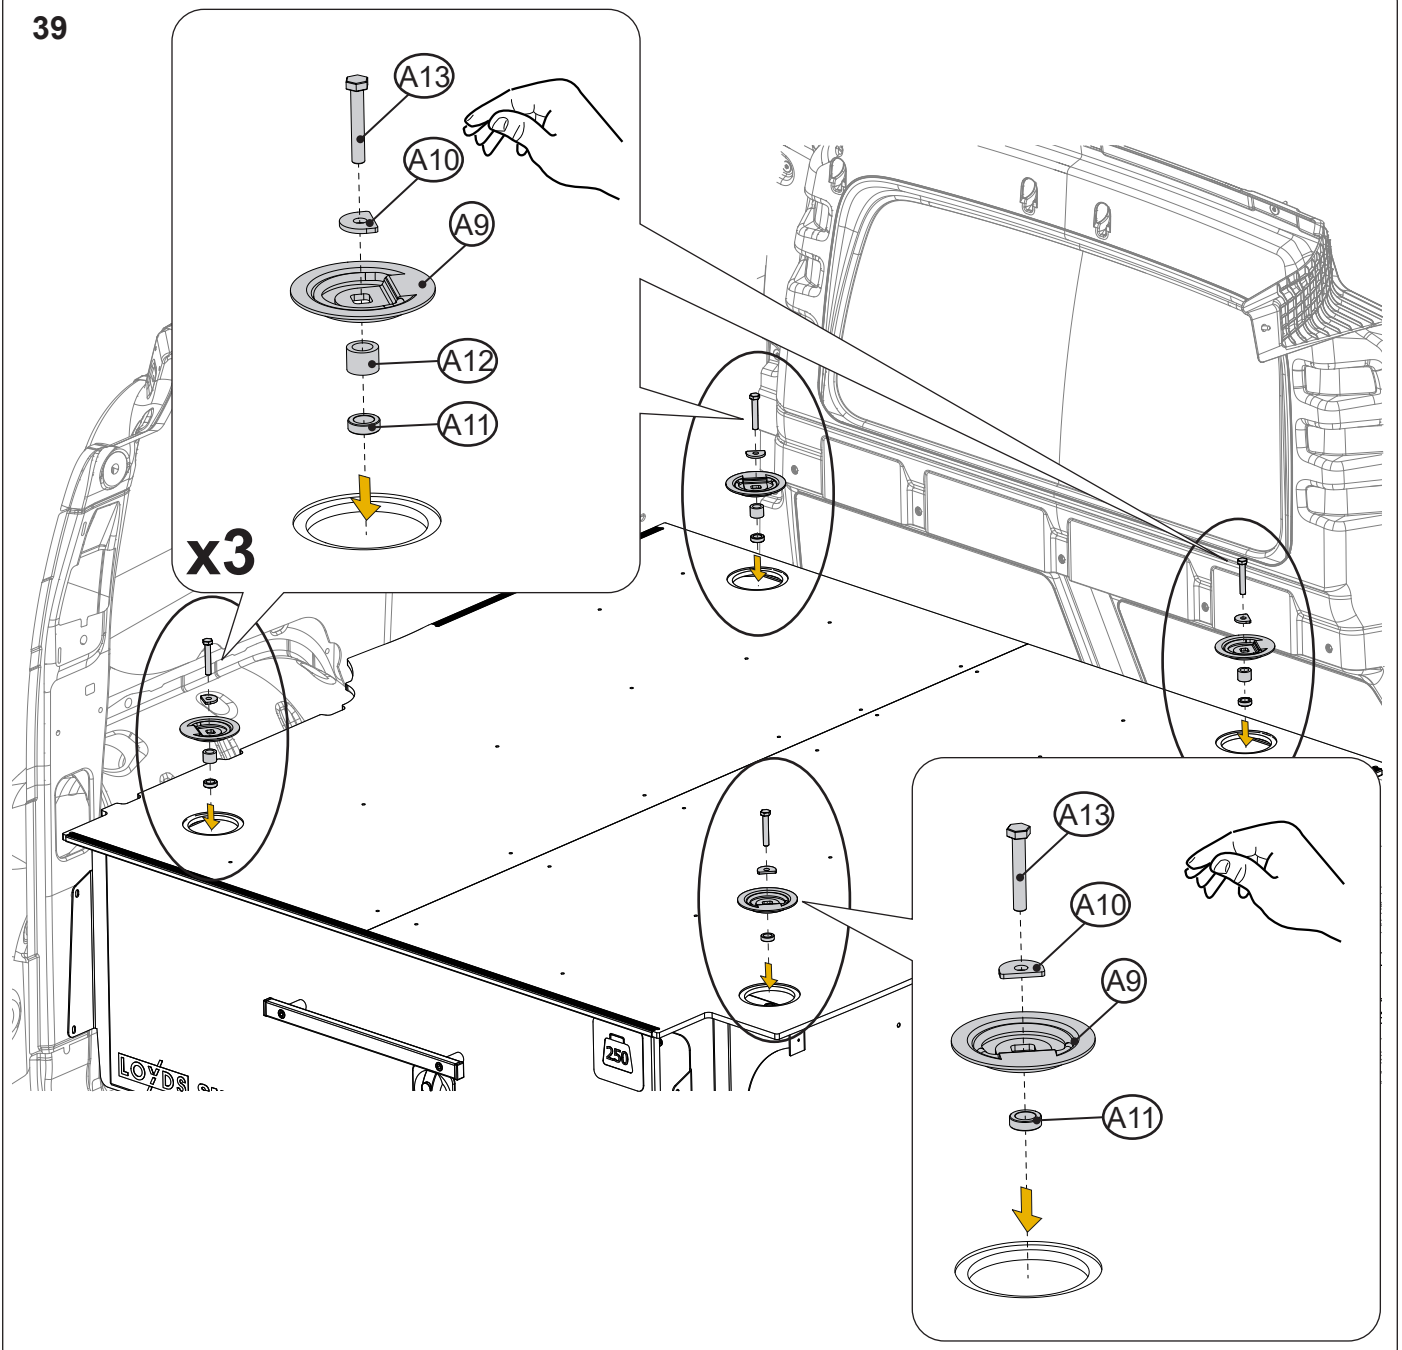

40

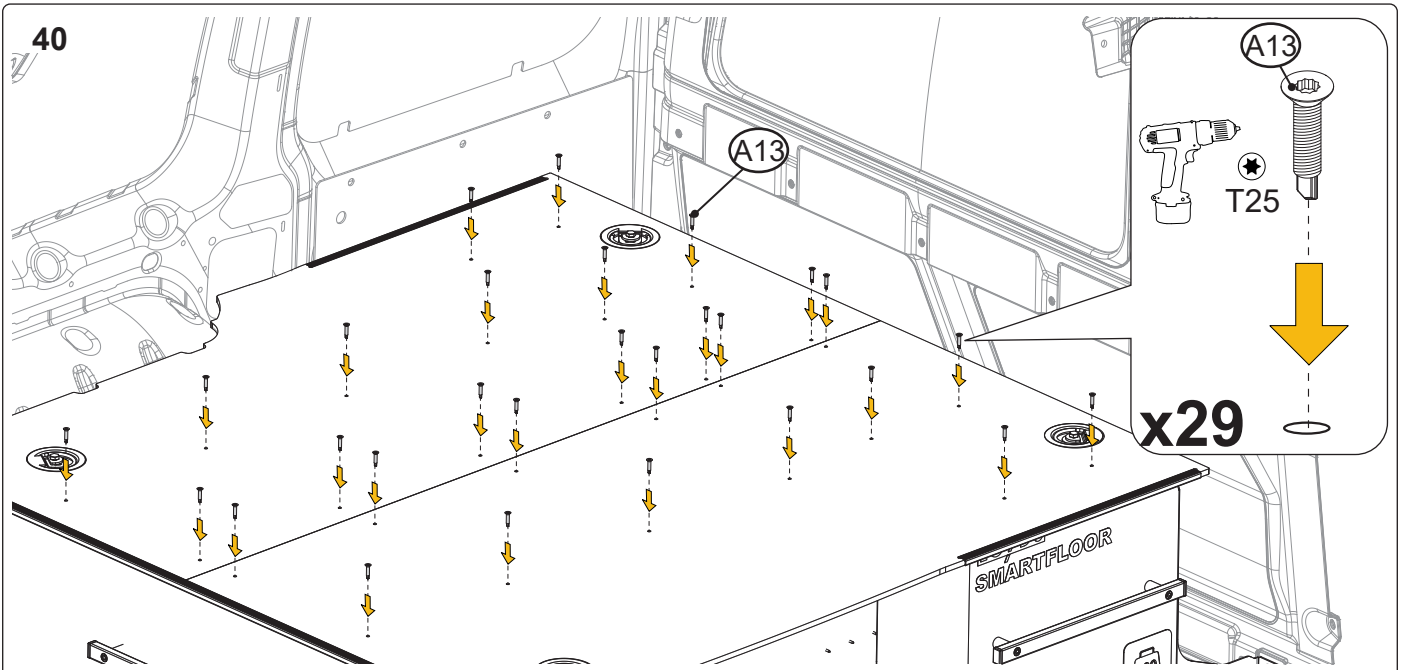


41

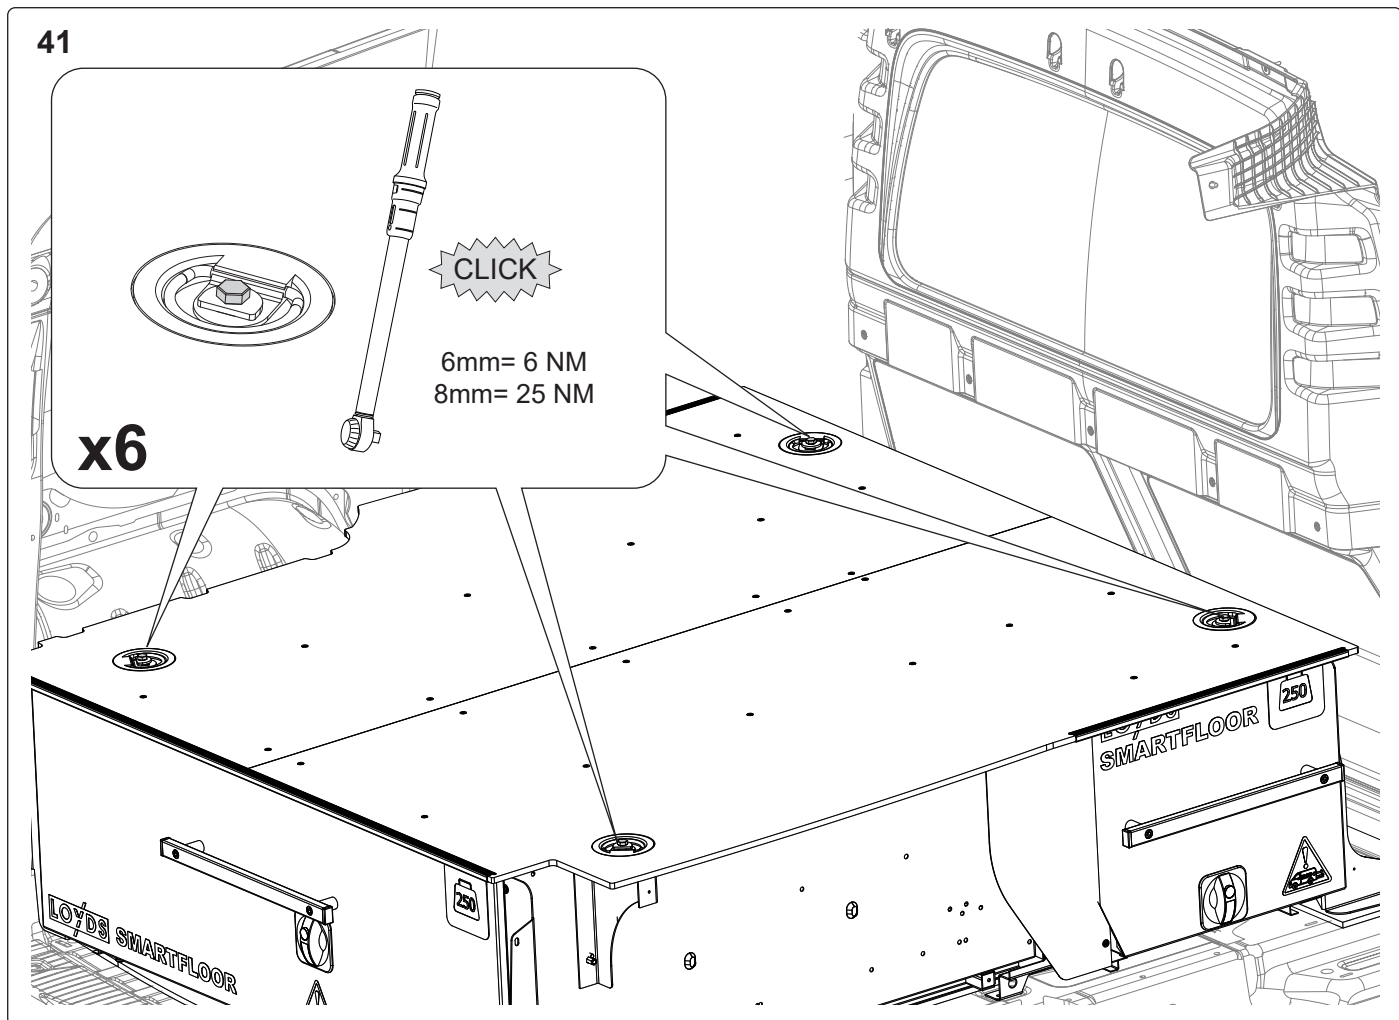


42

FOR **ORIGINAL** AND **PREFERENCE** SEPARATOR

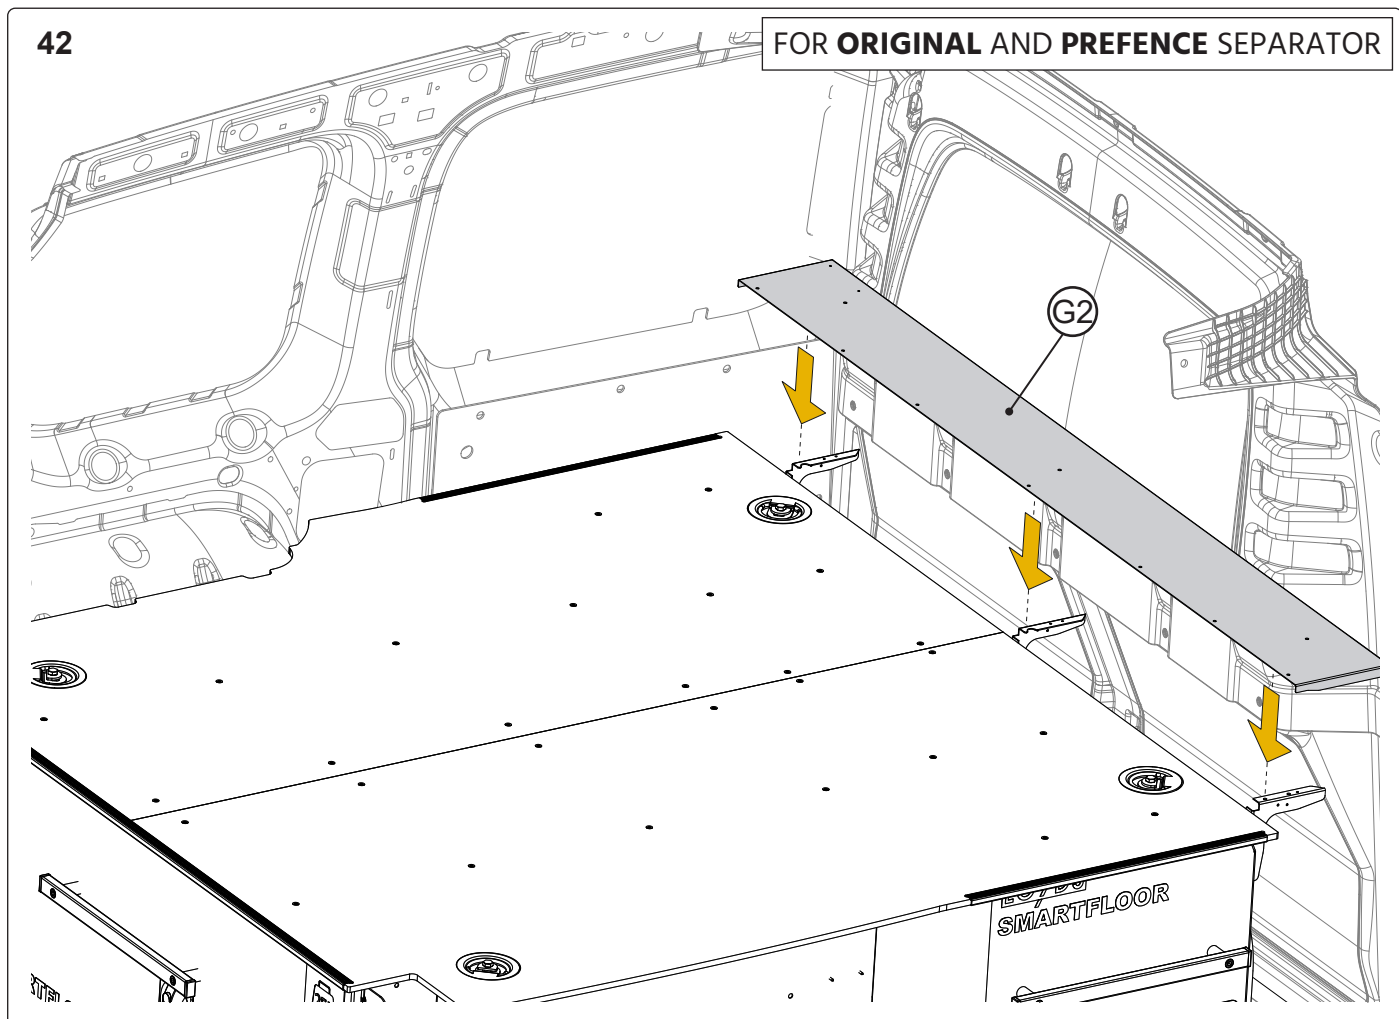


43

FOR **ORIGINAL** AND **PREFERENCE** SEPARATOR

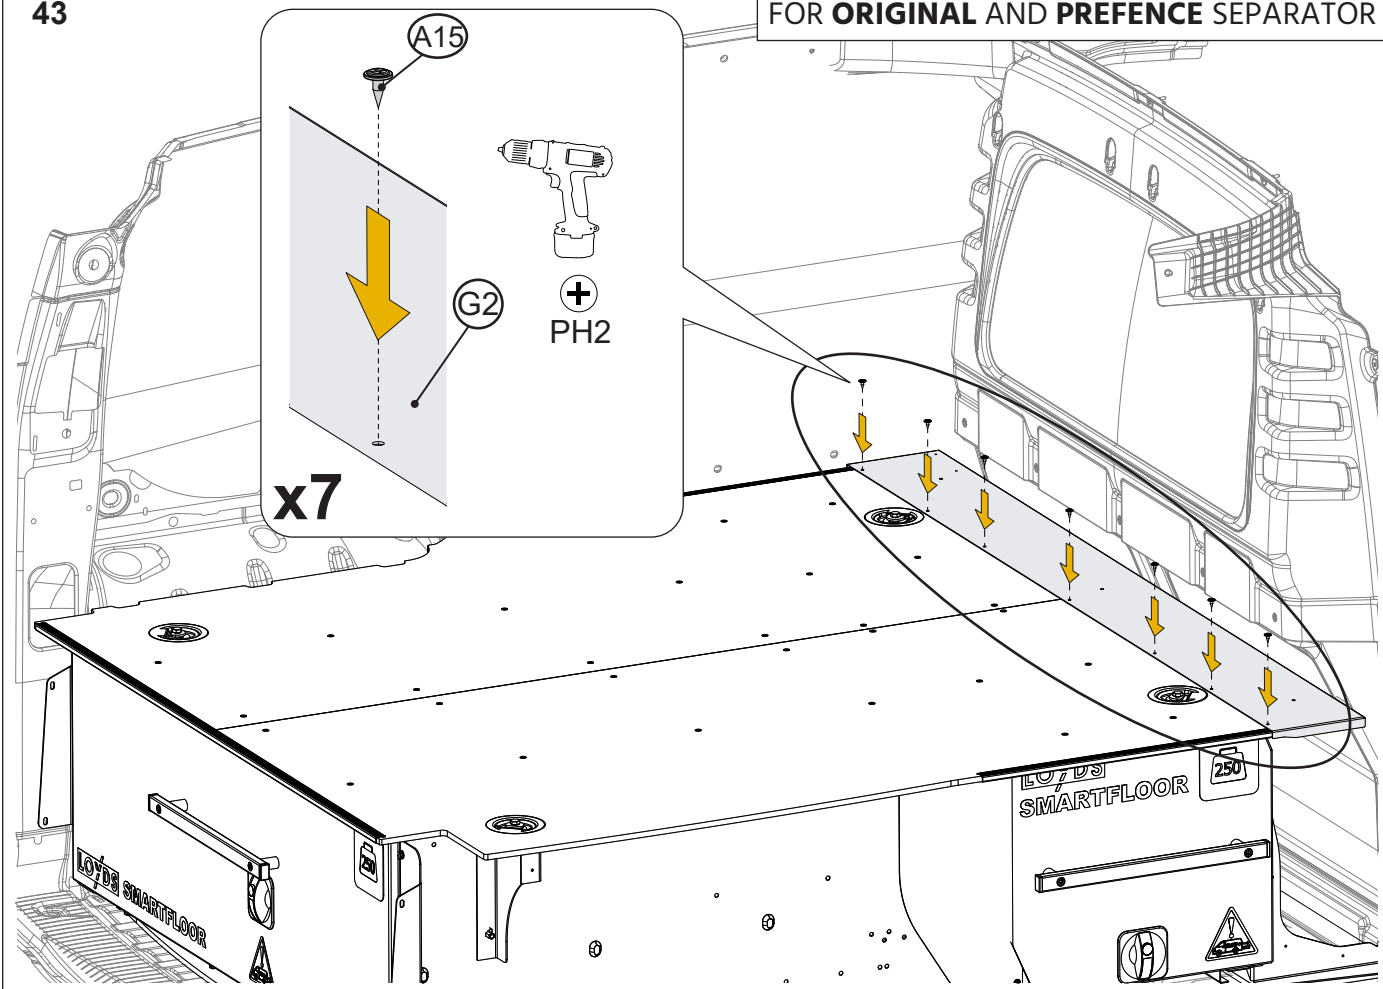


44

FOR **ORIGINAL** AND **PREFERENCE** SEPARATOR

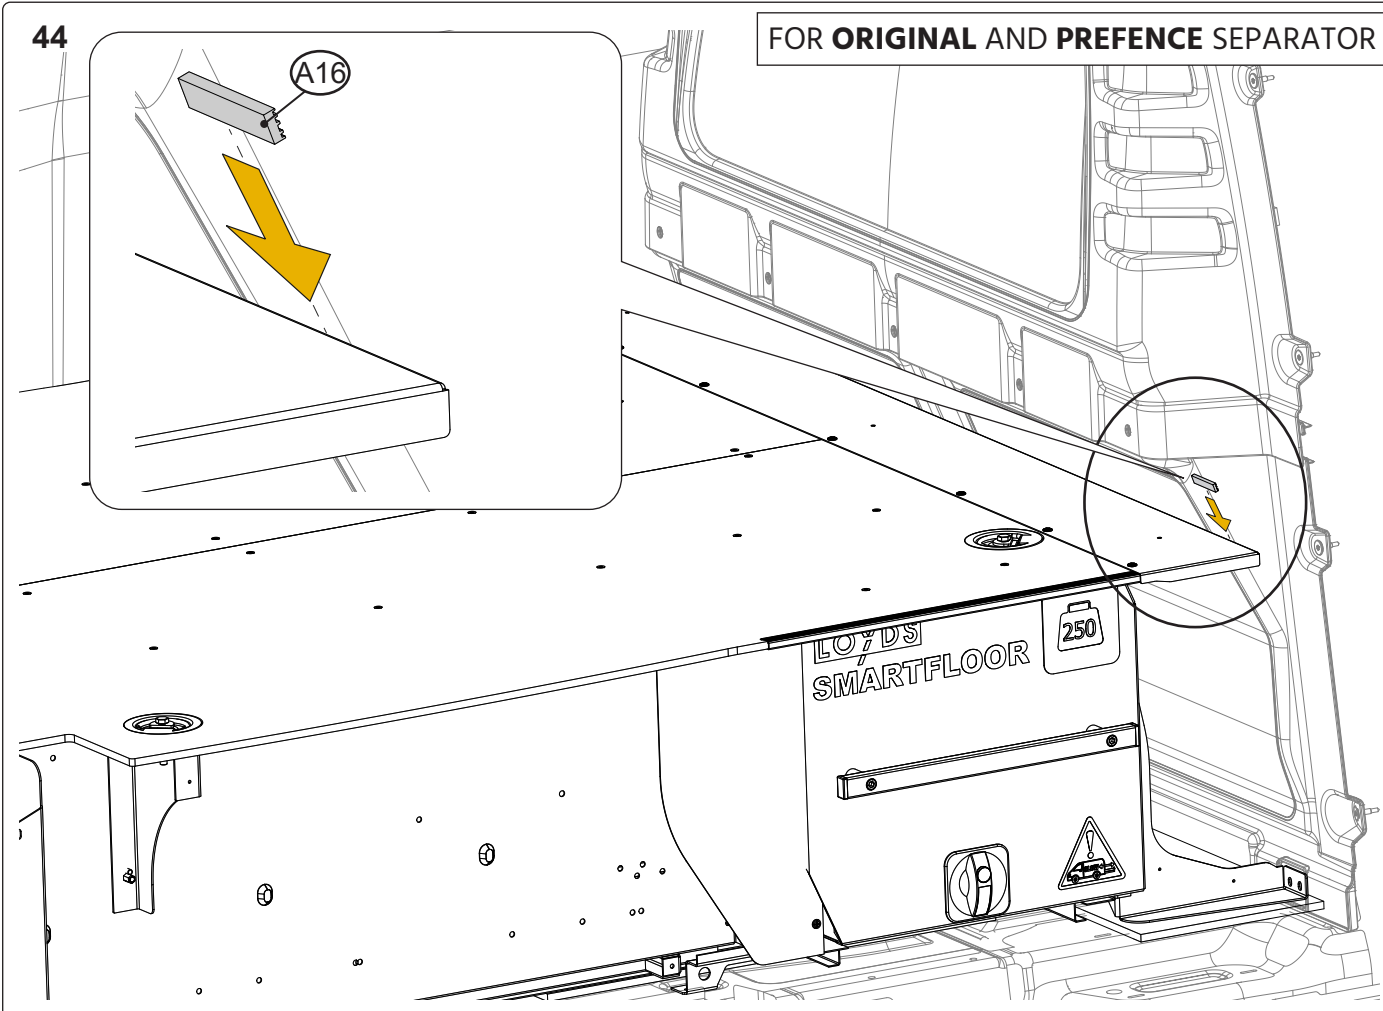

45

FOR LOYDS SEPARATOR

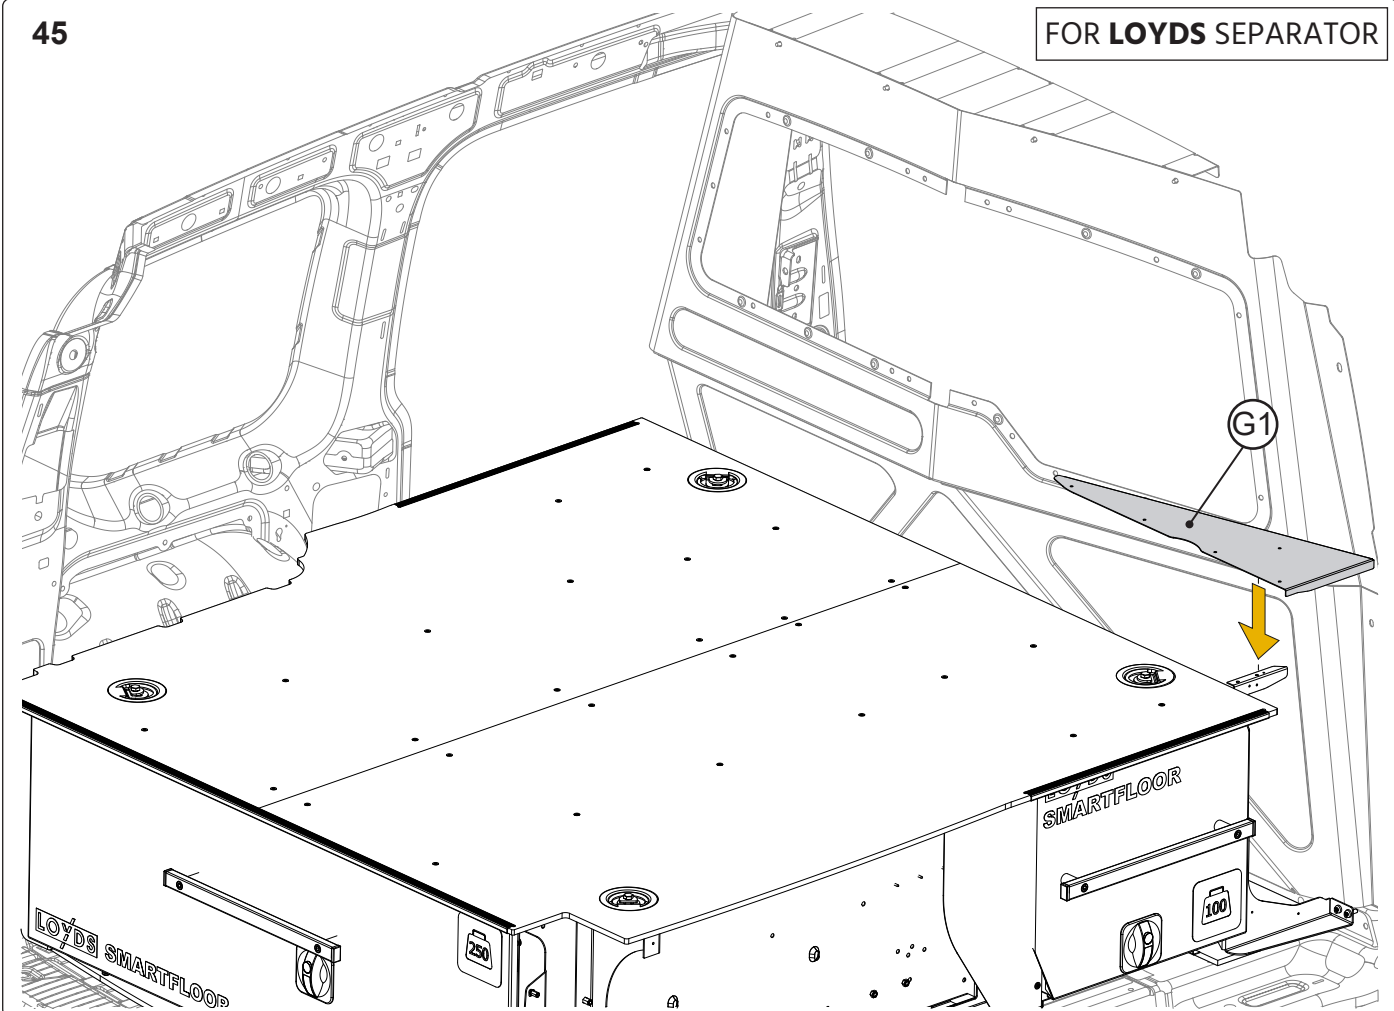

46

FOR LOYDS SEPARATOR

