


VW T7 & Ford Custom

Smartfloor Kit Complete L1 2SLD

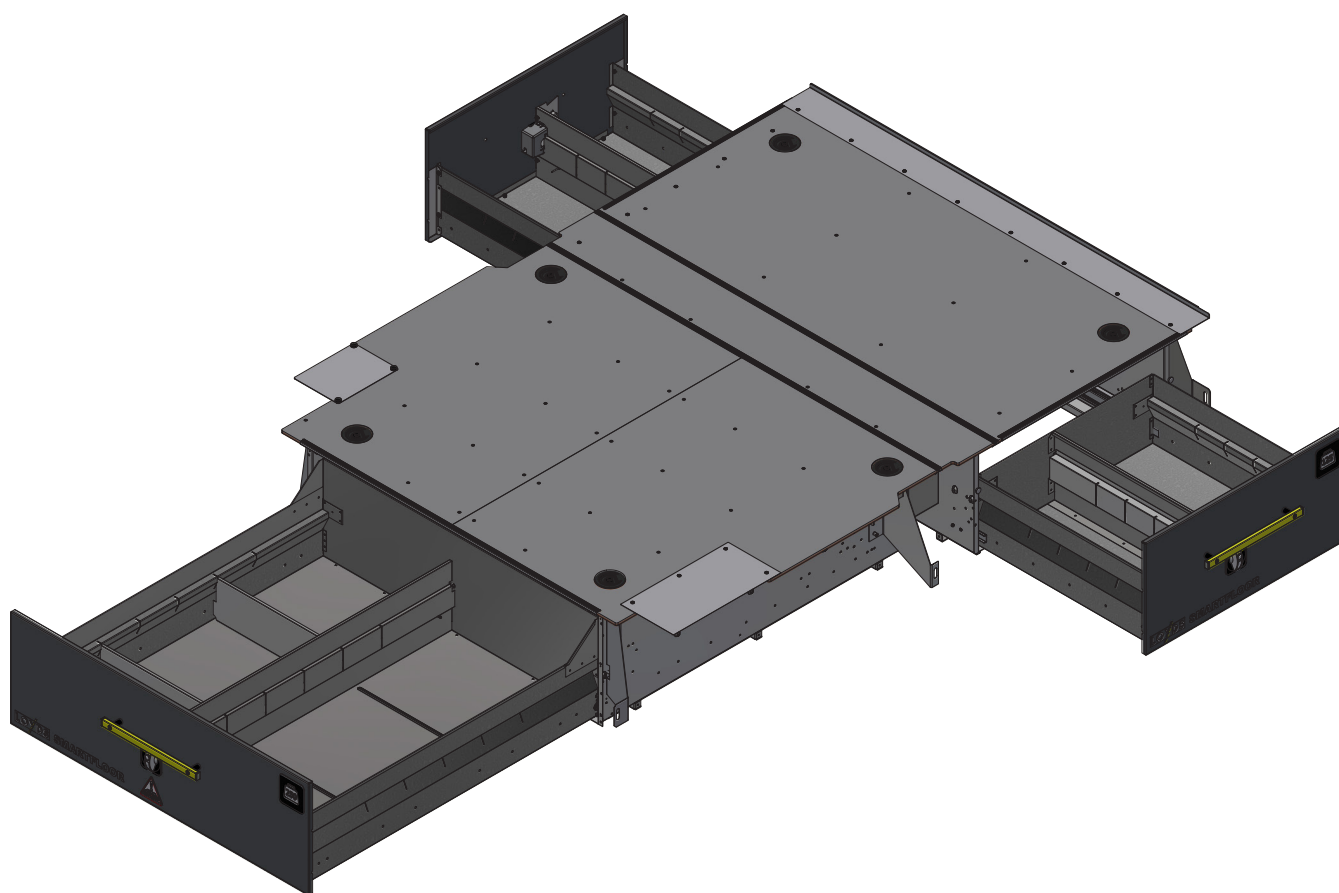

Installation Manual 15029906_A


Loyds Industri AS - 2025-04-15

LOYDS


Revision Record

Rev nr	Date	Page	Picture	Update	New	Deleted steps
A	2025-04-15				X	


Tools

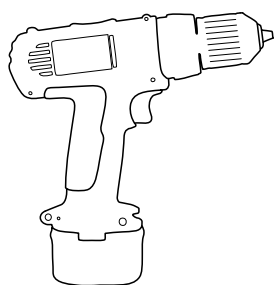


T25
T30




PH2




6 mm

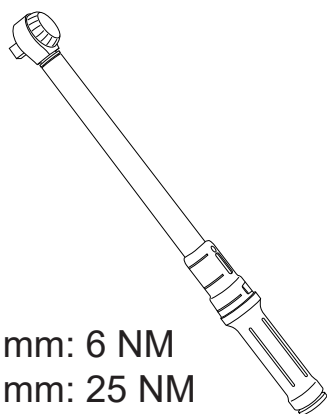

6 mm: 6 NM
8 mm: 25 NM

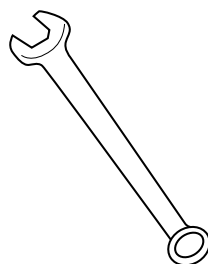


13 mm

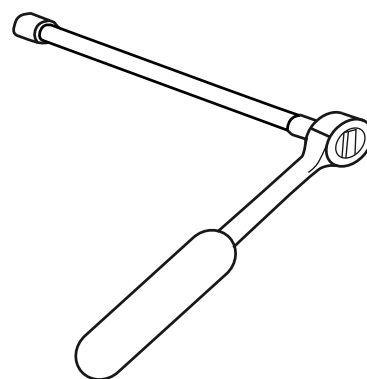


Use colors when printing this installation manual. / Ved utskrift, bruk farger.

15026711 Complete SF Transit Custom & Transporter T7 L1 2SLD

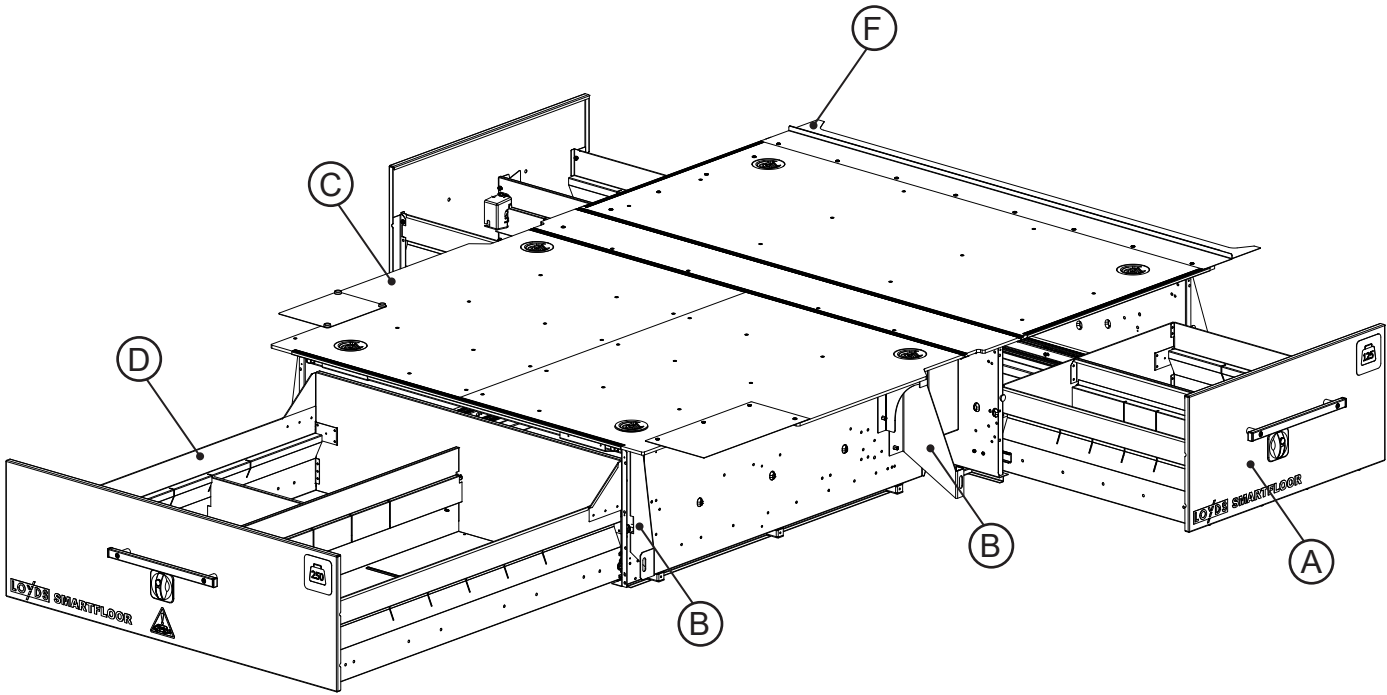


Number	Quantity	Part Number	Definition
A	1	15029475	FD2 W770xL750 ASSY
B	1	15026188	Steel Bracket Set Ford Transit Custom L1 2024
C	1	15026186	Floor Kit Ford Transit Custom L1 2024
D	1	15029485	RD W1140xL1200 ASSY
F	1	15026714	SF VW T7 L1 L2 Cover Plate Loyds Sep

15026188 Steel Bracket Set Ford Transit Custom L1 2024

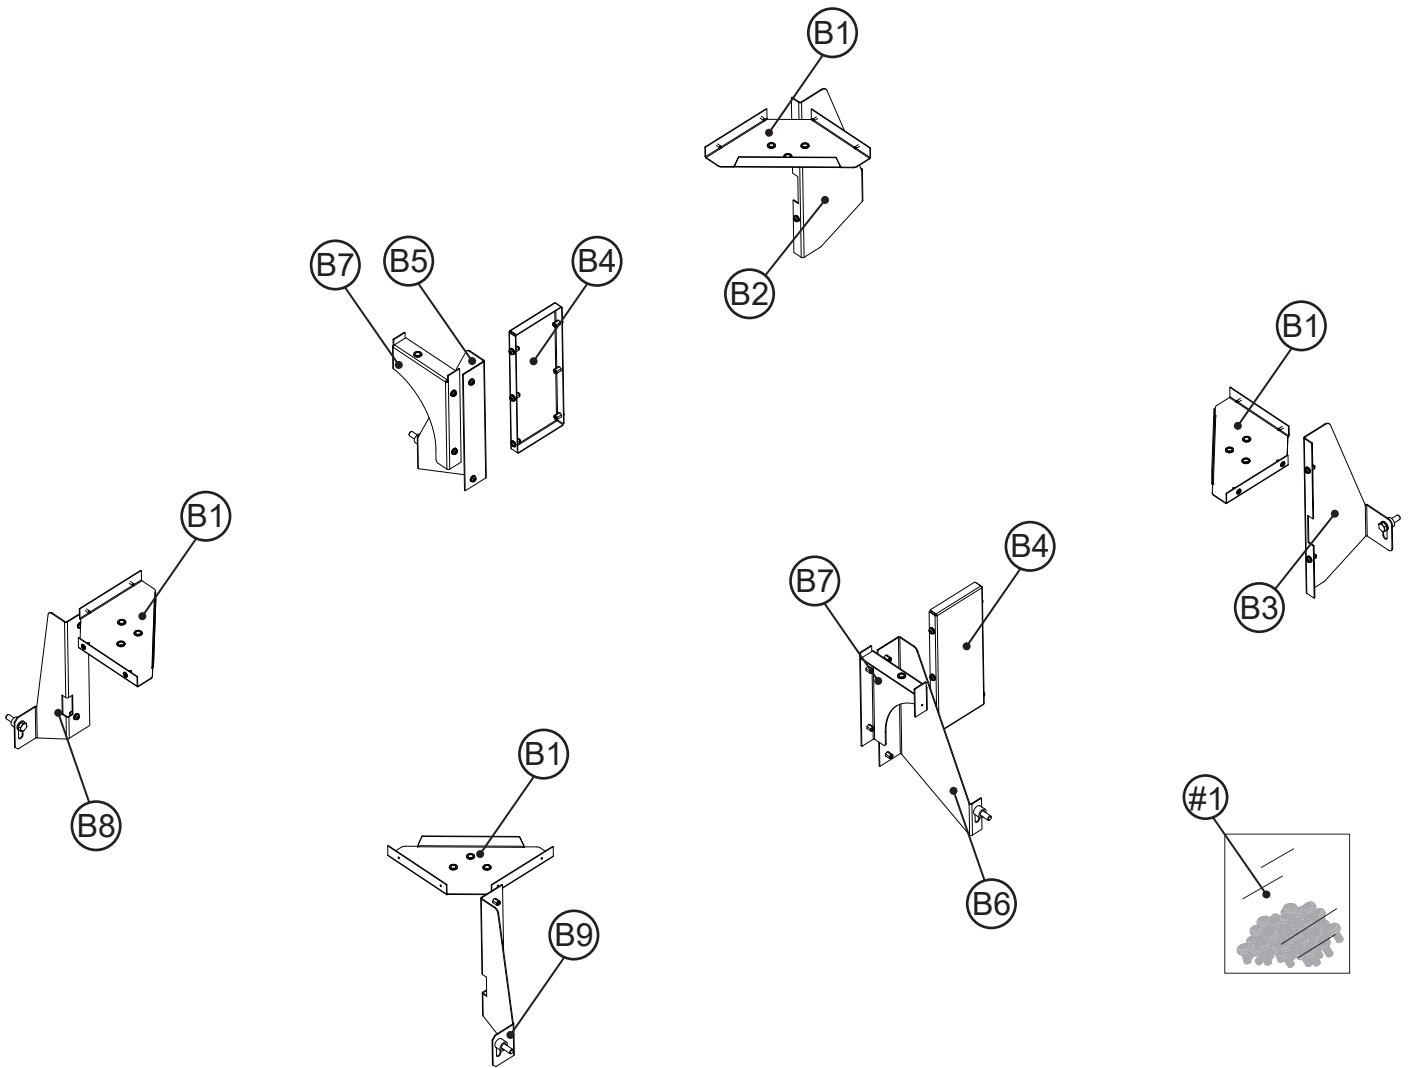


Number	Quantity	Part Number	Definition
B1	4	15018460	Bracket Latch Inner 8mm ASSY
B2	1	15025670	Bracket Front Left Transit Custom ASSY
B3	1	15026182	Bracket Front Right Transit Custom ASSY
B4	2	15026179	Bracket Distance Ford Transit Custom L1 2024 ASSY
B5	1	15025677	Bracket Side Left Transit Custom ASSY
B6	1	15025681	Bracket Side Right Transit Custom ASSY
B7	2	15018461	Bracket Latchcup Side M8 SF 2020 ASSY
B8	1	15025679	Bracket Rear Left Transit Custom ASSY
B9	1	15025683	Bracket Rear Right Transit Custom ASSY
#1	1	15026330	Fitting Kit Bracket Set Ford Transit Custom L1 2024

15026186 Floor Kit Ford Transit Custom L1 2024

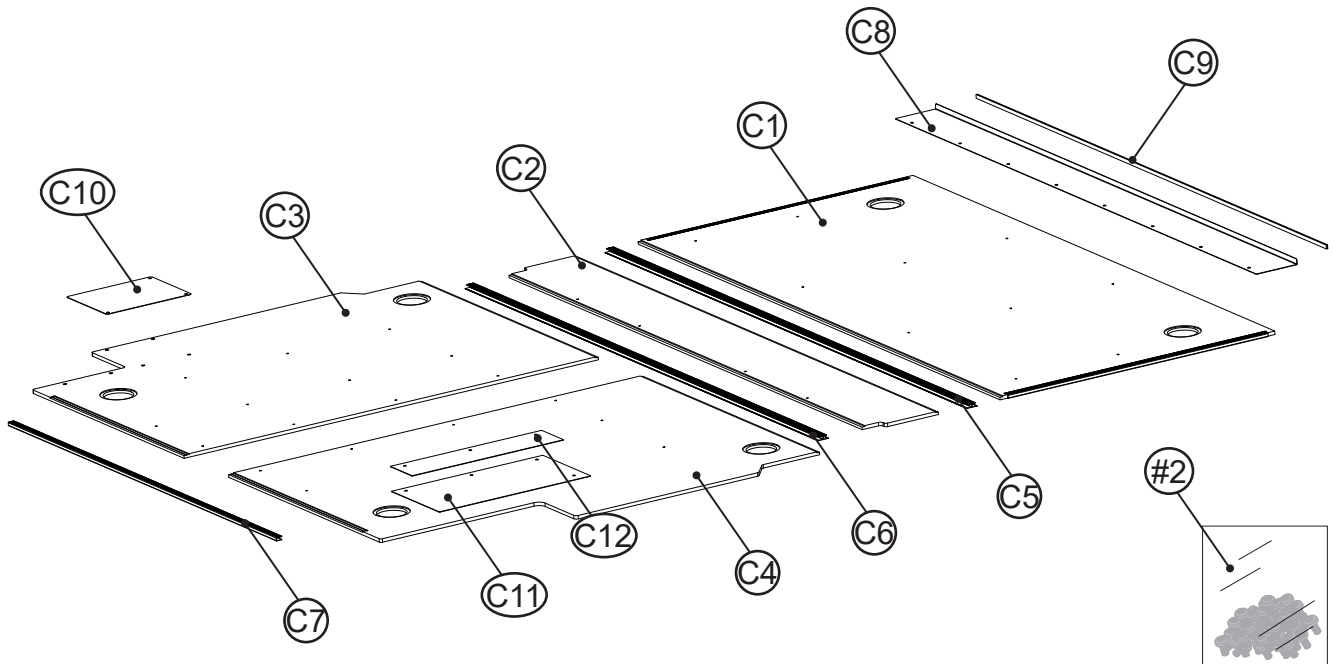


Number	Quantity	Part Number	Definition
C1	1	15026185	Floor Front Ford Transit Custom L1 L2 2024 ASSY
C2	1	15026161	Floor Mid Ford Transit Custom L1 2024
C3	1	15026159	Floor Rear Ford Transit Custom L1 2024
C4	1	15025441	Floor Front Front-Module Drawer PEJ SF2020 ASSY
C5	1	15026152	H-profile 9mm L=1653
C6	1	15026162	H-profile 9mm L=1613
C7	1	15022714	U-profile 9mm L=1224
C8	1	15026171	SF Ford Transit Custom L1 L2 Cover plate Front
C9	1	36.721004	Rubber Profile L1600mm
C10	1	15026163	SF Ford Transit Custom Tool Box Lid
C11	1	15028768	Cover Plate Transit Custom
C12	1	15028767	Cover Plate Transit Custom Converter Heater
#2	1	15026187	Fitting Kit Floor Kit Ford Transit Custom L1 2024

2x 15010236 Handle Assy

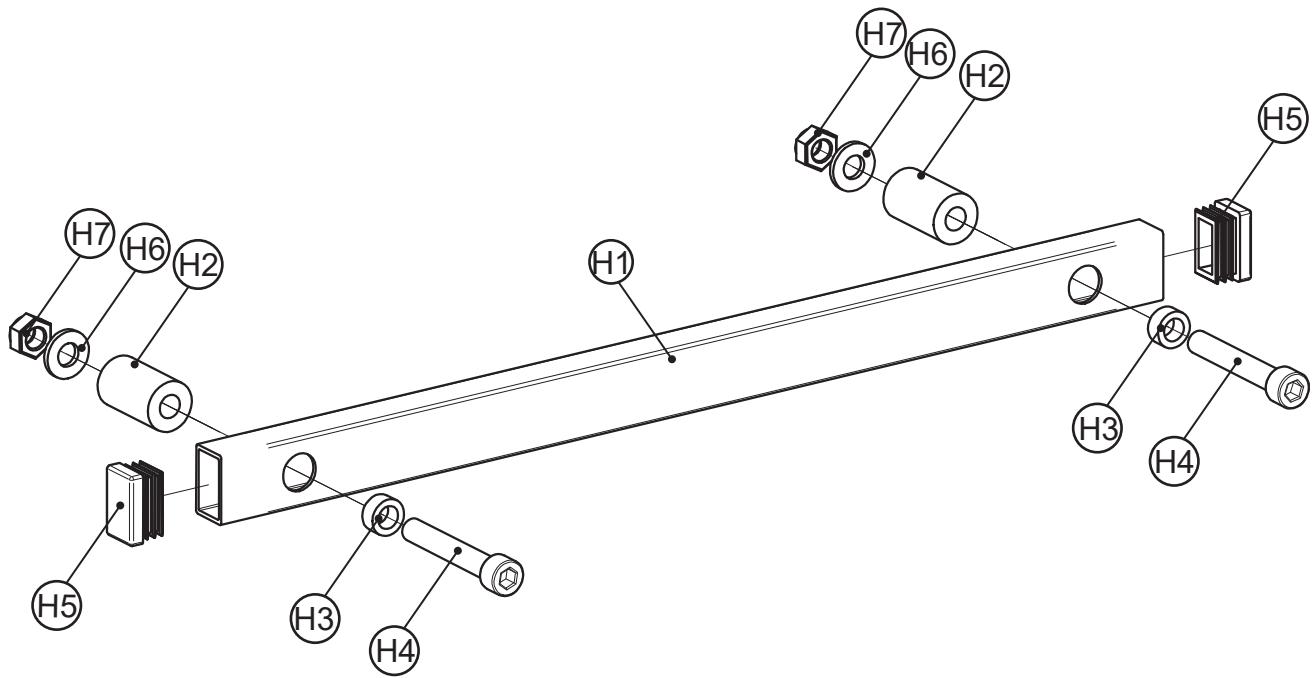


Number		Quantity	Part Number	Definition
H	H1	2	15009441	Handle Tube 25x15x286
	H2	2	15009443	Spacer Ø8,3x18x30 Nylon Black
	H3	2	15009443	Spacer Ø8,1x13x6mm Galv
	H4	2	15009444	Screw M8x50 Cylinderh Hex
	H5	2	15009438	End sleeve Black
	H6	2	8,4x17x2	M8 Washer, DIN 125
	H7	2	8 NMU	Mutter M8 Nyloc DIN985

15026330 Fitting Kit Bracket Set Ford Transit Custom L1


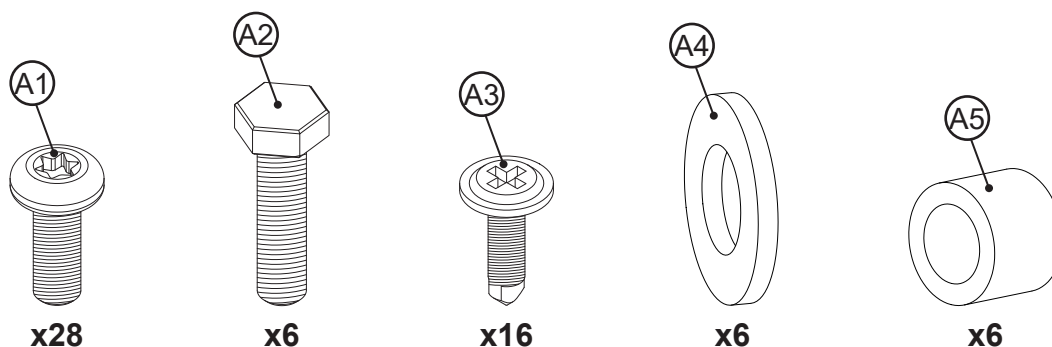


A1	15003551 M6x16 TX30 pan (DIN 7985)
A2	16000014 Skrue M10x40 K6-A4 Din933
A3	4,2x16 FL Screw Selfdrill flathead
A4	10,5X20X2 DIN 125 - A 10.5 Washer
A5	15001584 Distansehylse D20 d13 h15


15026187 Fitting Kit Floor Kit Ford Transit Custom L1 2024

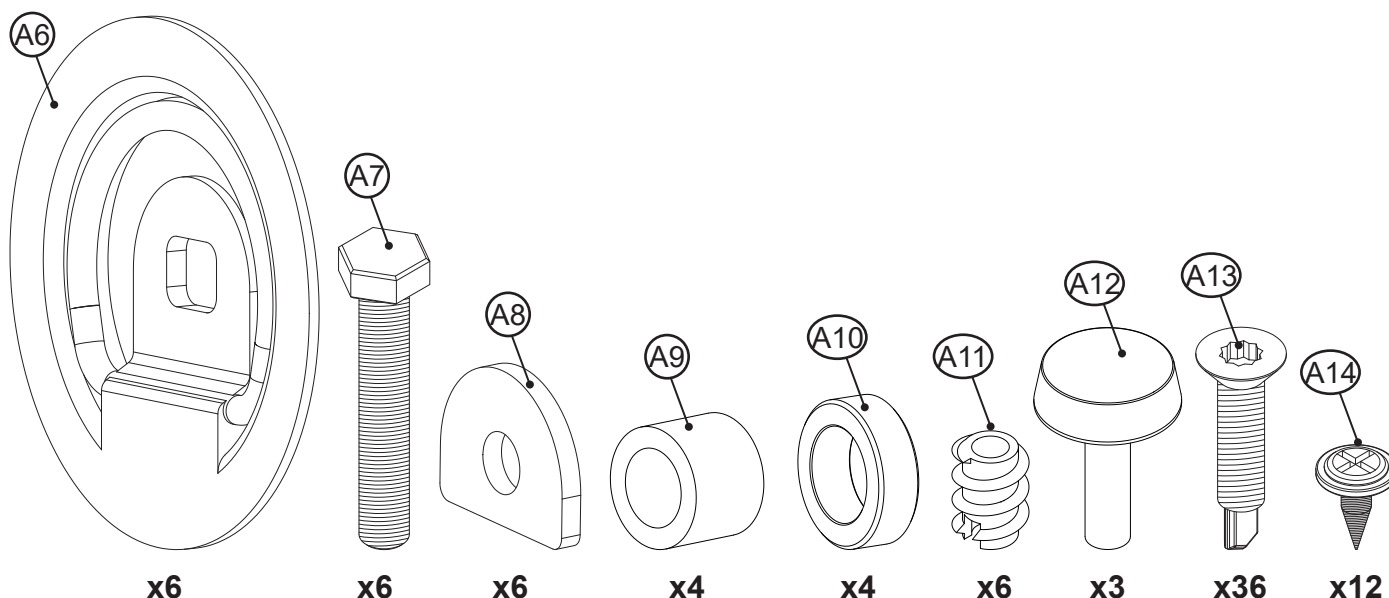


A6	15005497 Latch Cup Black Ø90 Ø12x15 1000Kp
A7	15004713 M8x50 screw, 6K DIN 933 Black, ElZn+Cr3
A8	15005884 Washer Latchcup for Ø8
A9	15001584 Distansehylse D20 d13 h15
A10	13x20x6,4 Spacer, U-709
A11	15010378 M6 Threaded insert with Hex socket
A12	M6x20 ø20 Rattskrue M6x20 Knob
A13	15016947 Screw 4,8x25 Selfdrill Counters EW25 Elz
A14	4,2x13 S Screw 4,2x13 Flathead Needle Black

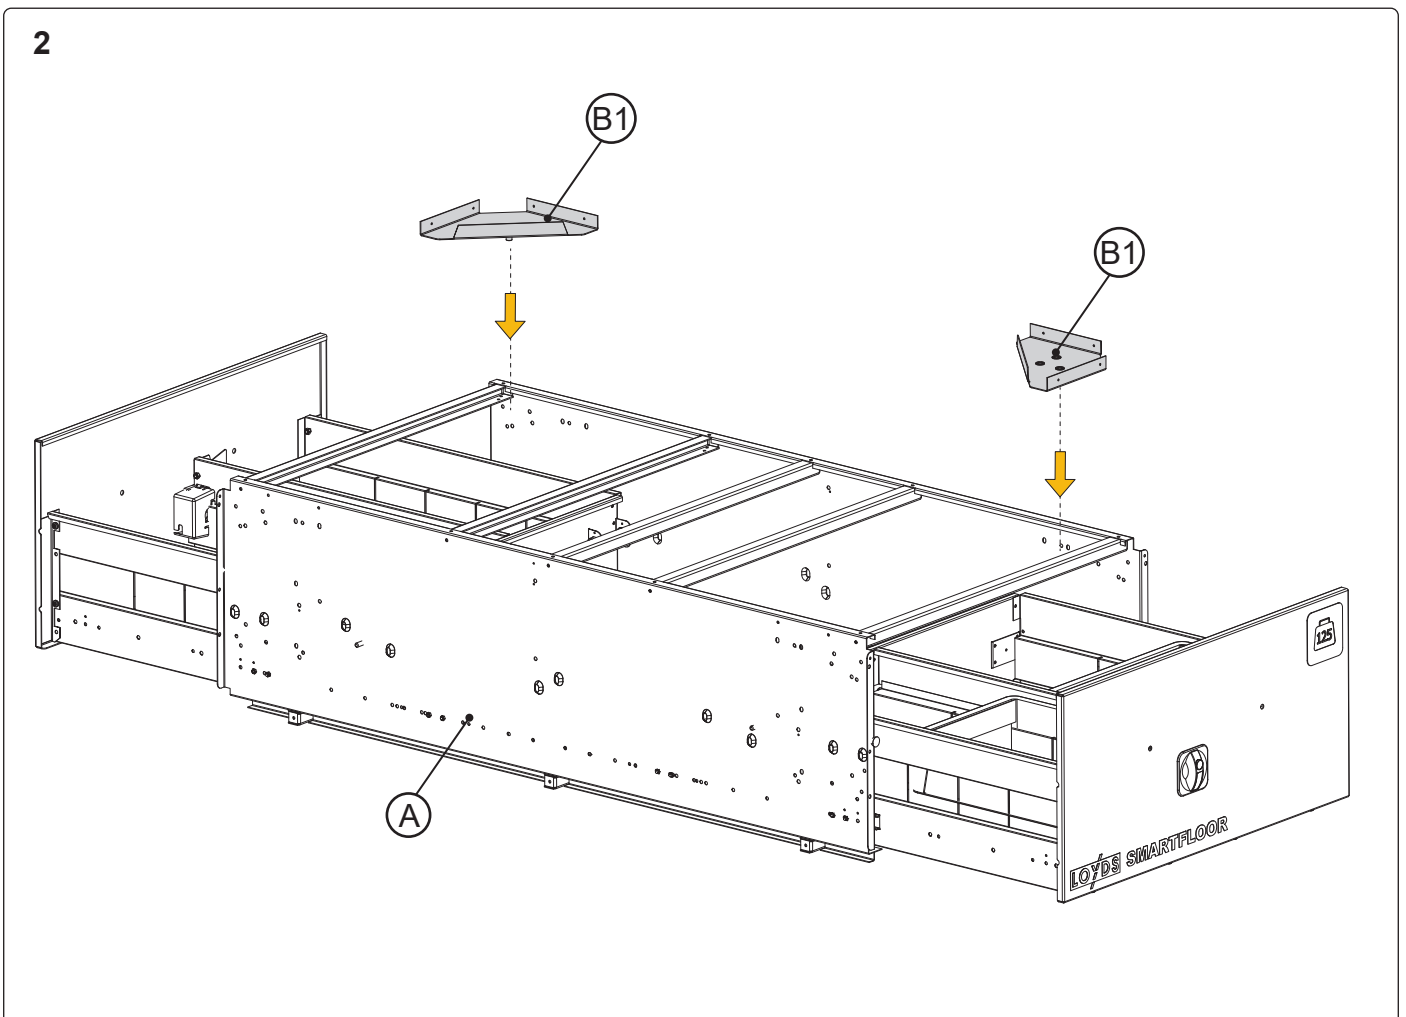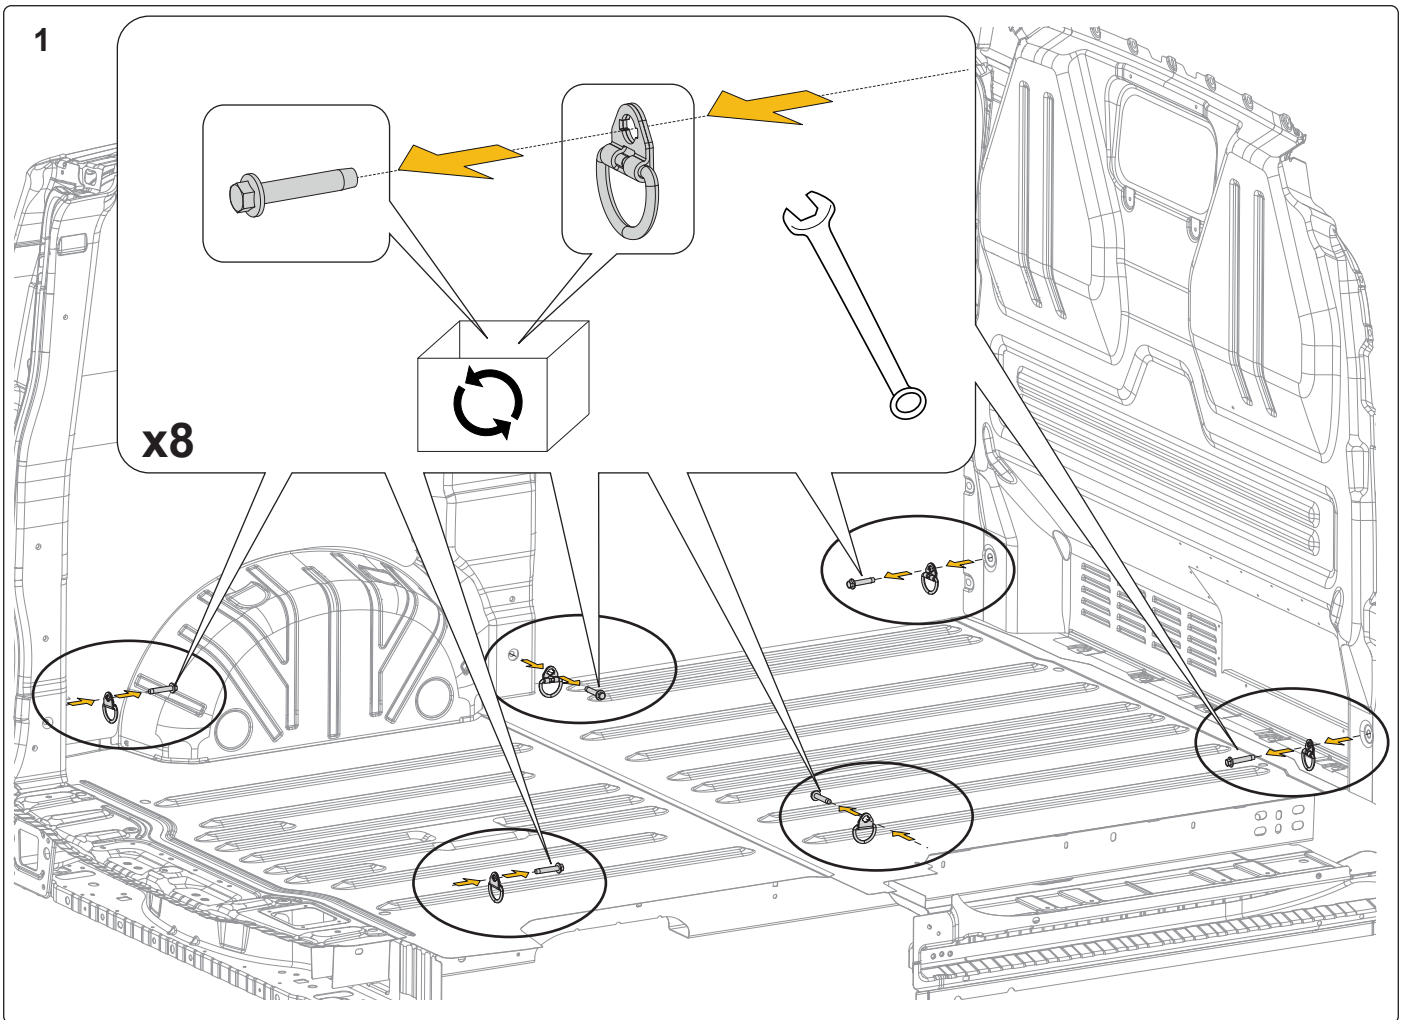



3

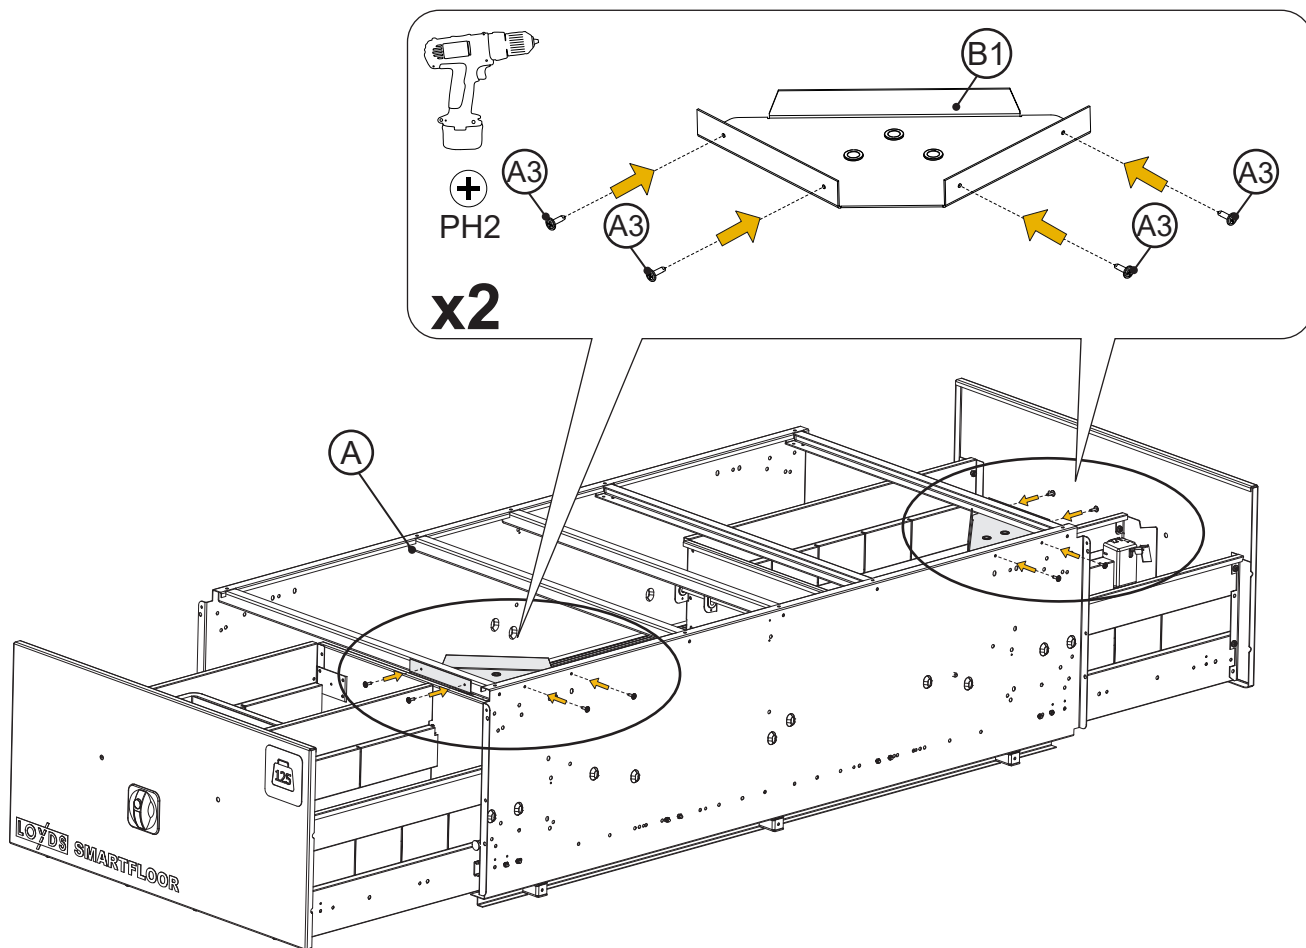


4

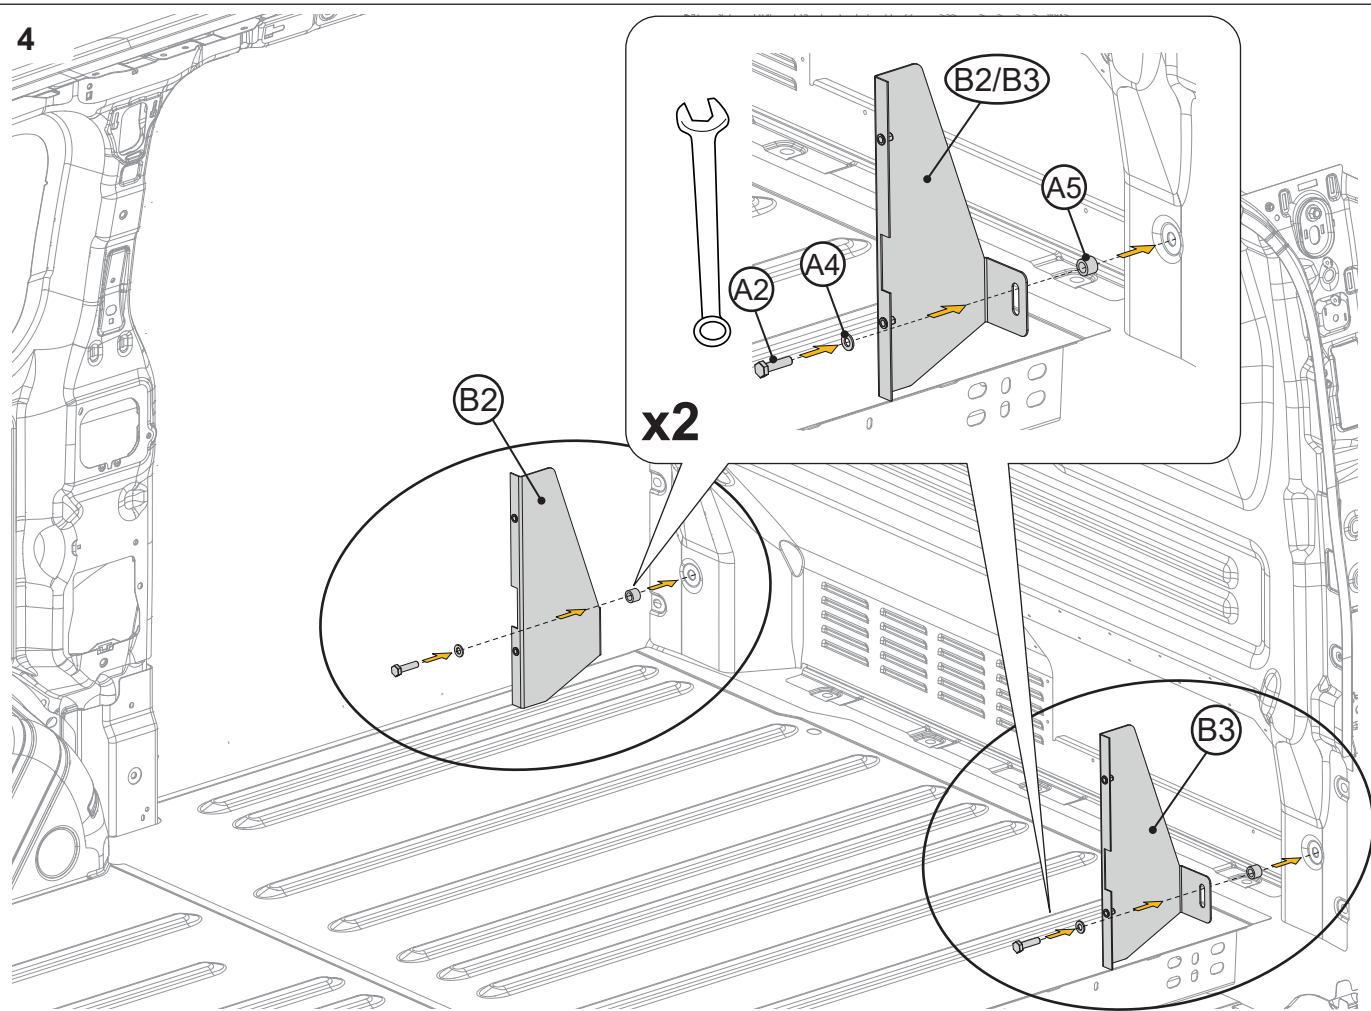


5

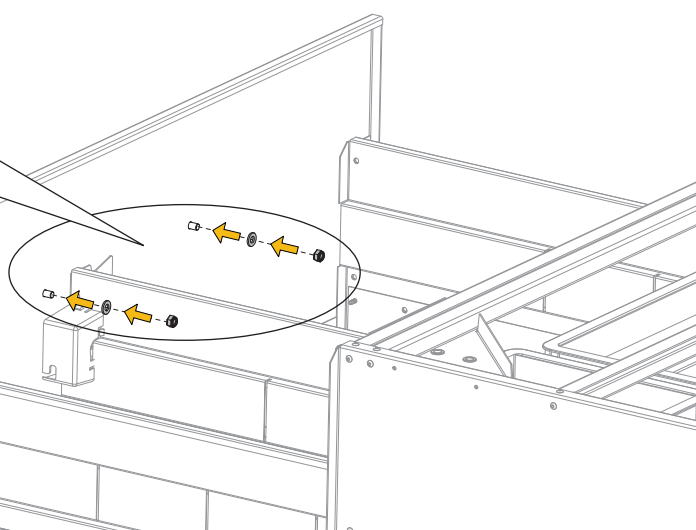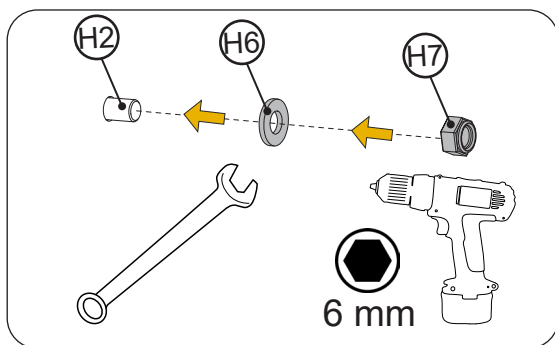


x3

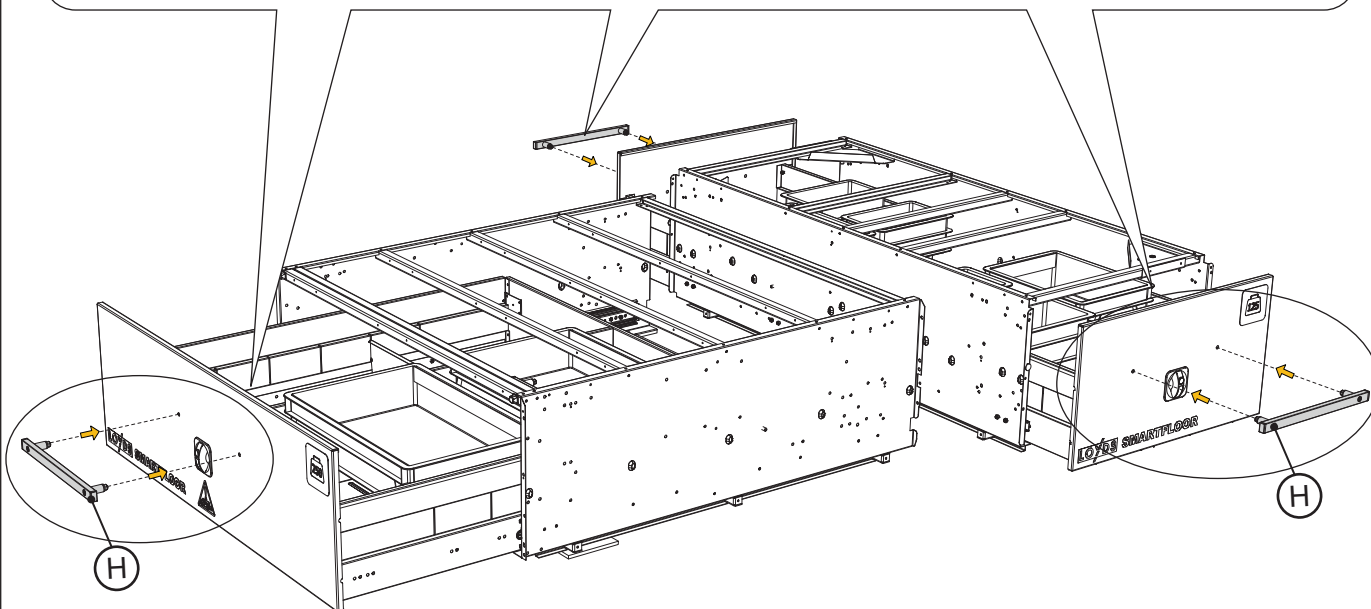


6

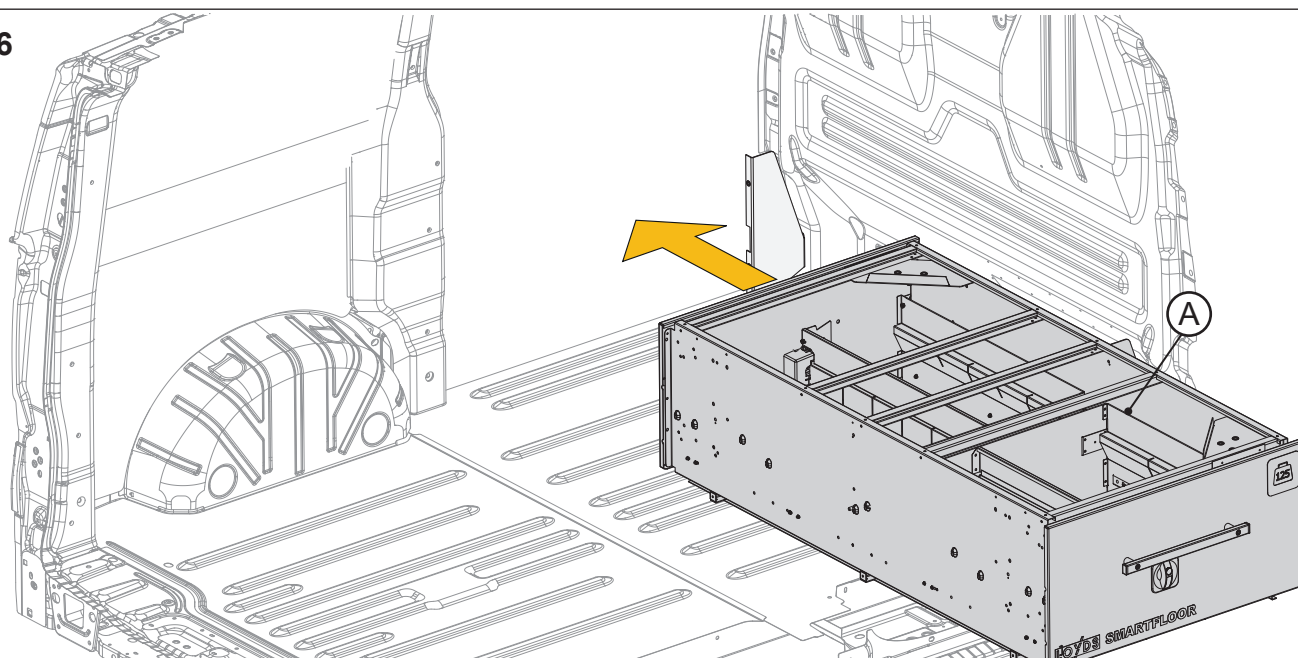


7

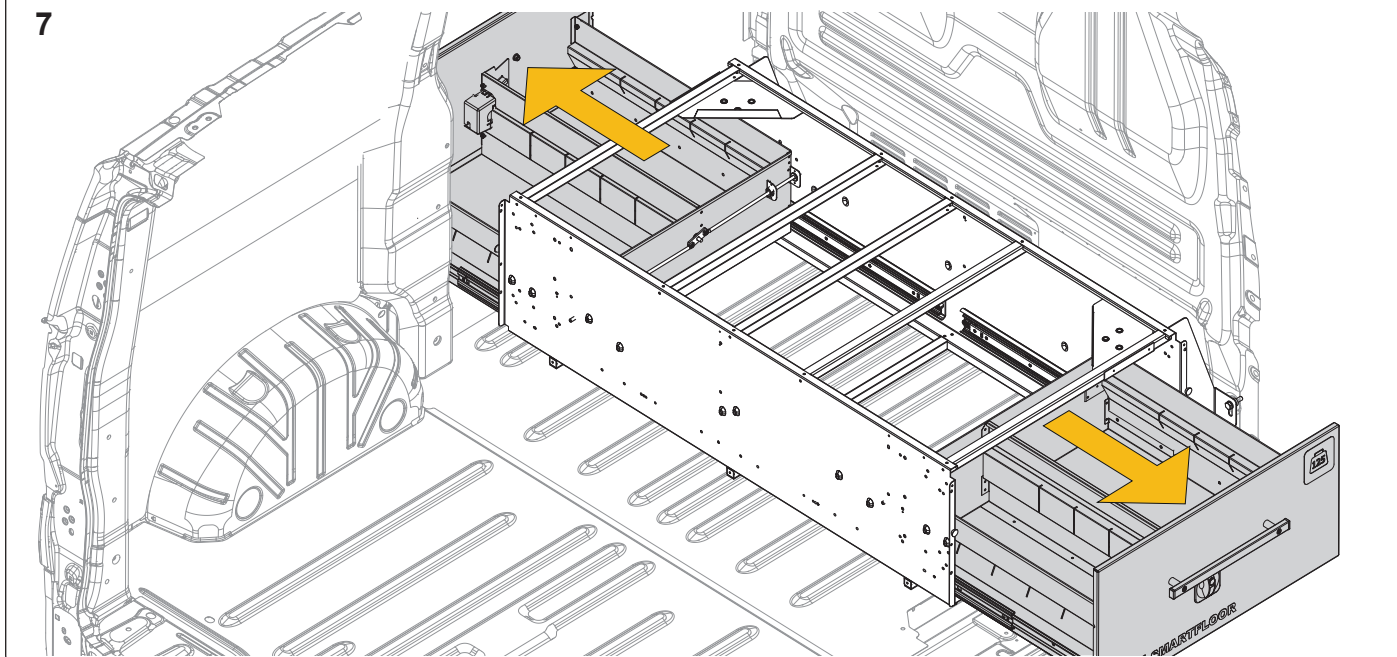


8

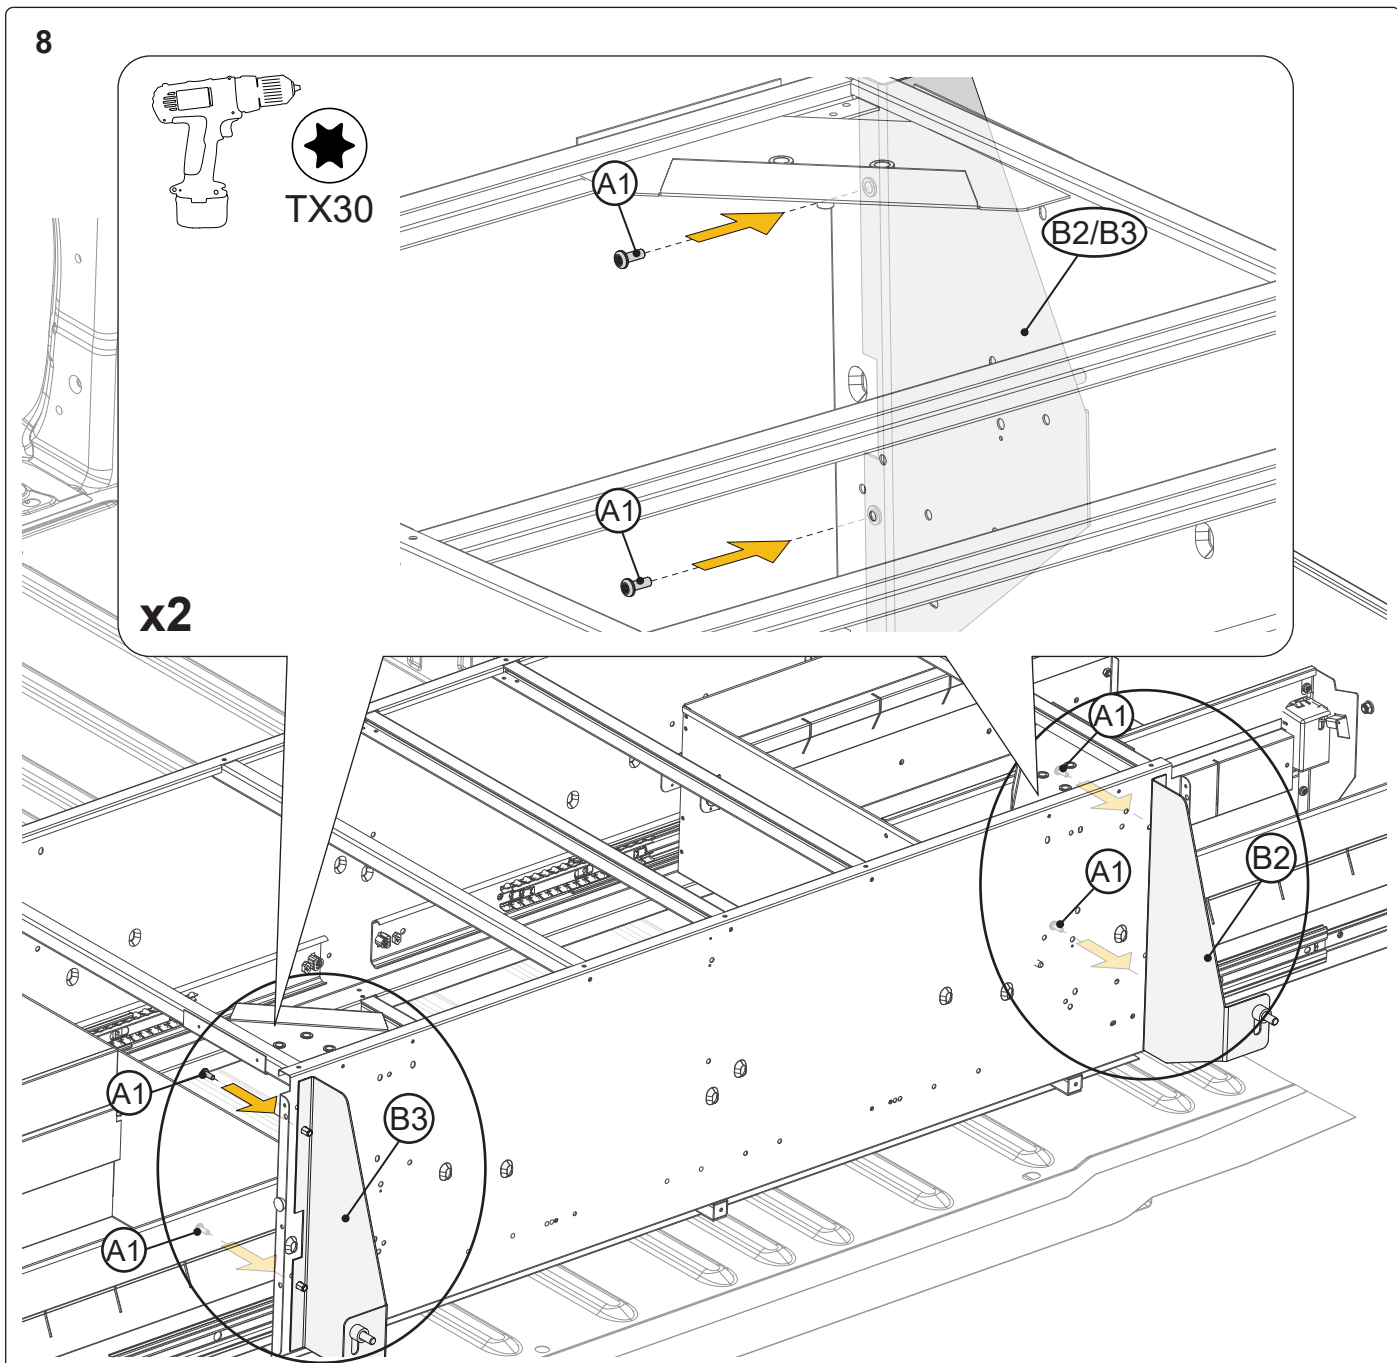


9

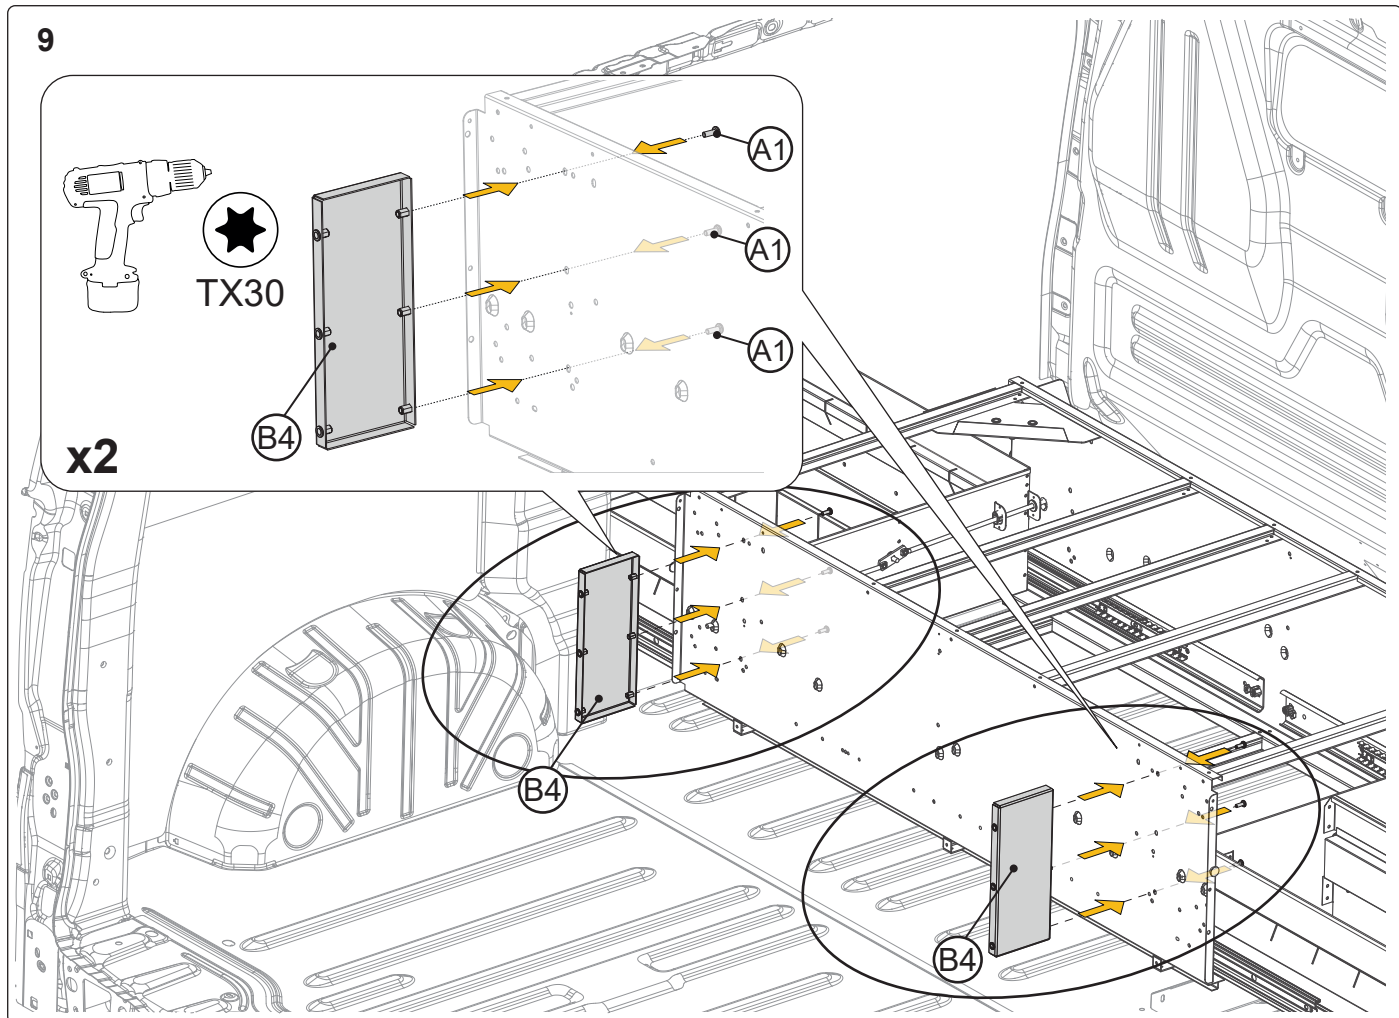


10

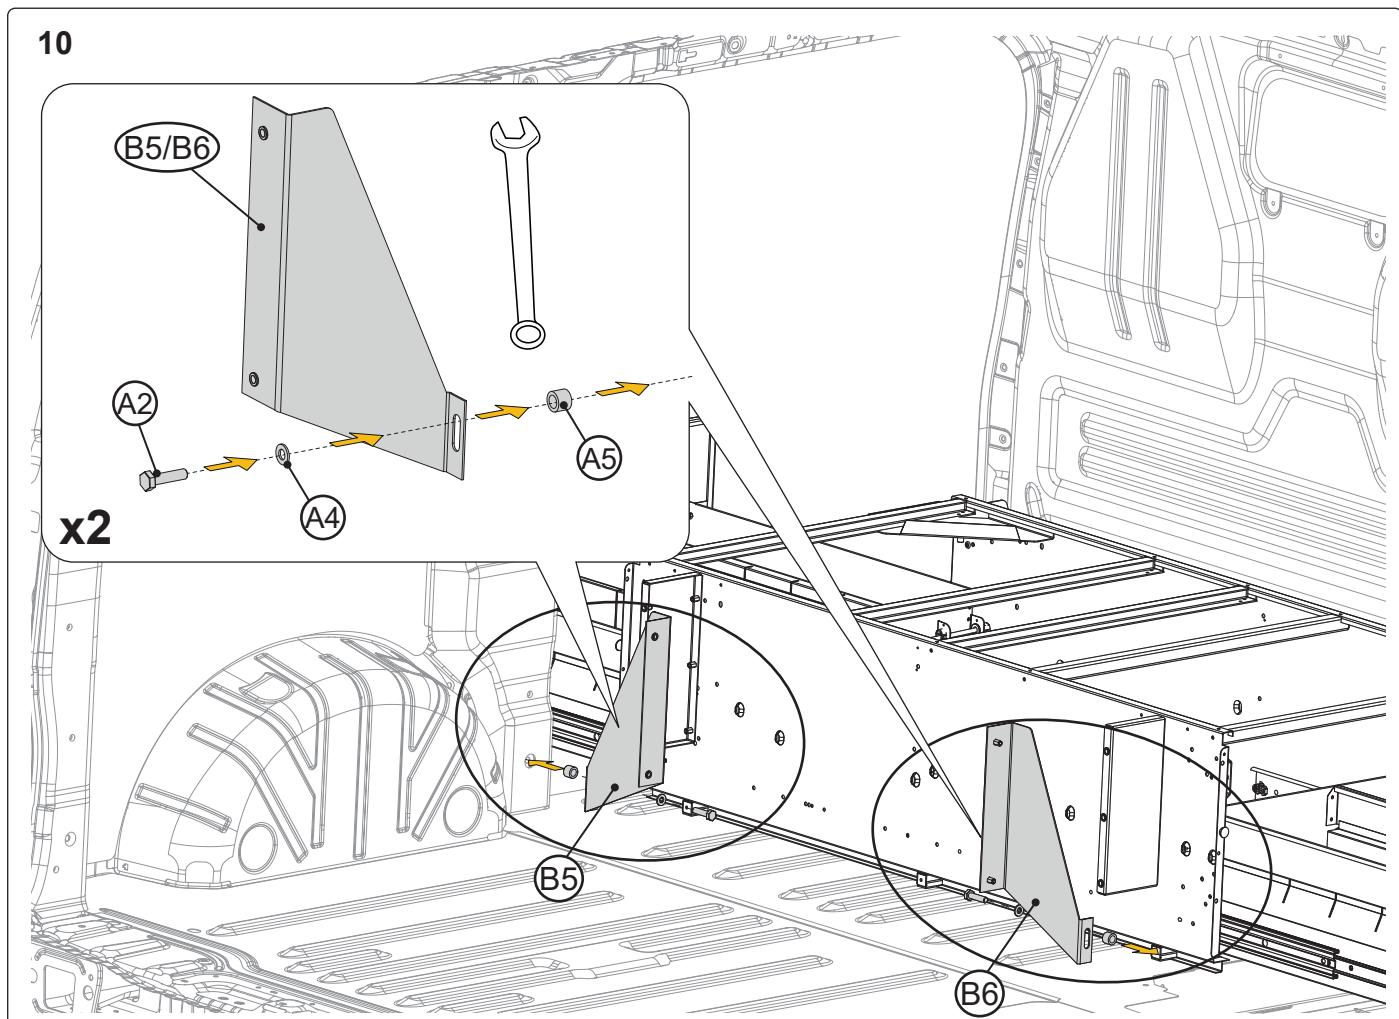



11

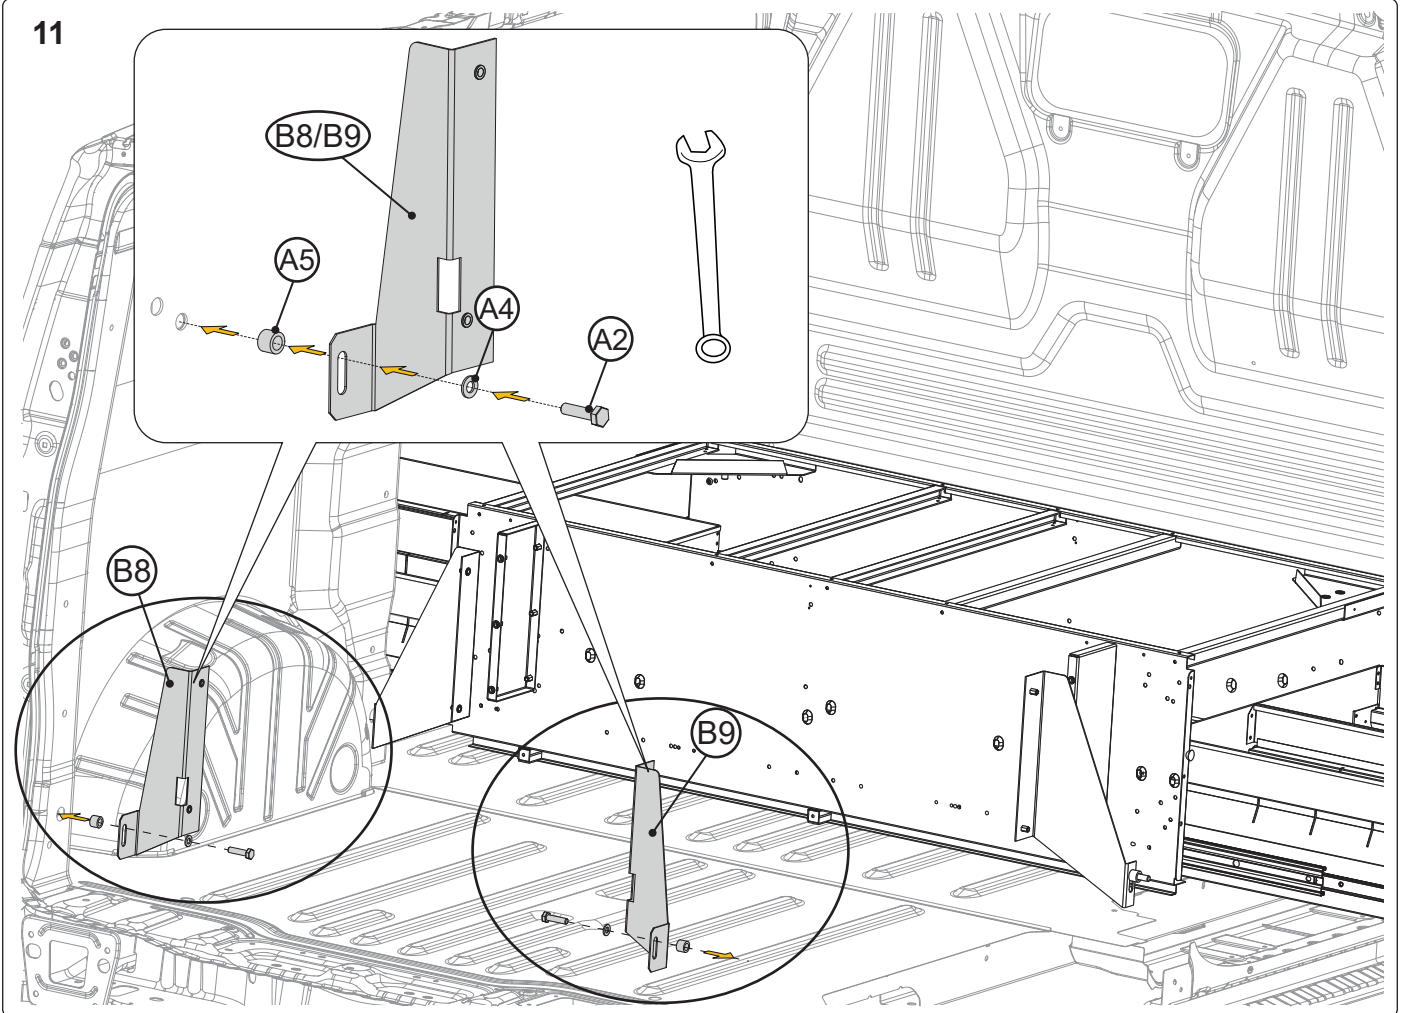


12

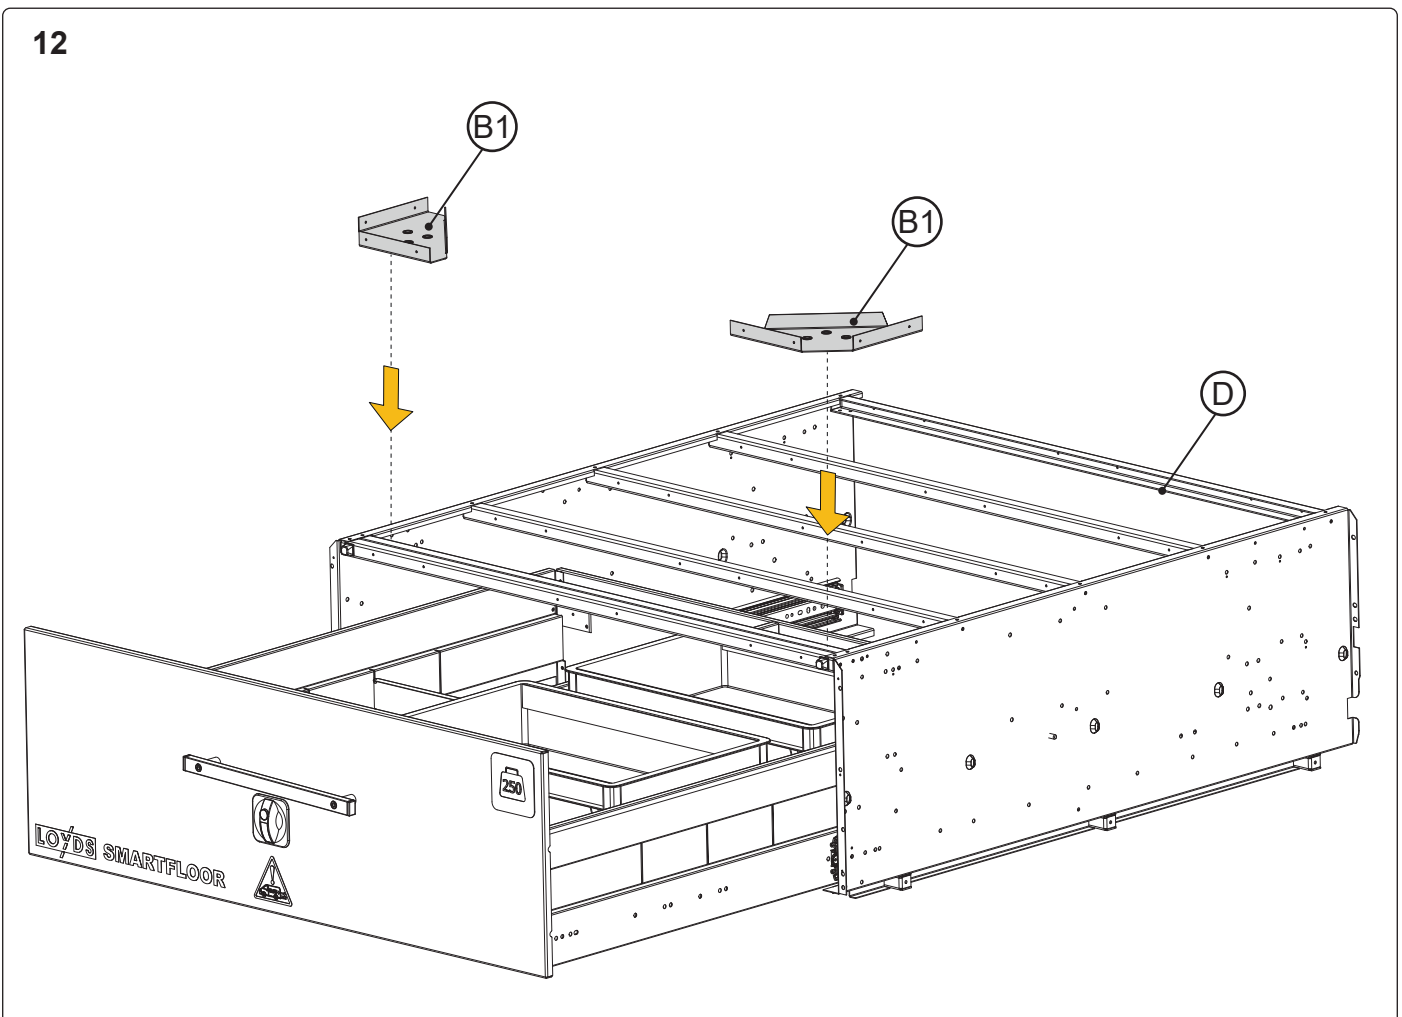

13

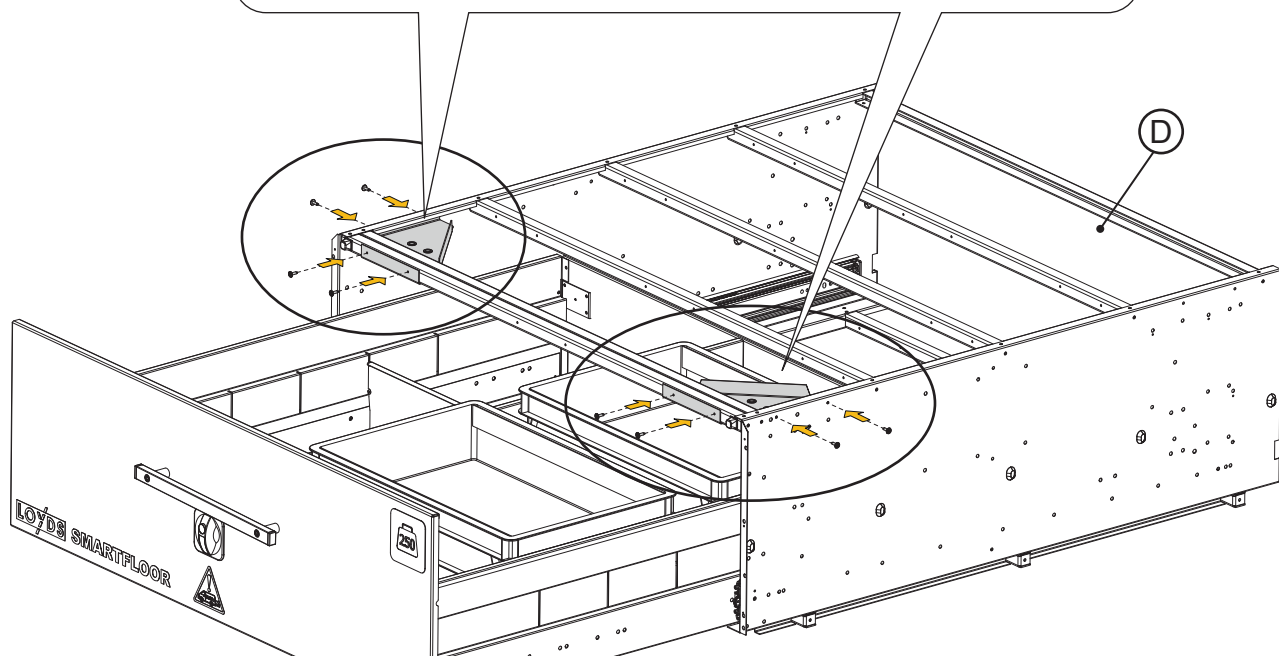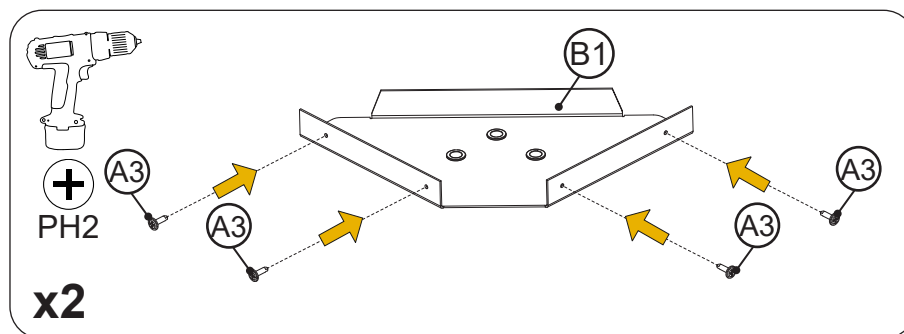


14

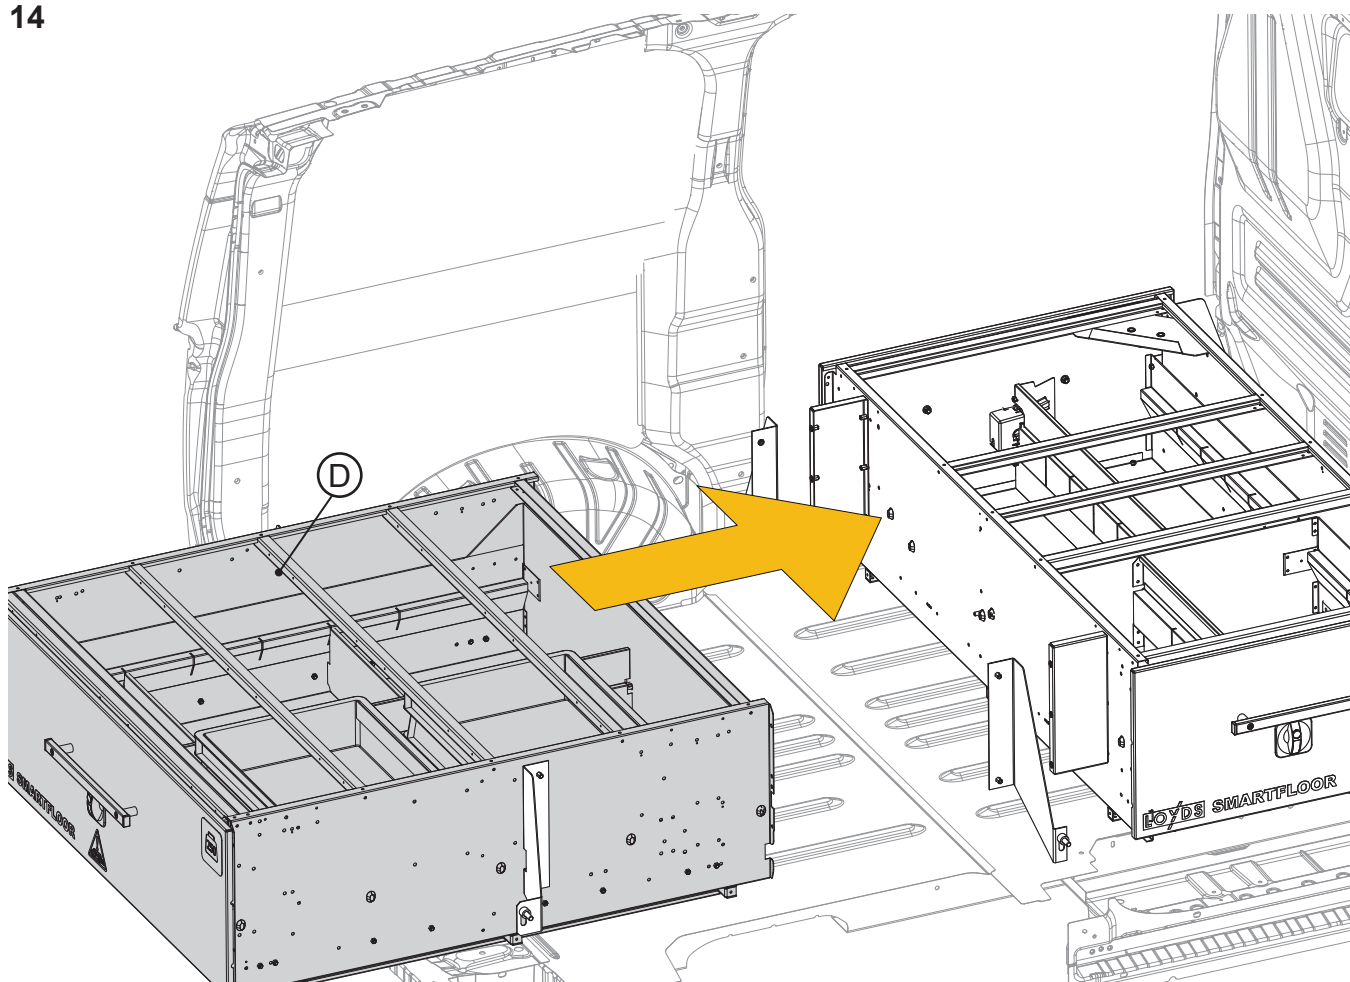


15

This diagram illustrates the process of attaching the front panel to the base frame. It features a callout box with a power drill icon and the label 'TX30' next to a star symbol. The callout shows three screws, labeled 'A1', being driven into the panel, labeled 'B4'. The main diagram shows the front panel being attached to the base frame, with a label 'D' pointing to the frame and 'B4' pointing to the panel. A label 'A' points to the internal structure of the panel. The base frame is labeled 'LOYD'S SMARTFLOOR'.


16

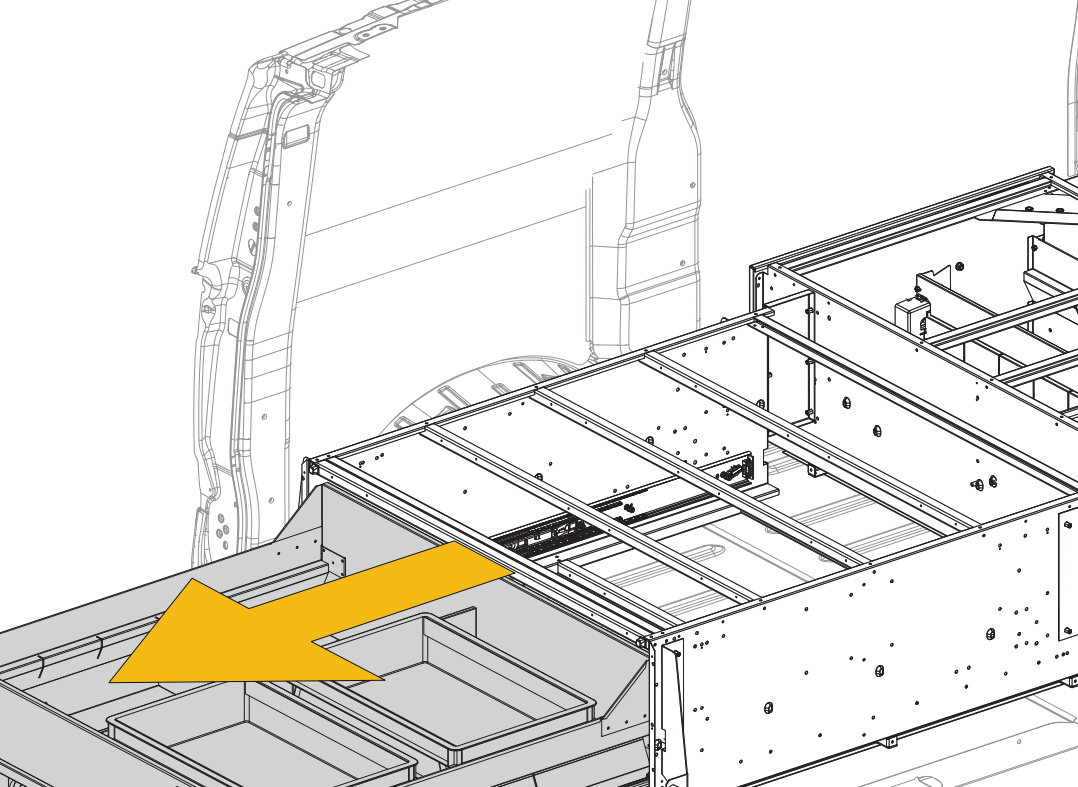


17

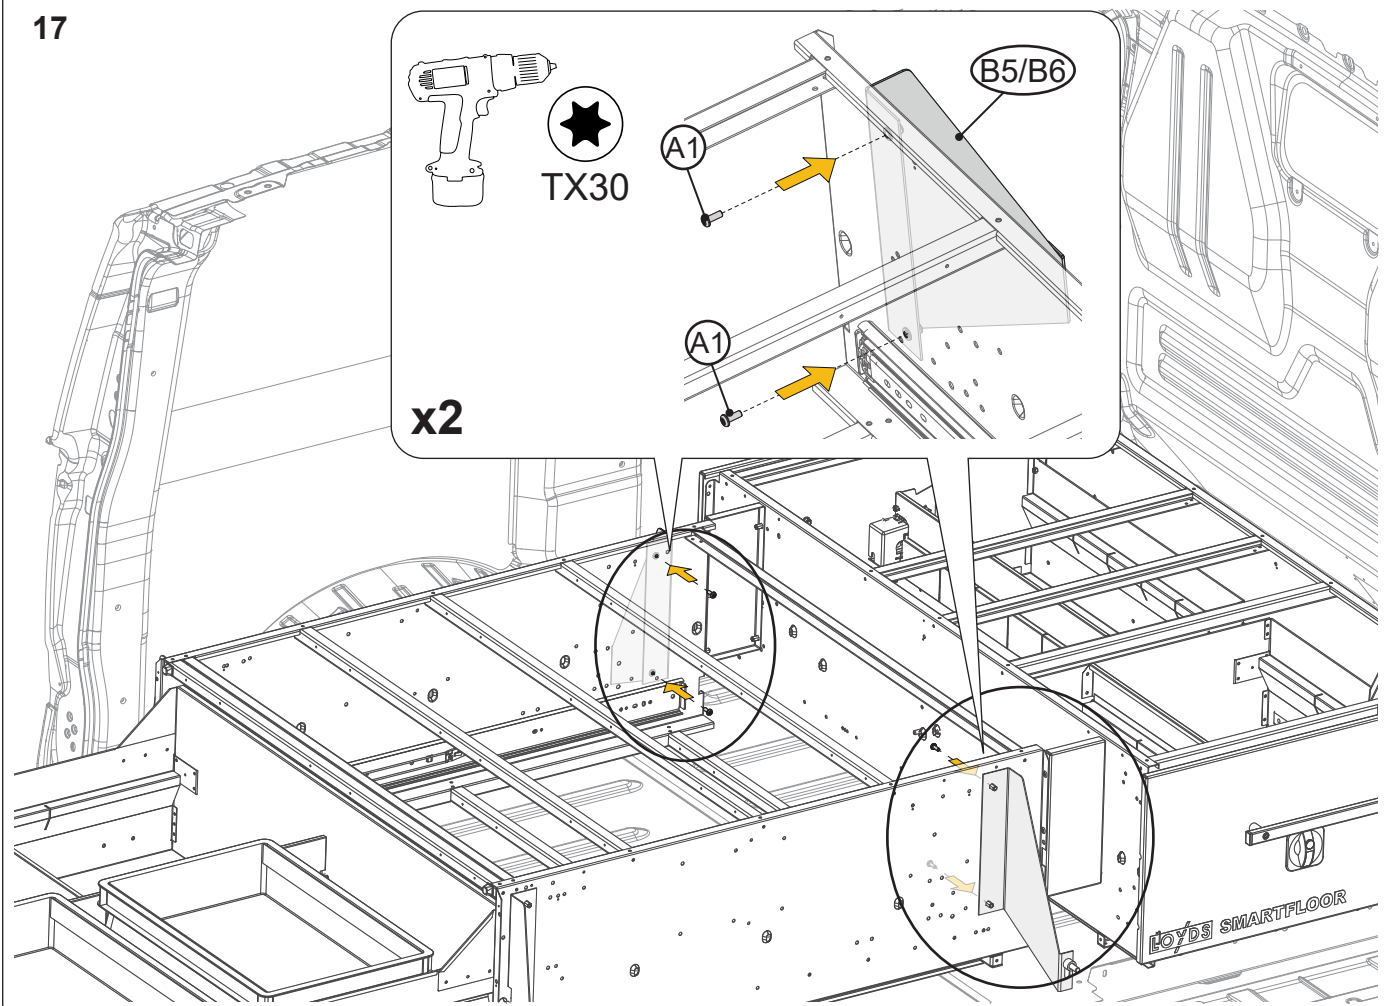


18

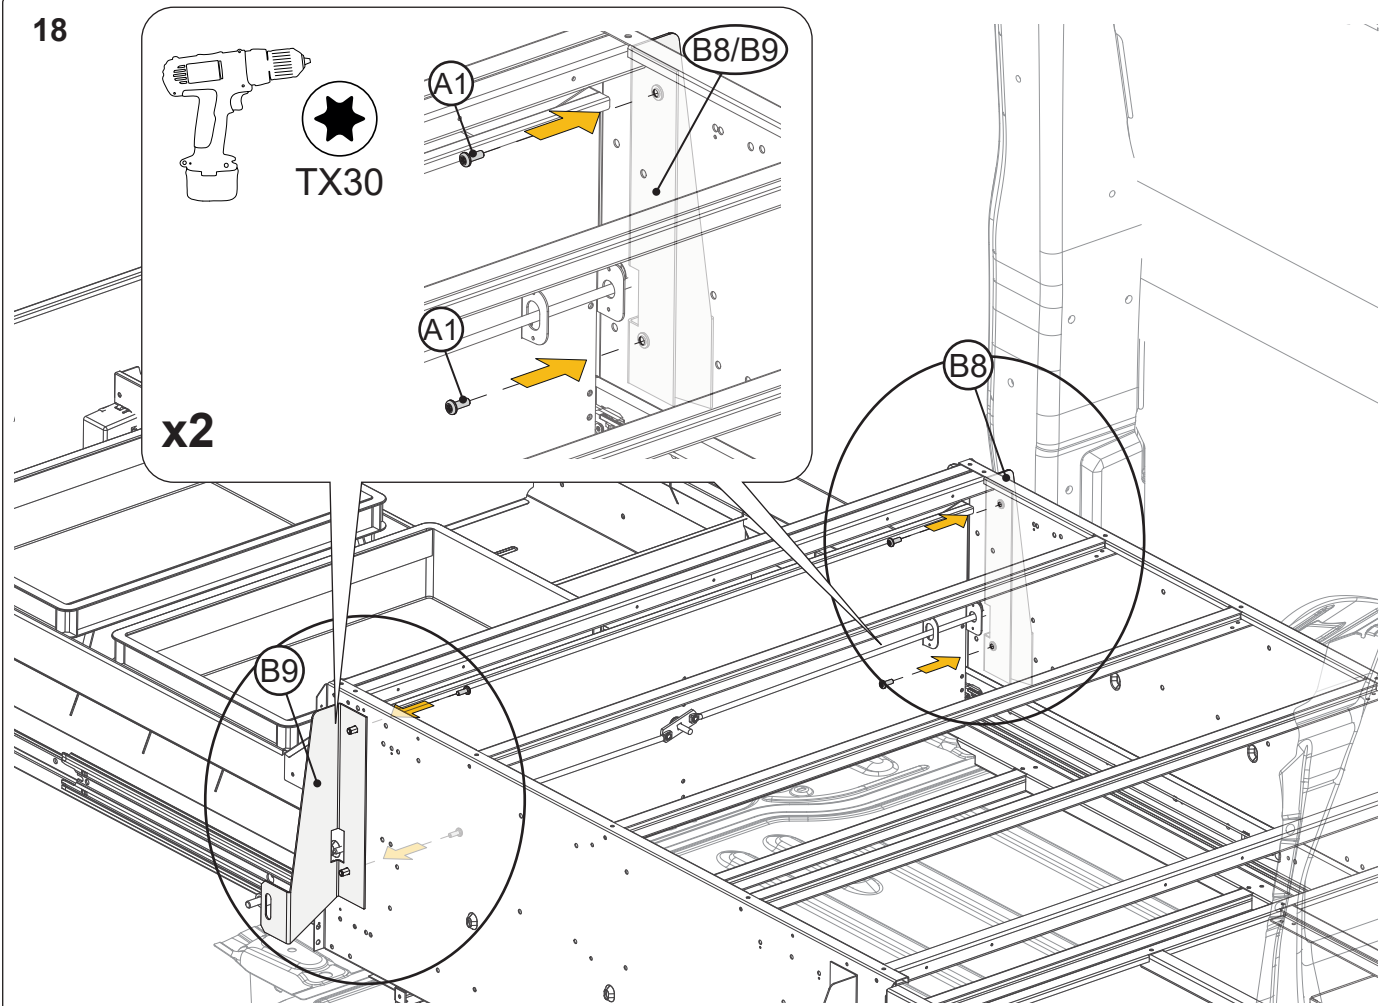


19

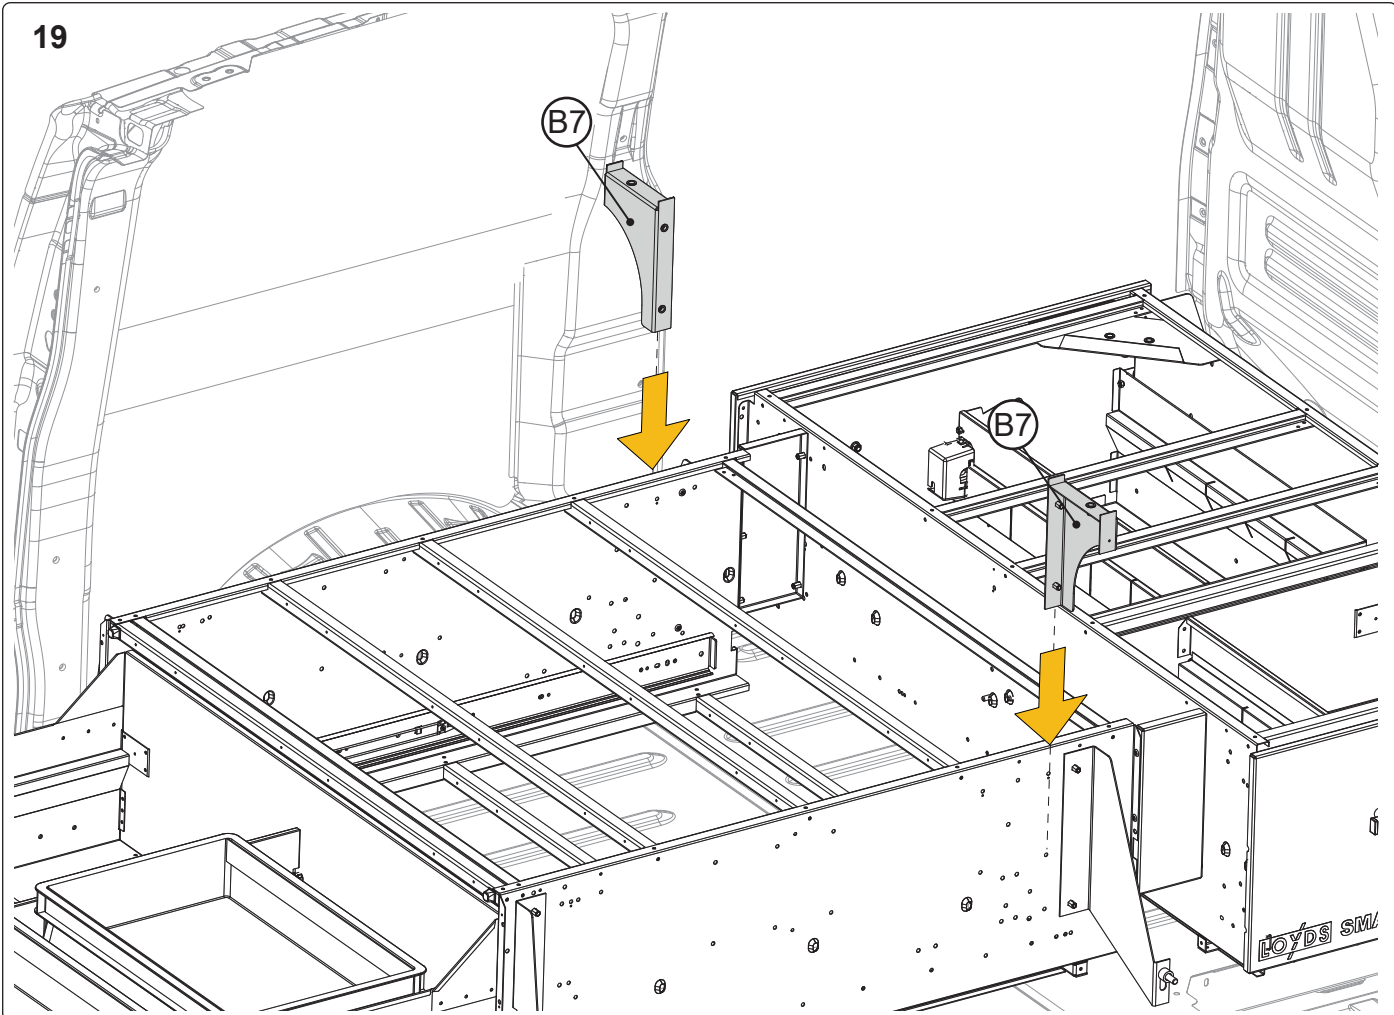


20

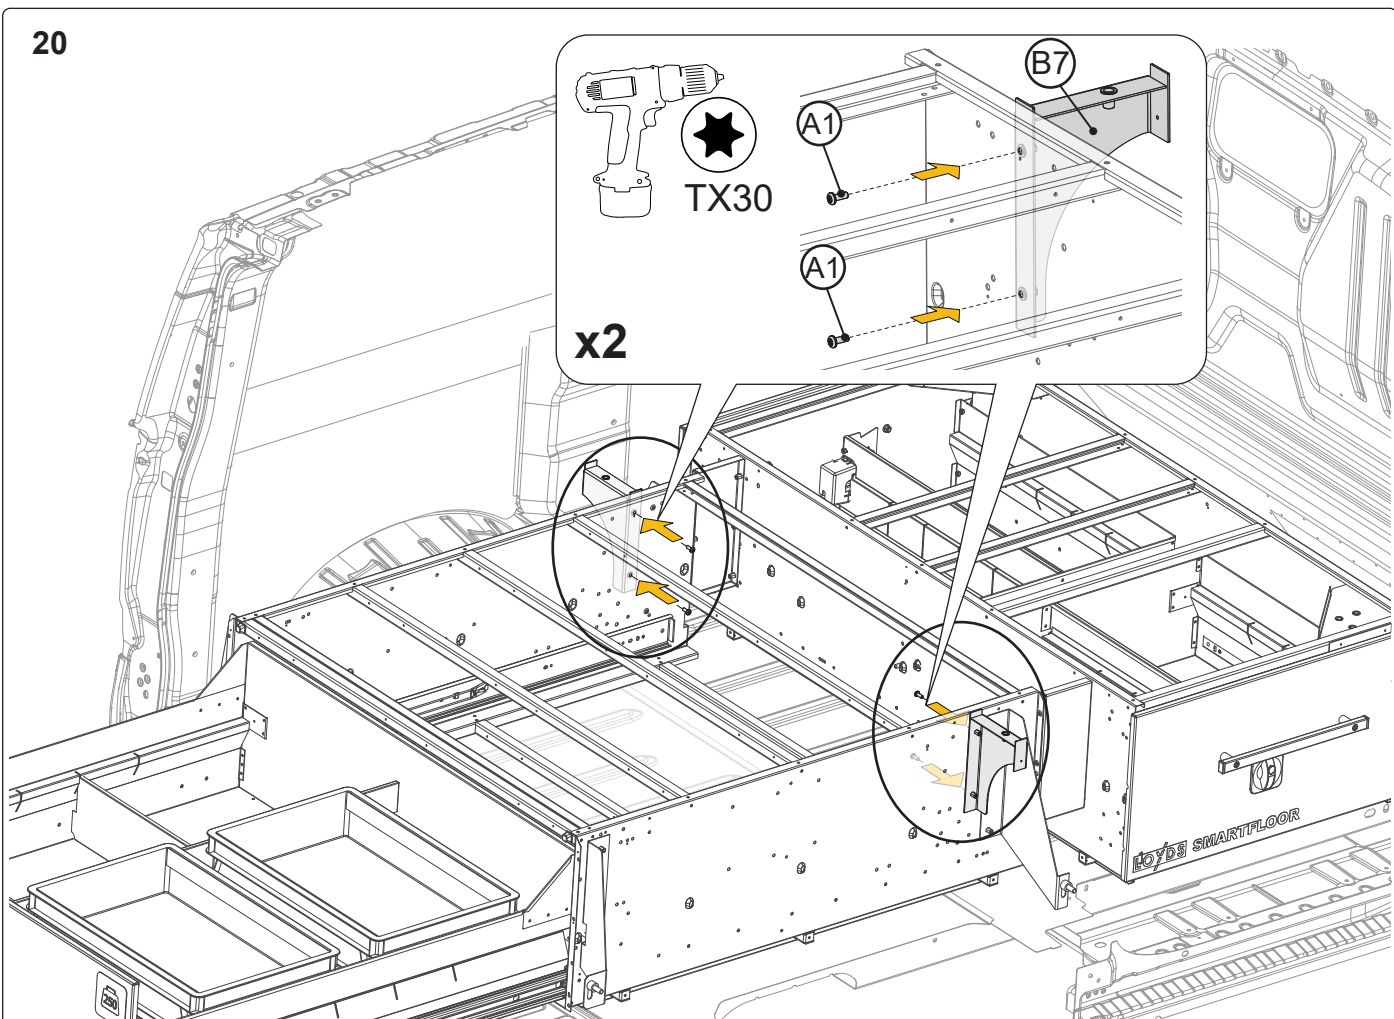


21

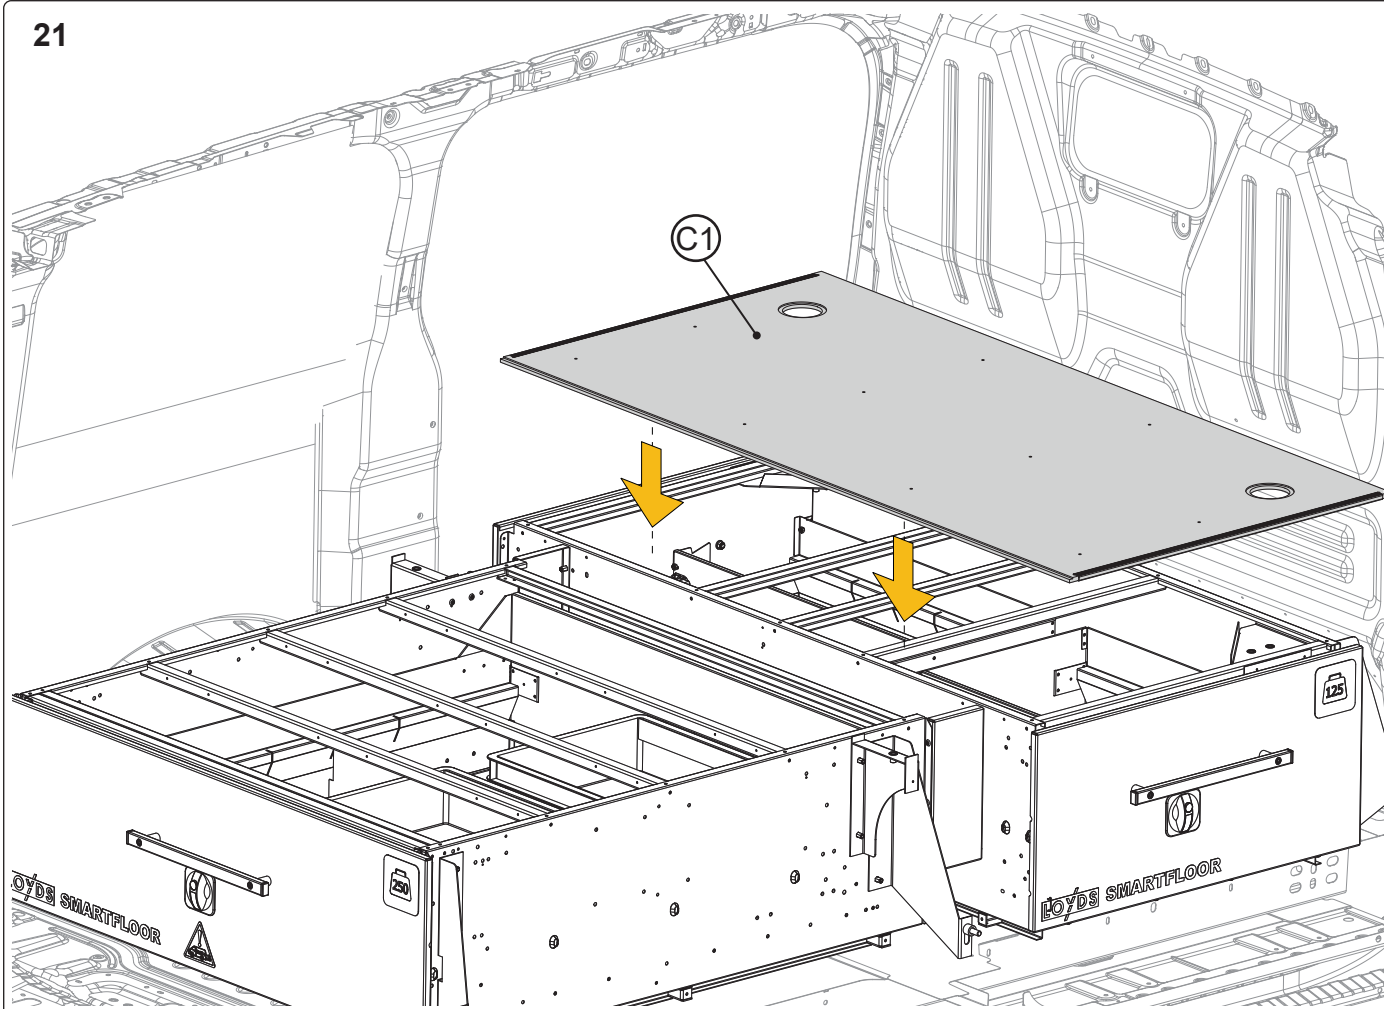


22

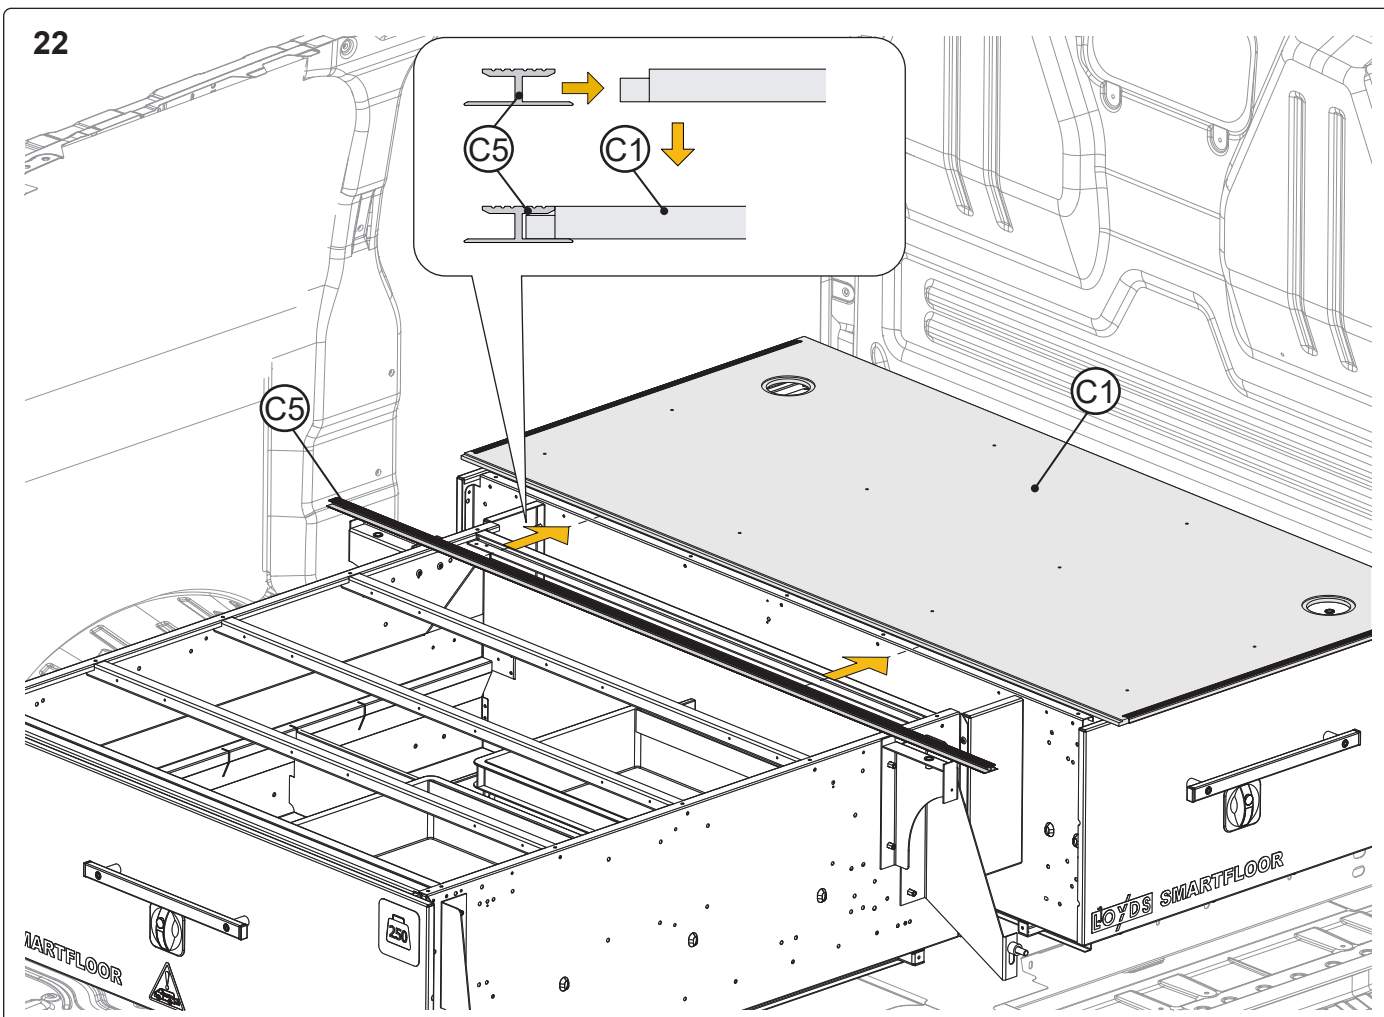


23

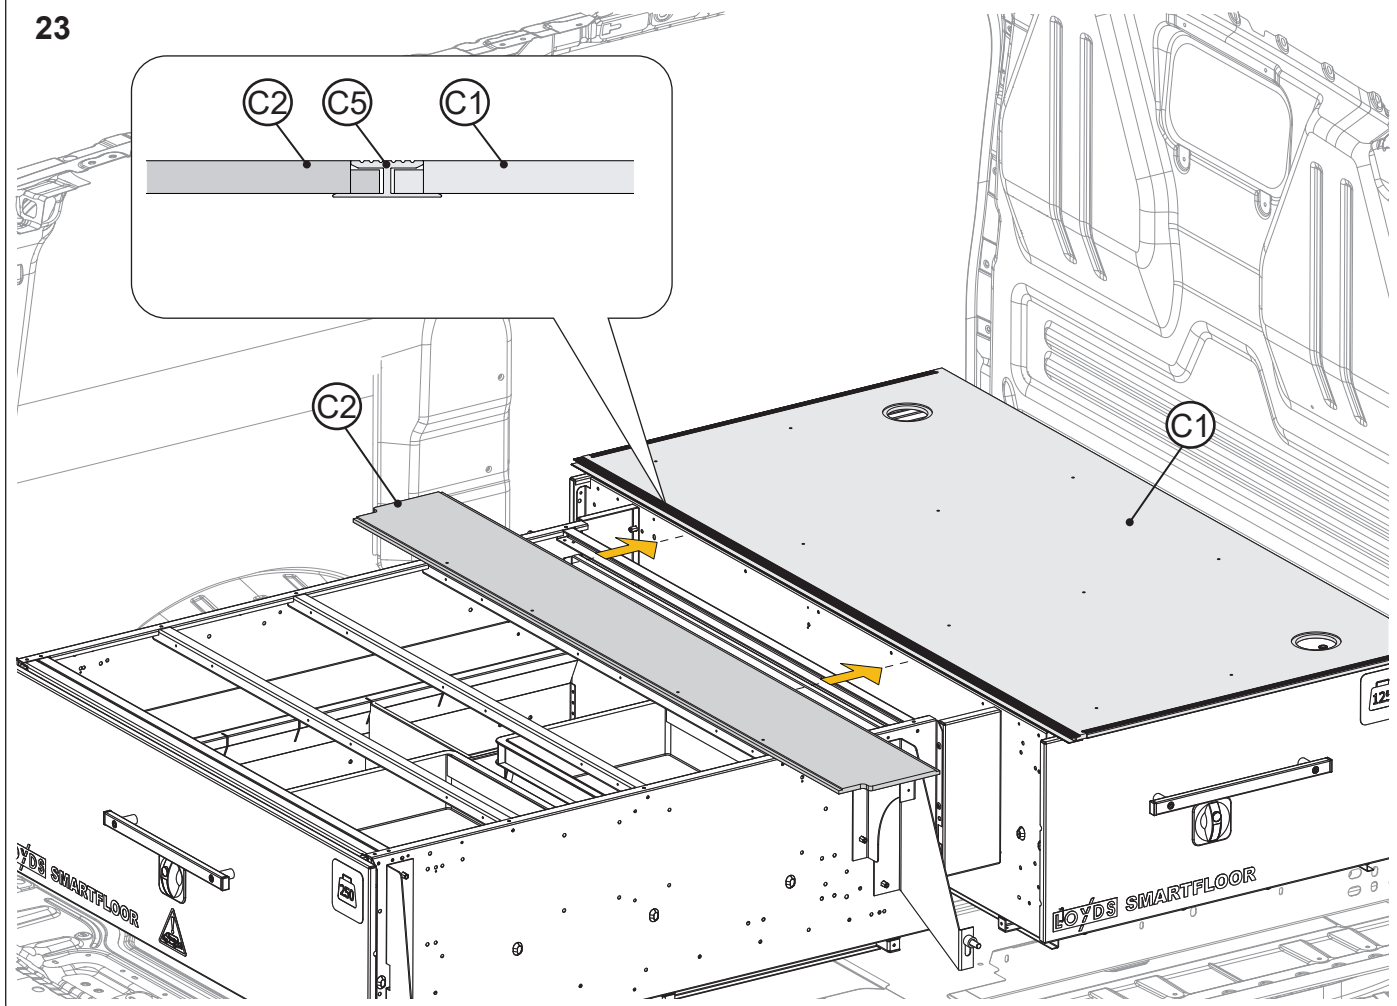


24

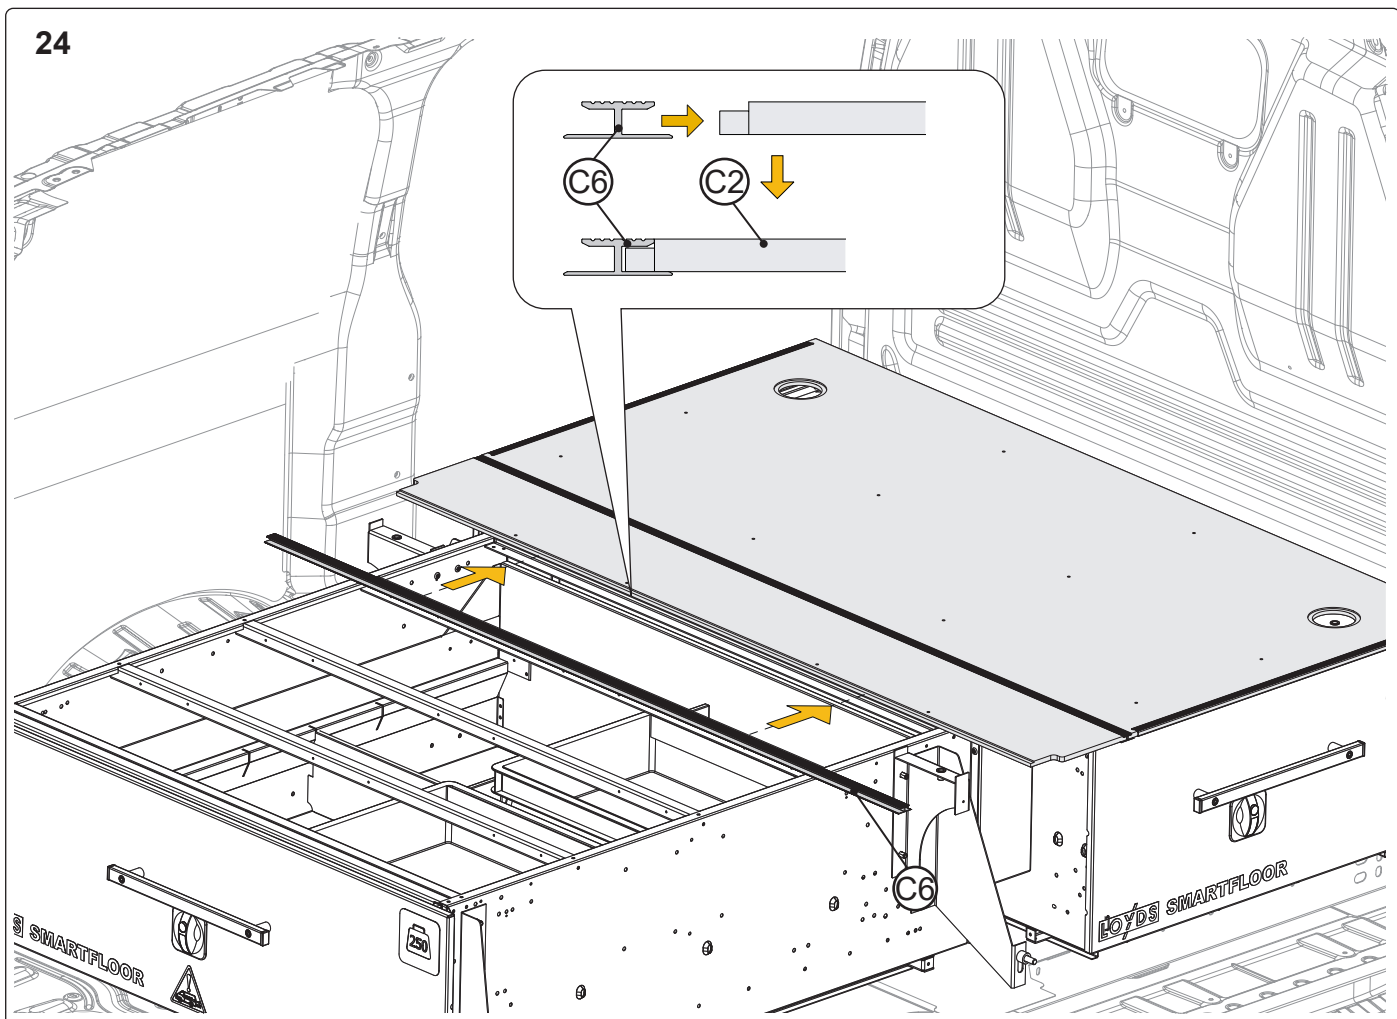


25

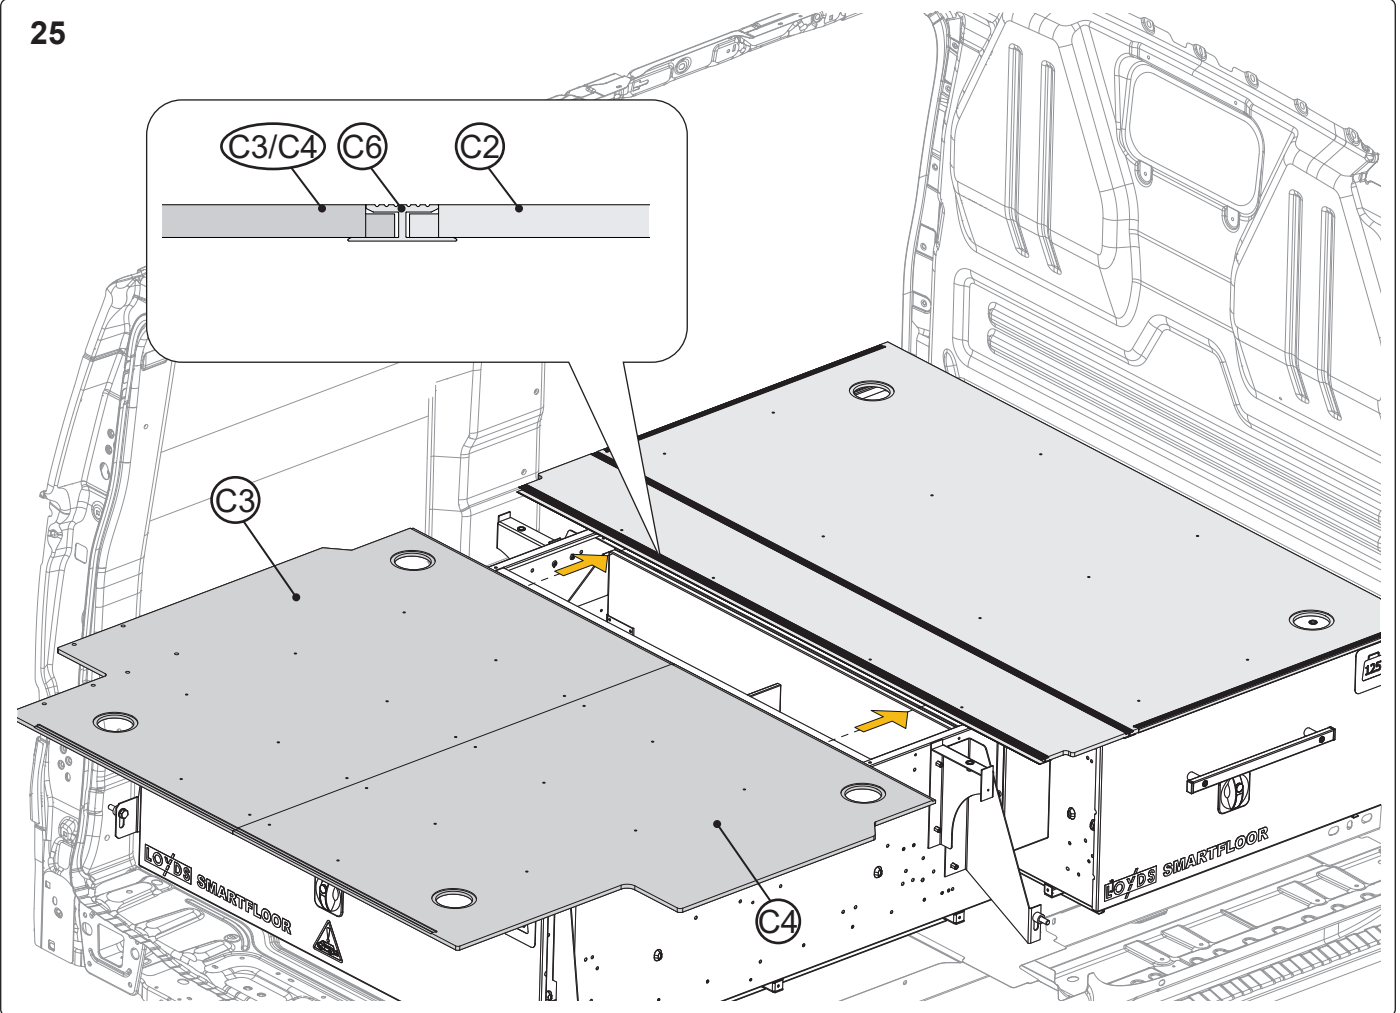


26

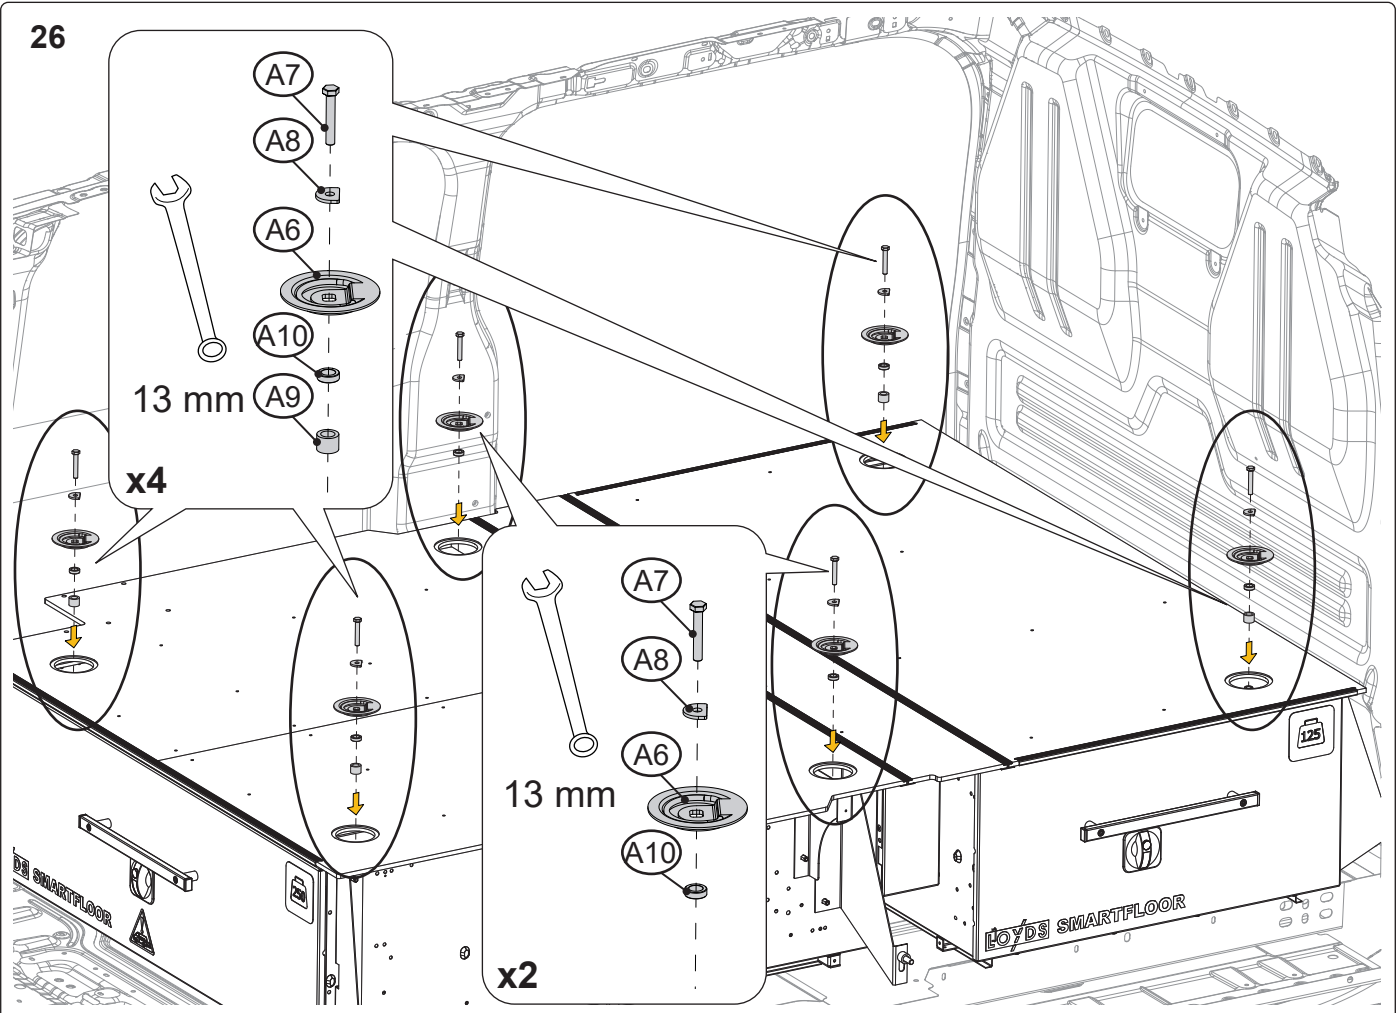


27

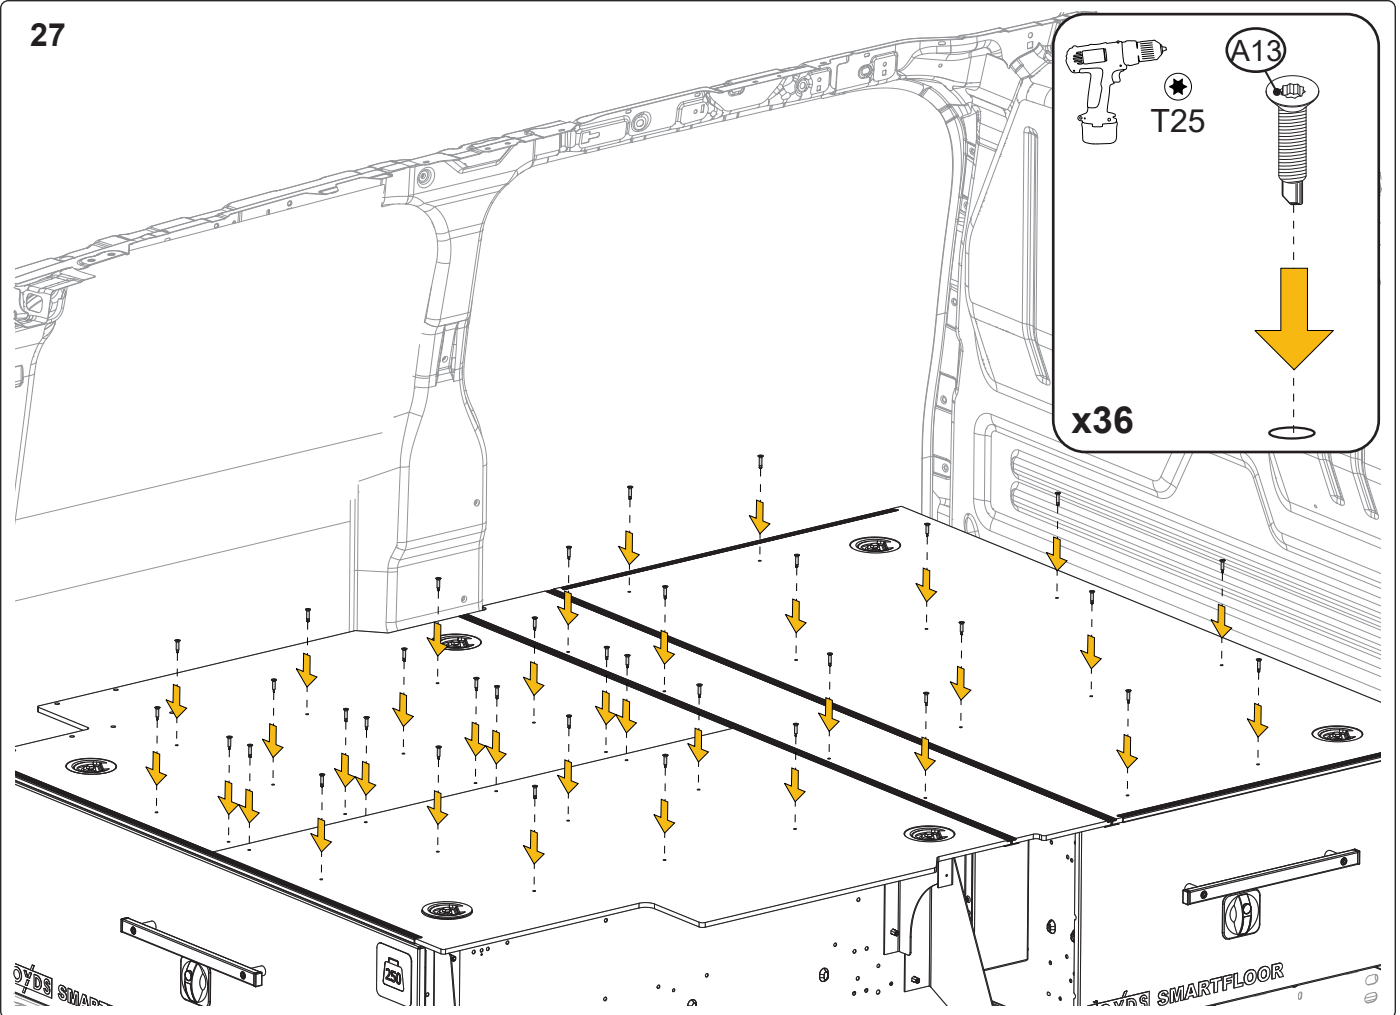


28


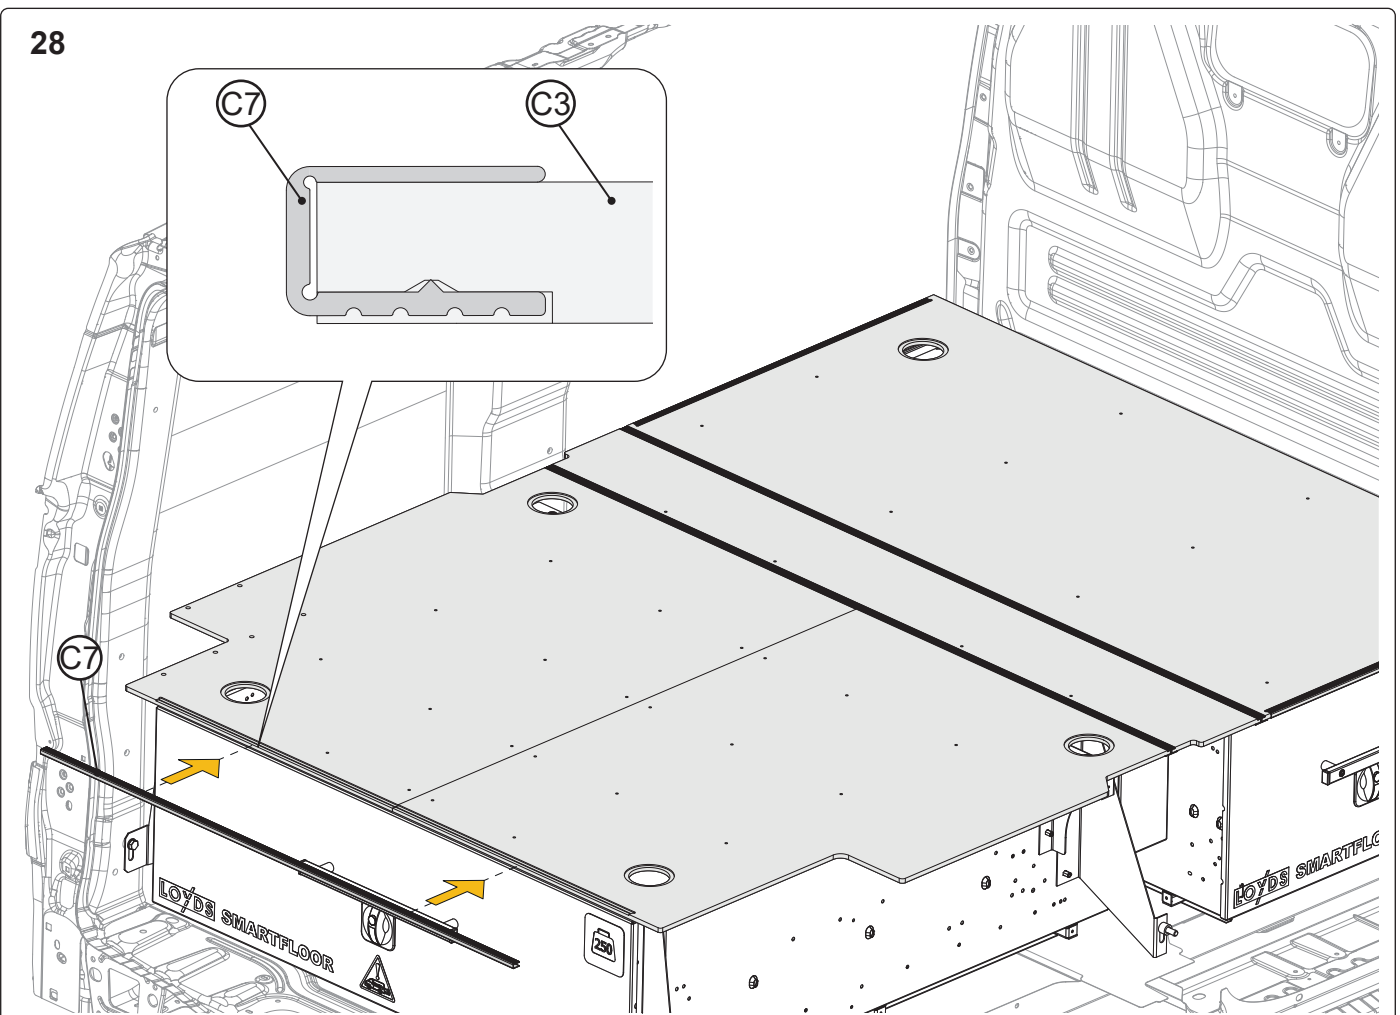


29

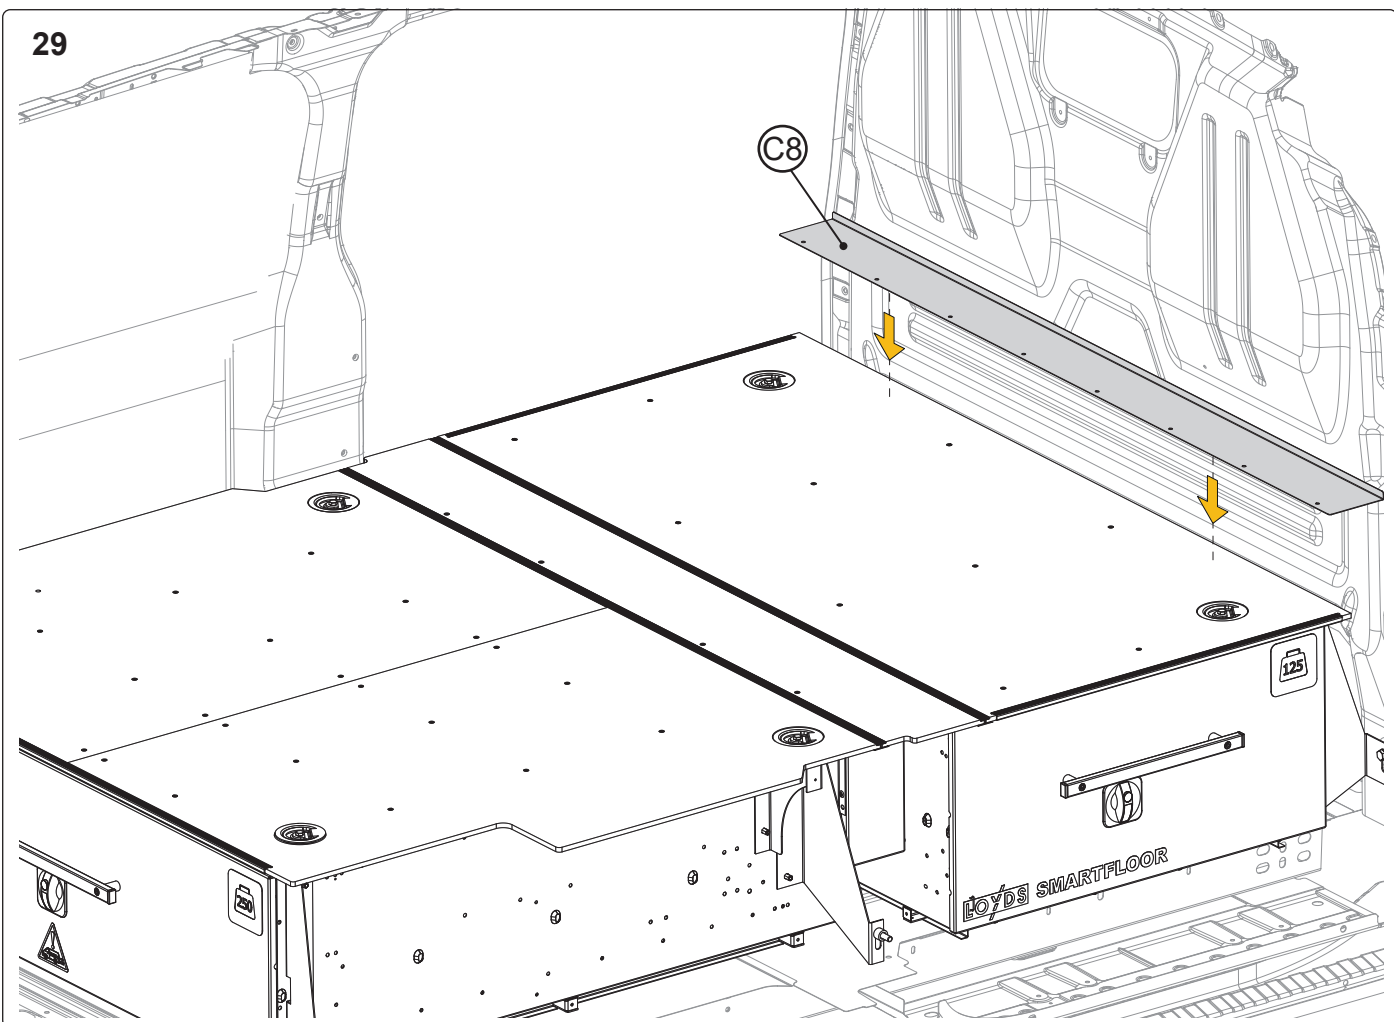


30

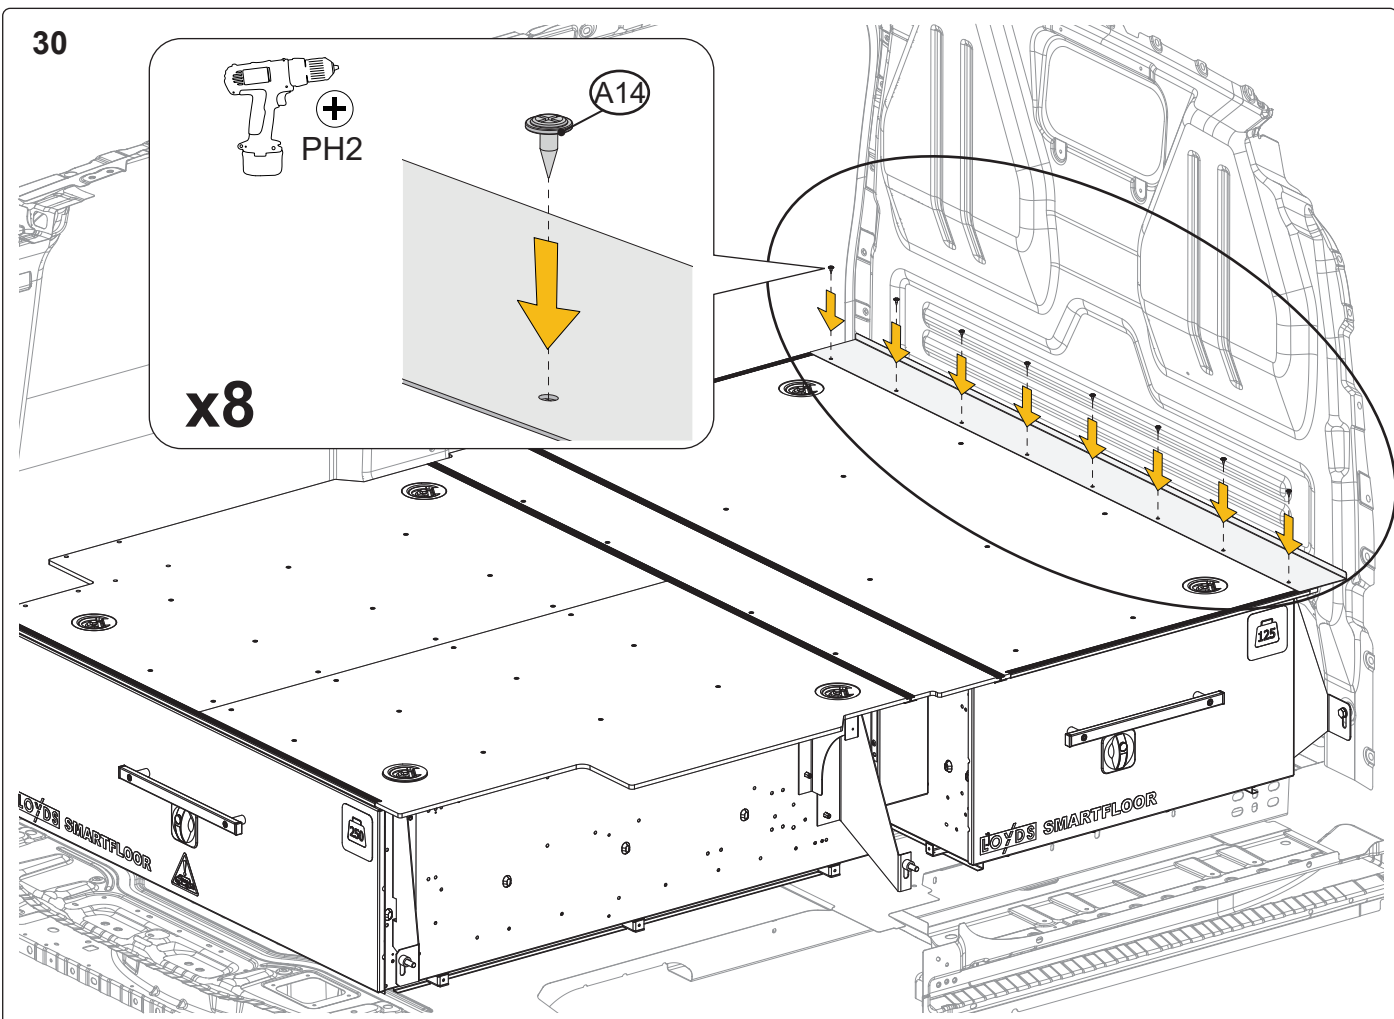

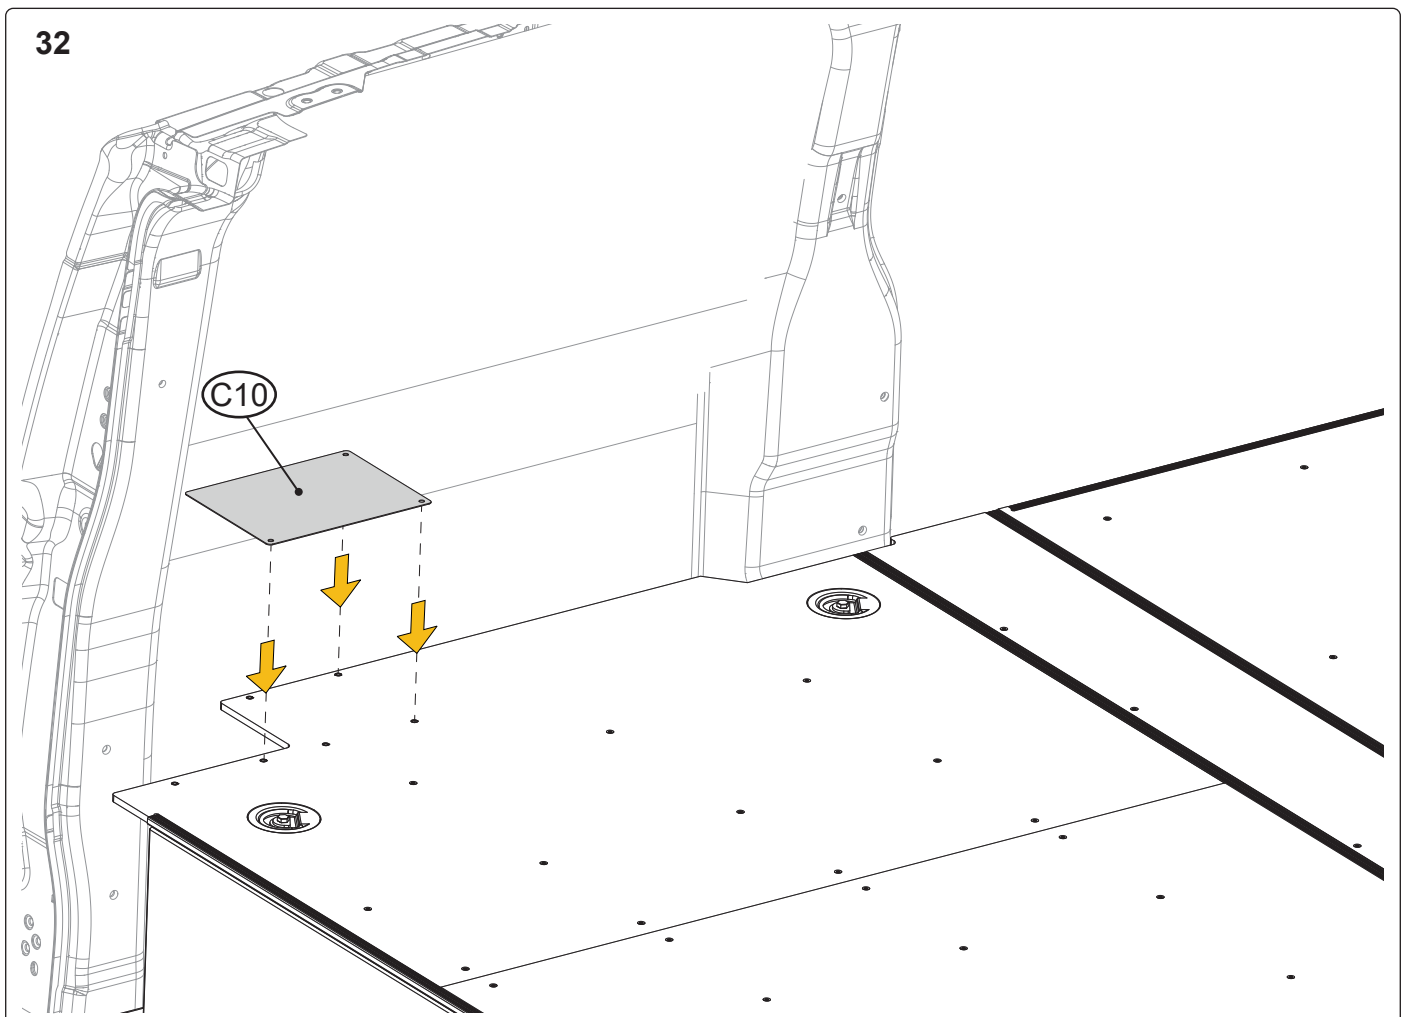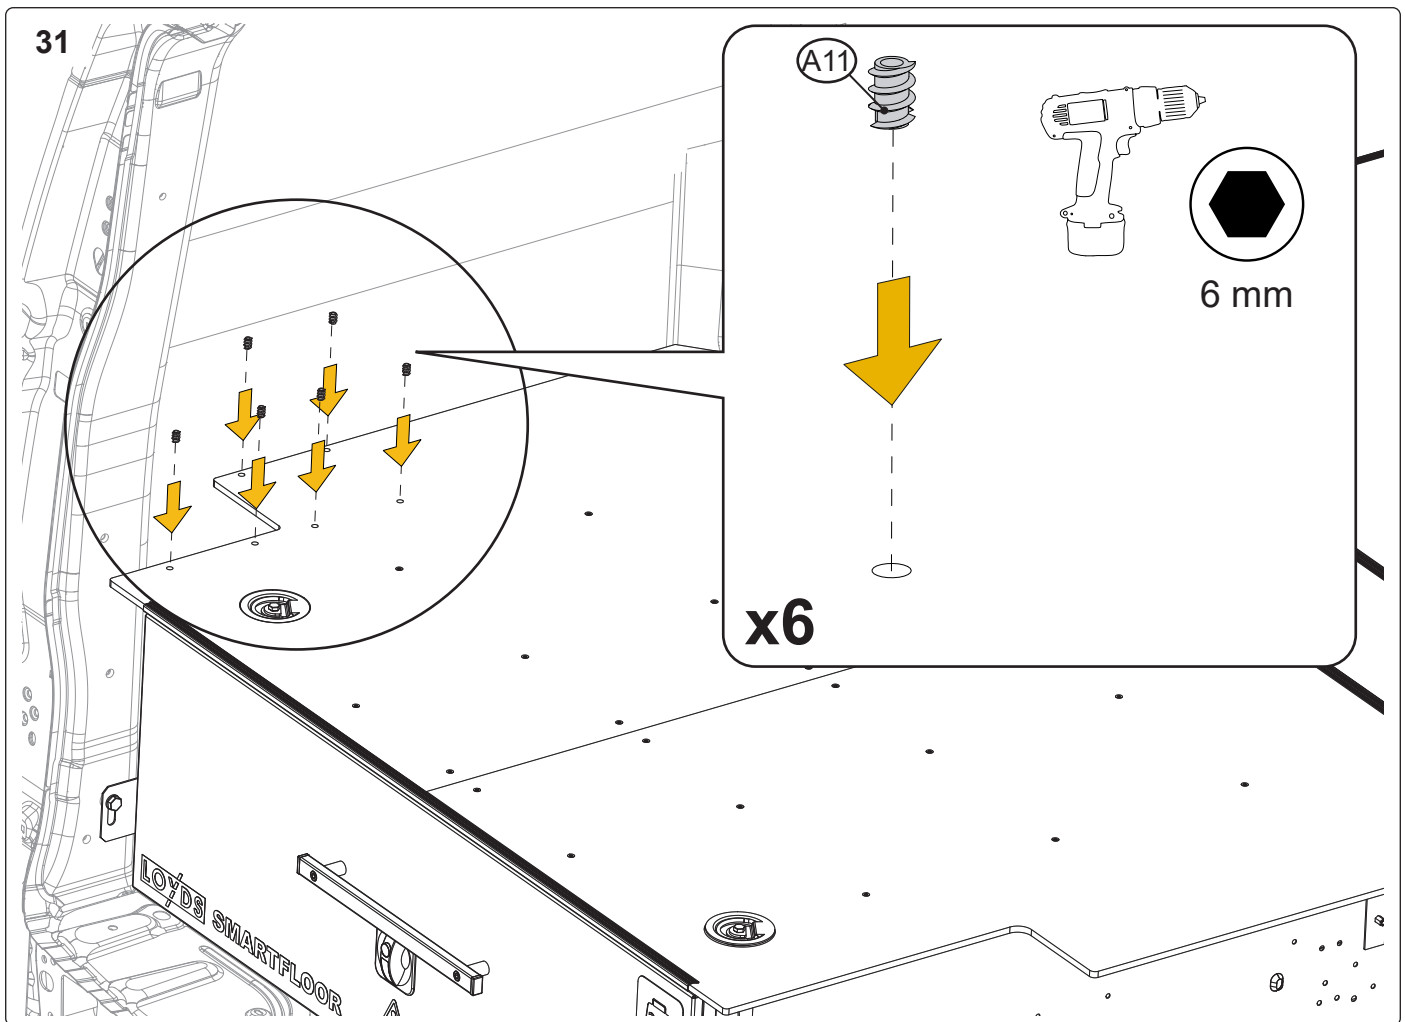


33

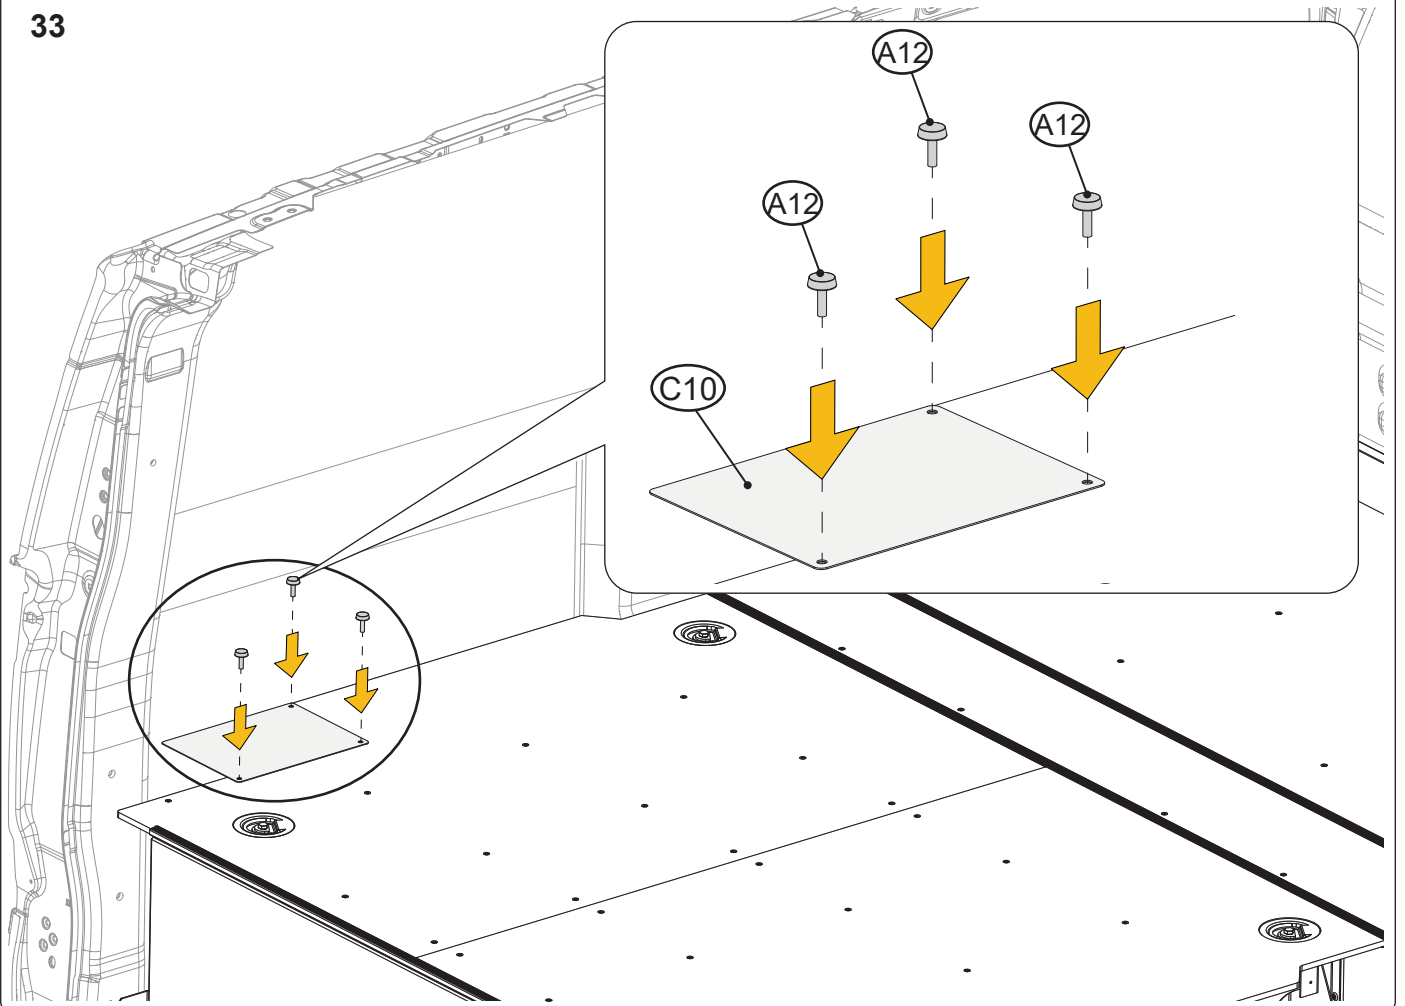


34

FOR CARS **WITH** CONVERTER/HEATER

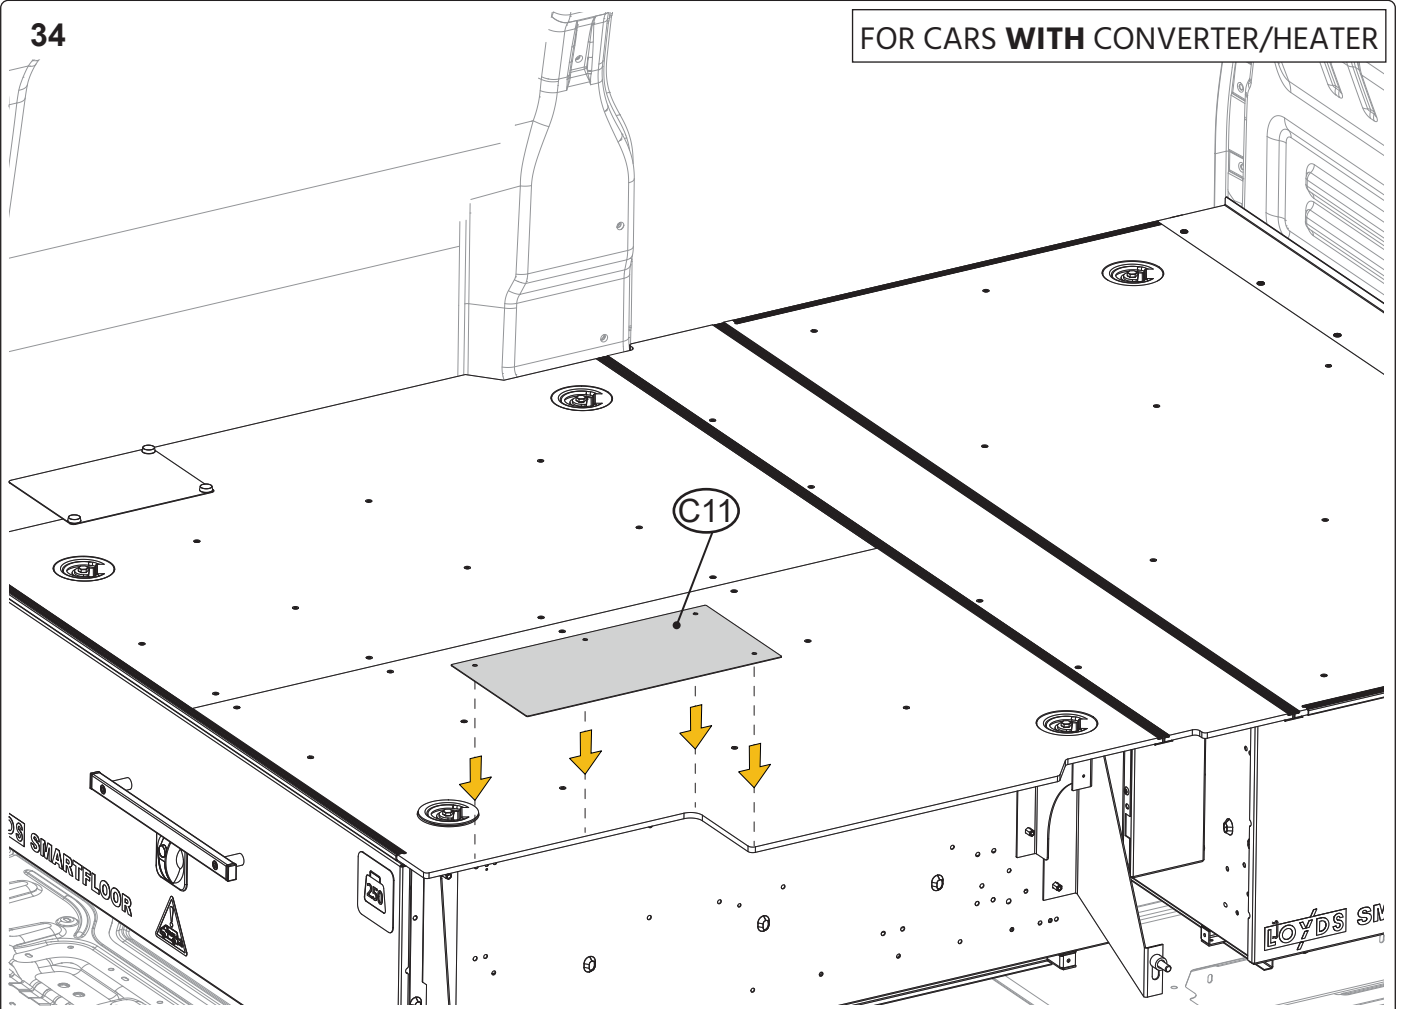

35

FOR CARS **WITH** CONVERTER/HEATER

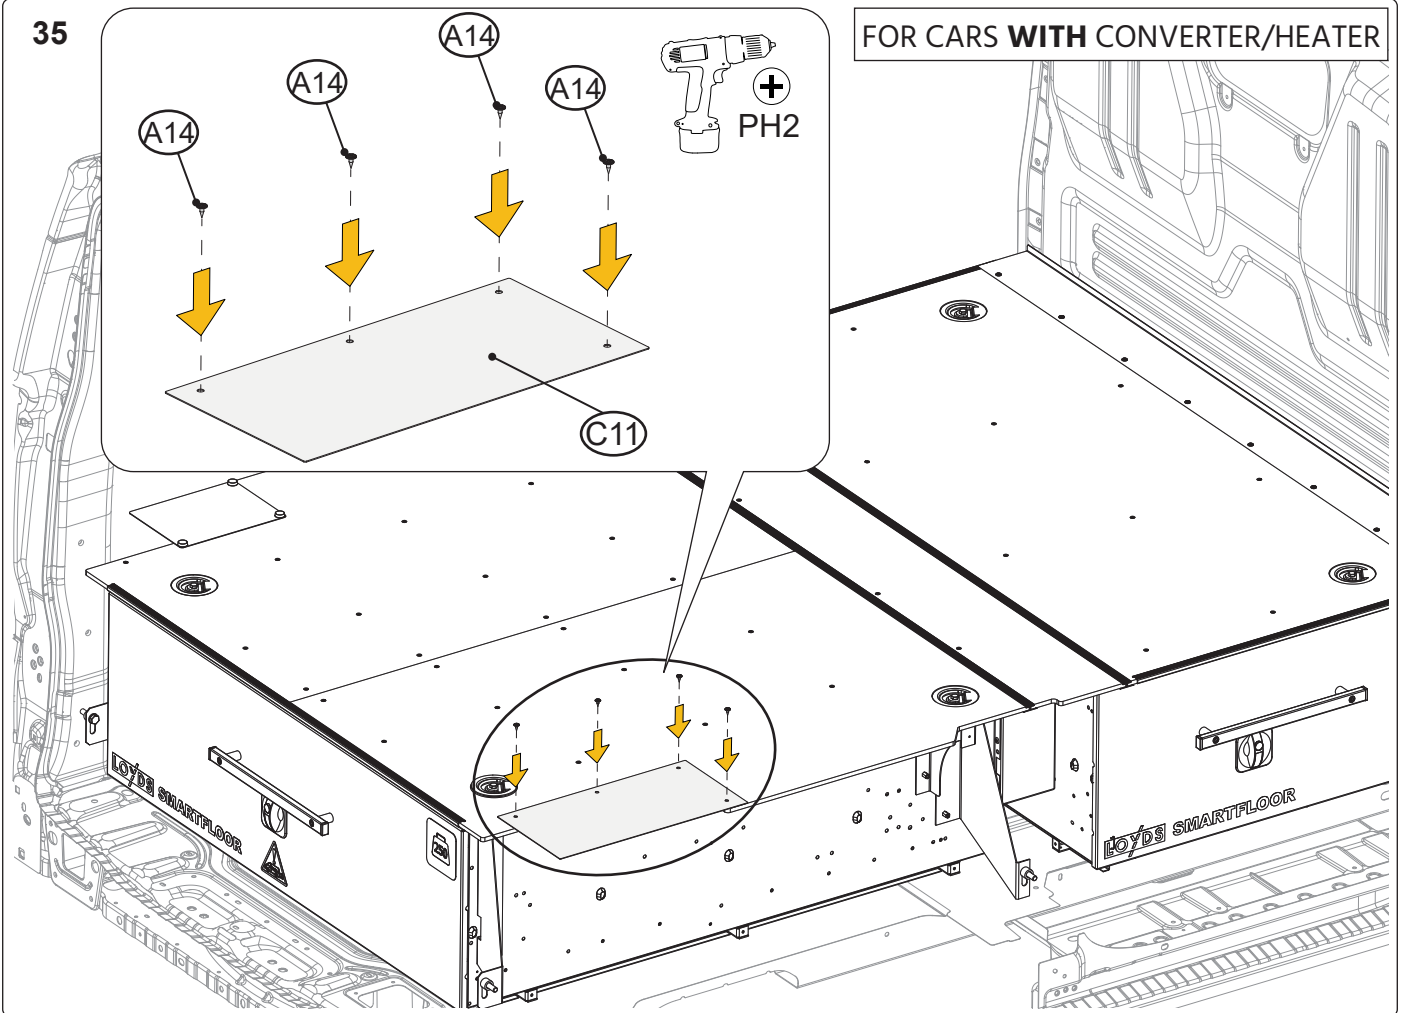

36

FOR CARS **WITHOUT** CONVERTER/HEATER



37

FOR CARS **WITHOUT** CONVERTER/HEATER

