


VW ID Buzz GTX

Smartfloor Front Module 2SLD

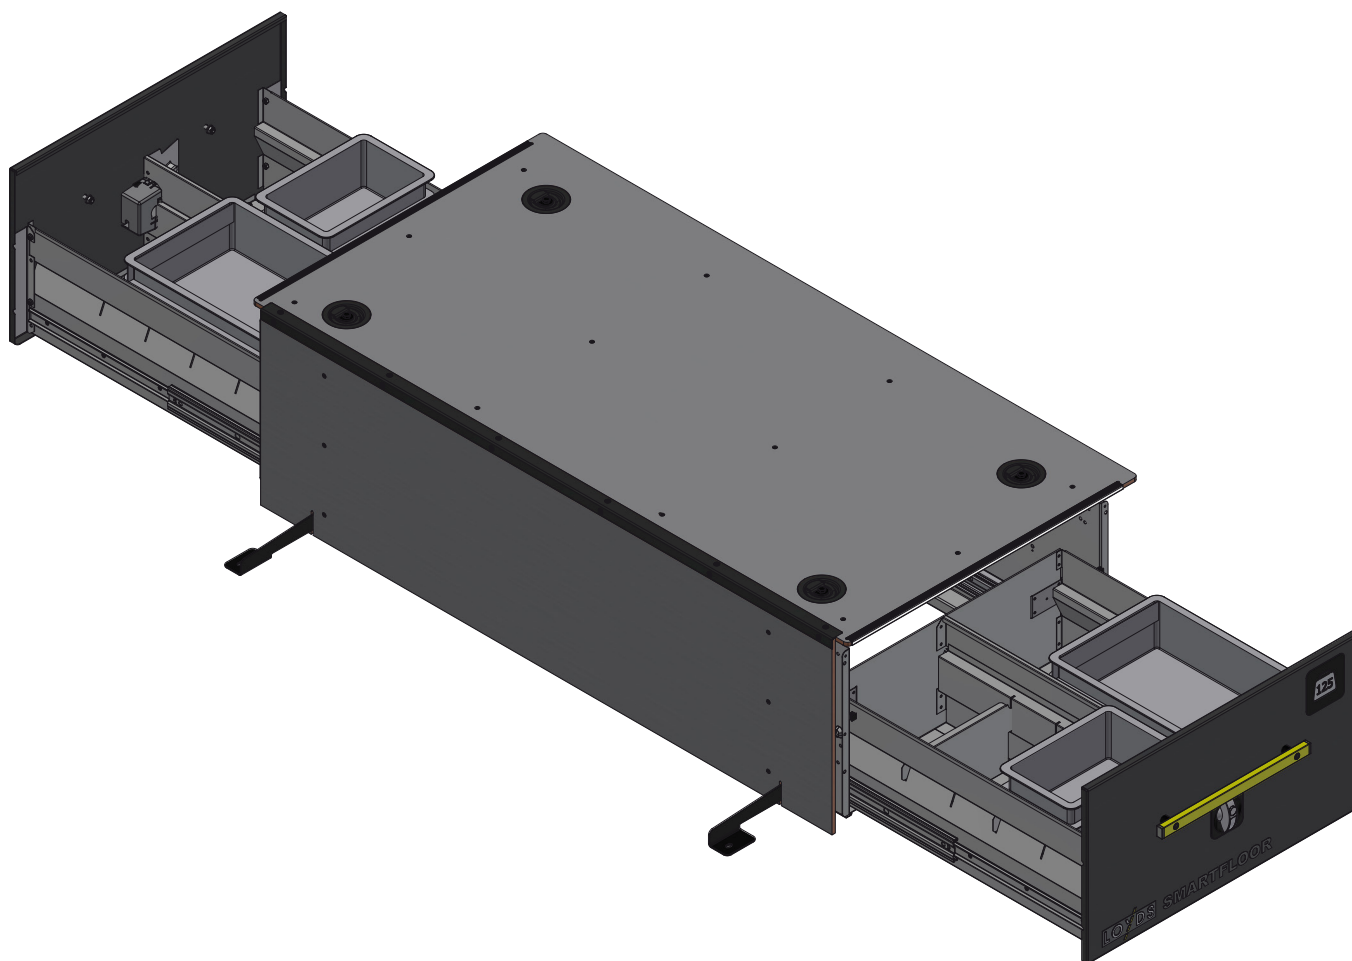

Installation Manual 15029913_A


Loyds Industri AS - 2026-06-30

LOYDS


Revision Record

Rev nr	Date	Page	Picture	Update	New	Deleted steps
A	2026-06-30				X	

Tools

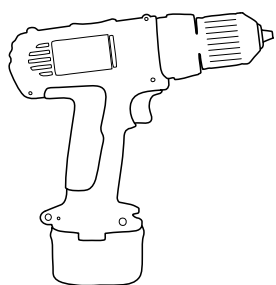

TX25
TX30



PH2





6 mm




6 mm 



6 mm: 6 NM
8 mm: 25 NM

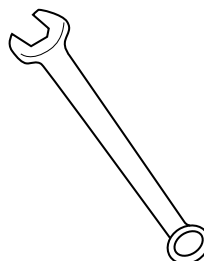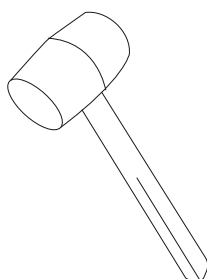

10 mm
13 mm

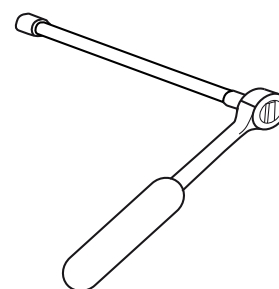


10 mm
13 mm




Use colors when printing this installation manual. / Ved utskrift, bruk farger.

15029797 SF ID Buzz GTX Front Module 2SLD Complete

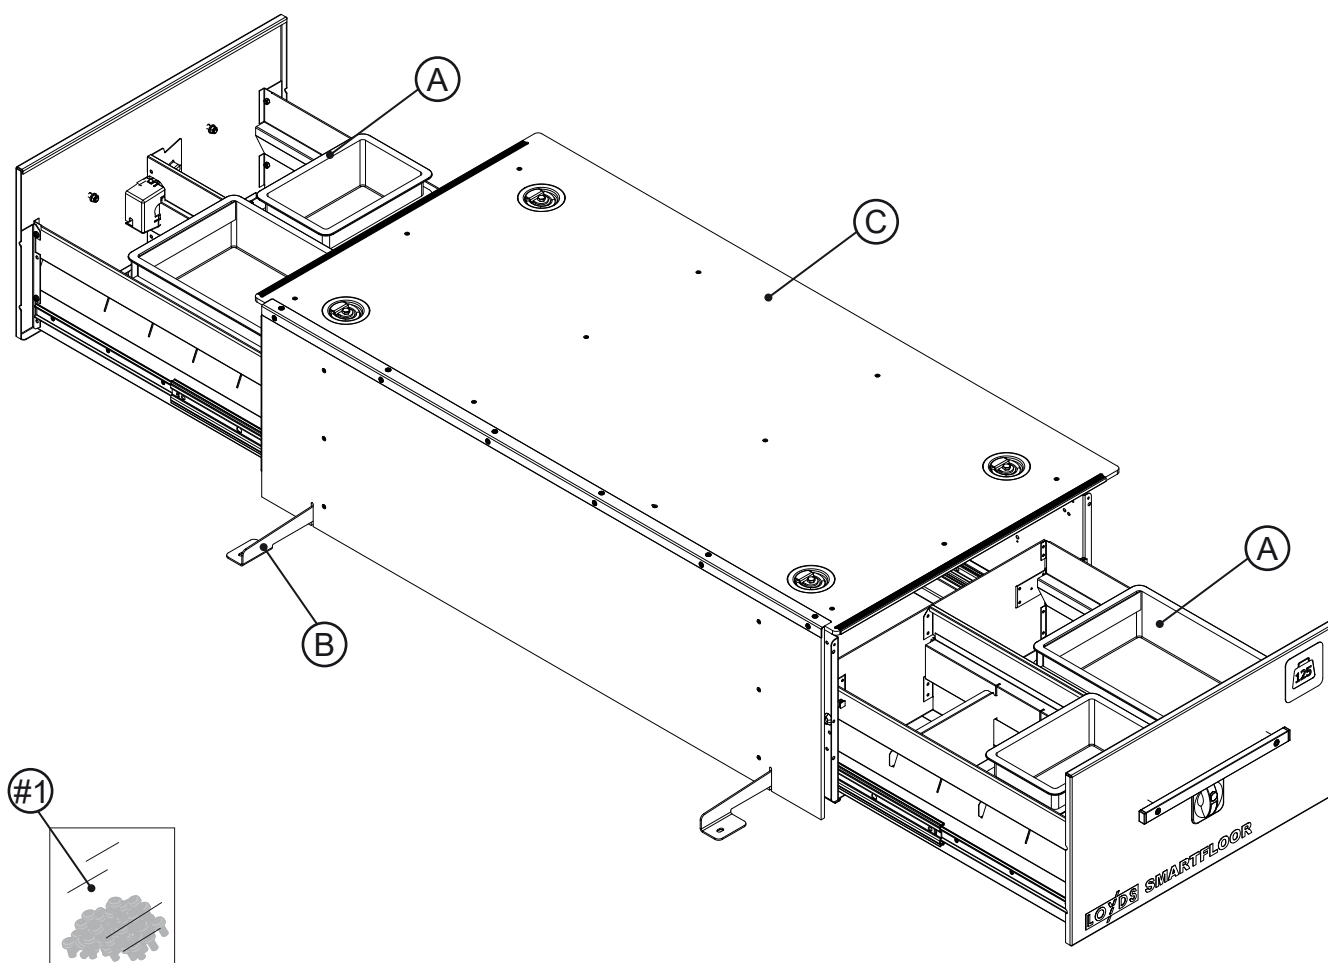


Number	Quantity	Part Number	Definition
A	1	15029957	FD2 W600xL750 Electric ASSY PB
B	1	15029801	SF ID Buzz GTX Front Module Bracket Kit
C	1	15029809	SF ID Buzz GTX Front Module Floor Kit
#1	1	15029800	SF ID Buzz GTX Front Module Fitting Kit

15029801 SF ID Buzz GTX Front Module Bracket Kit

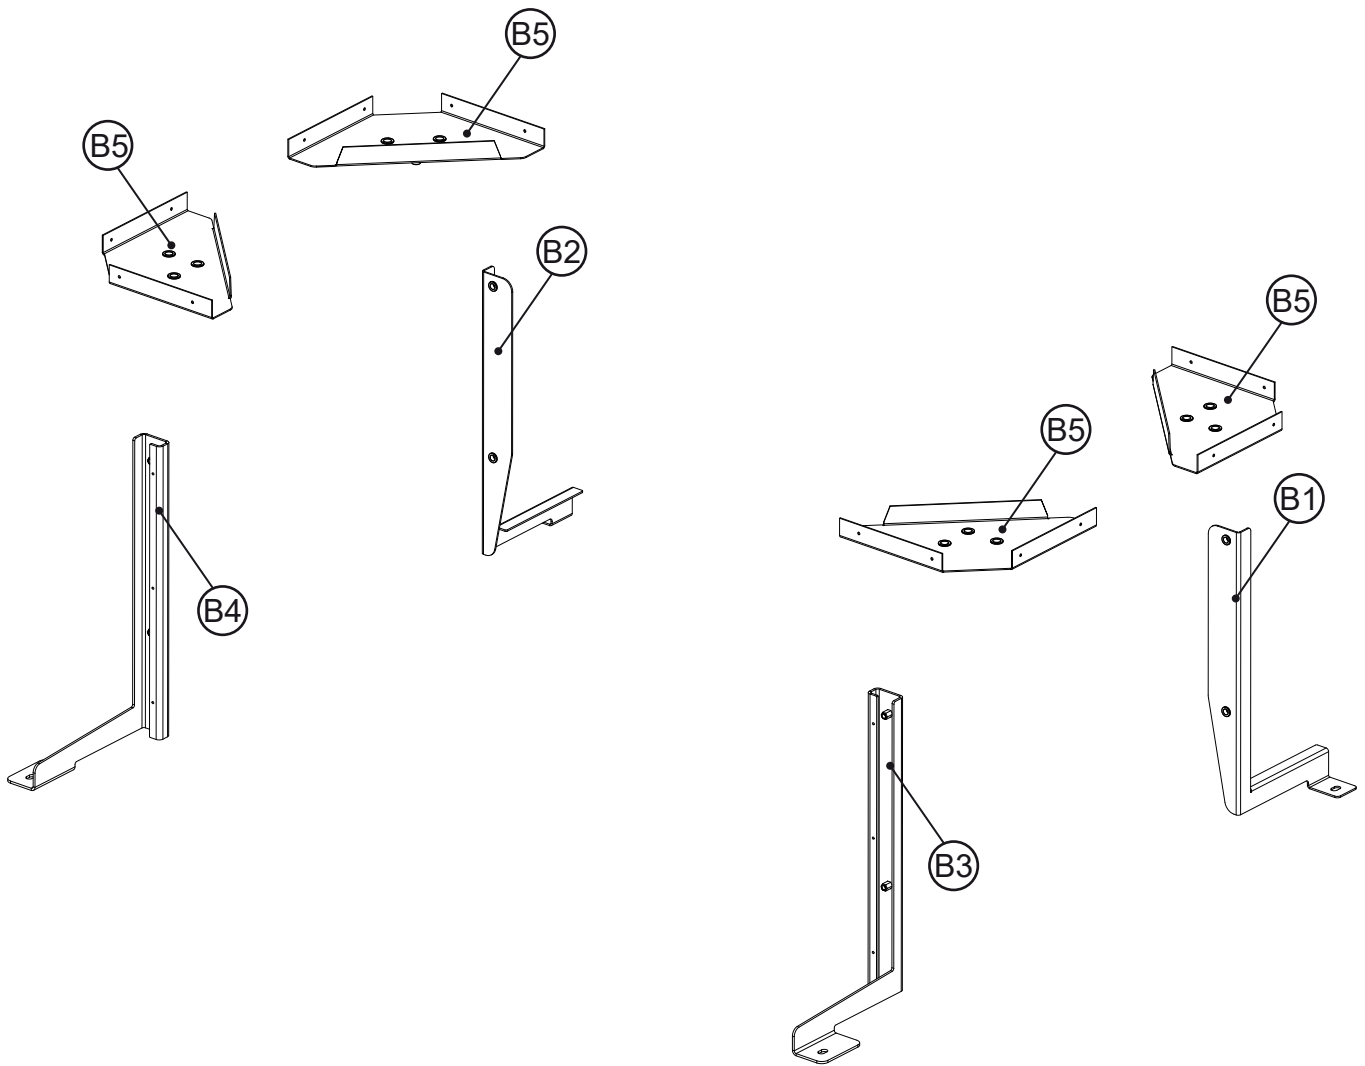


Number	Quantity	Part Number	Definition
B1	1	15029772	SF ID Buzz GTX Front Right Bracket ASSY
B2	1	15029774	SF ID Buzz GTX Front Left Bracket ASSY
B3	1	15029804	SF ID Buzz GTX Front Module Middle R Bracket Assy
B4	1	15029805	SF ID Buzz GTX Front Module Middle L Bracket Assy
B5	4	15018460	Bracket Latch Inner 8mm ASSY

15029809 SF ID Buzz GTX Front Module Floor Kit

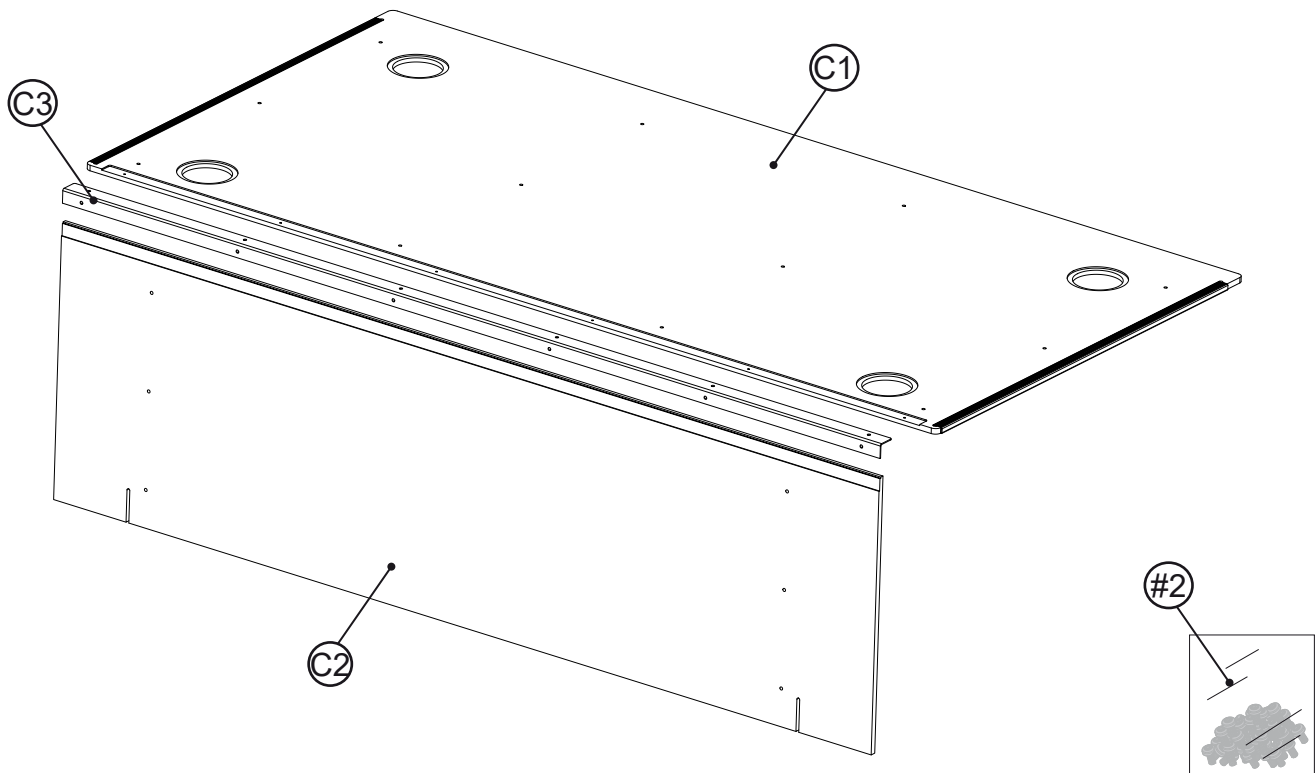


Number	Quantity	Part Number	Definition
C1	1	15029827	SF ID Buzz GTX Front Module Floor with u-profil
C2	1	15029799	SF ID Buzz GTX Vertical Floor
C3	1	15029962	SF ID Buzz GTX FM Floor Angle
#2	1	15029825	SF ID Buzz GTX Front Module Floor Fitting Kit

15010236 Handle Assy

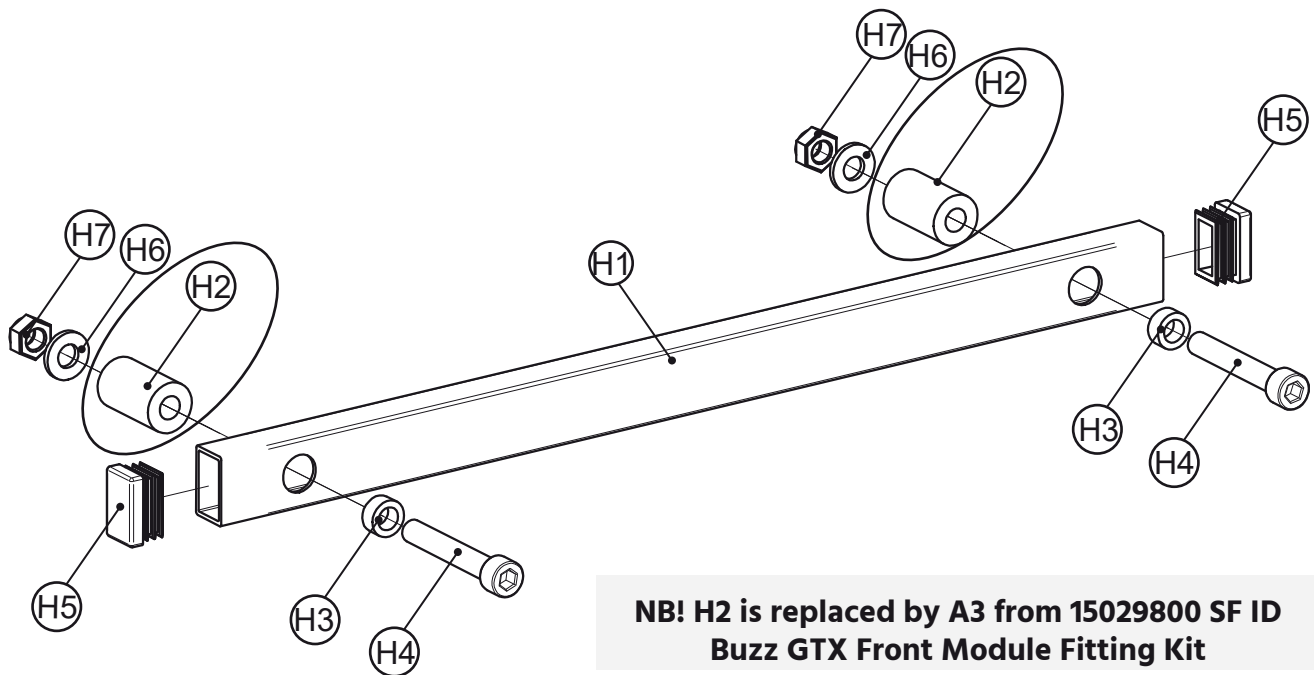


Number	Quantity	Part Number	Definition
H1	2	15009441	Handle Tube 25x15x286
H2	2	15009442	Spacer Ø8,3x18x30 Nylon Black
H3	2	15009443	Spacer Ø8,1x13x6mm Galv
H4	2	15009444	Screw M8x50 Cylinderh Hex
H5	2	15009438	End sleeve Black
H6	2	8,4x17x2	M8 Washer, DIN 125
H7	2	8 NMU	Mutter M8 Nyloc DIN985

#1 15029800 SF ID Buzz GTX Front Module Fitting Kit


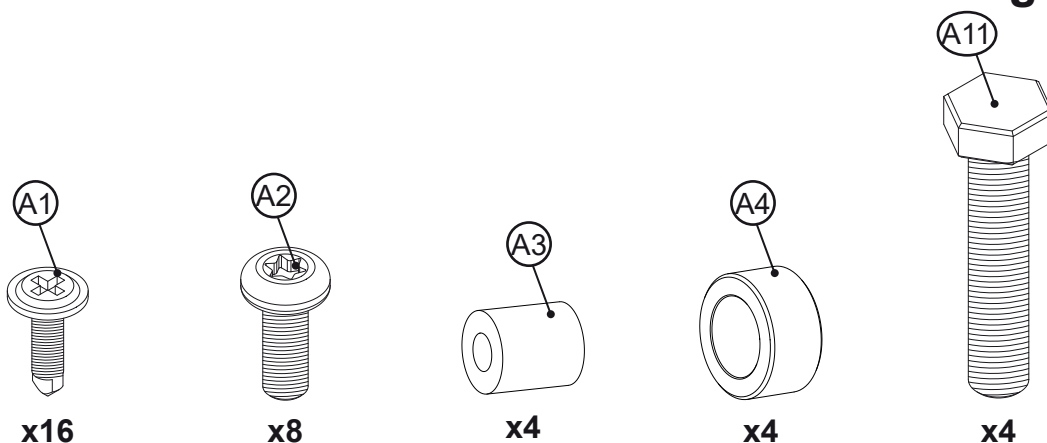


A1	4,2x16 FLS Platescrew selfdrilling E45759 Black
A2	15003551 M6x16 TX30 pan (DIN 7985)
A3	15010652 Spacer Ø8,3x18x20 Nylon Black
A4	13x20x10 Spacer, U-710
A11	8x40 6ks M8x40mm Bolt, DIN 933, sort


#2 15029825 SF ID Buzz GTX Front Module Floor Fitting Kit

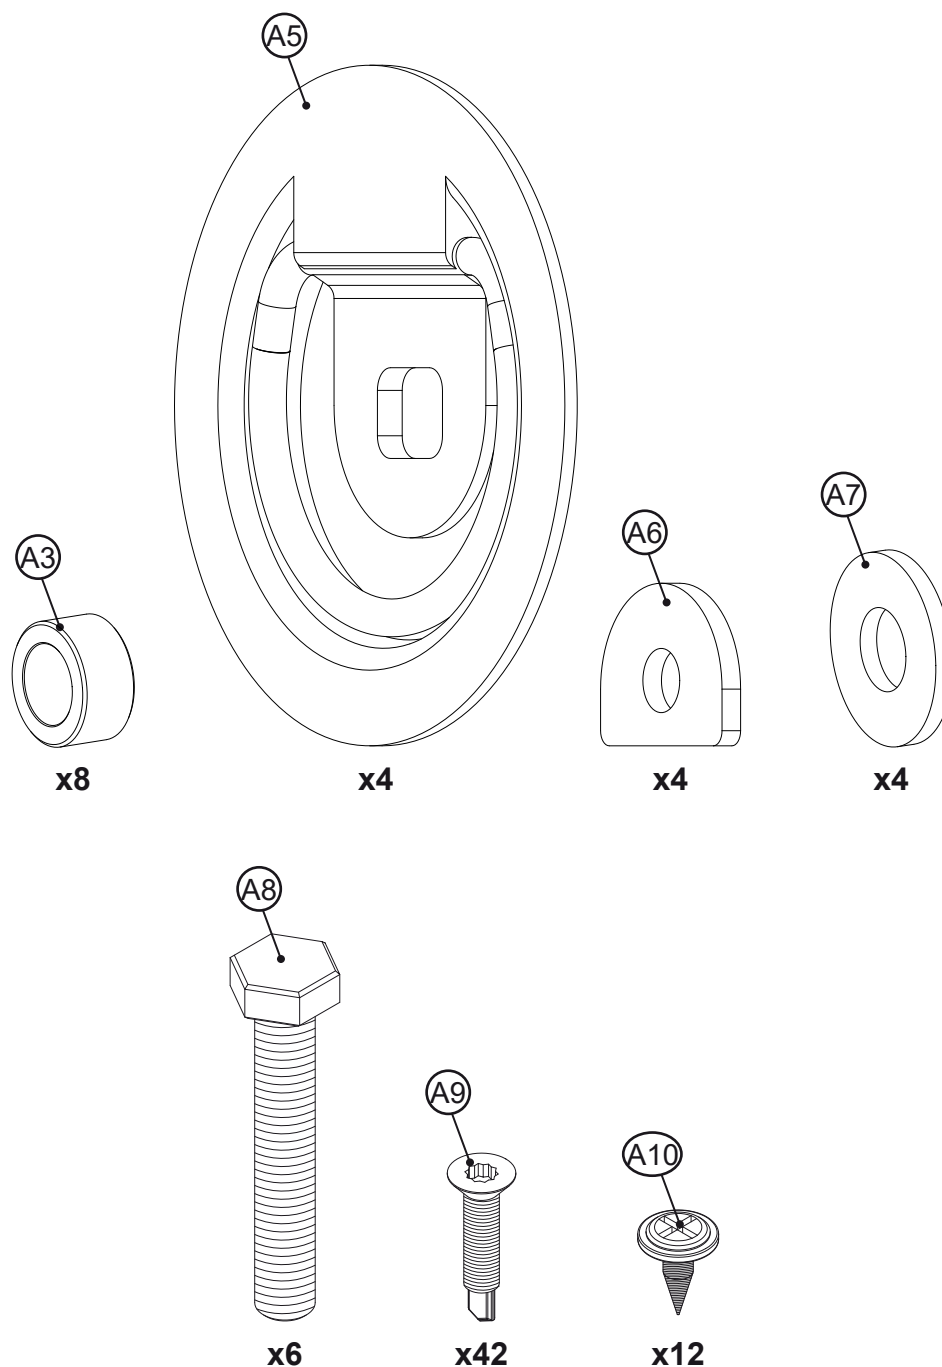


A4	13x20x10 Spacer, U-710
A5	15005497 Latch Cup Black Ø90 Ø12x15 1000Kp
A6	15005884 Washer Latchcup for Ø8
A7	15009916 Washer 30x13x3 Elz
A8	15004713 M8x50 screw, 6K DIN 933 Black, ElZn+Cr3
A9	15016947 Screw 4,8x25 Selfdrill Counters Torx Elz
A10	4,2 x 13 S Screw Flathead Needle Black

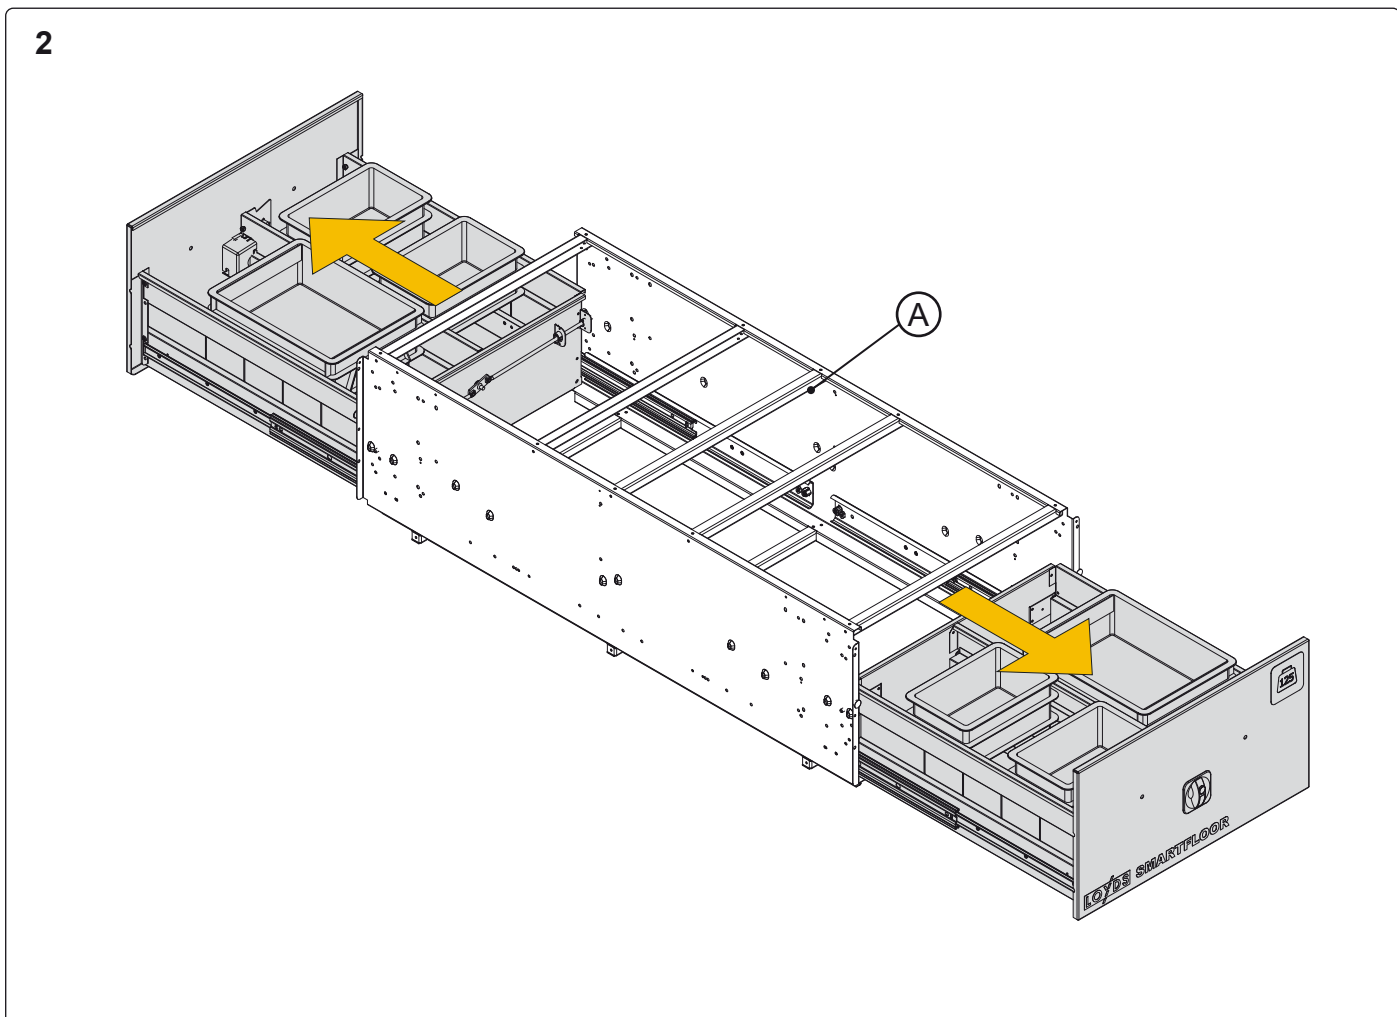
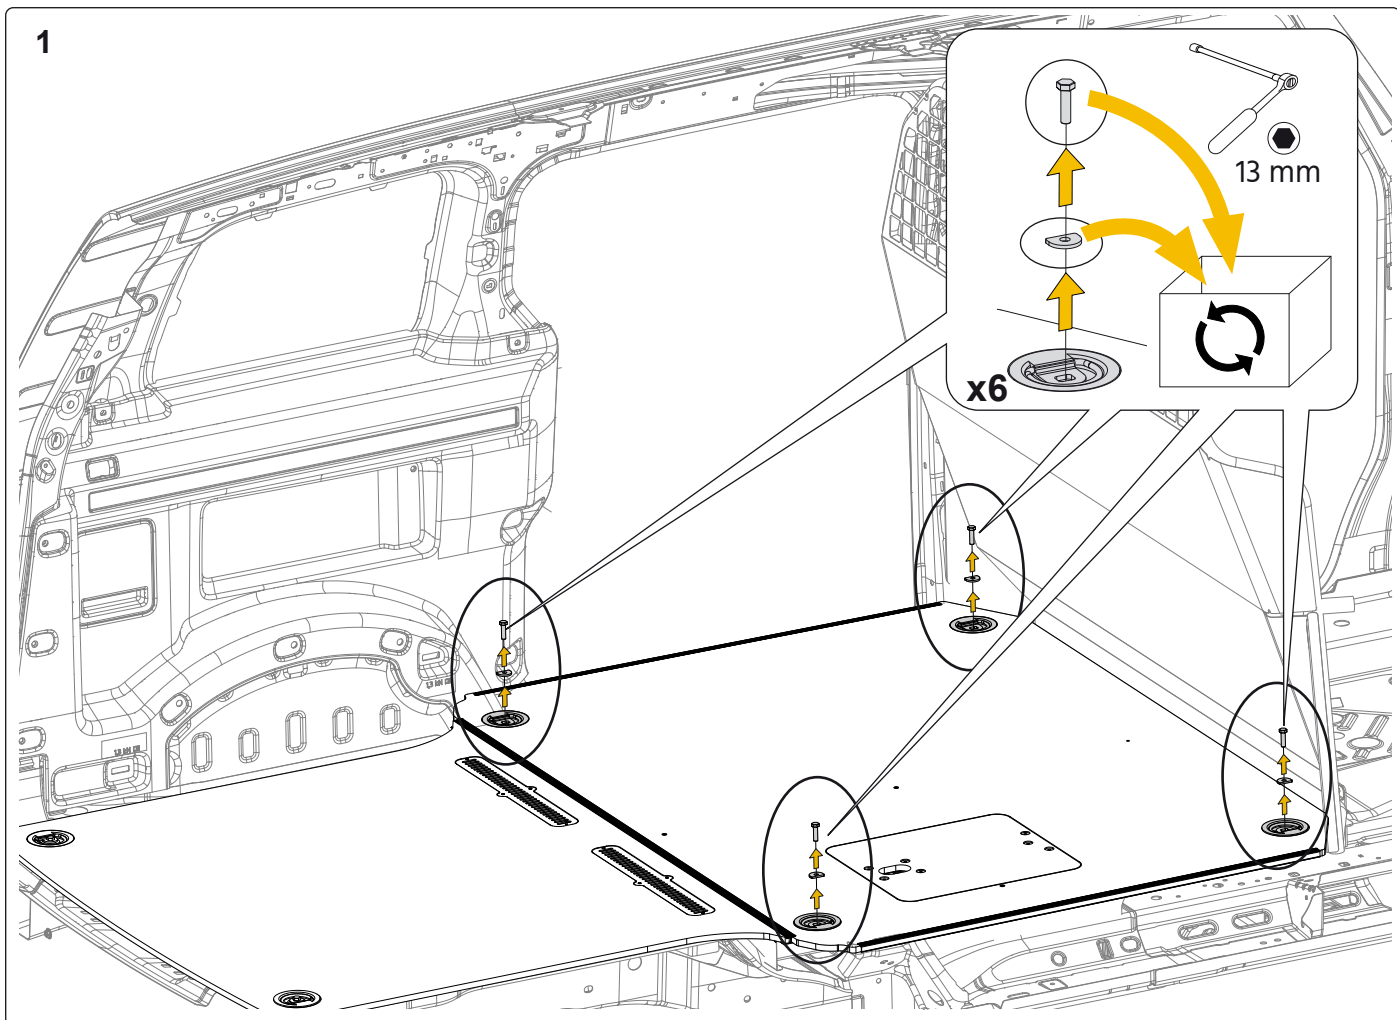


3

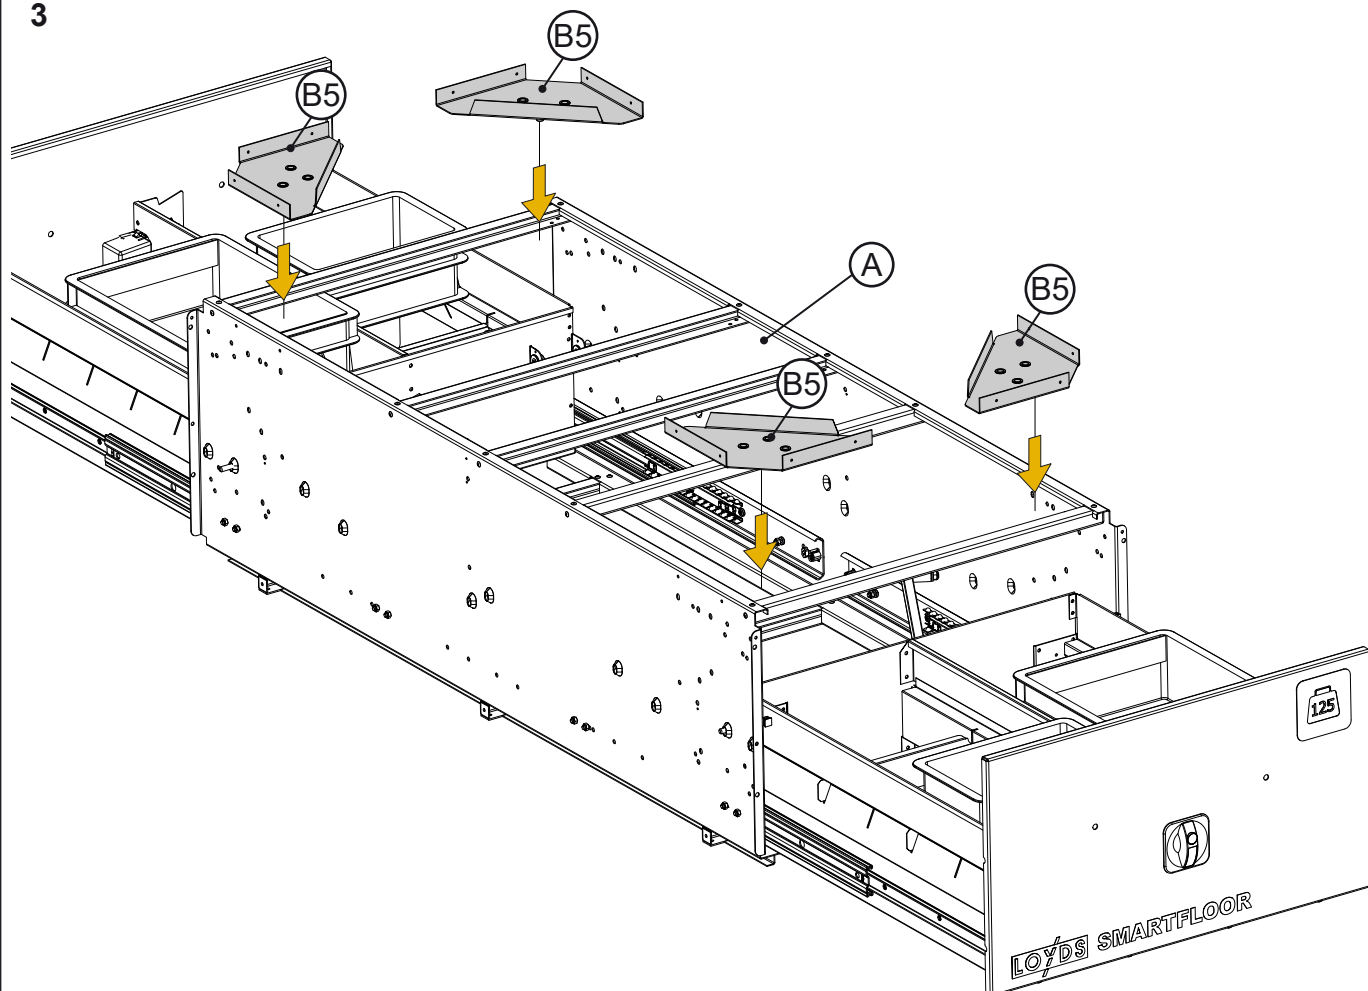


4

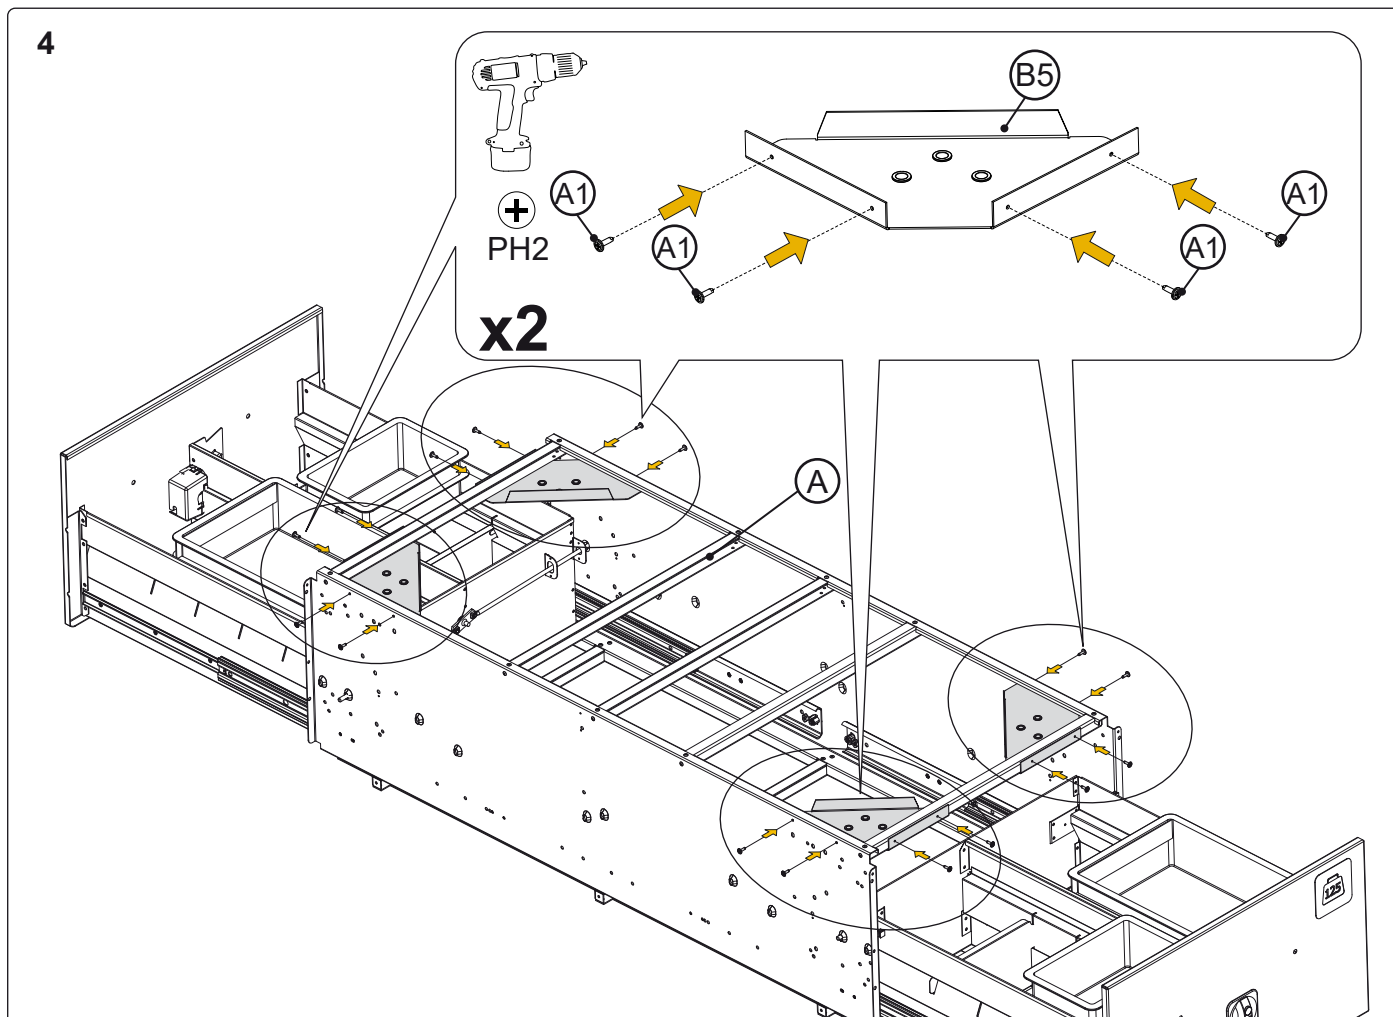


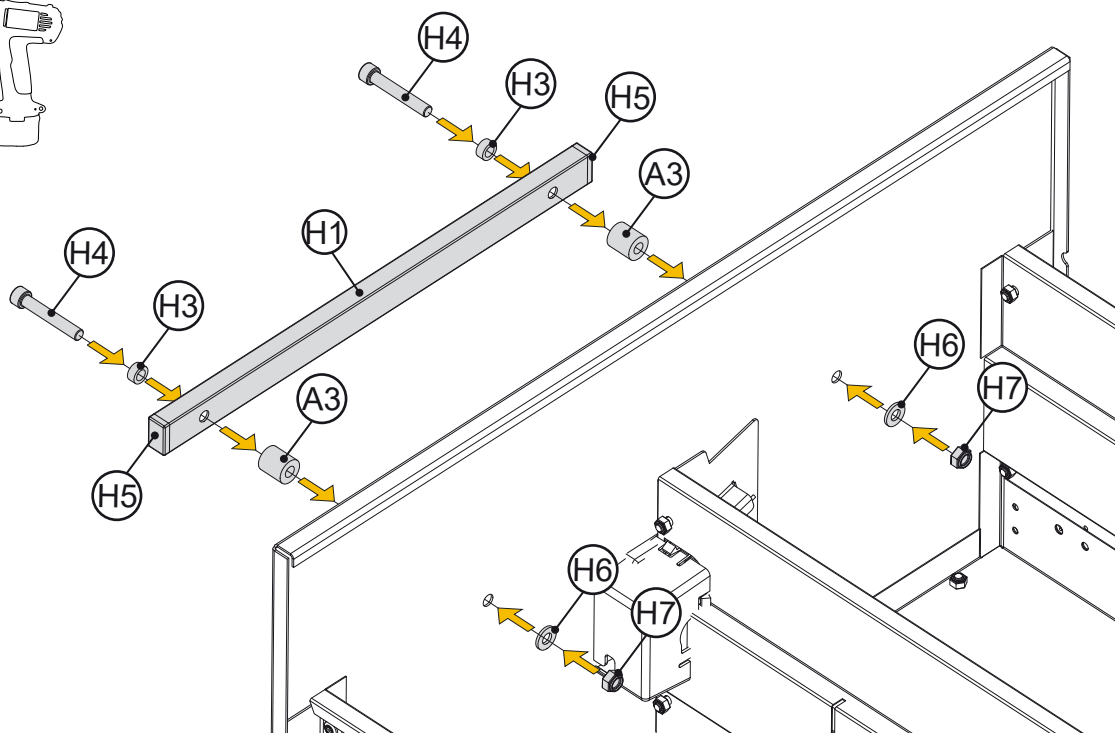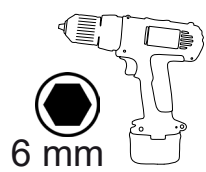

x2

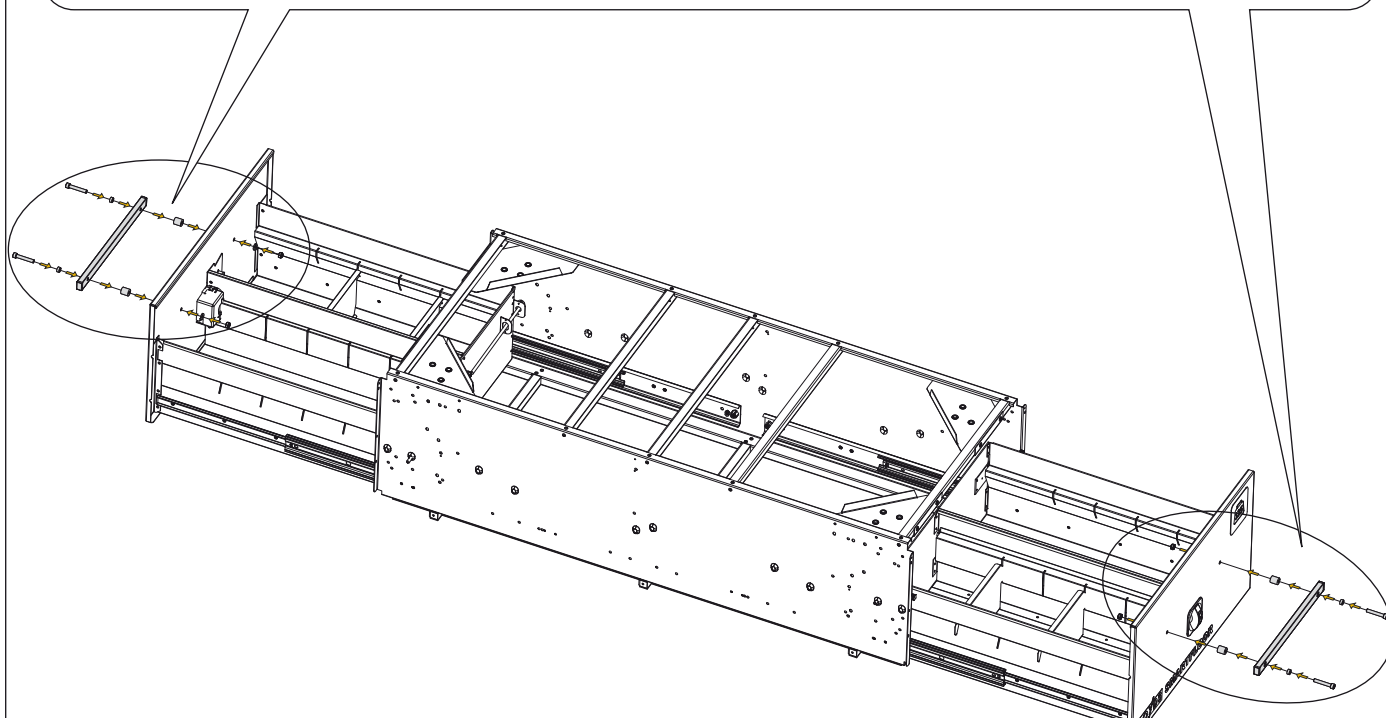


6

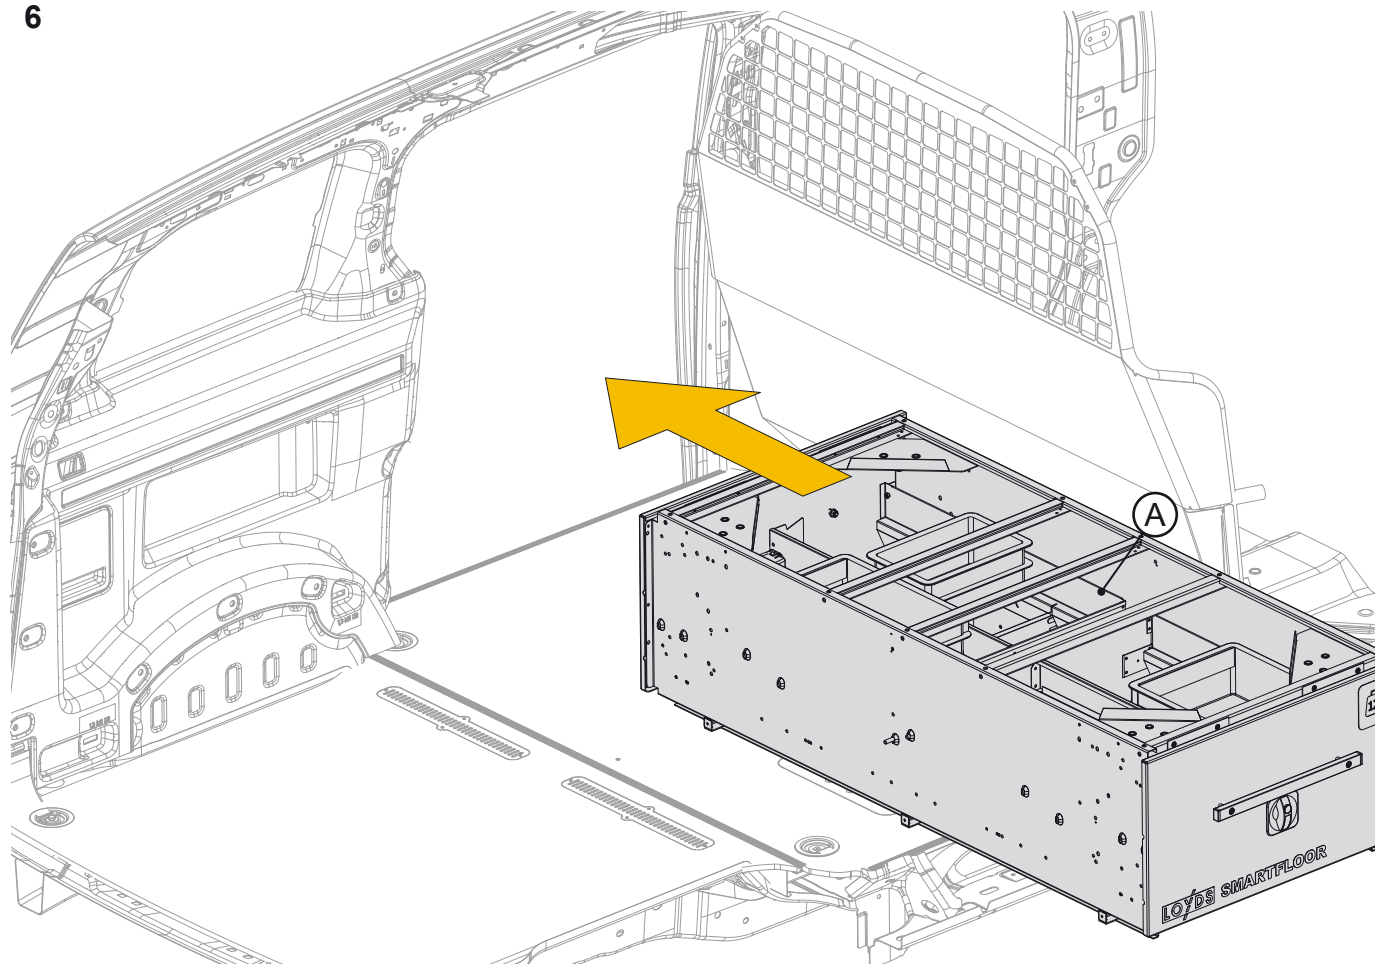


7


Ensure the front module is centered on the floor

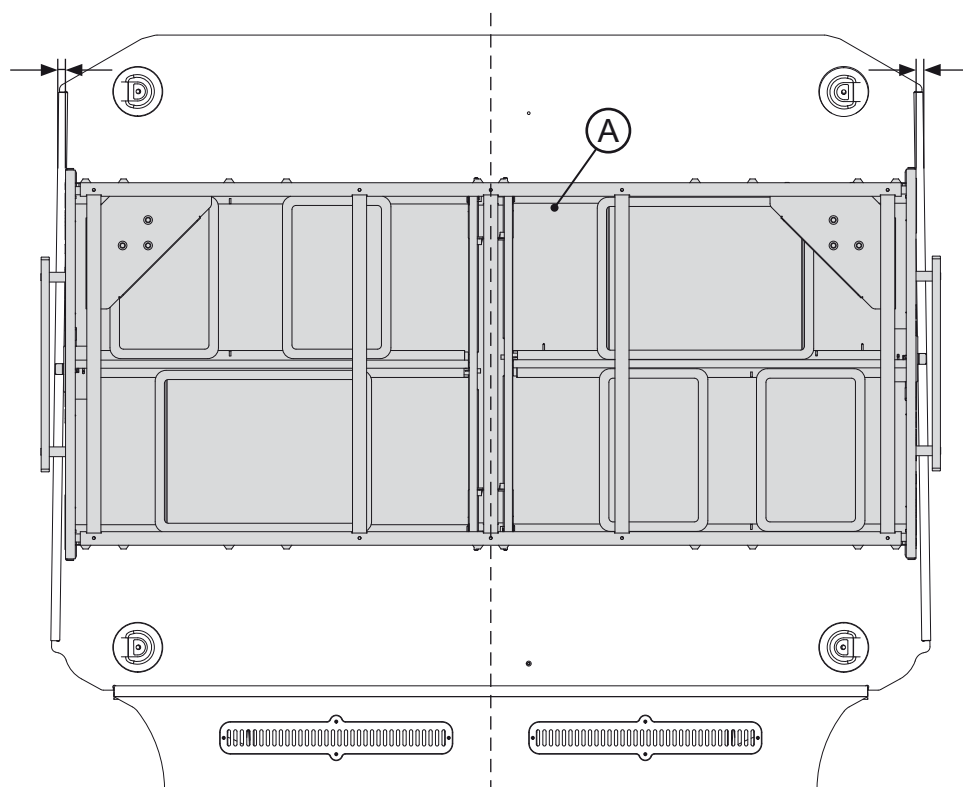


8

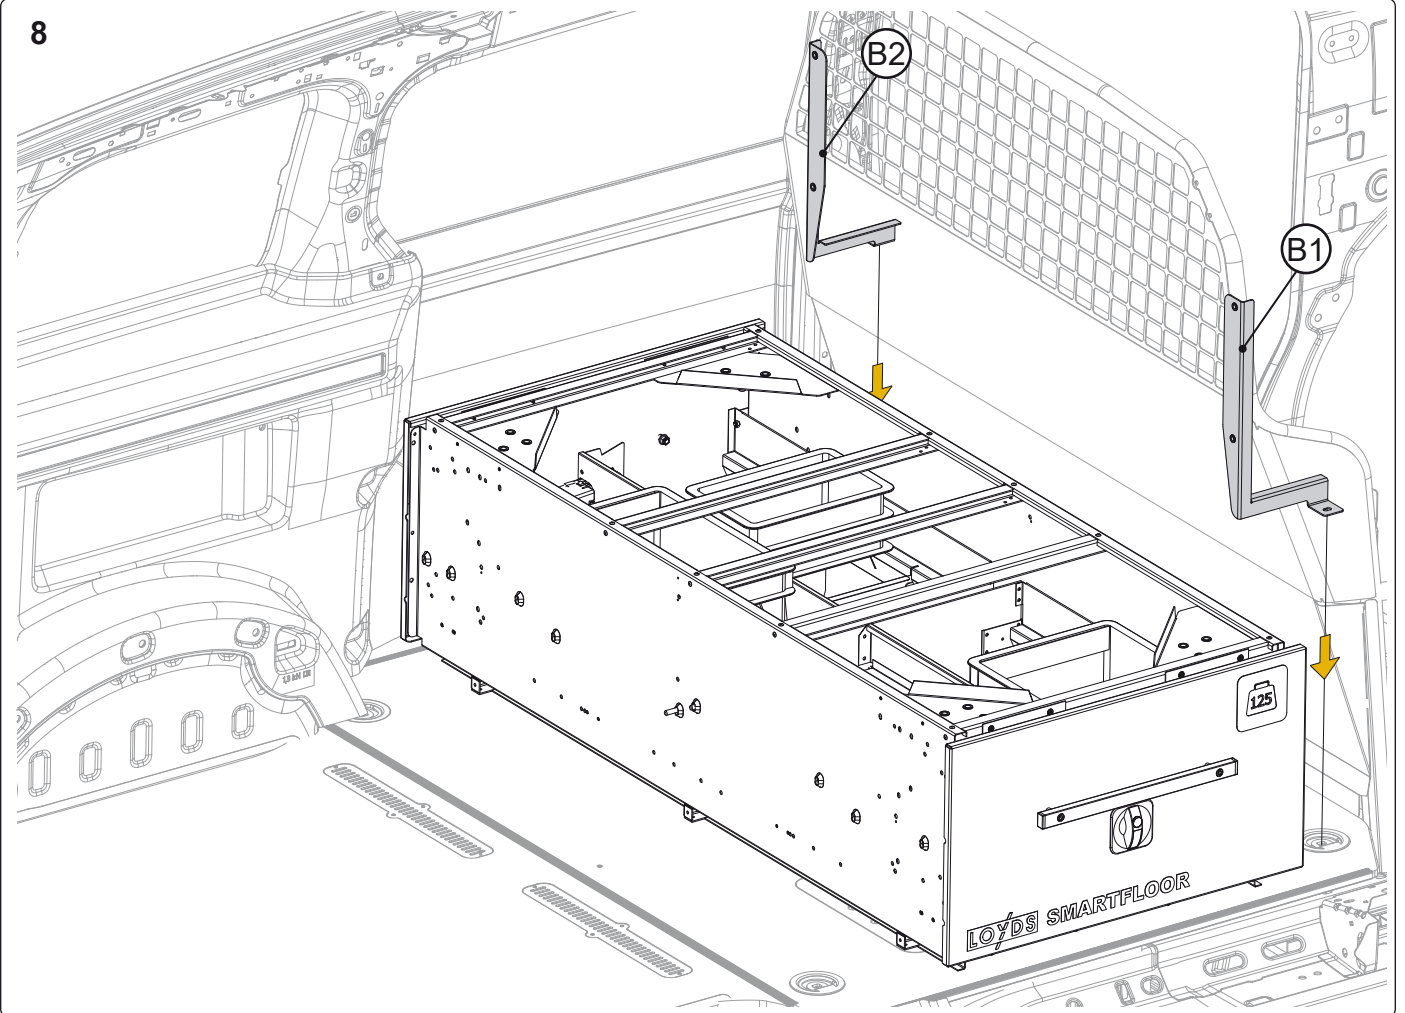


9

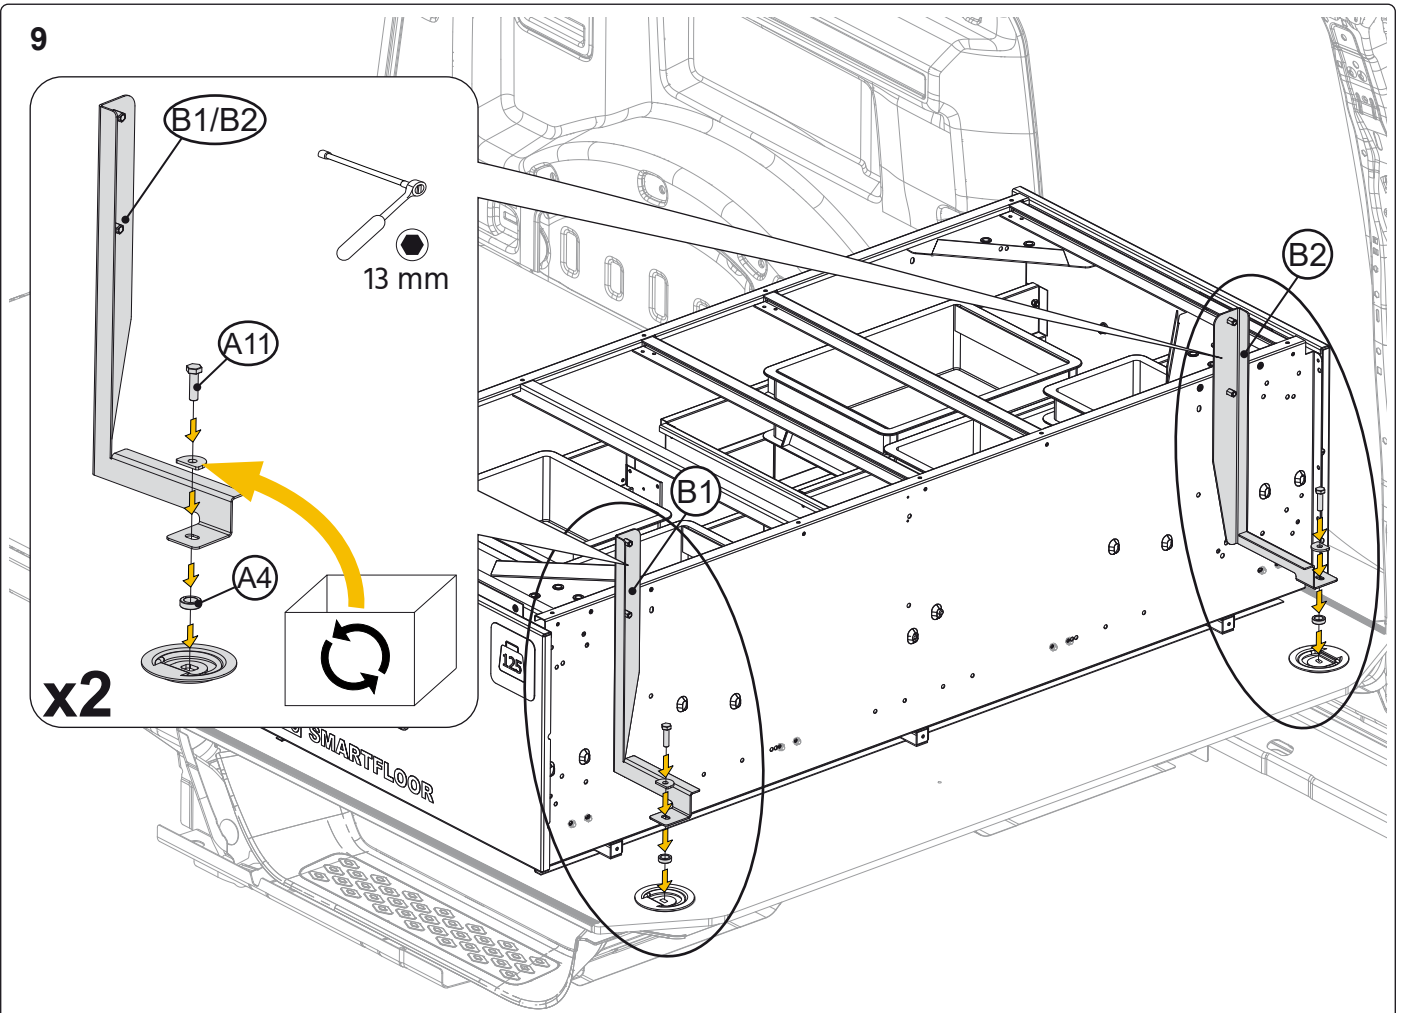


10

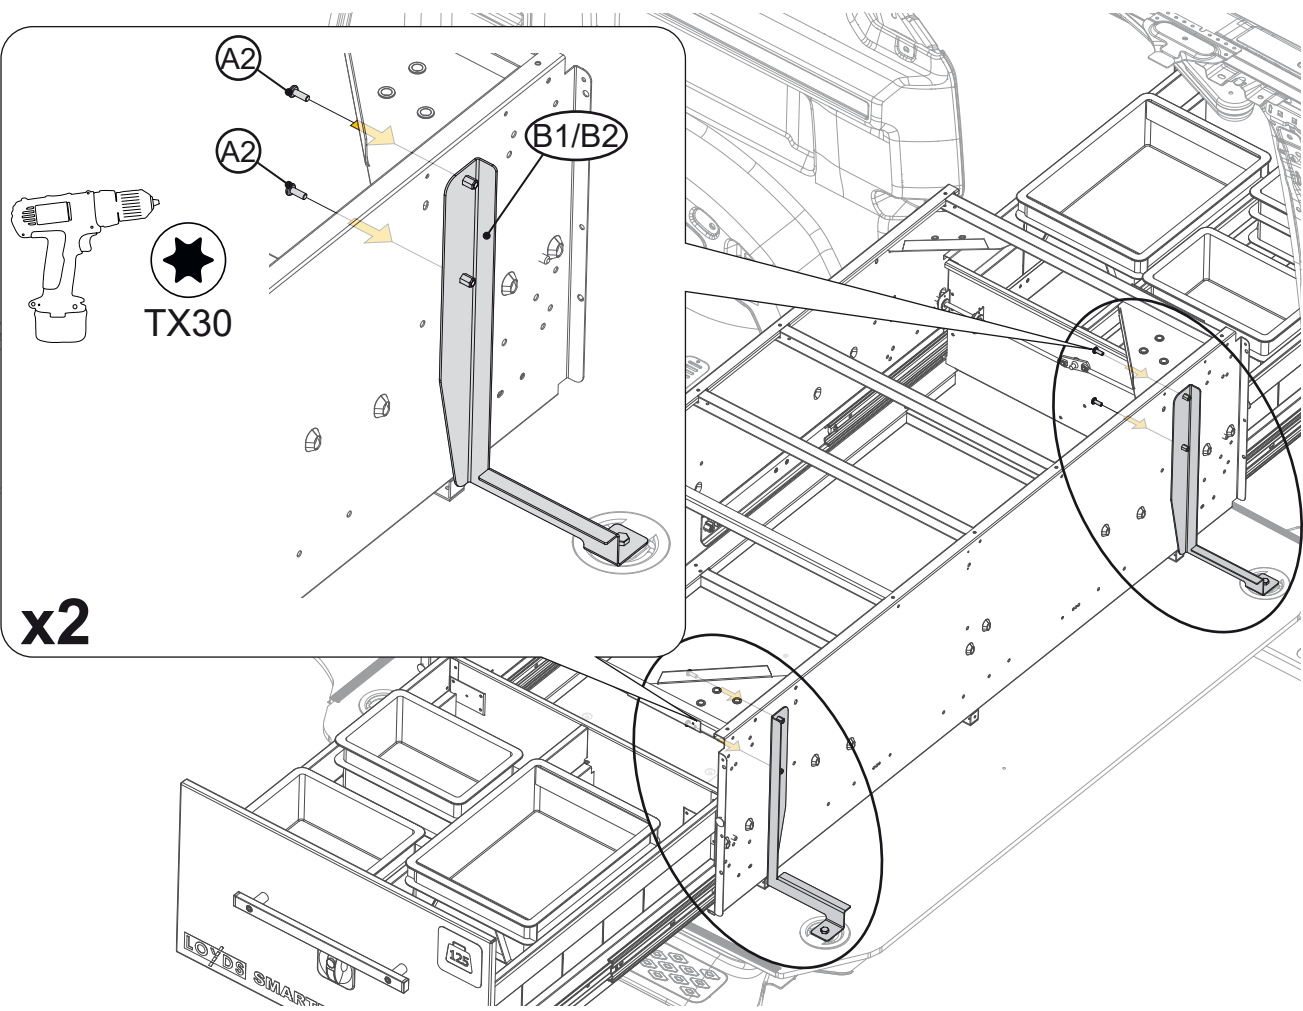


11

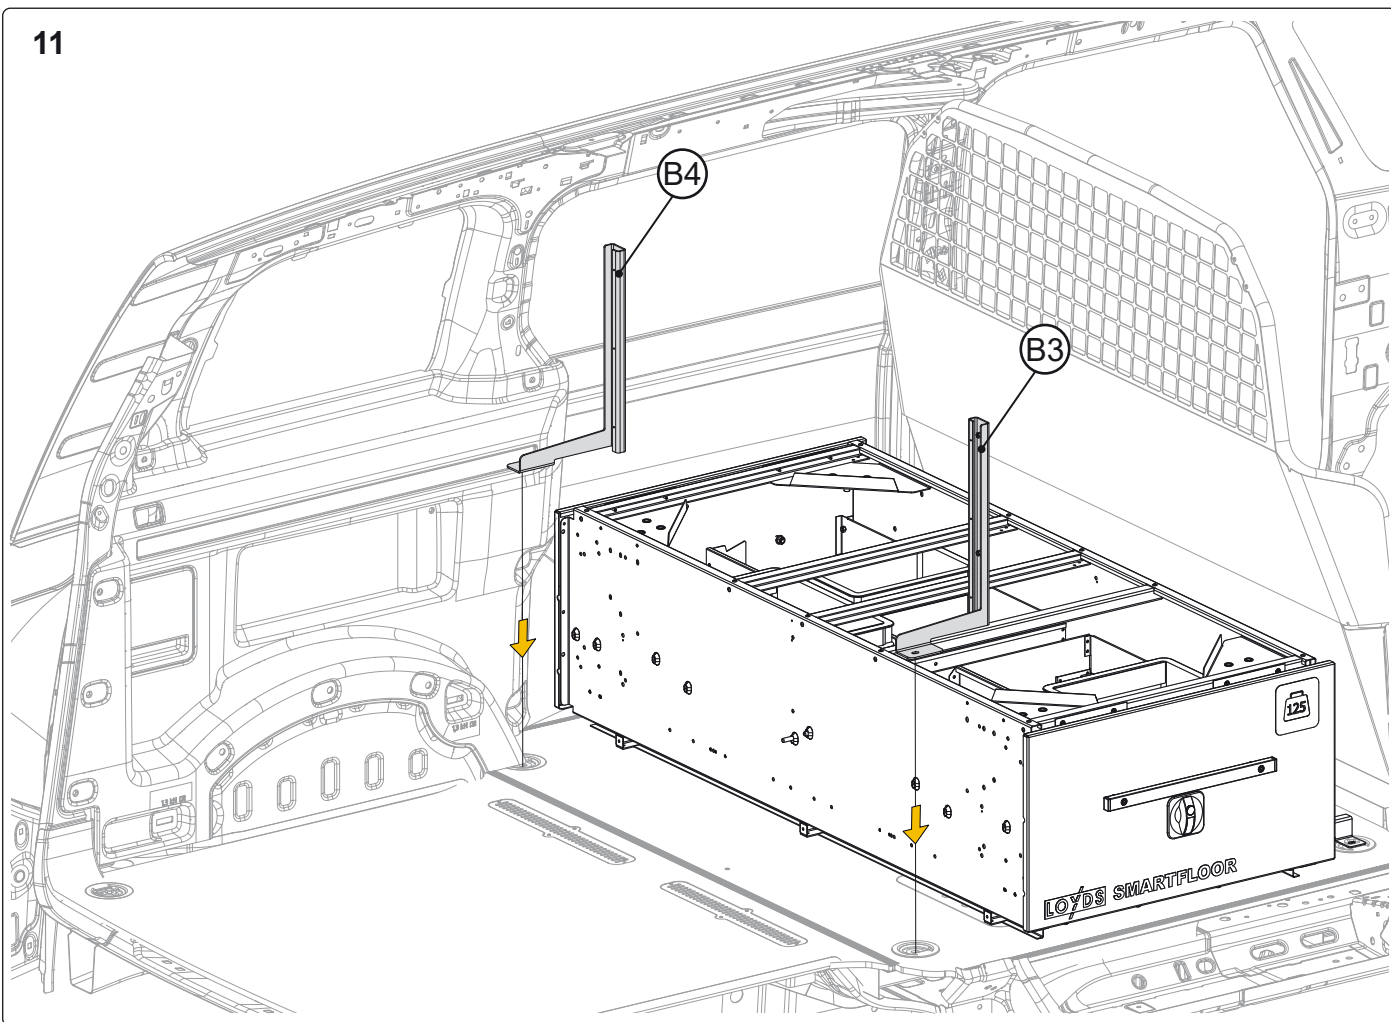


12

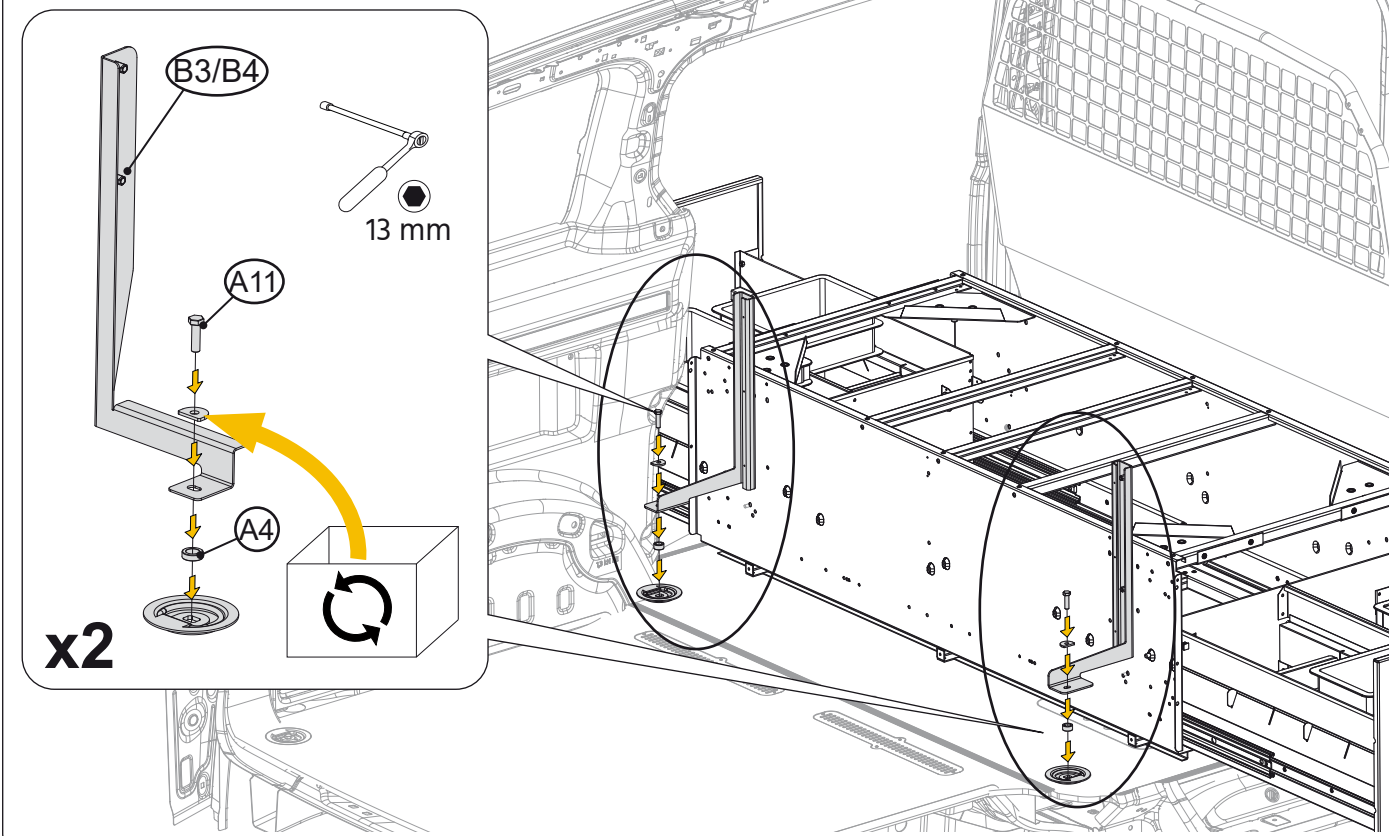


13

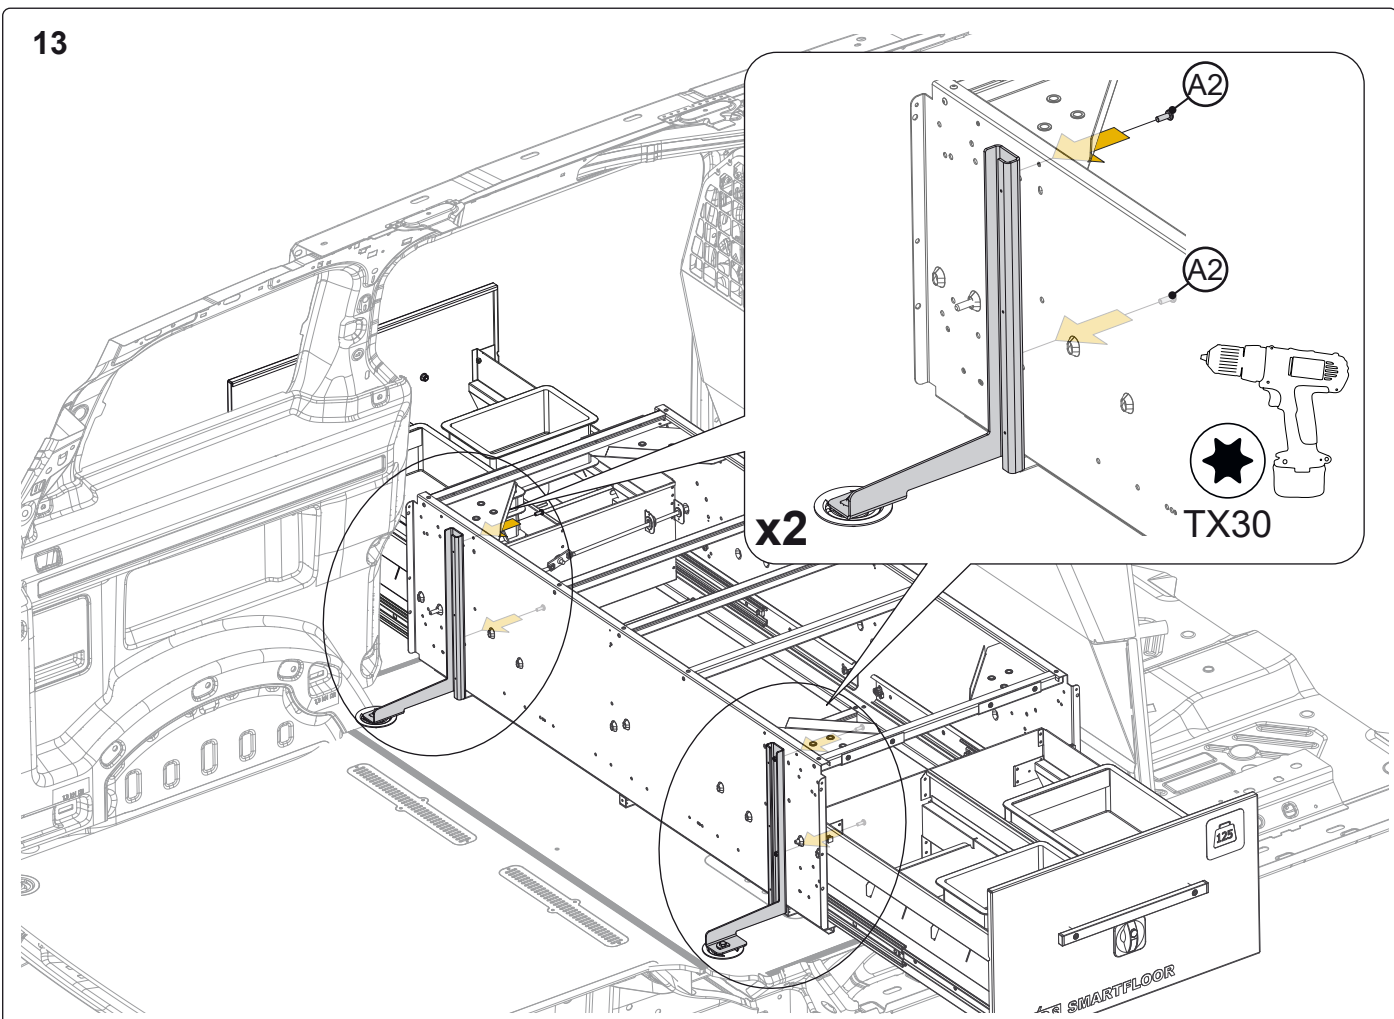


14

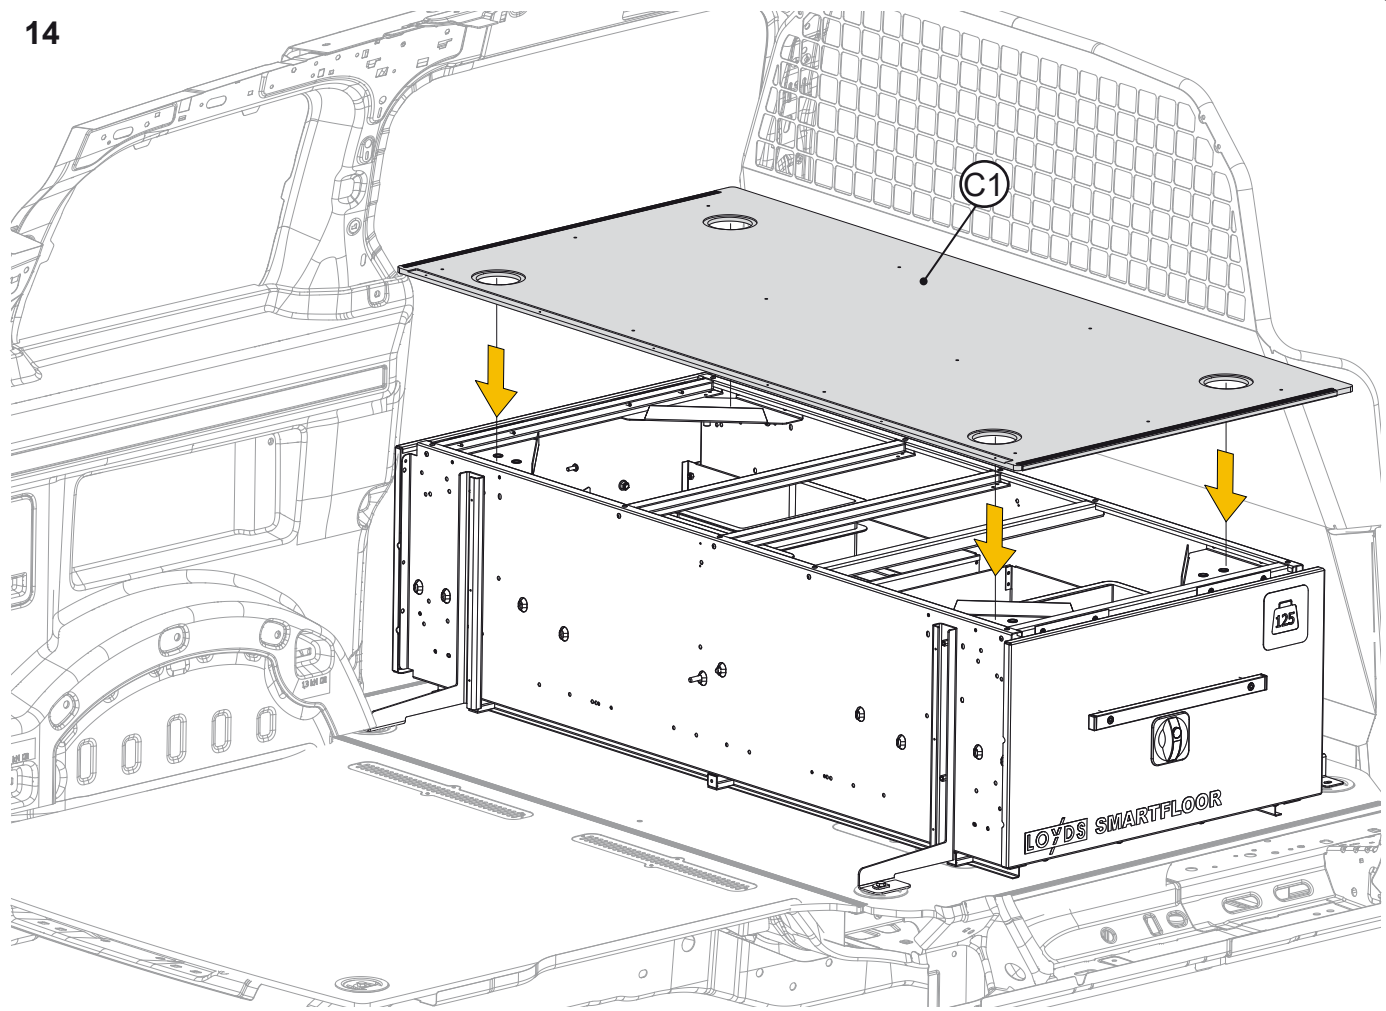


15

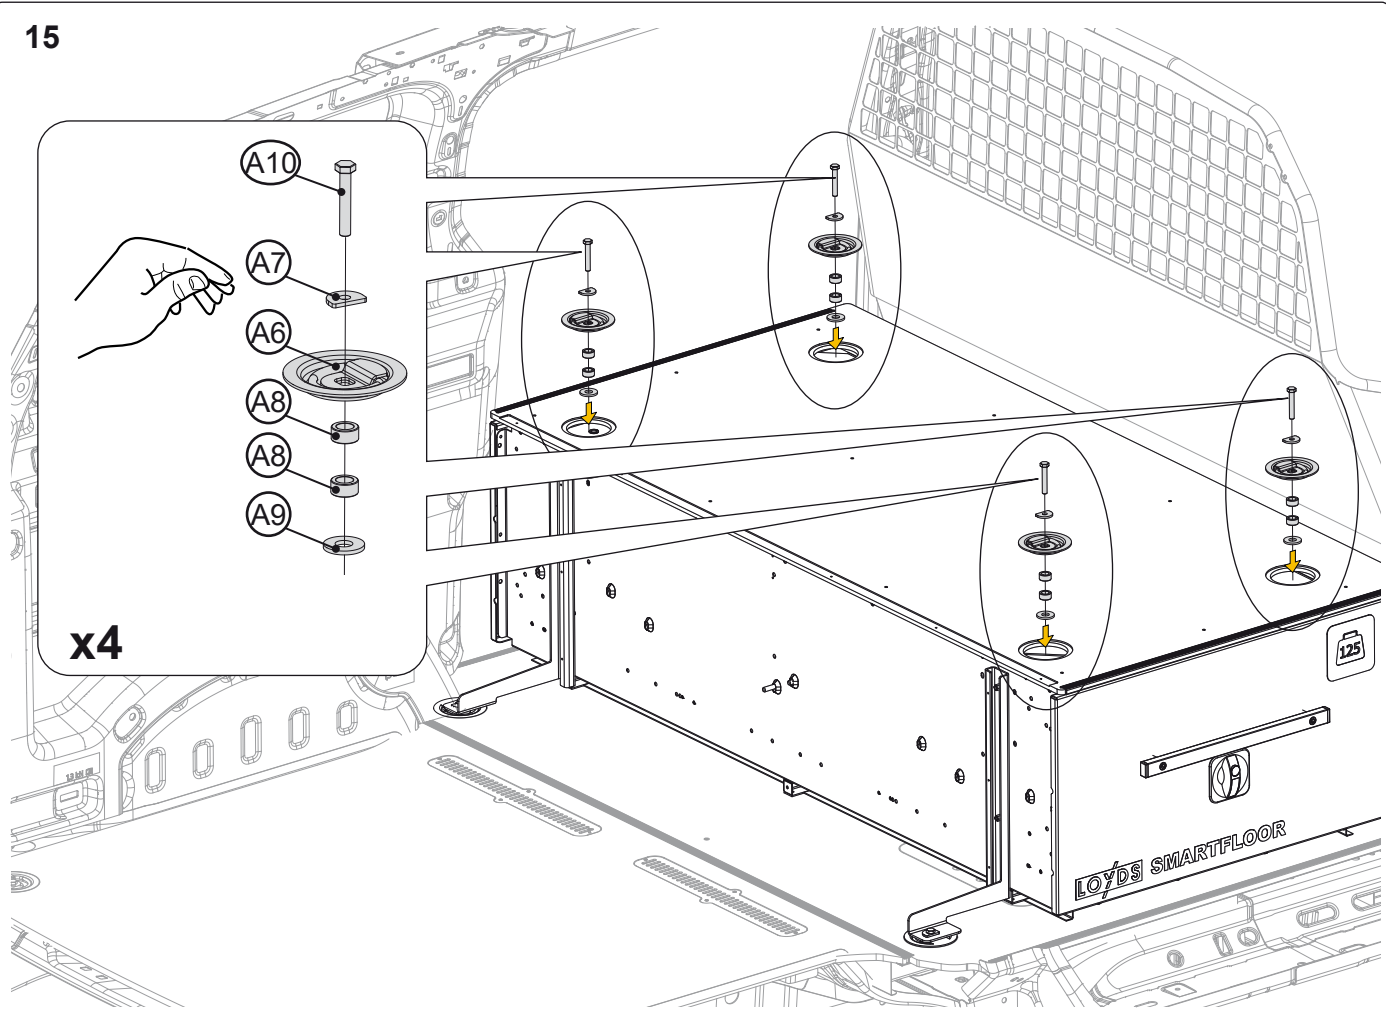


16

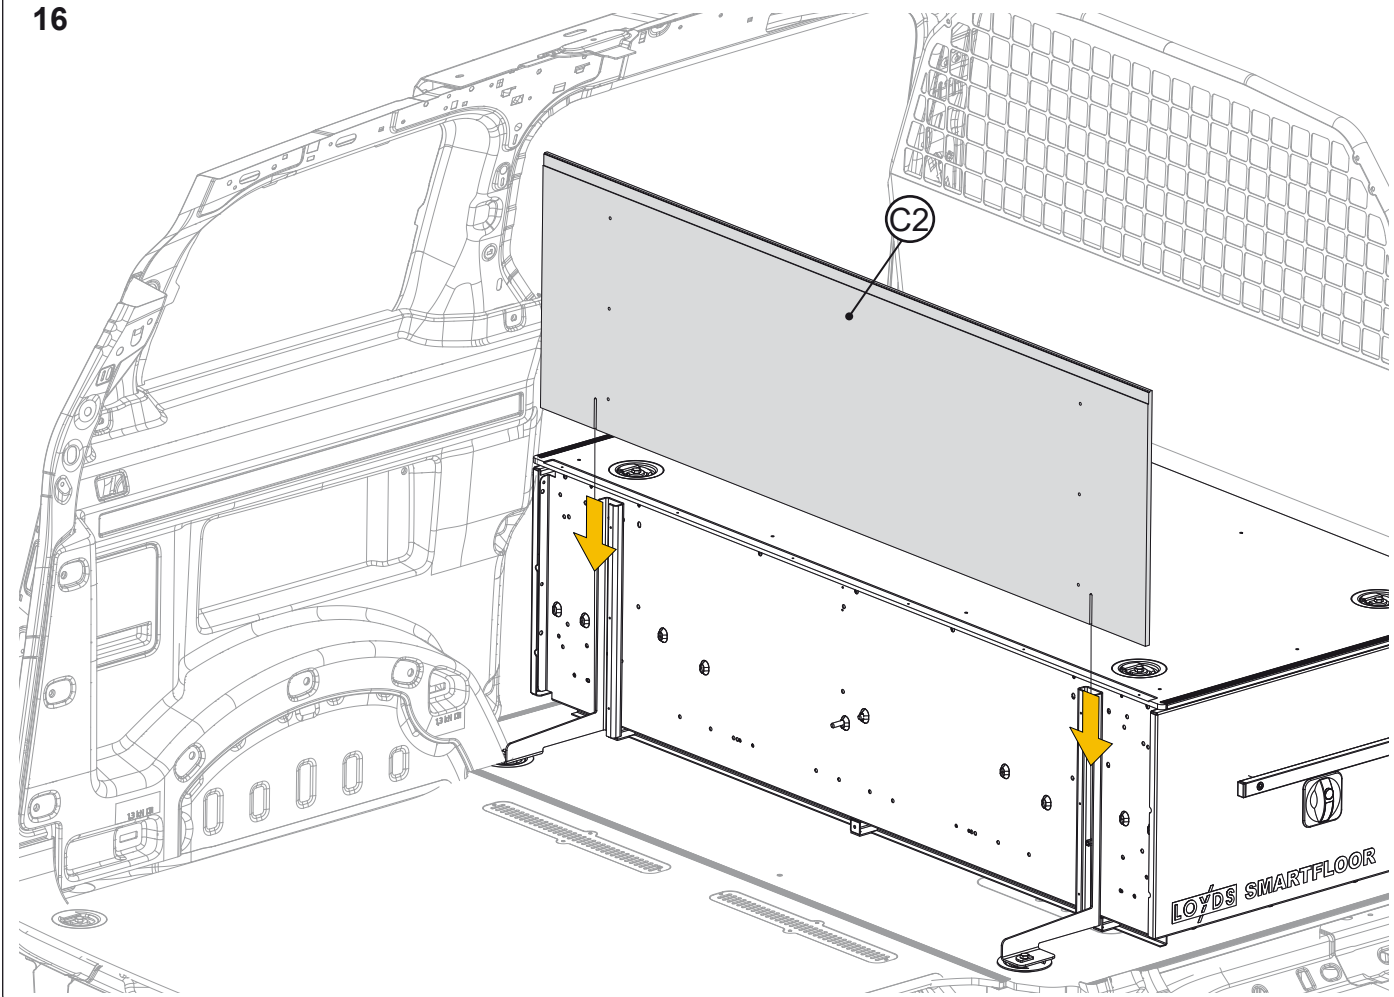


17

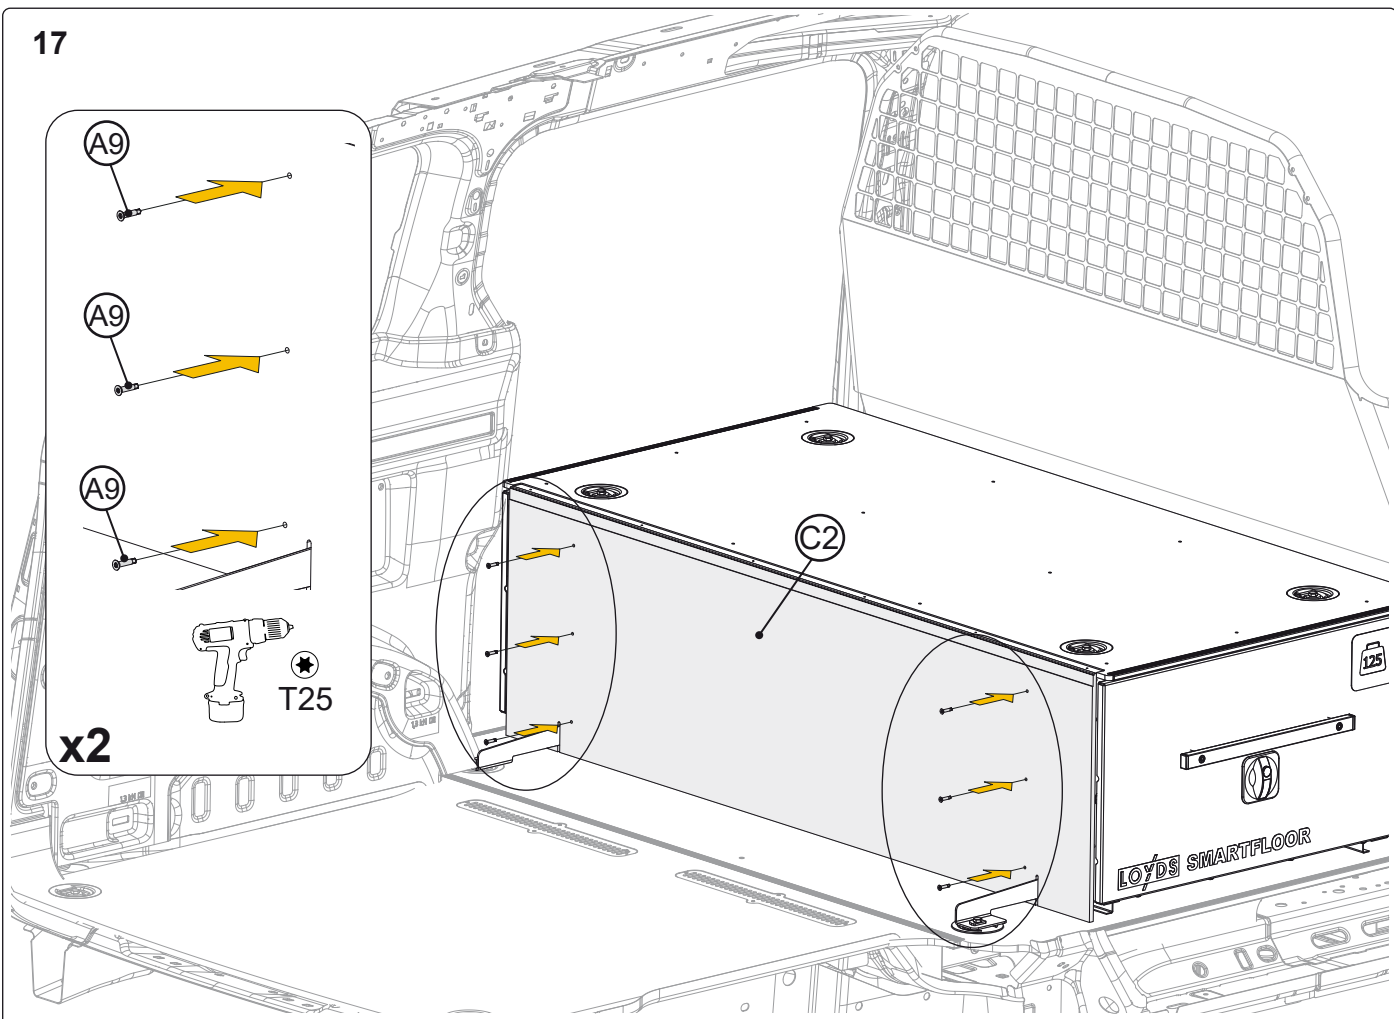


18

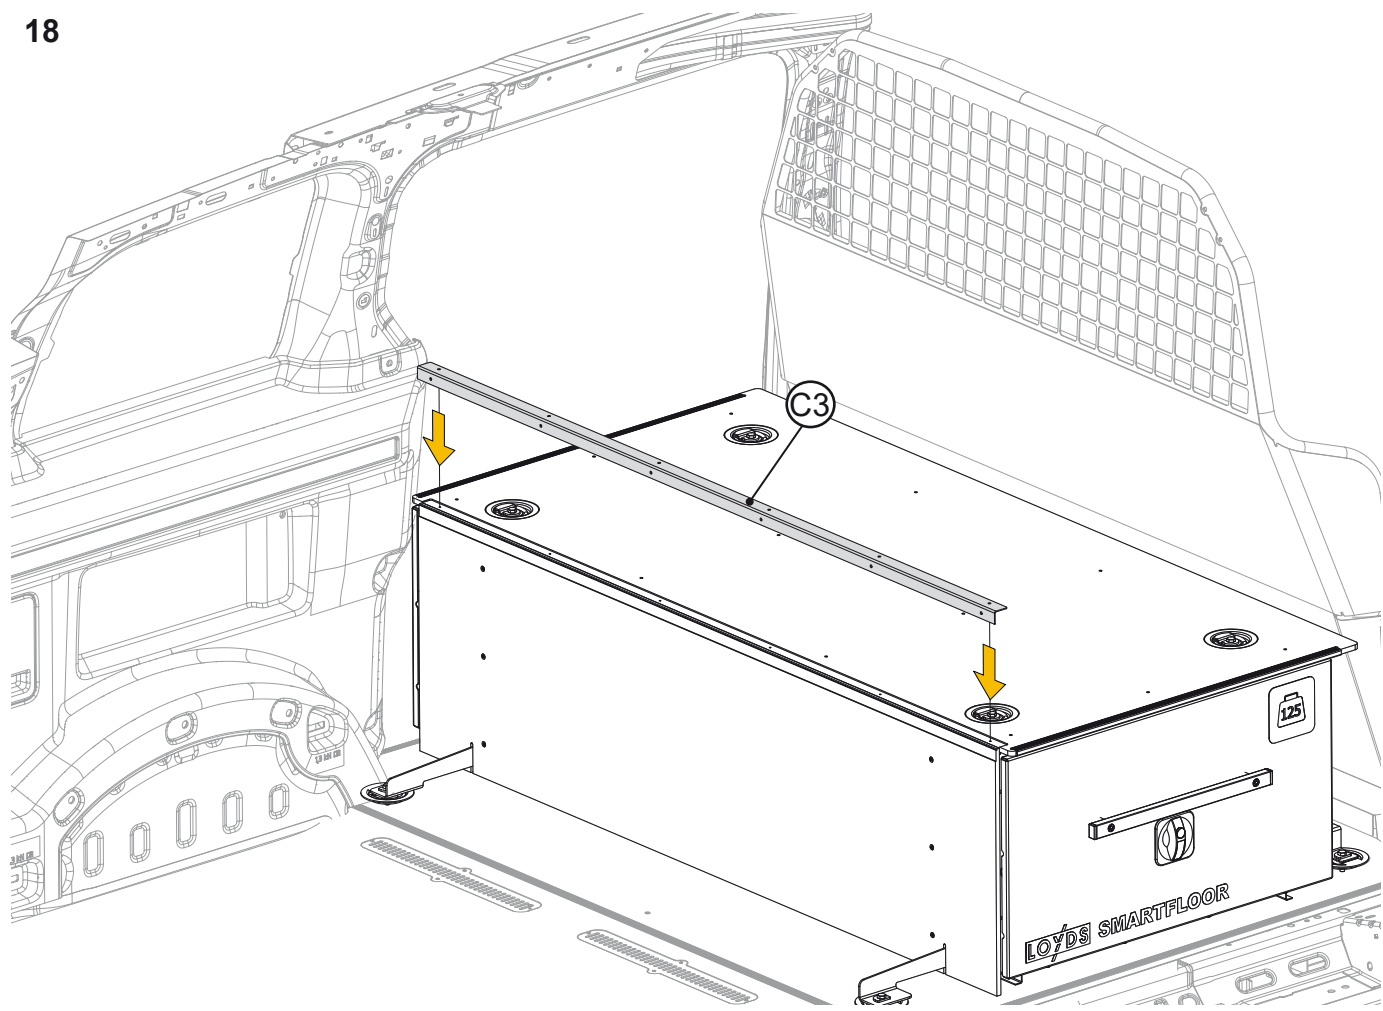

19

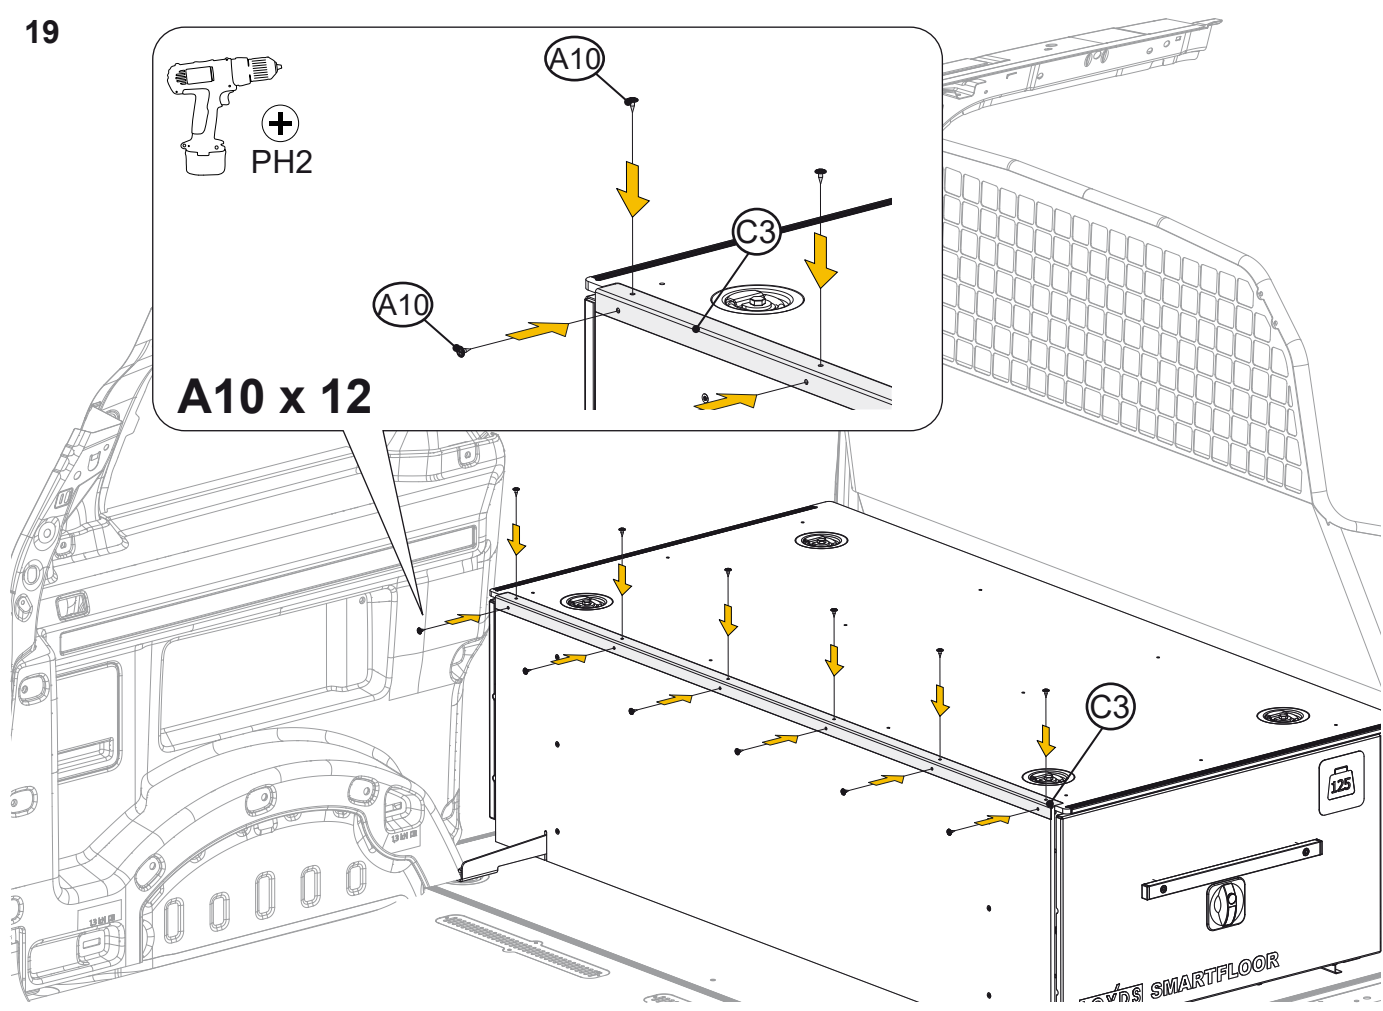

20

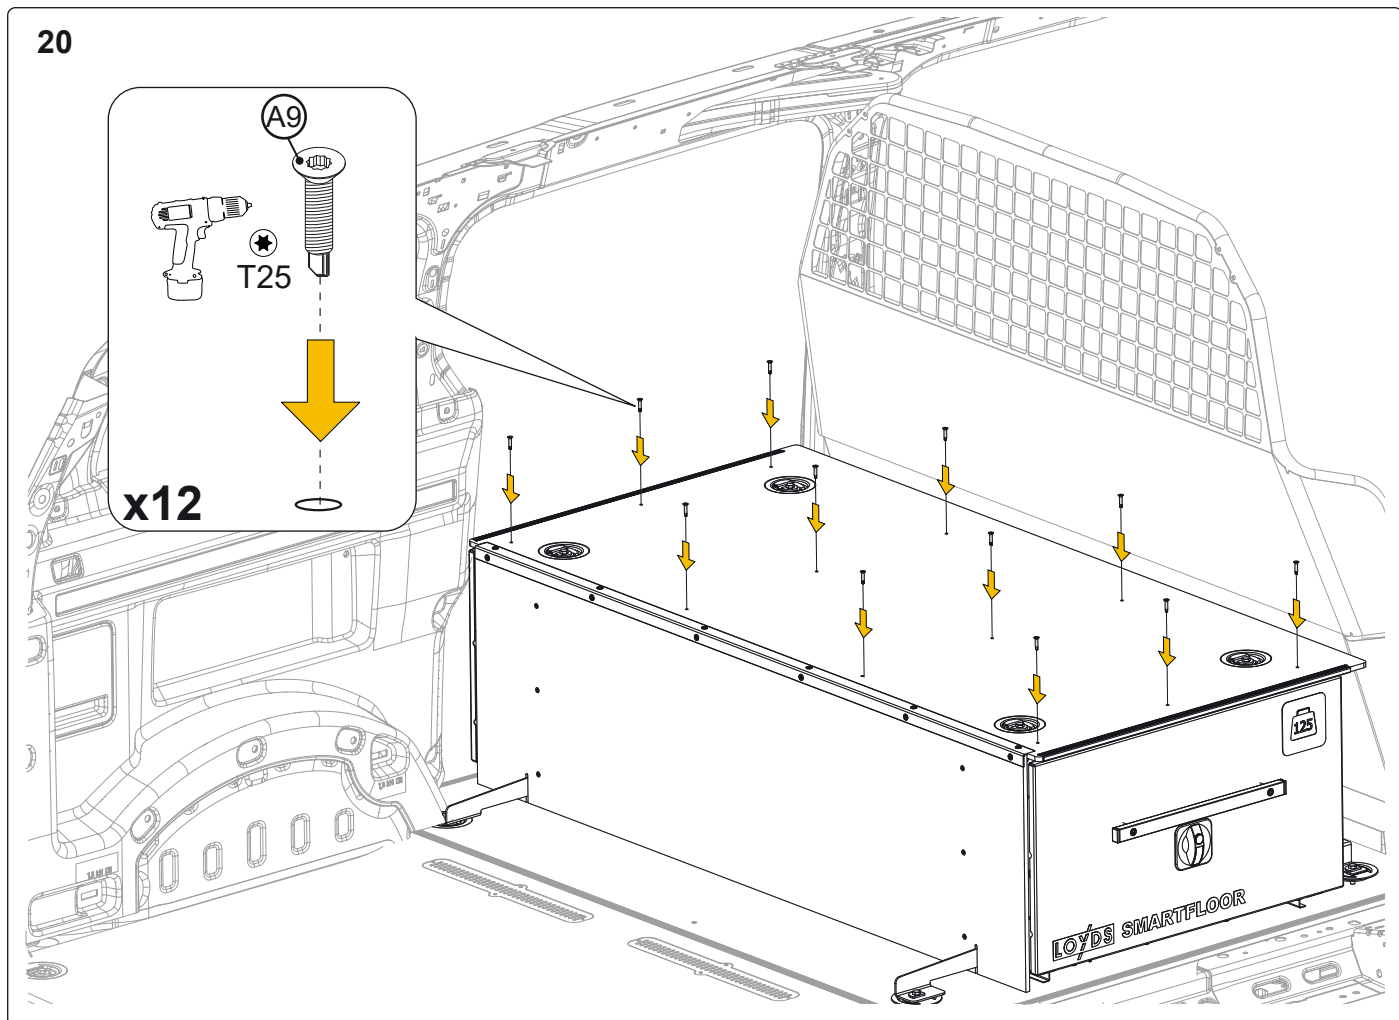

21

