

VW ID Buzz GTX

# Stepladder Holder Main Assy

---



## Installation Manual

15029918 | REV A | 2026-09-24


# LOYDS

Some illustrations in this manual were generated or enhanced using AI-based tools.  
All content has been reviewed for technical accuracy prior to publication.


## Revision Record

| Rev nr | Date       | Page | Picture | Update | New | Deleted steps |
|--------|------------|------|---------|--------|-----|---------------|
| A      | 2026-09-24 |      |         |        | X   |               |
|        |            |      |         |        |     |               |
|        |            |      |         |        |     |               |
|        |            |      |         |        |     |               |

## Tools

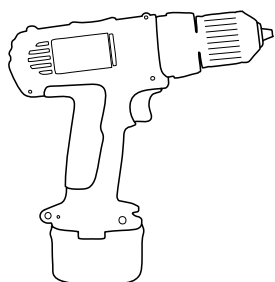

T20  
T30

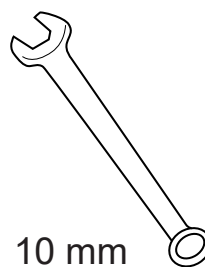


10 mm




Use colors when printing this installation manual. / Ved utskrift, bruk farger.

15030056 Stepladder Holder GTX Main Assy


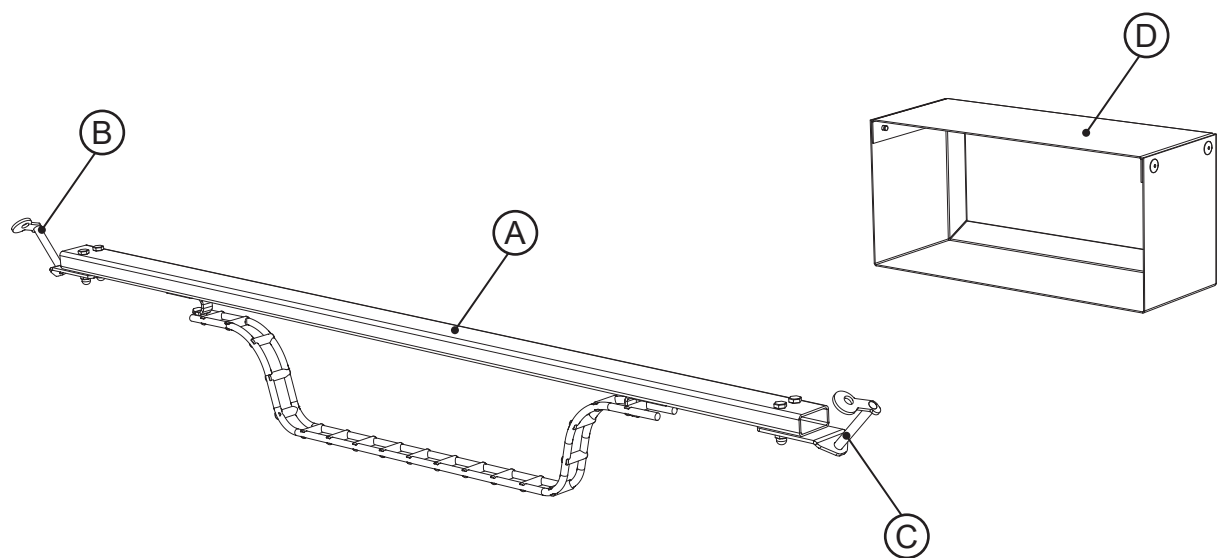


| Number | Quantity | Part Number | Description                           |
|--------|----------|-------------|---------------------------------------|
| A      | 1        | 15030077    | Stepladder Holder Tube Sub Assy       |
| B      | 1        | 15030058    | Stepladder Hook Left Sub Assy         |
| C      | 1        | 15030057    | Stepladder Holder Right Hook Sub Assy |
| D      | 1        | 15029130    | Stepladder Holder Box Sub Assy GTX    |
| E      | 1        | 15030075    | Stepladder Holder GTX Fitting kit     |


#1 15030075 Stepladder Holder GTX Fitting Kit

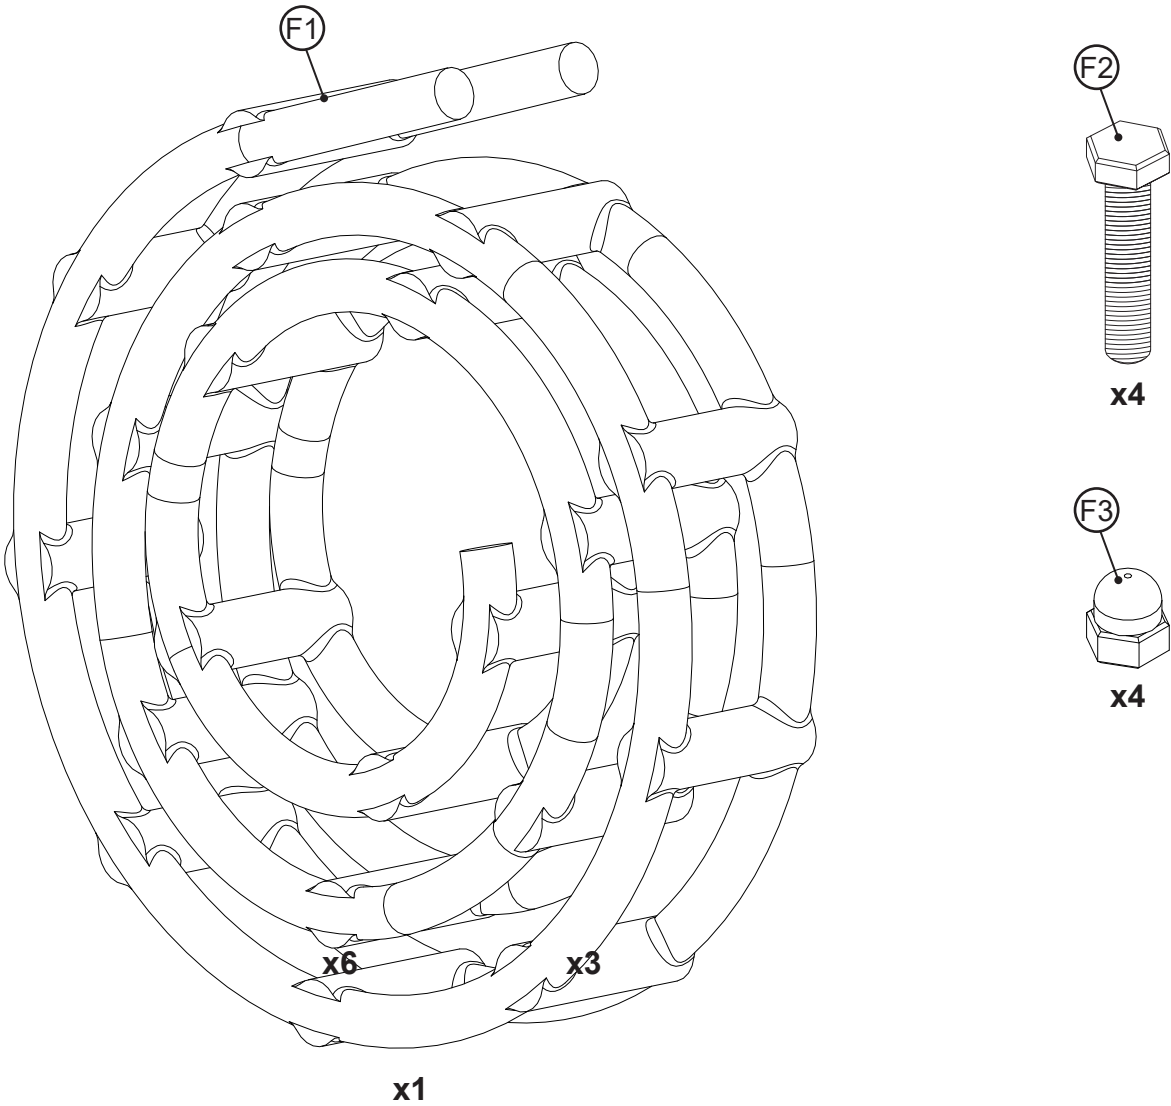

|           |                                         |
|-----------|-----------------------------------------|
| <b>F1</b> | 15023394 Stepladder Rubber Ladder Strap |
| <b>F2</b> | 6x30 6KS Bolt Black, DIN 933            |
| <b>F3</b> | 15004413 M6 Cap Nut DIN 1587            |

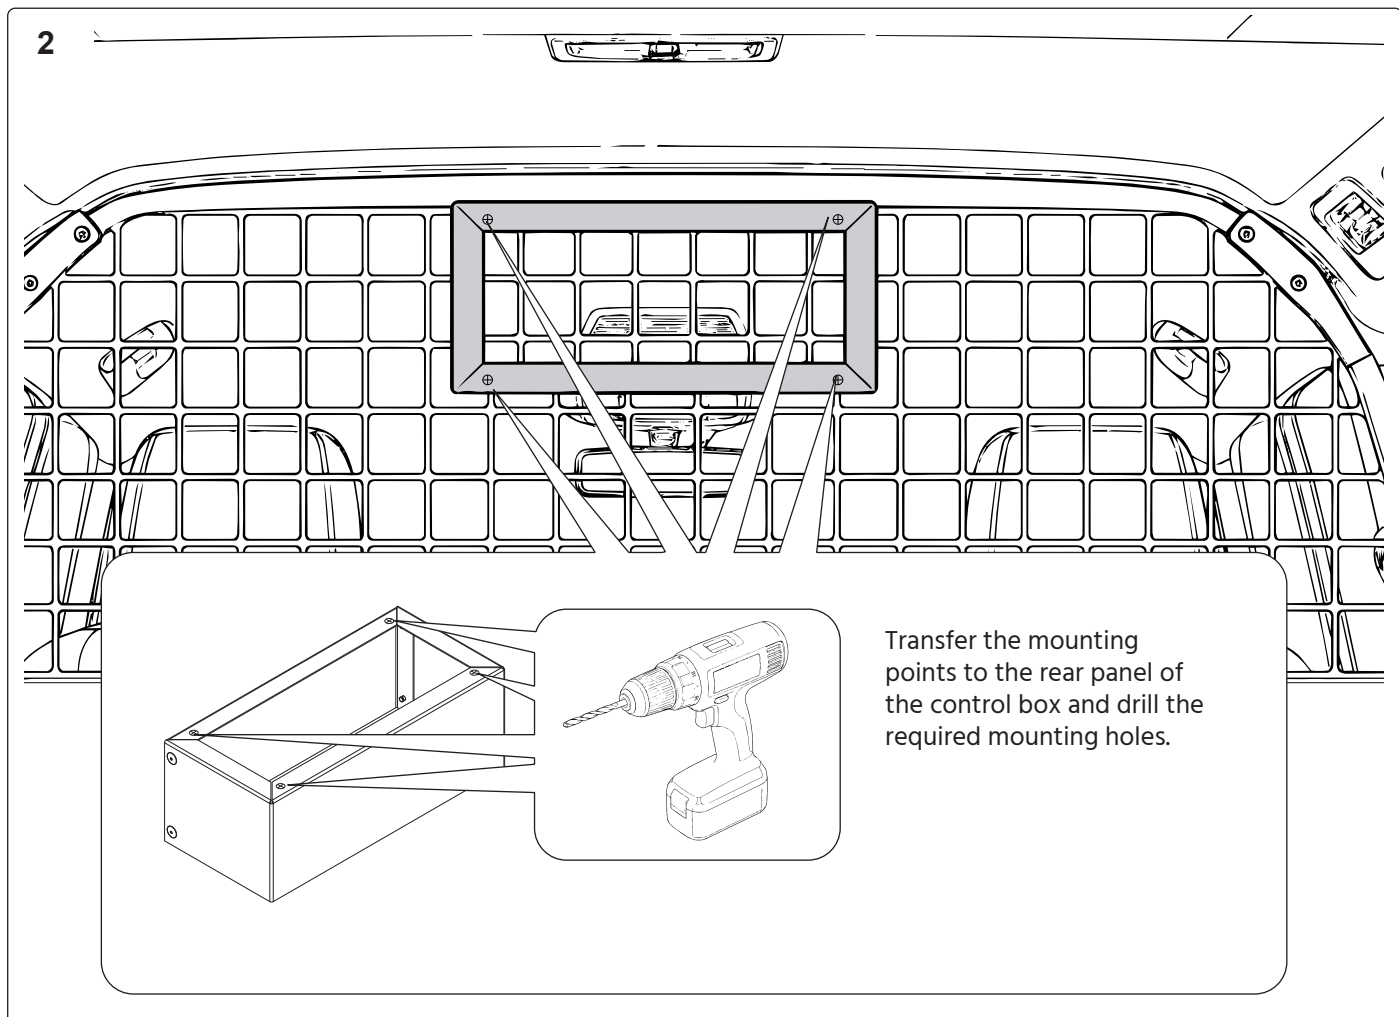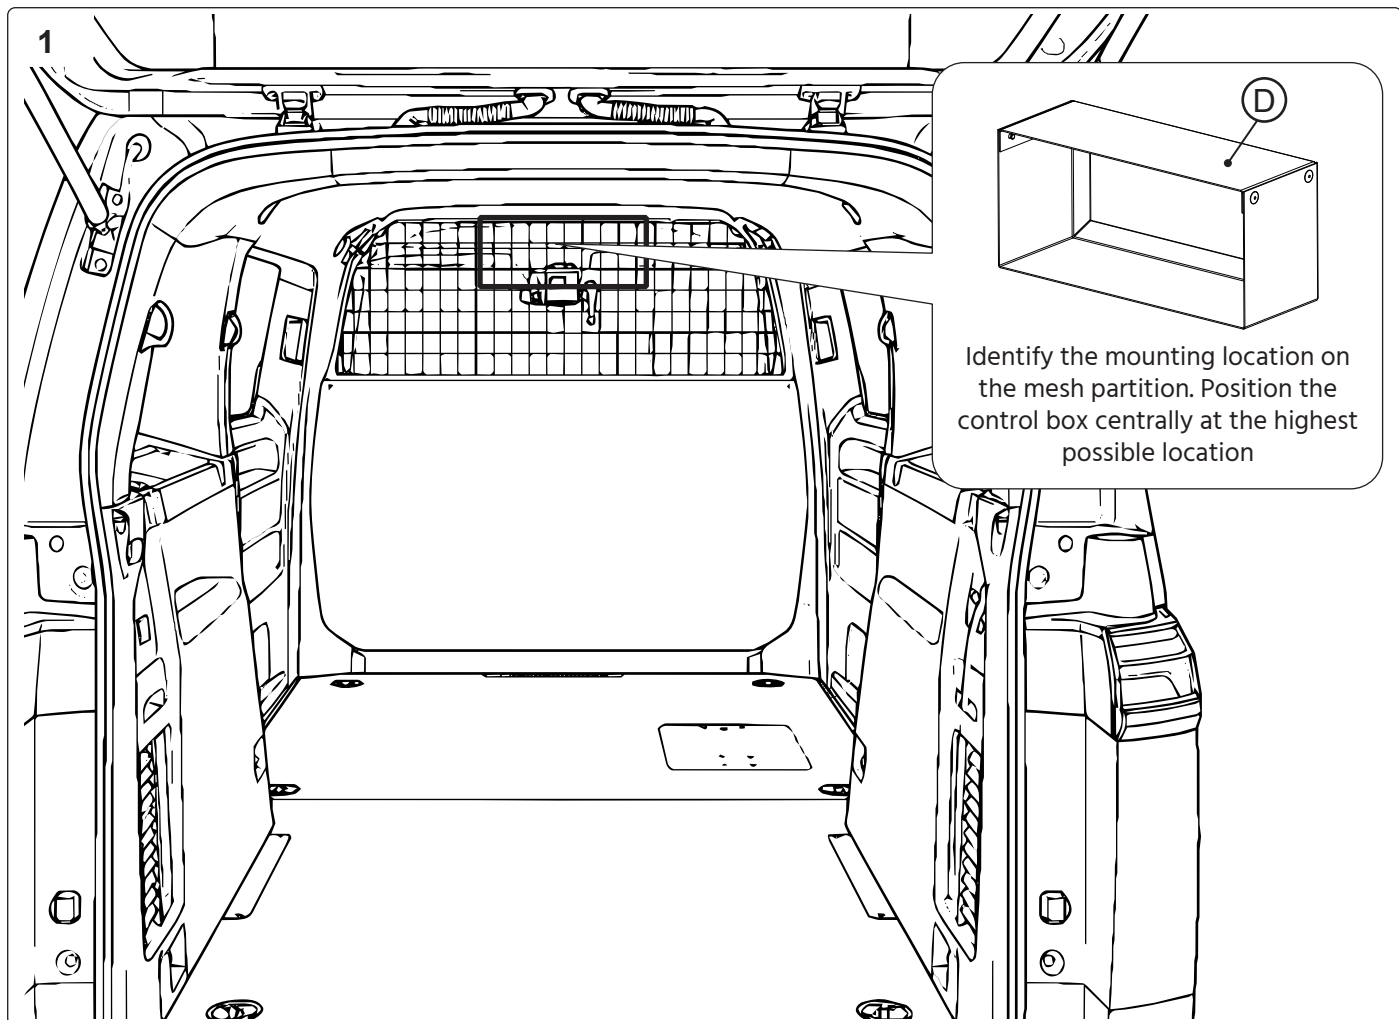

3

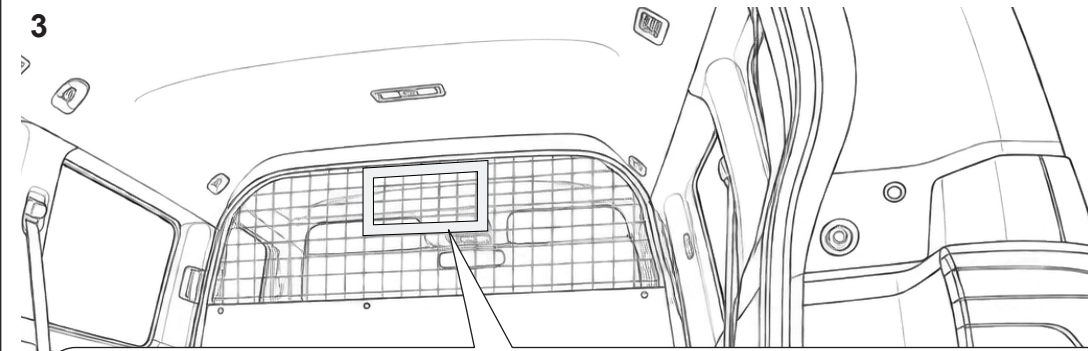


6 NMU

M6x40

M6x22



M16x16

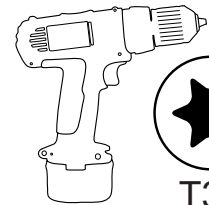


T30

Secure the box to the mesh partition wall

4

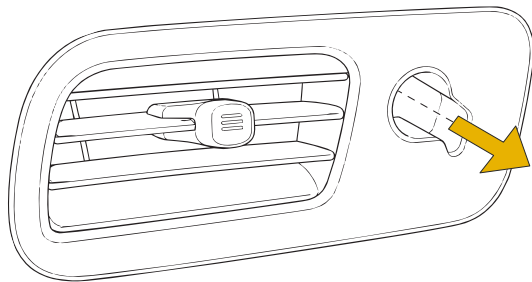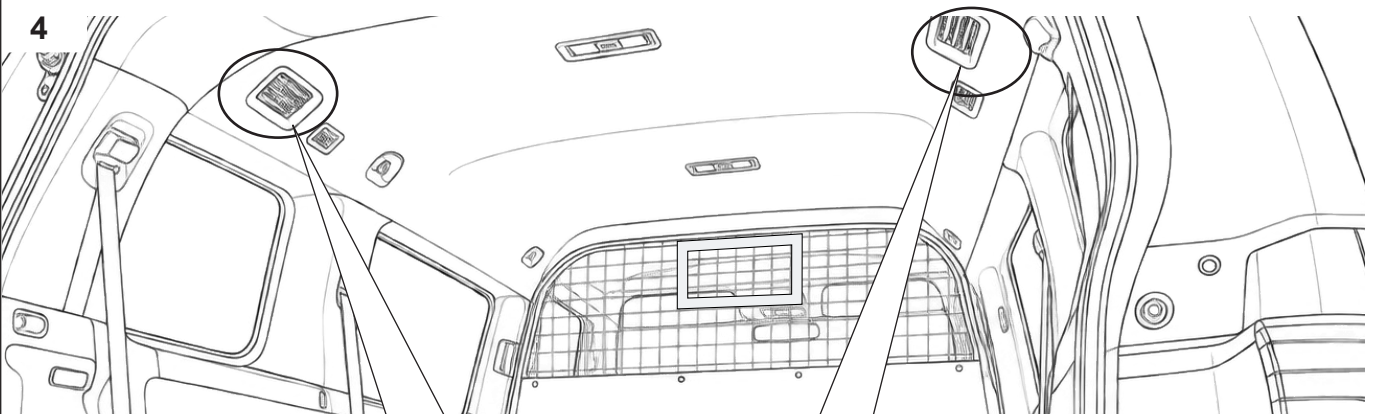




Remove and retain the original screw from the roof vent for reinstallation.


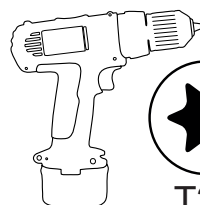


T20

x2

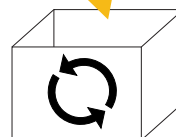

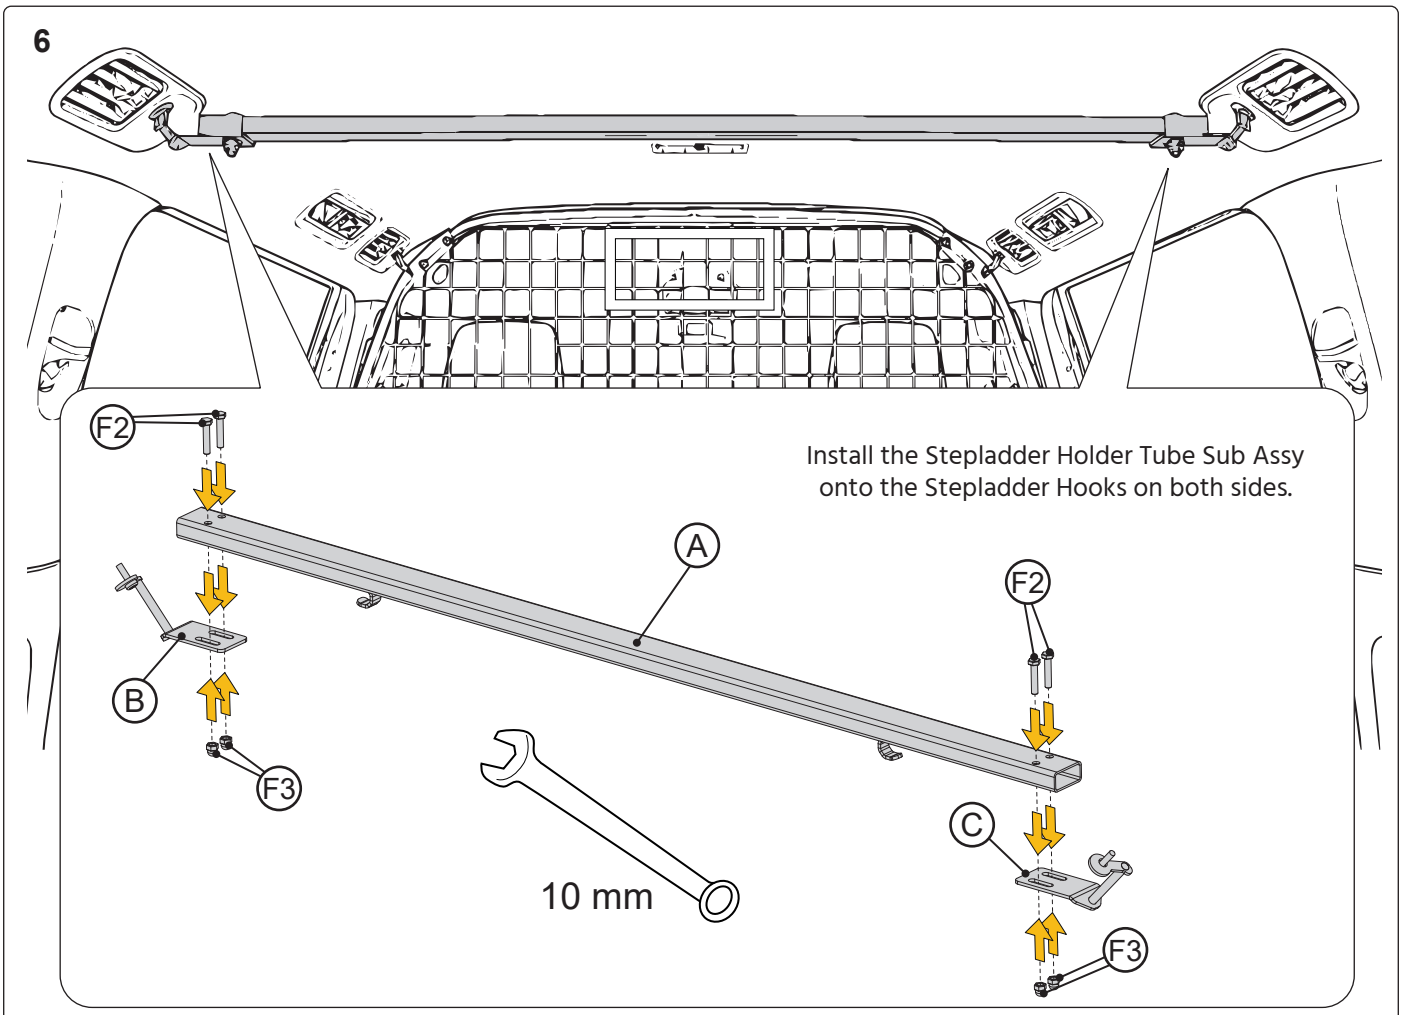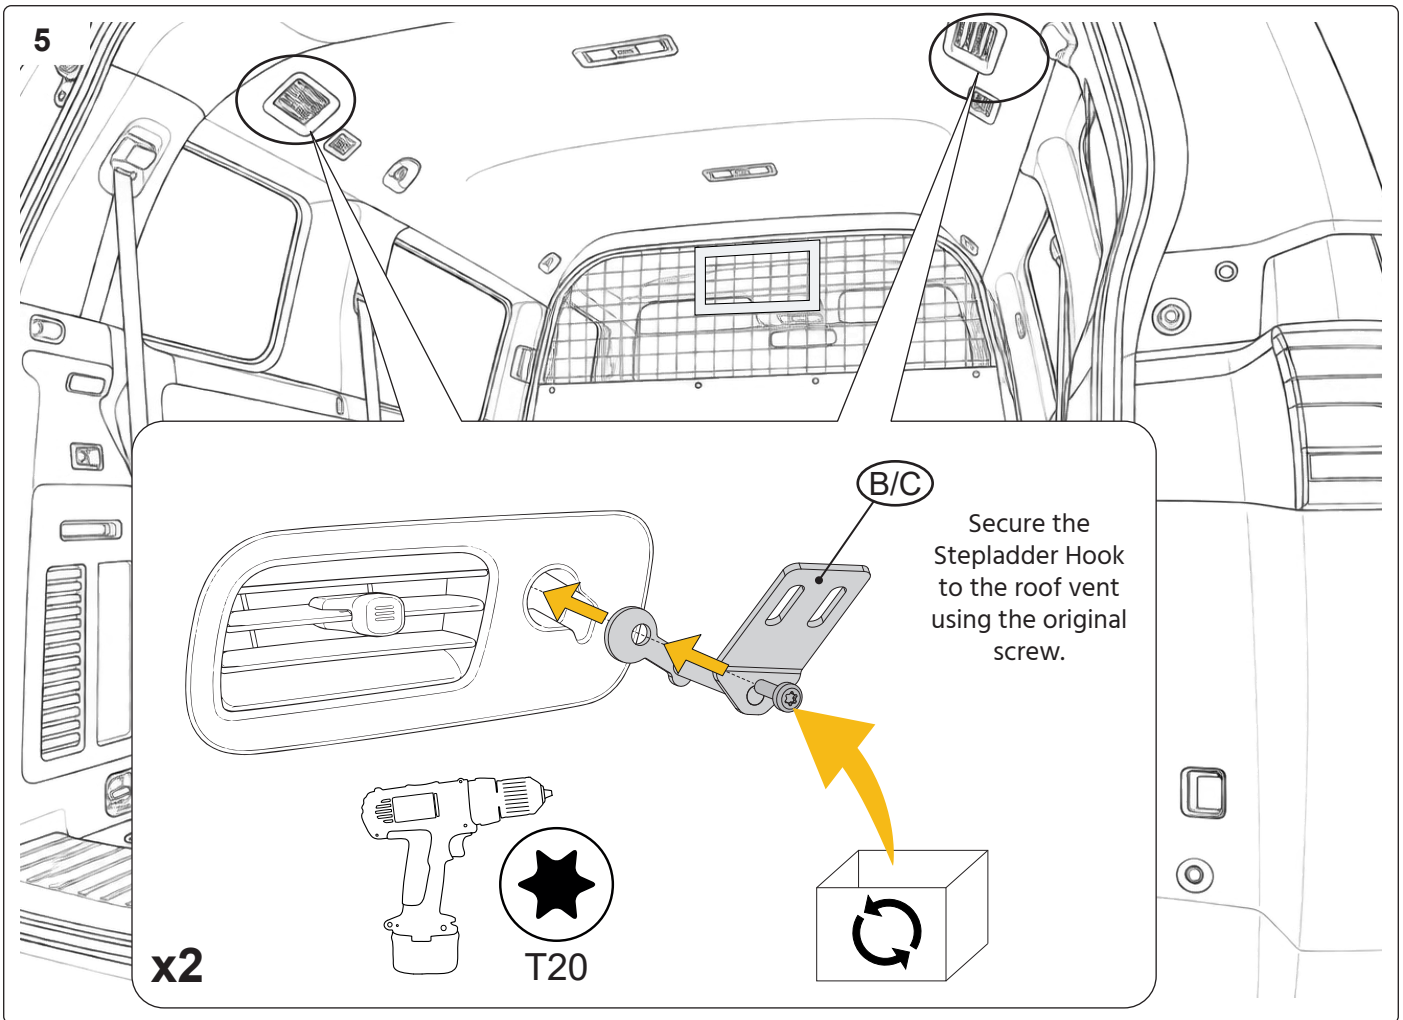

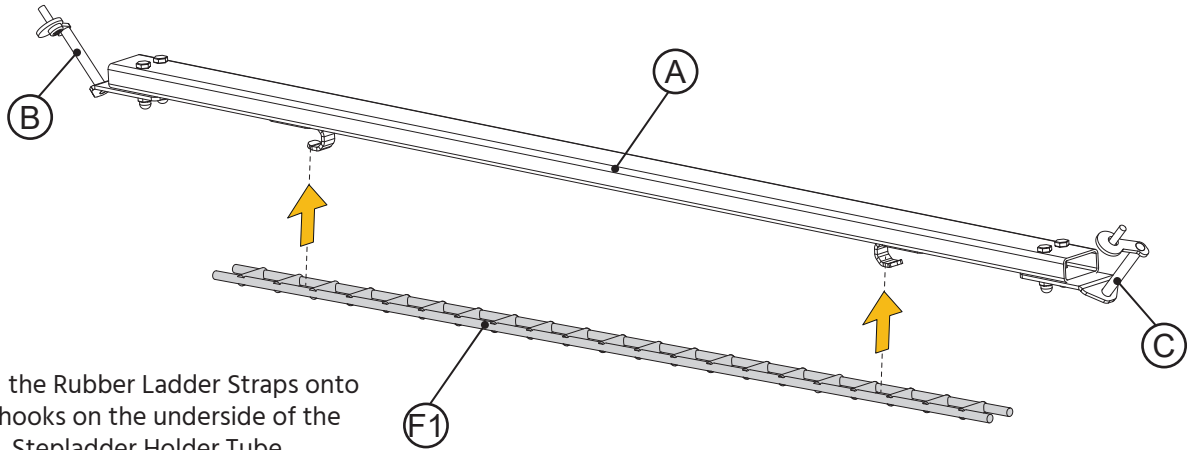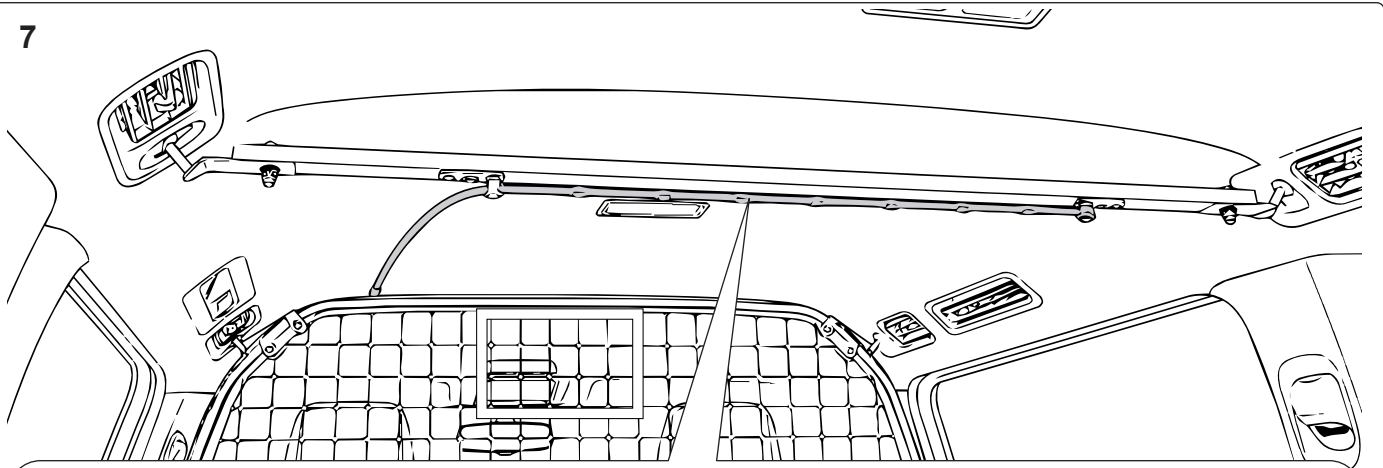

Install the Rubber Ladder Straps onto  
the hooks on the underside of the  
Stepladder Holder Tube