


VW ID. Buzz Cargo
Smartfloor Complete Module 2SLD
with Electric Slide Door & Comfort Wall

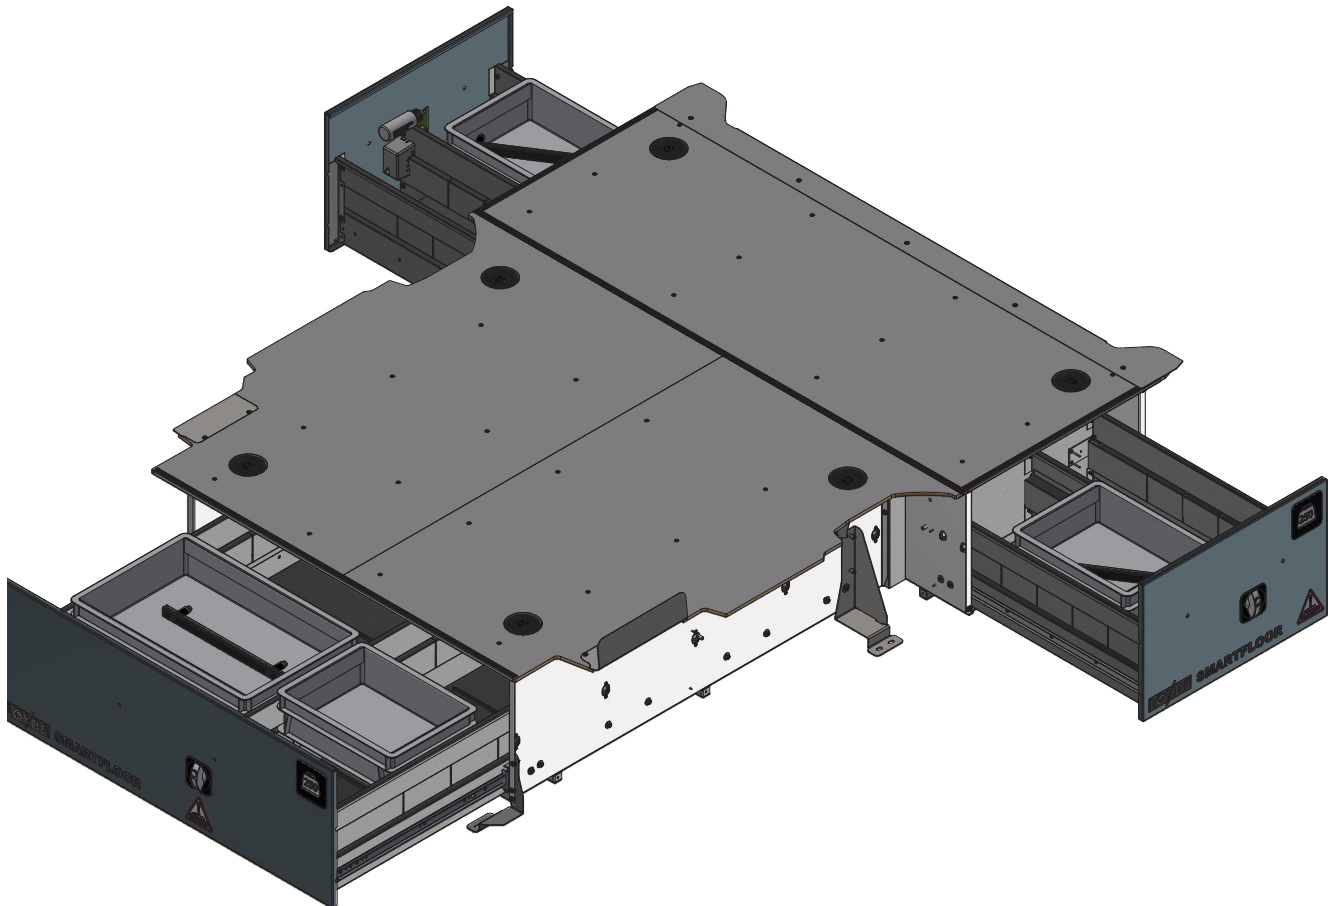

Installation Manual

Manual 15023481_C





Loyds Industri AS - 2024-11-07




Revision Record						
Rev nr	Date	Page	Picture	Update	New	Deleted steps
A	2023-05-04				X	
B	2023-05-30	8, 20	A9, 30+31	A9: 15008749 replaced 13x20x6,4. Added 4xA10		
C	2023-11-07	6, 15	14, 16	Removed Bolt A3		



Use colors when printing this installation manual. / Ved utskrift, bruk farger.

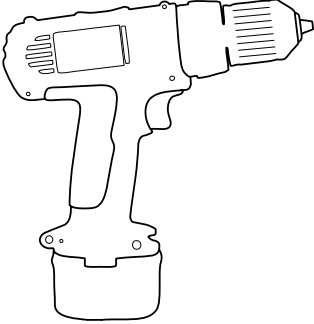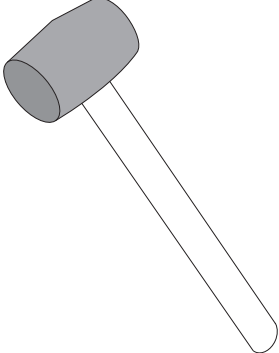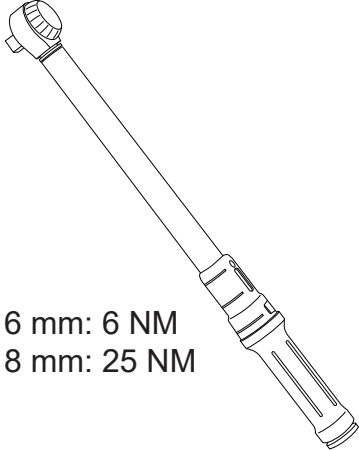
Tools		
		 6 mm: 6 NM 8 mm: 25 NM
 TX25 TX30		
 PH2		

15023425 Smartfloor Complete Electric 2SLD

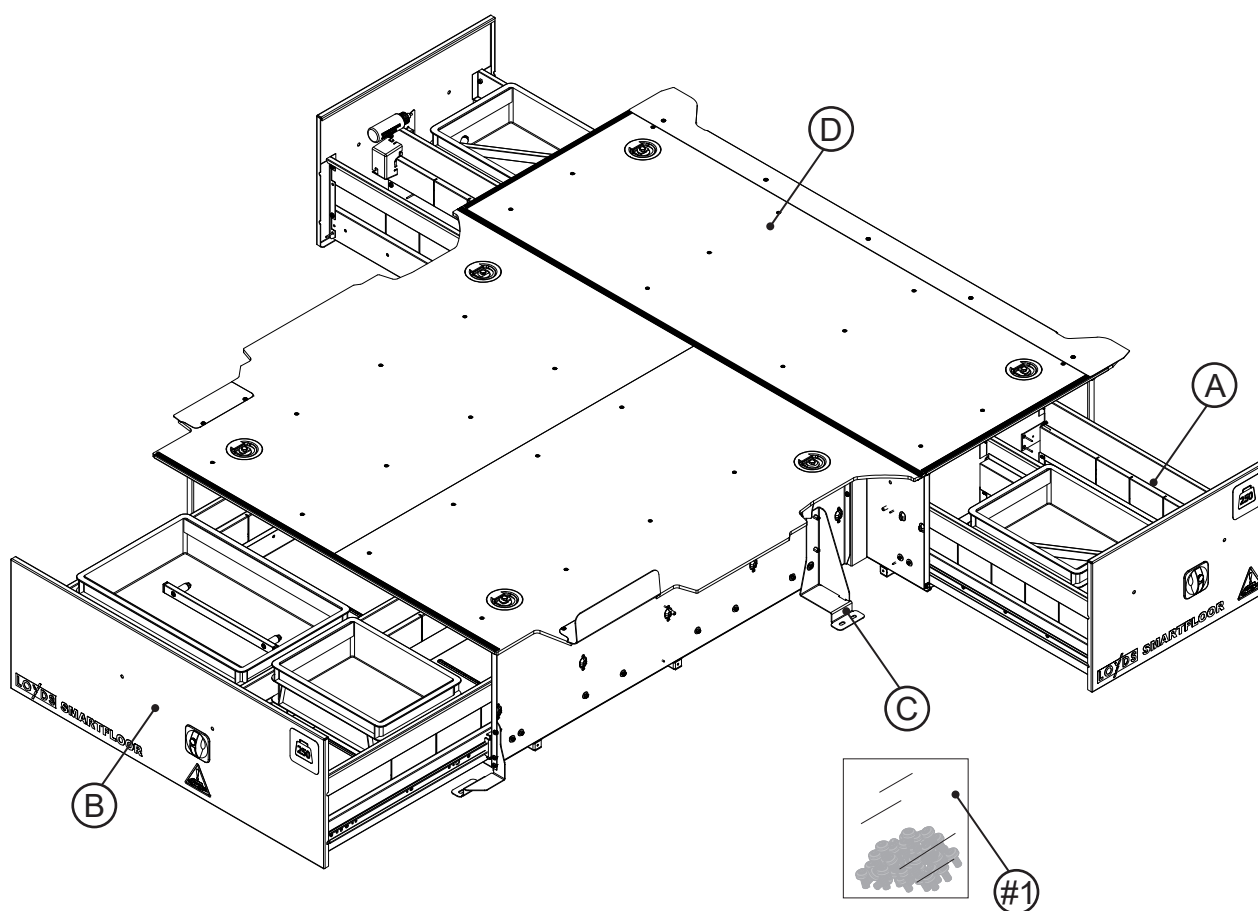


Number	Quantity	Part Number	Definition
A	1	15023421	Smartfloor Front Drawer Electric 2SLD W500 x L750
B	1	15022782	Rear Drawer W1000 L1200 Main AS ALU
C	1	15023402	Smartfloor Bracket Kit Drawer W500
D	1	15023403	Smartfloor Floor Kit Assy
#1	1	15023404	Smartfloor Fitting Kit electric Door

15023402 Smartfloor Bracket Kit Drawer W/500

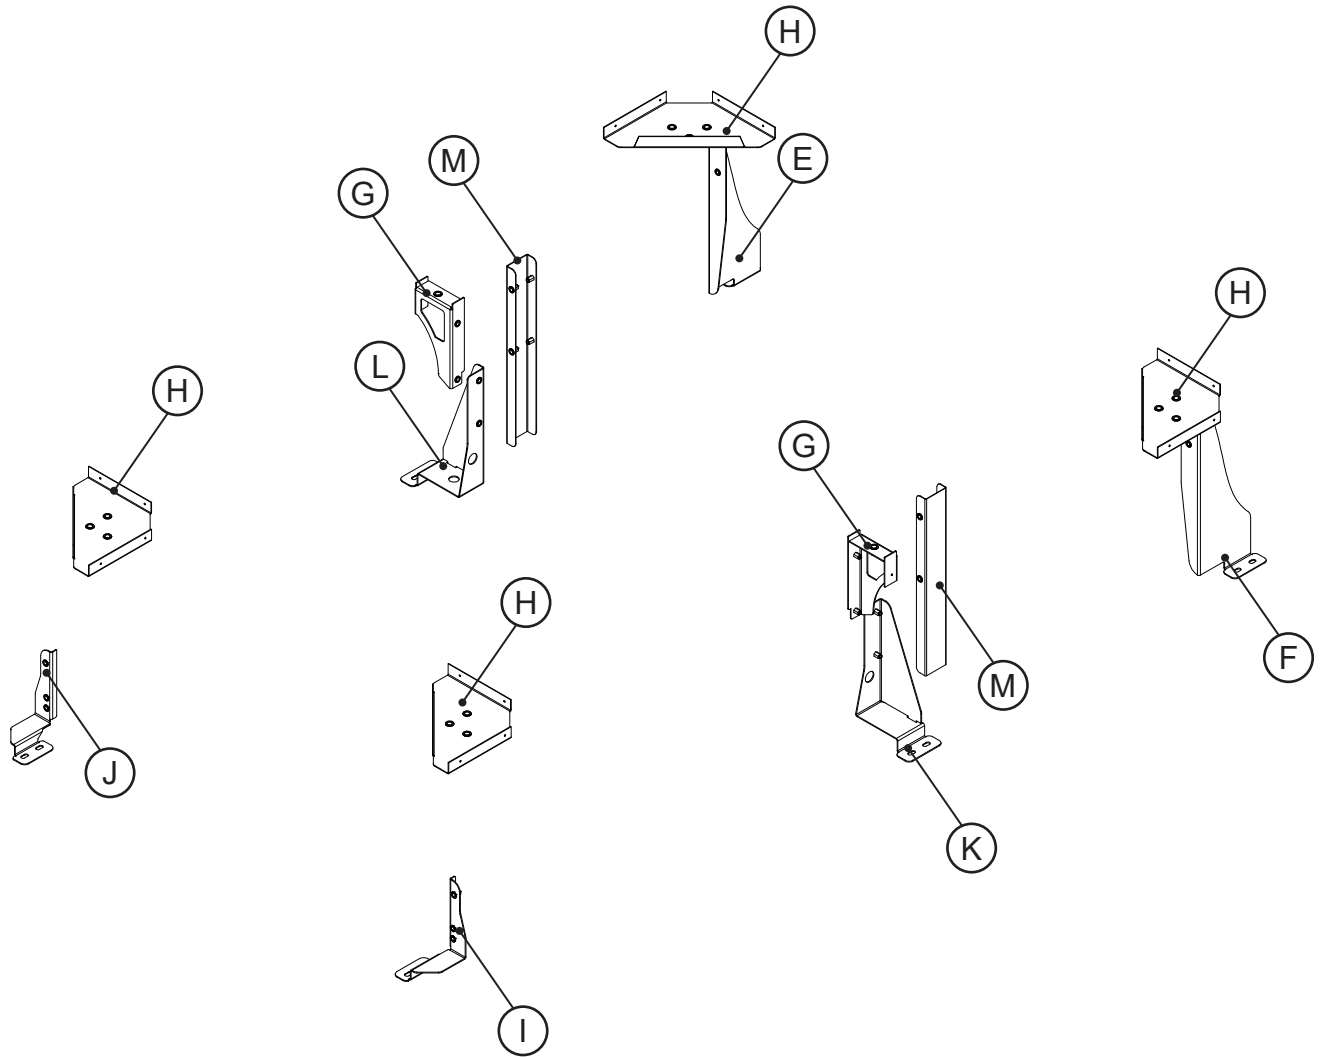


Number	Quantity	Part Number	Definition
E	1	15023413	Smartfloor Front Left Bracket Front drawer W500 Assy
F	1	15023417	Smartfloor Front Right Bracket Front drawer W500 Assy
G	2	15023259	Bracket Latchcup Side M8 ID.C ASSY
H	4	15018460	Bracket Latch Inner 8mm ASSY
I	1	15022480	Bracket Rear Right ID Buzz SF 2020 ASSY
J	1	15022465	Bracket Rear Left ID Buzz SF 2020 ASSY
K	1	15022469	Bracket Middle Right ID Buzz SF 2020 ASSY
L	1	15022471	Bracket Middle Left ID Buzz SF 2020 ASSY
M	2	15023415	Smartfloor Middle Bracket Front Drawer W500 Assy

#1 15023404 Smartfloor Fitting Kit Electric Door

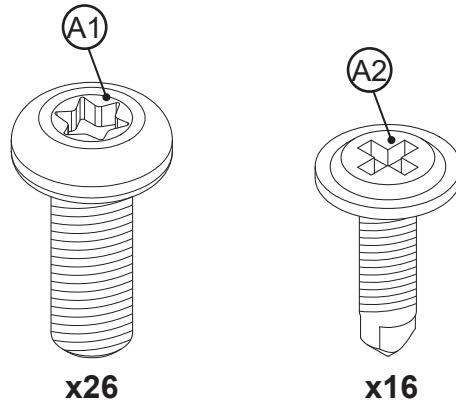


A1	15003551 M6x16 TX30 pan (DIN 7985)
A2	4,2x16 FLS Platescrew selfdrilling E45759 Black

15023403 Smartfloor Floor Kit Assy

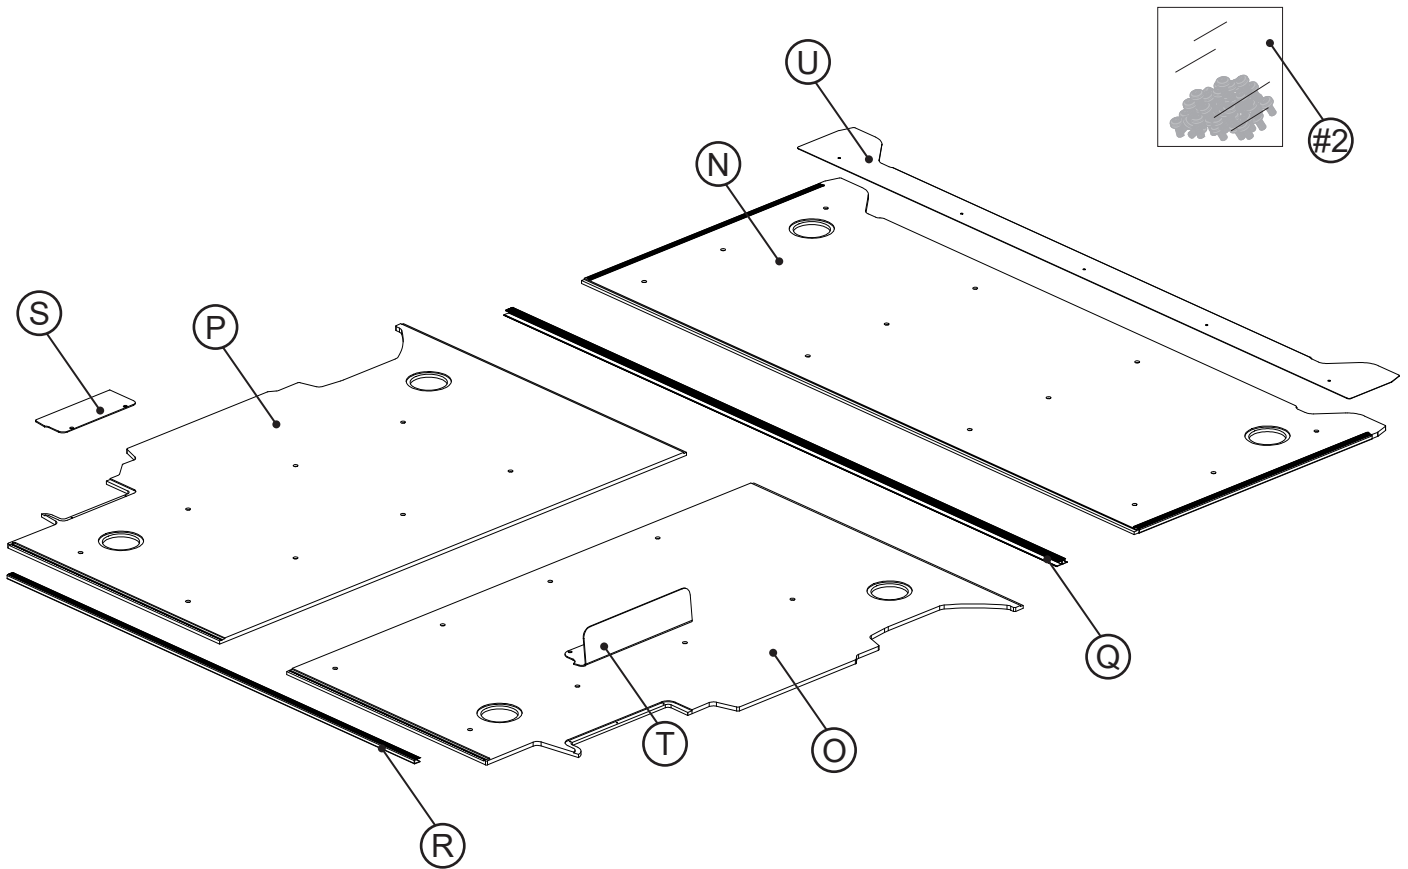


Number	Quantity	Part Number	Definition
N	1	15023419	Smartfloor Front Floor Assy
O	1	15022776	Floor Right SF
P	1	15022777	Floor Left SF
Q	1	15022778	H-profile 9mm L=1647
R	1	15022700	U-profile 9mm L=1213
S	1	15022790	SF Fusbox Hatch
T	1	15022791	SF Emergency Kit Hatch
U	1	15023426	Smartfloor Front Floor Extender
#2	1	15022699	Floor Fitting Kit

#2 15022699 Floor Fitting Kit

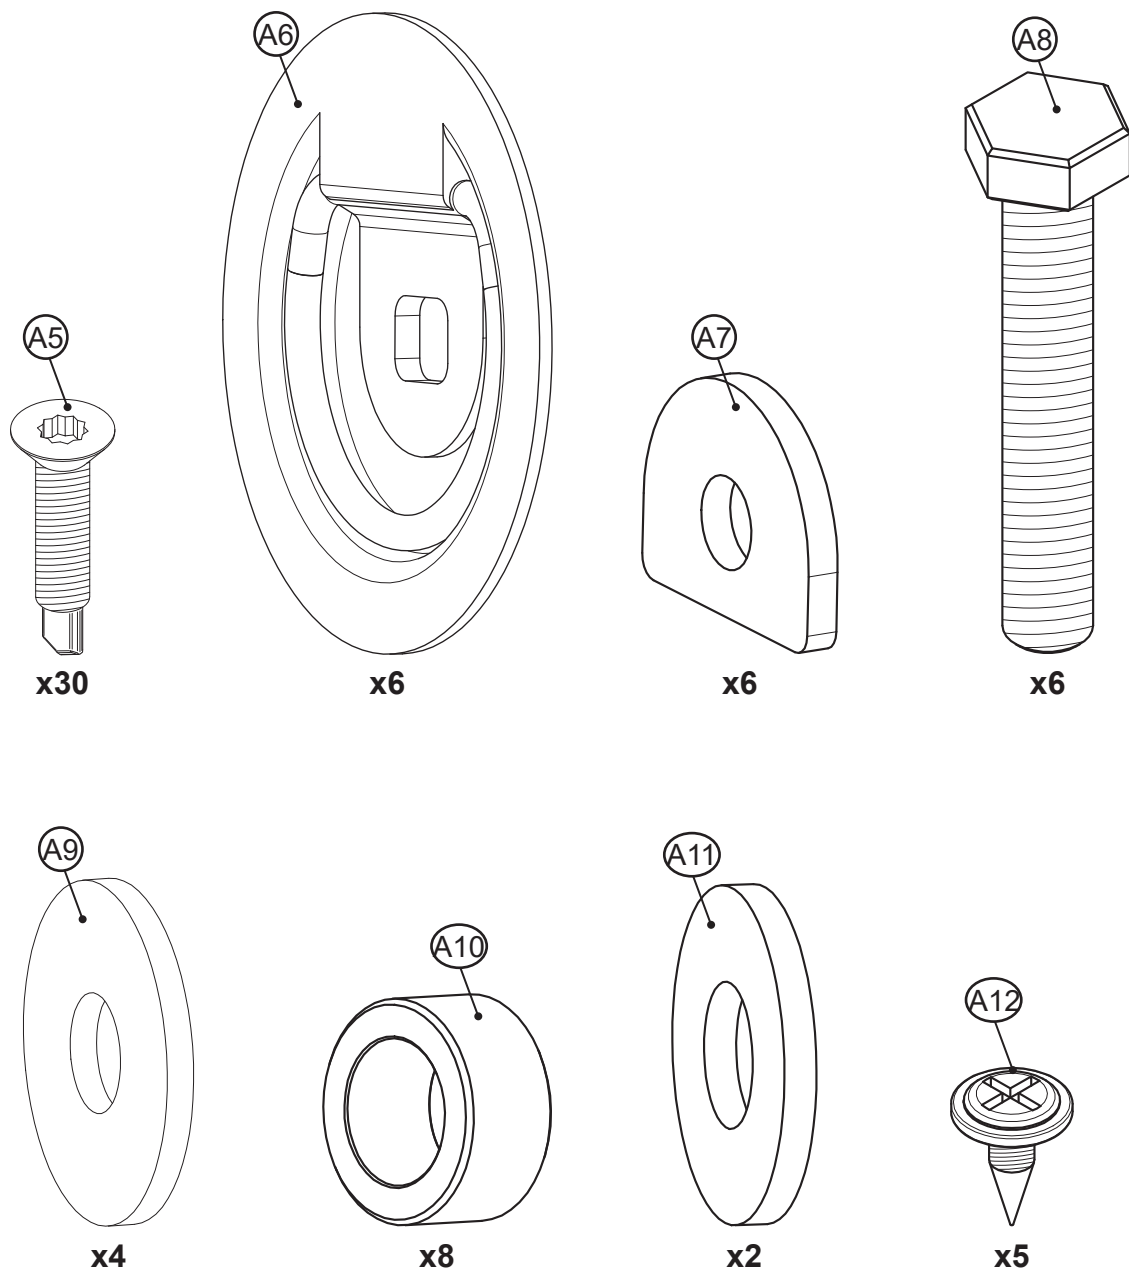


A5	15016947 Screw 4,8x25 Selfdrill Counters Torx Elz
A6	15005497 Latch Cup Black Ø90 Ø12x15 1000Kp
A7	15005884 Washer Latchcup for Ø8
A8	15004713 M8x50 screw, 6K DIN 933 Black, ElZn+Cr3
A9	15008749 Washer 8,2x24x2 A4
A10	13x20x10 Spacer, U-710
A11	15009916 Washer 30x13x3 Elz
A12	4,2 x 13 S Plateskrue Flathode Svart

1501036 Handle Assy (x3)

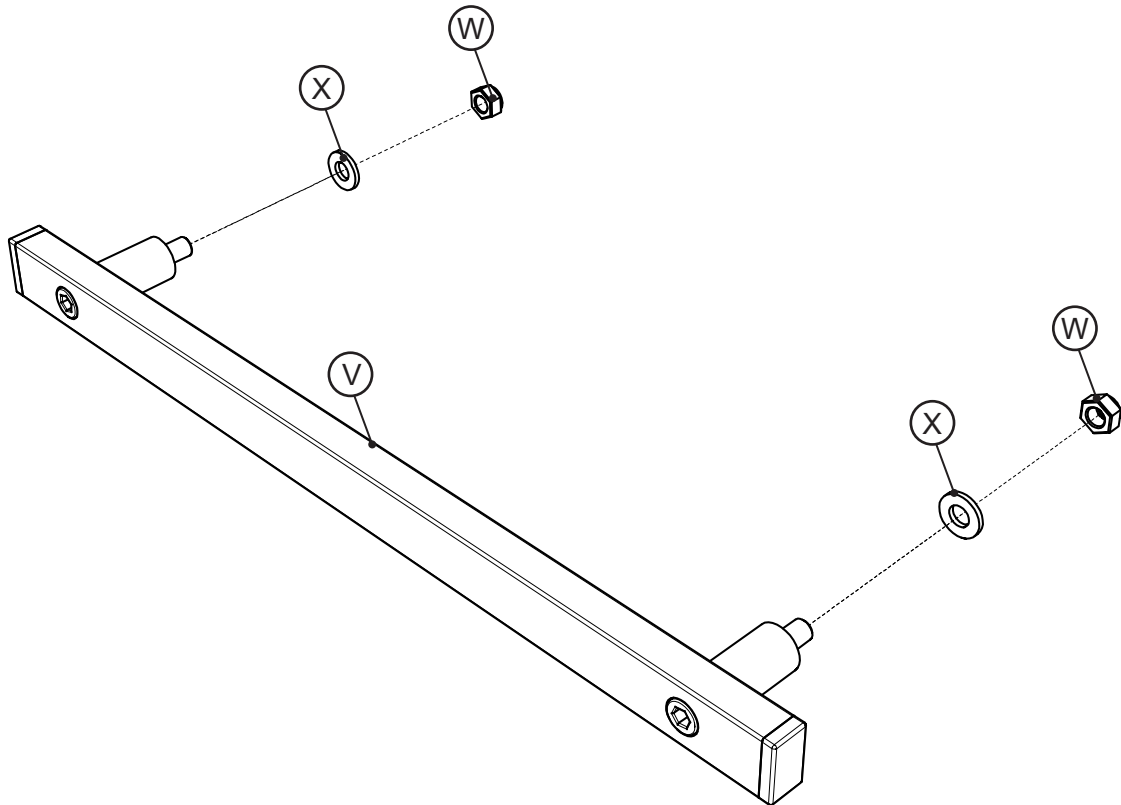


Number	Quantity	Part Number	Definition
V	1	15009441	Handle Tube 25x15x286
	2	15009442	Spacer Ø8,3x18x30 Nylon Black
	2	15009443	Spacer Ø8,1x13x6mm Galv
	2	15009444	Screw M8x50 Cylinderh Hex
	2	15009438	End Plug Tube 25x15 Inside
W	2	8 NMU	Mutter M8 nyloc DIN985
X	2	8,4x17x2	M8 Washer, DIN 125


1



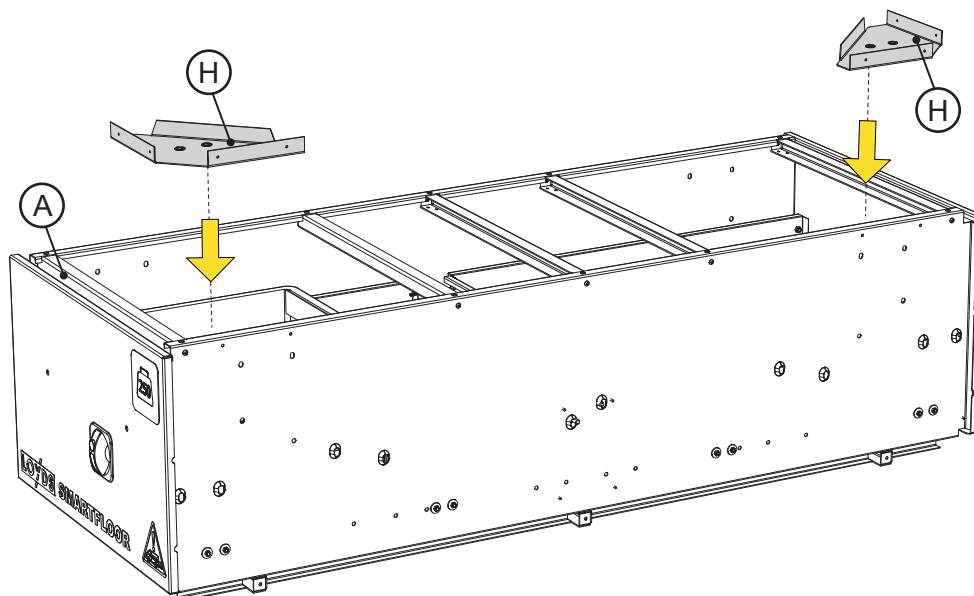


2

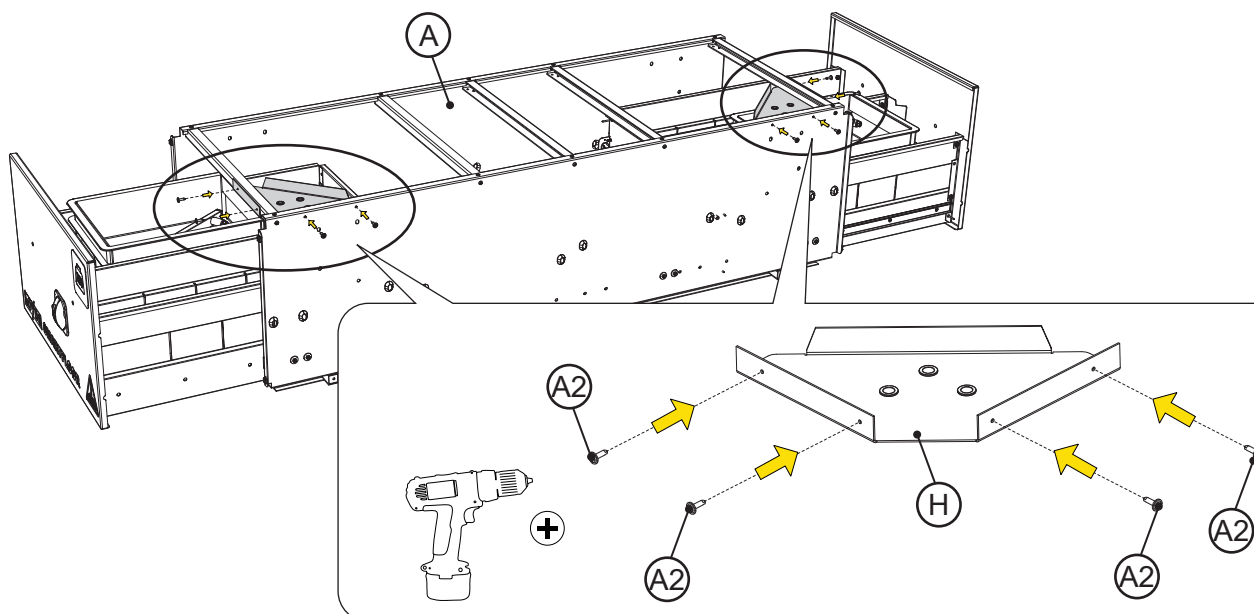


3

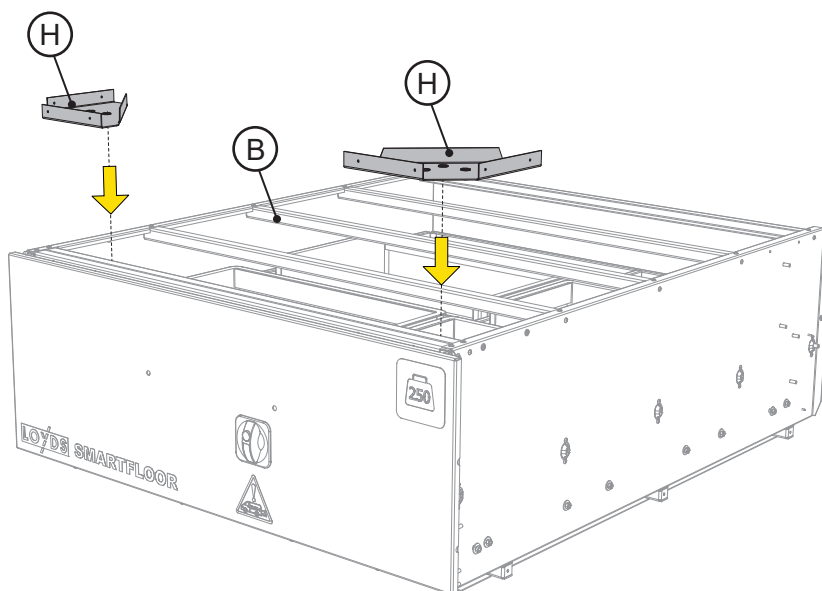


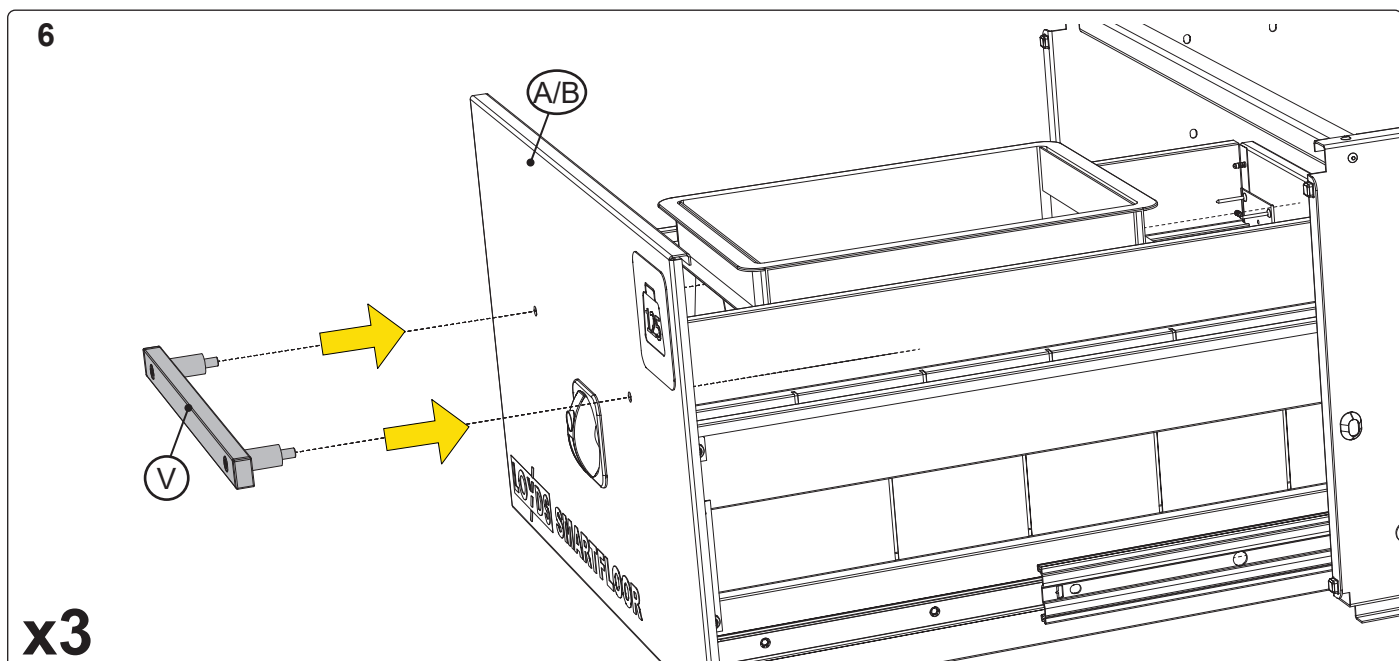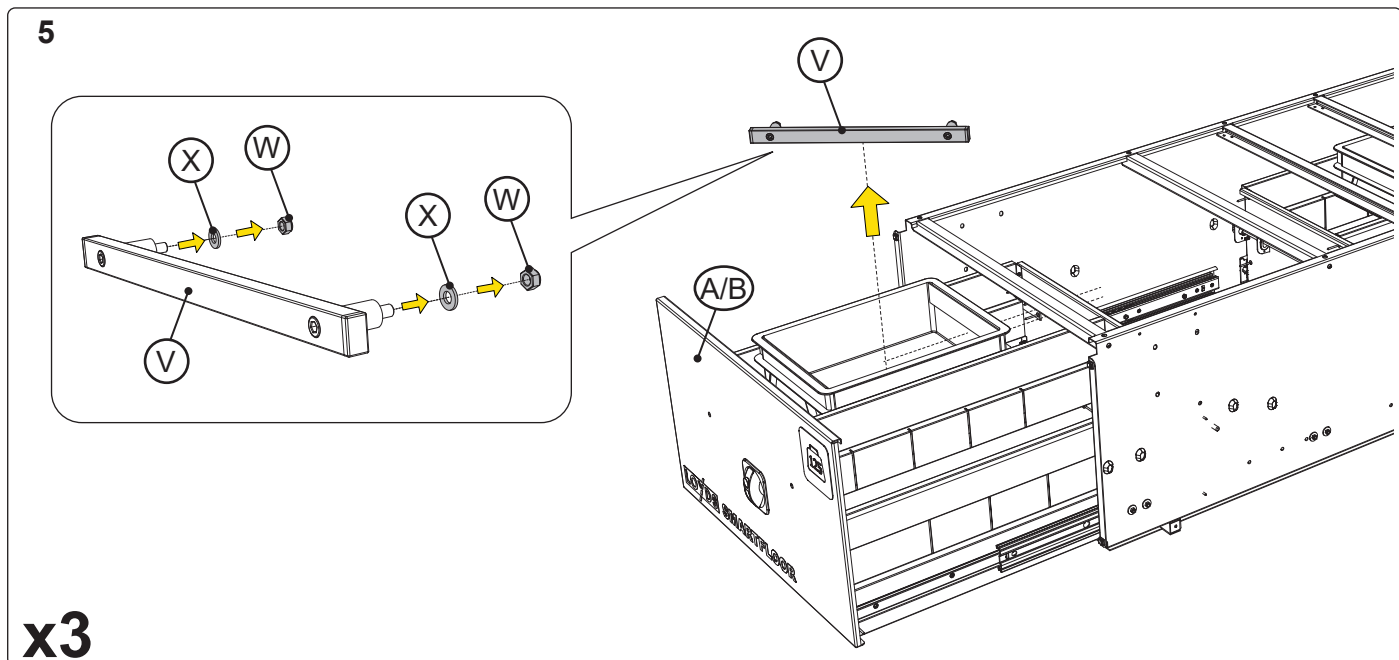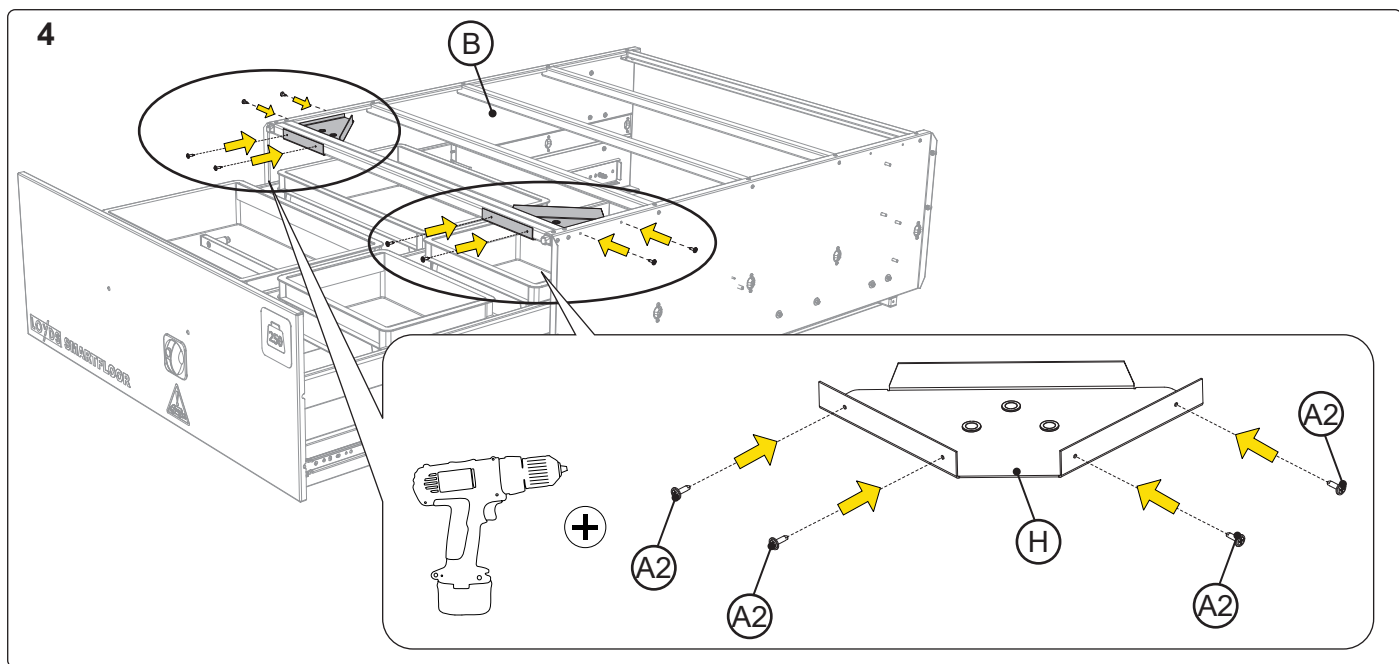



7

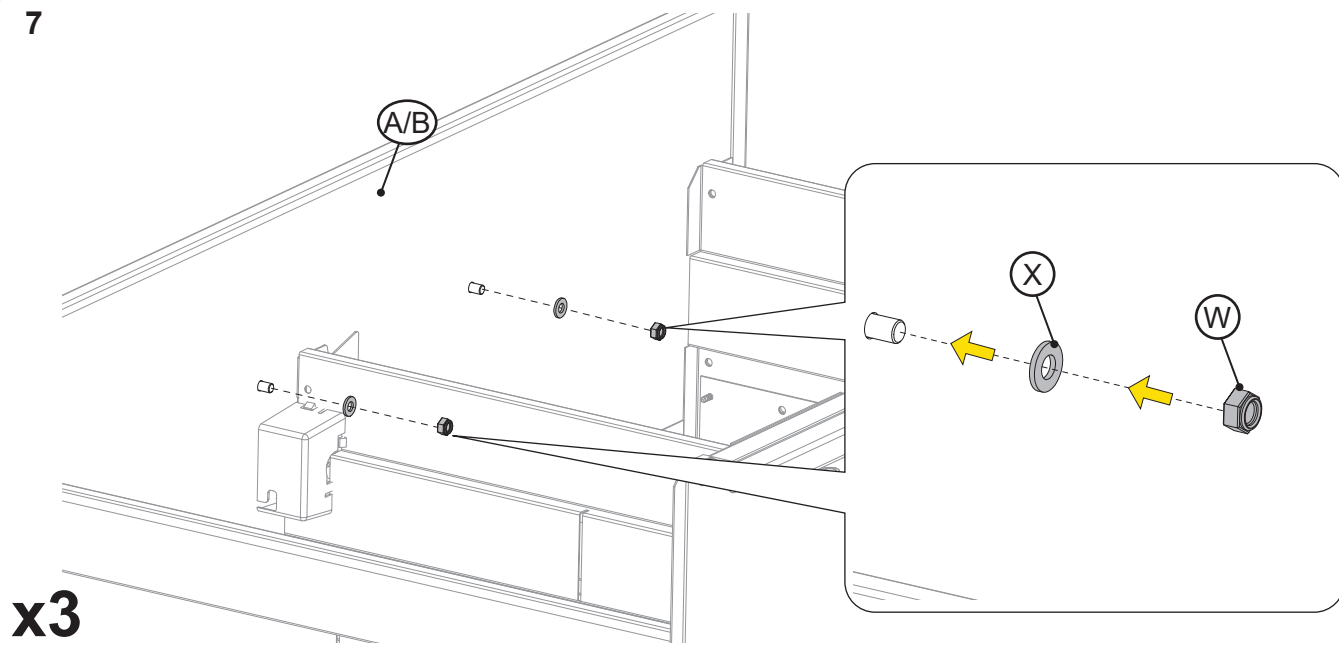


8

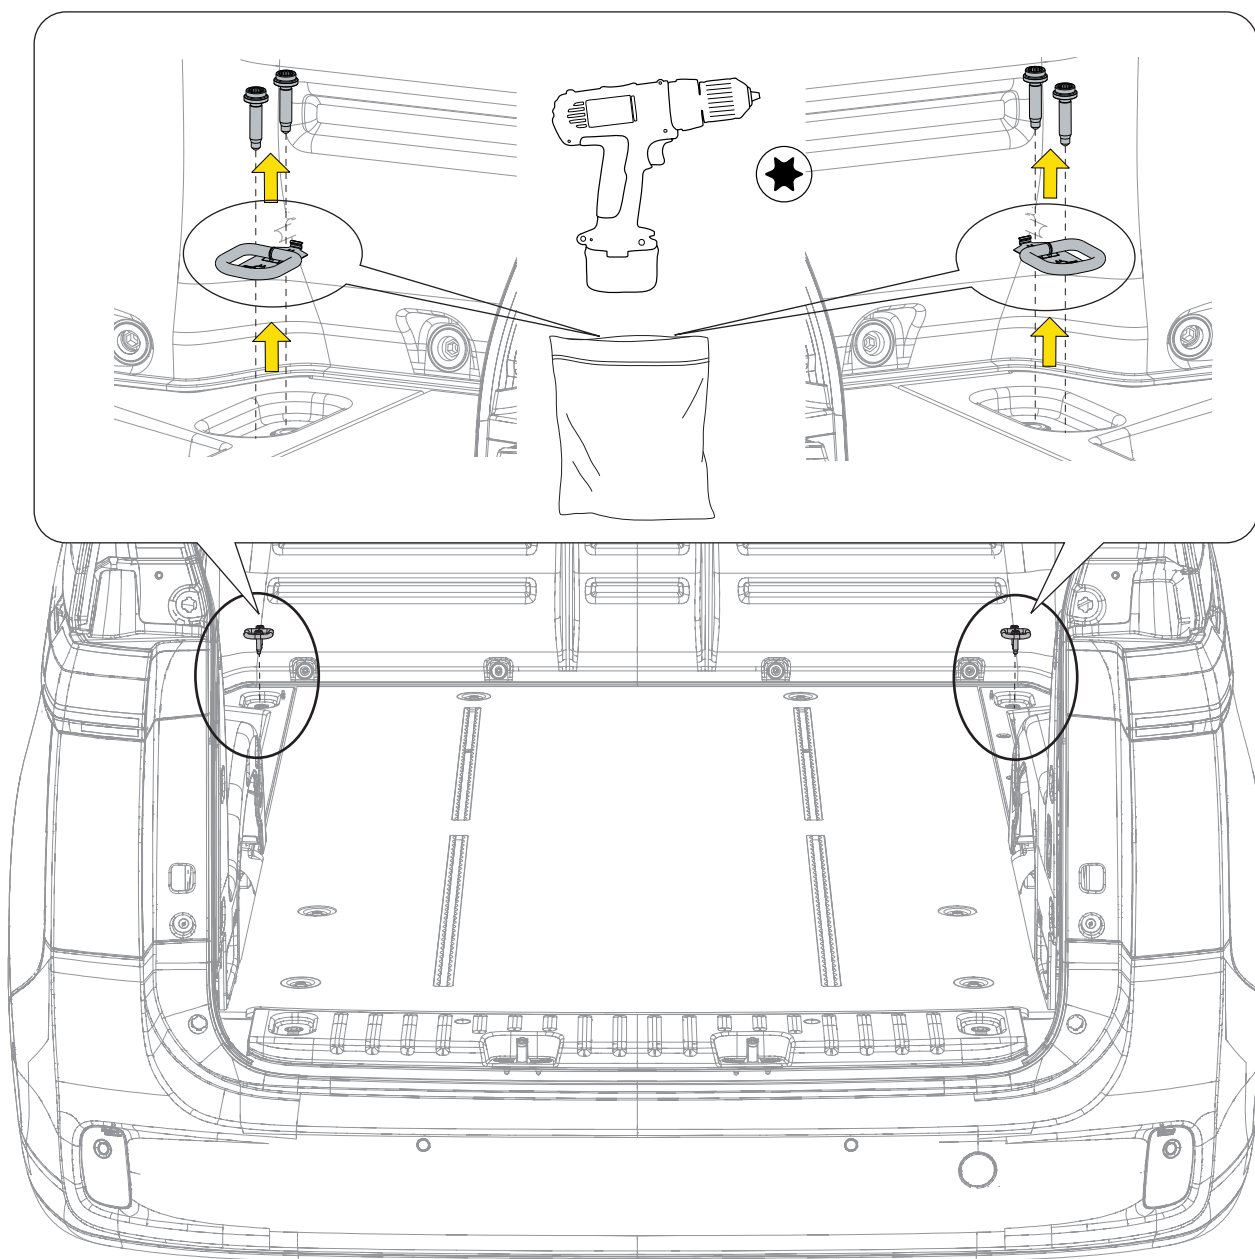

9

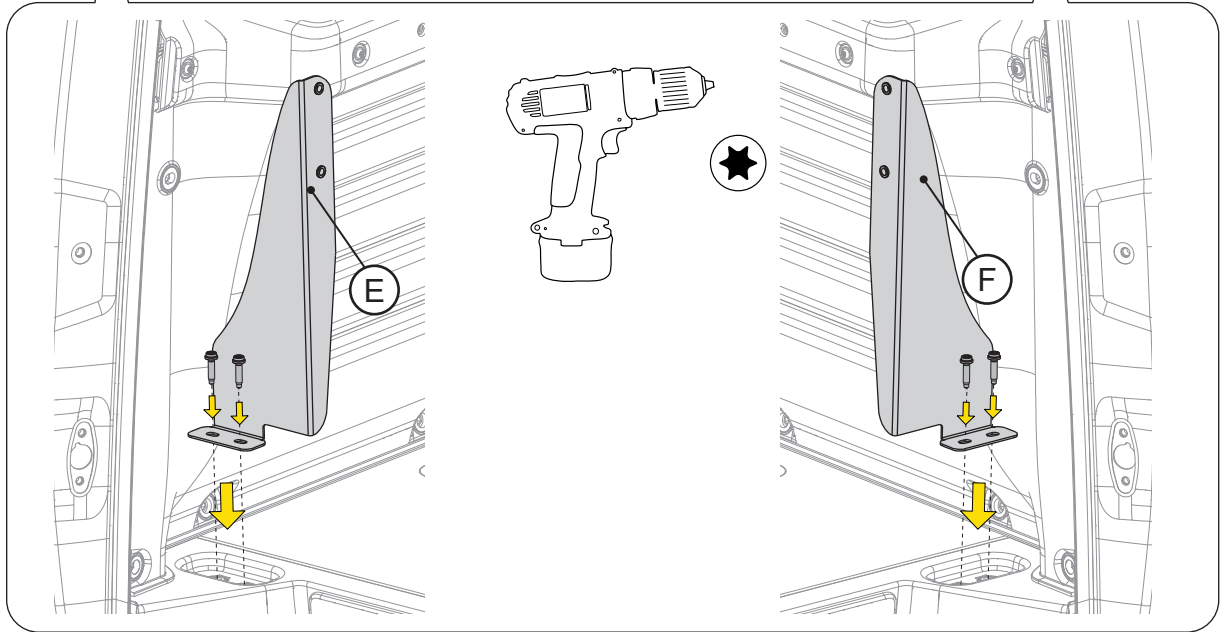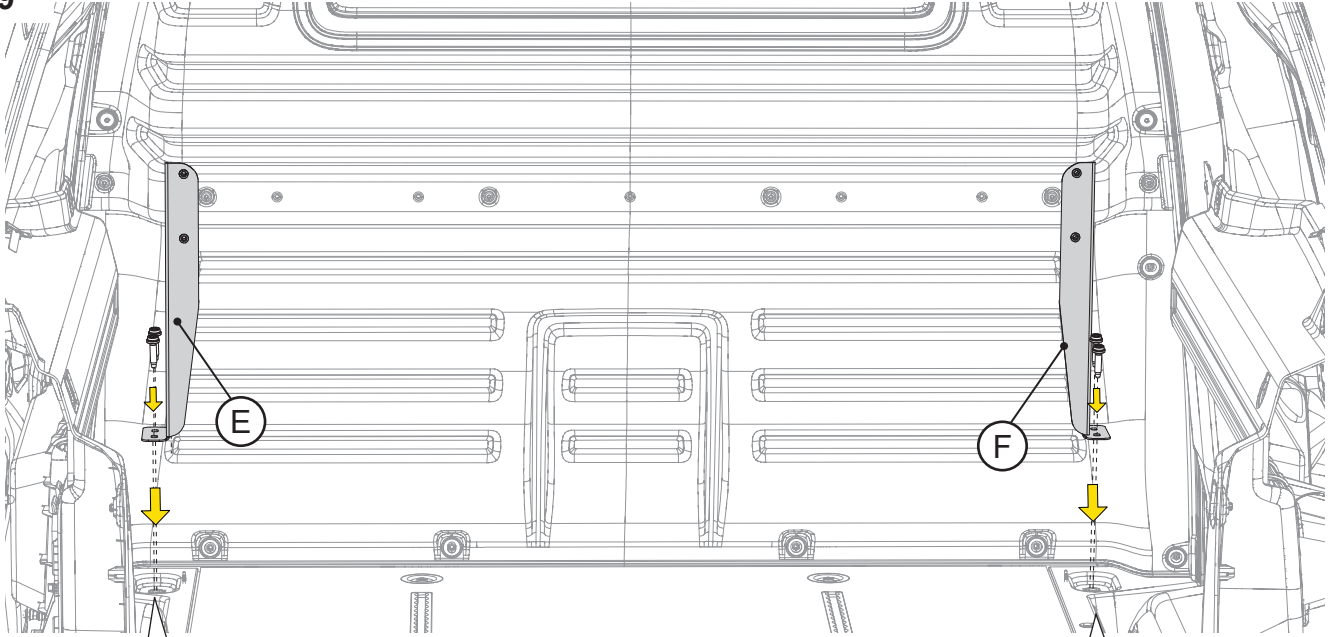

10

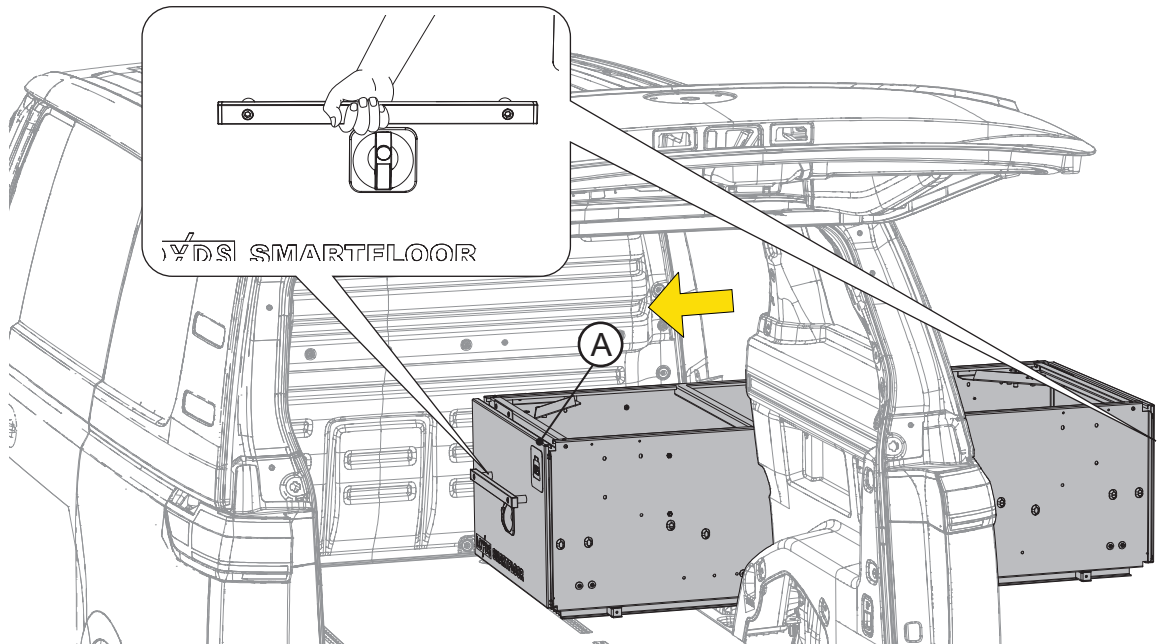


12

This diagram shows the rear view of a vehicle with its trunk open. Two circular callouts indicate the locations for attaching the rear crossbar to the roof rails. An inset on the right provides a detailed view of the attachment process. It shows a crossbar being secured to a roof rail using two screws, labeled 'A1'. Yellow arrows point to the screws. A power drill is shown in the top right corner, and a star icon indicates a warning or important note.


13

This diagram illustrates the process of attaching the side panel to the SmartFloor unit. A yellow arrow points from the side panel, which is marked with a circled 'M', towards the SmartFloor unit. Another yellow arrow points from the side panel towards the SmartFloor unit, indicating the direction of attachment. The SmartFloor unit is labeled 'LOYDS SMARTFLOOR' and '250'. The side panel is shown being moved into position to be attached to the SmartFloor unit.


14

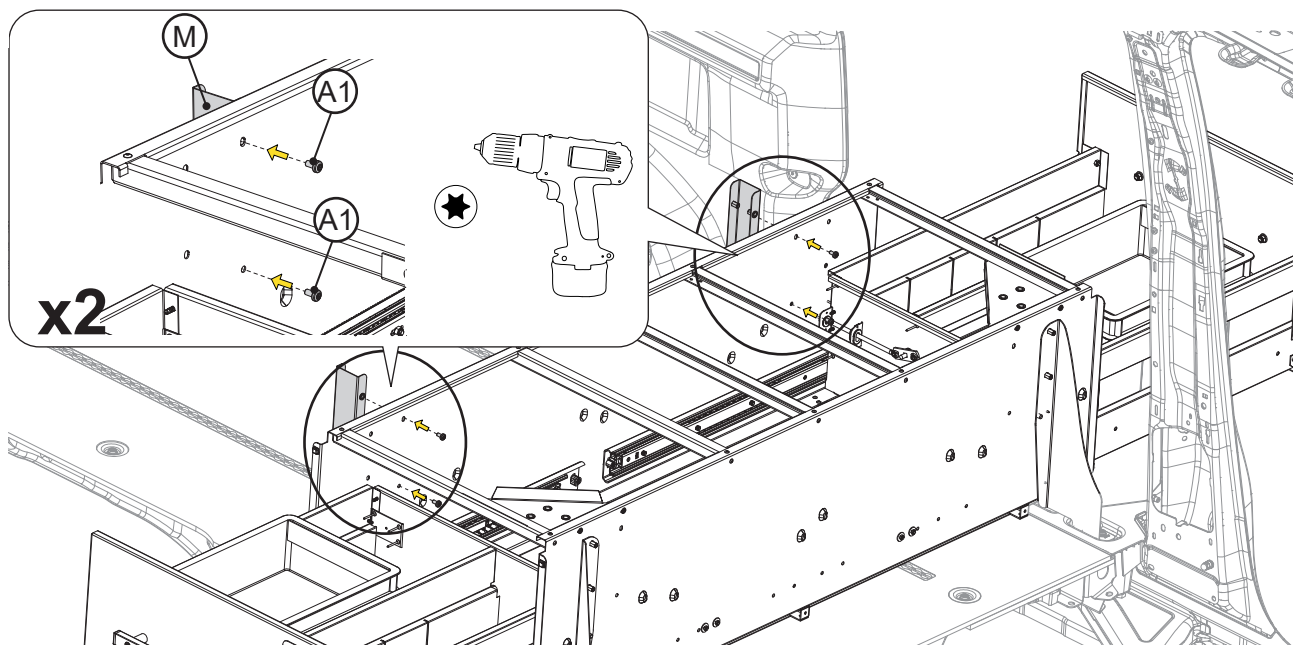


15

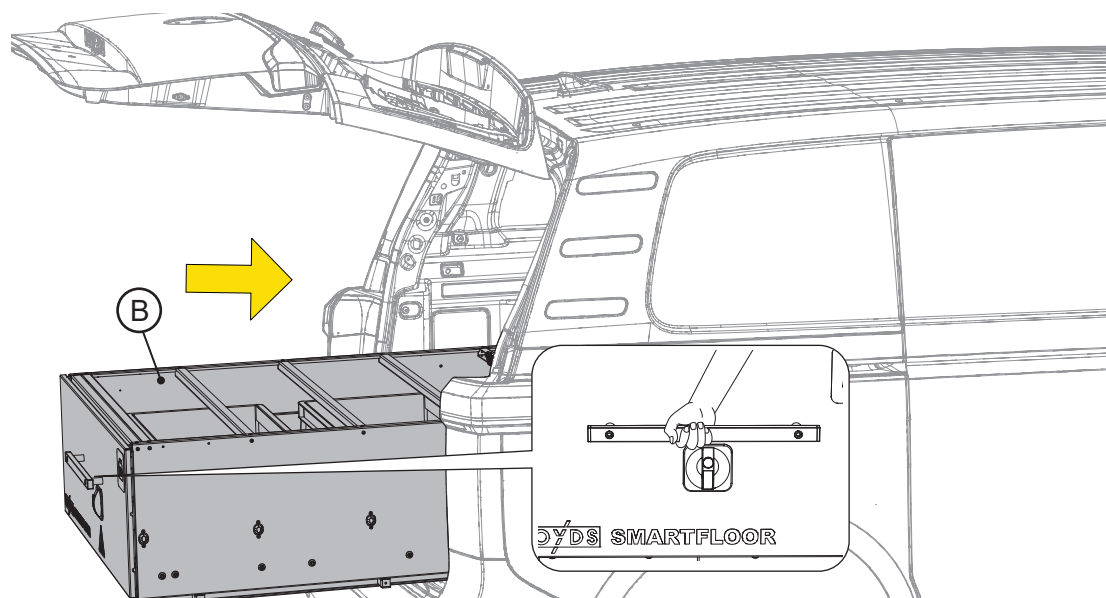


16

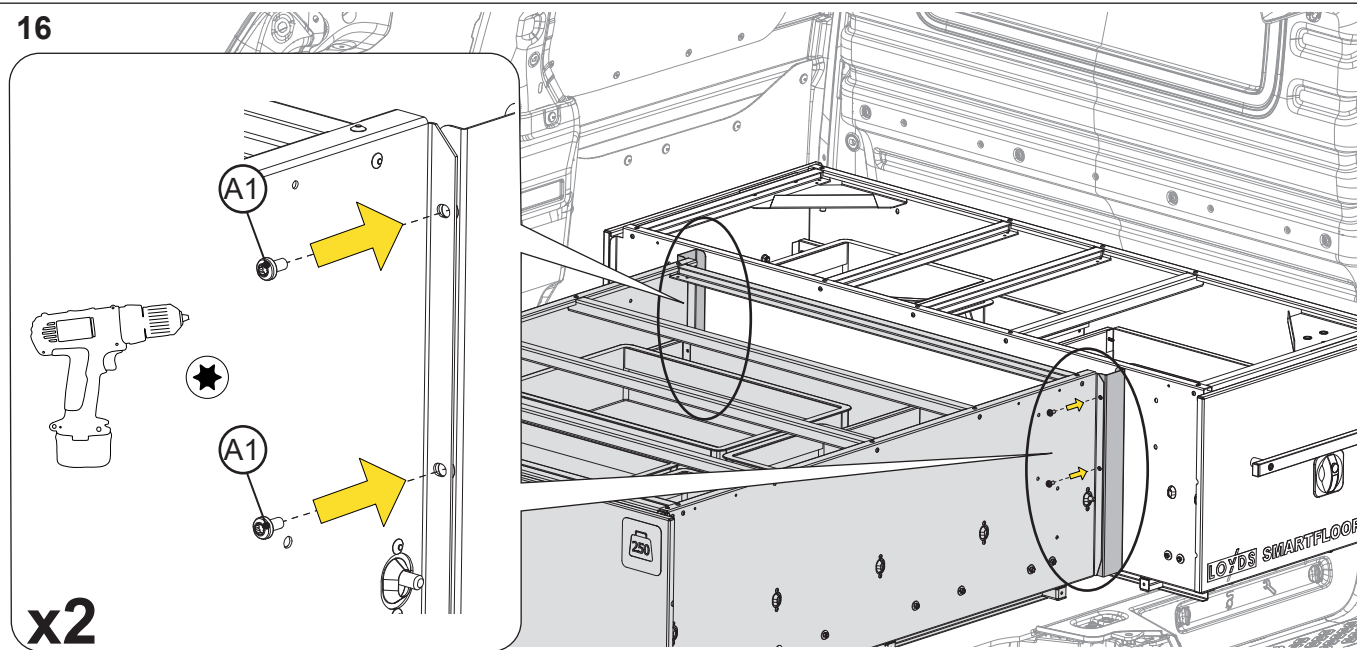


17

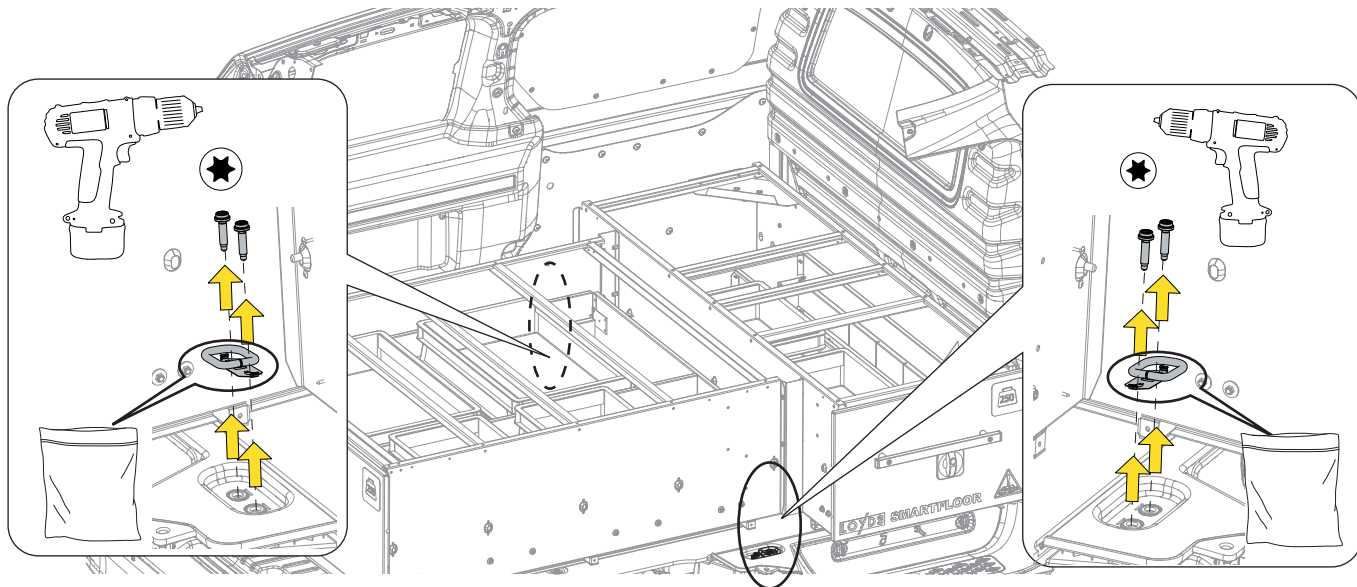


18

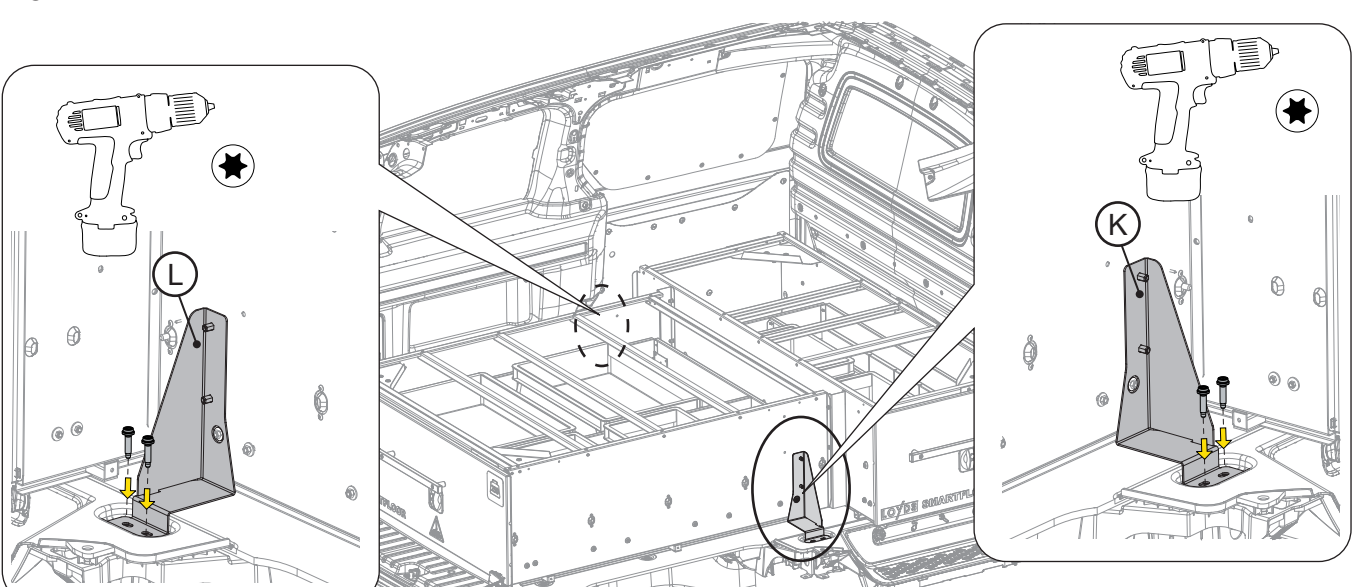


19

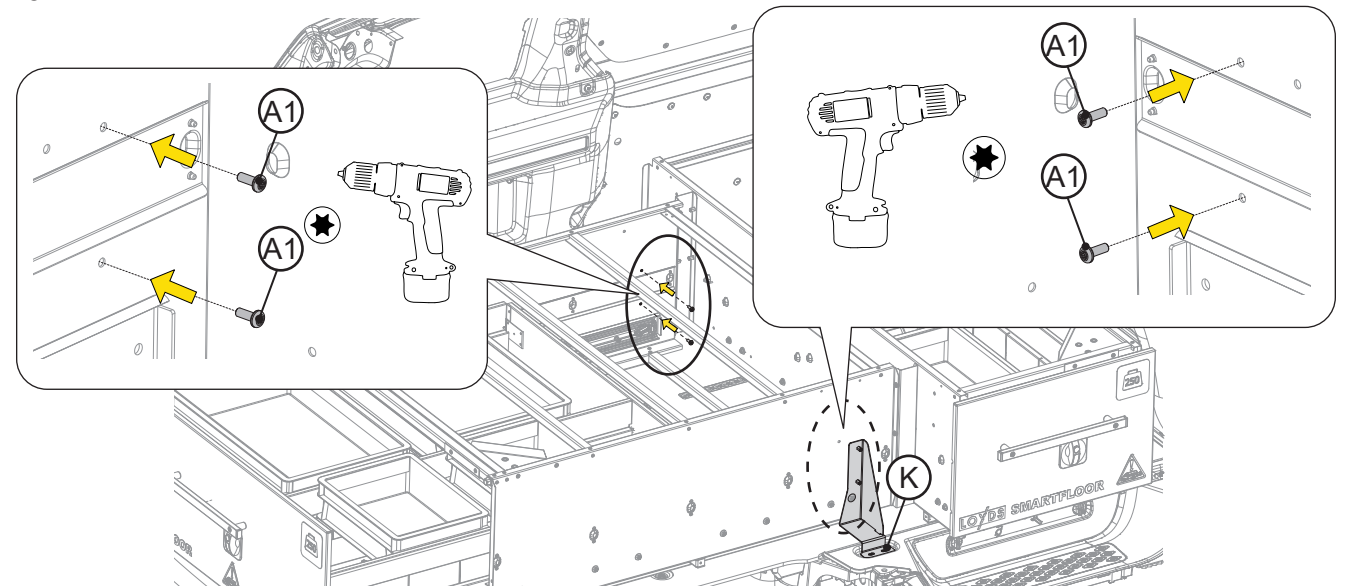


20

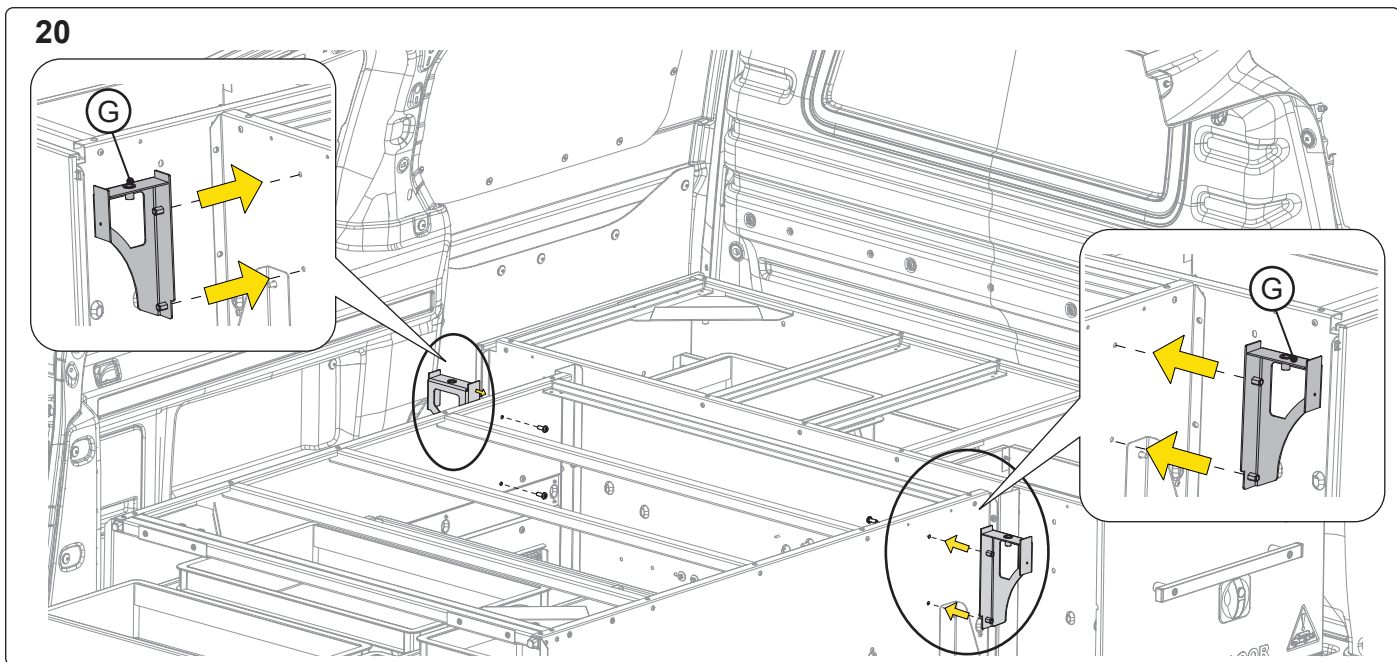


21

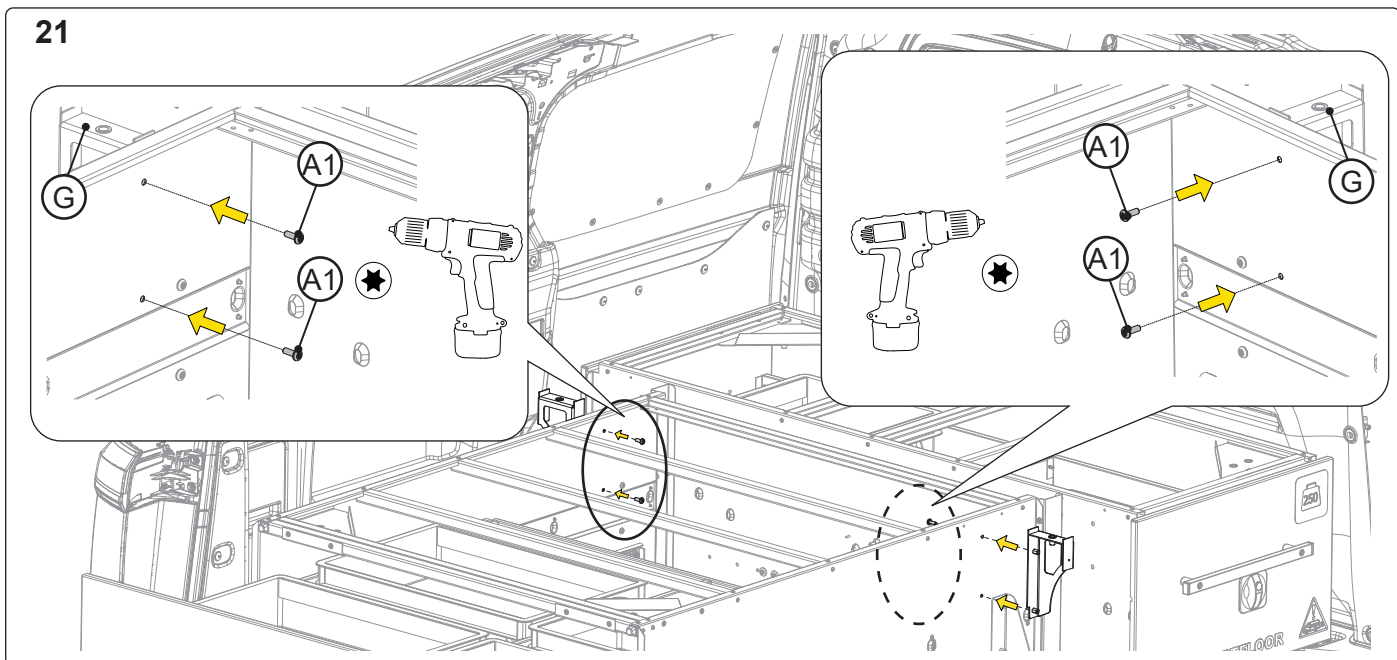


22

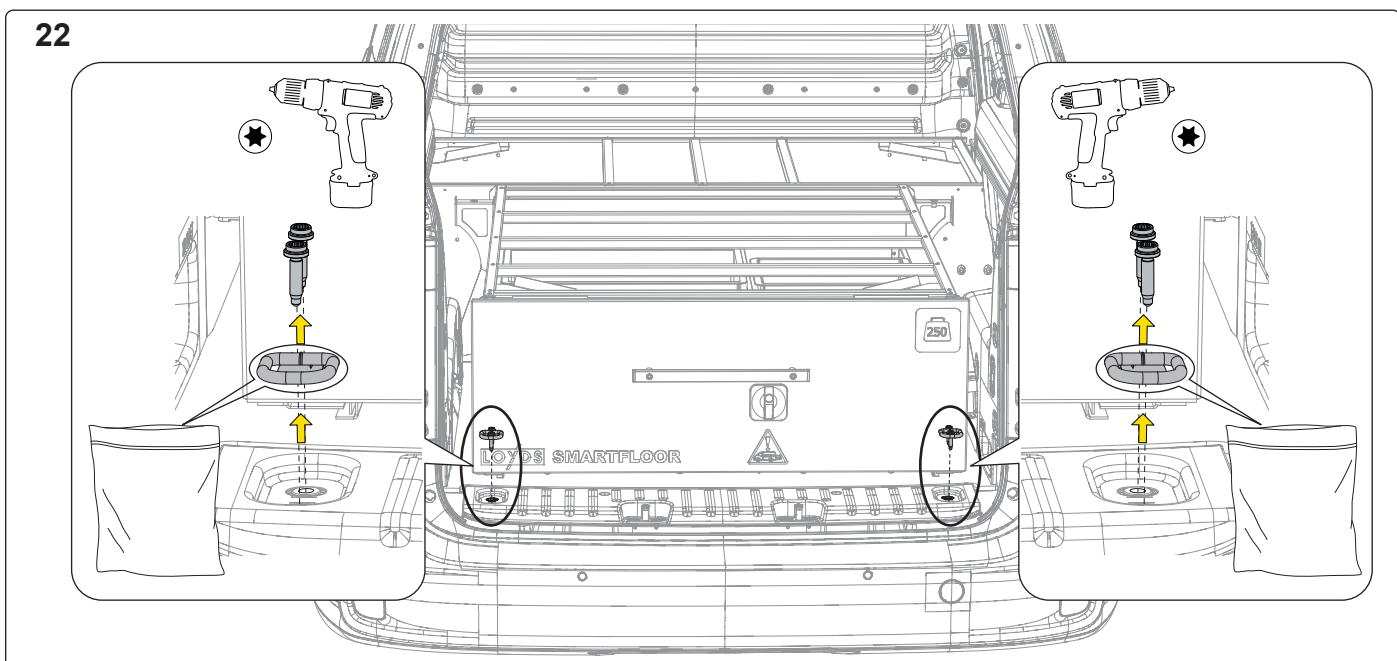


23

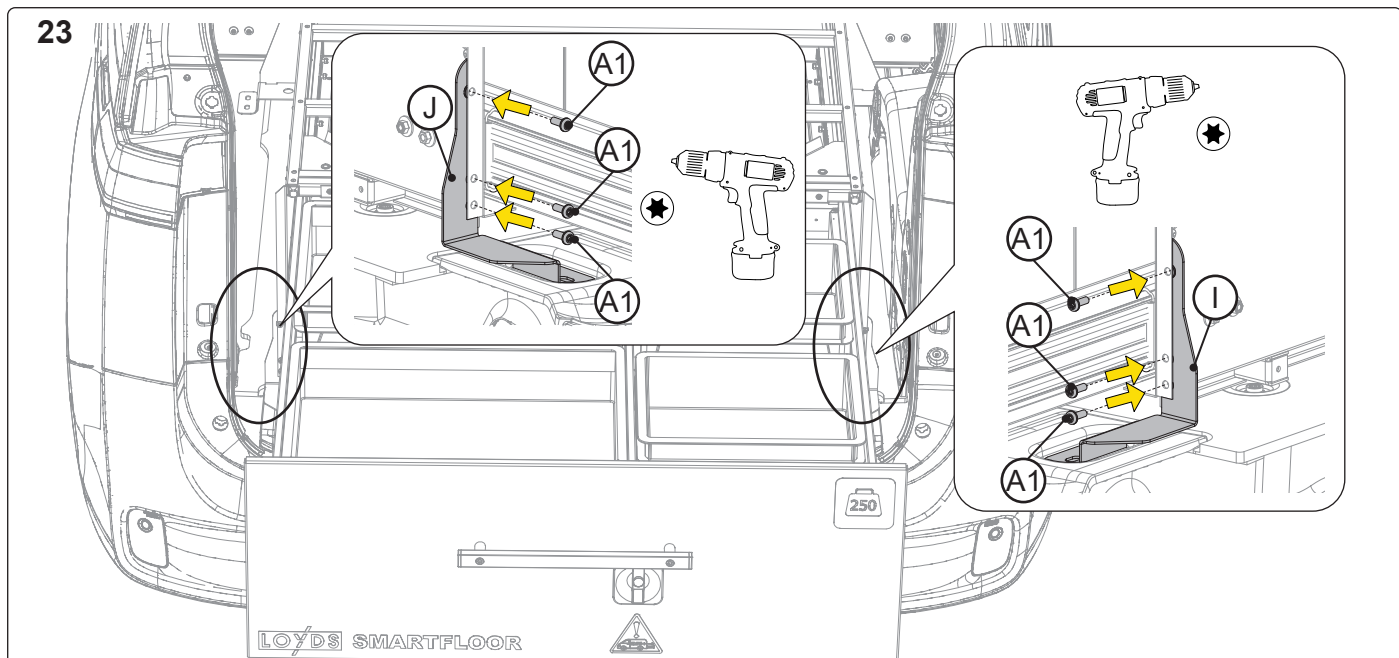


24

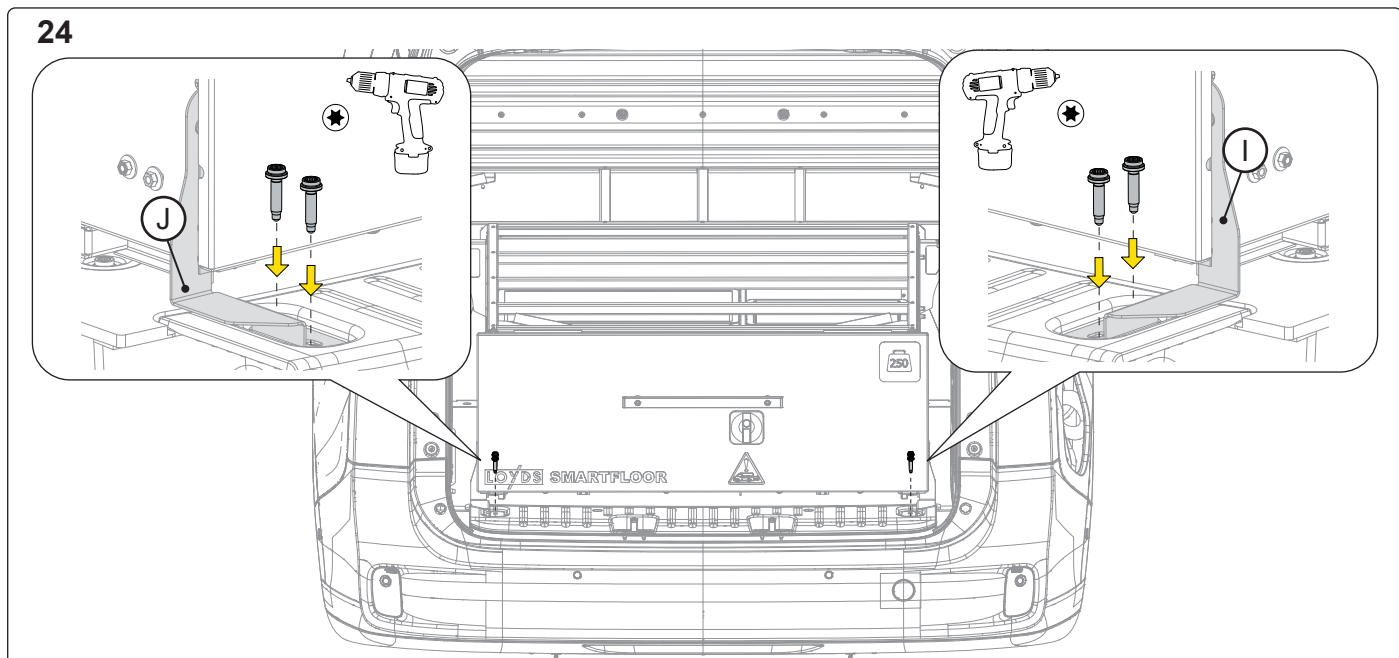


25

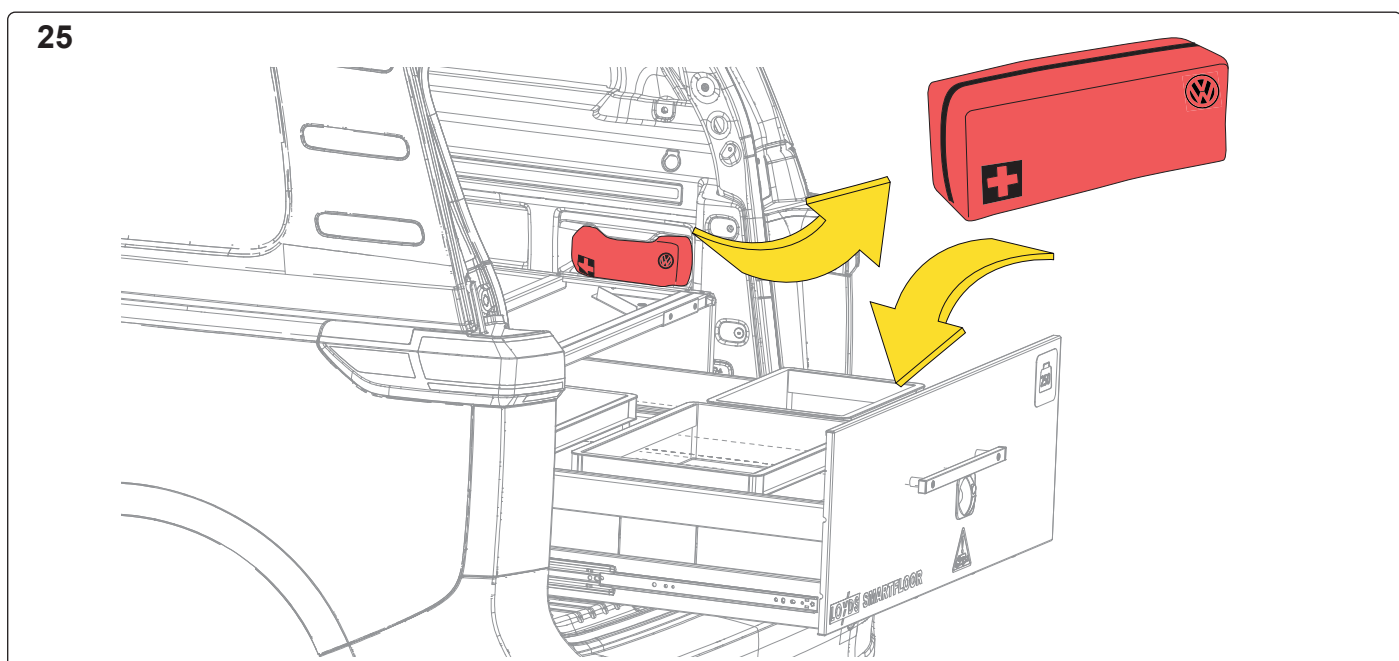


26

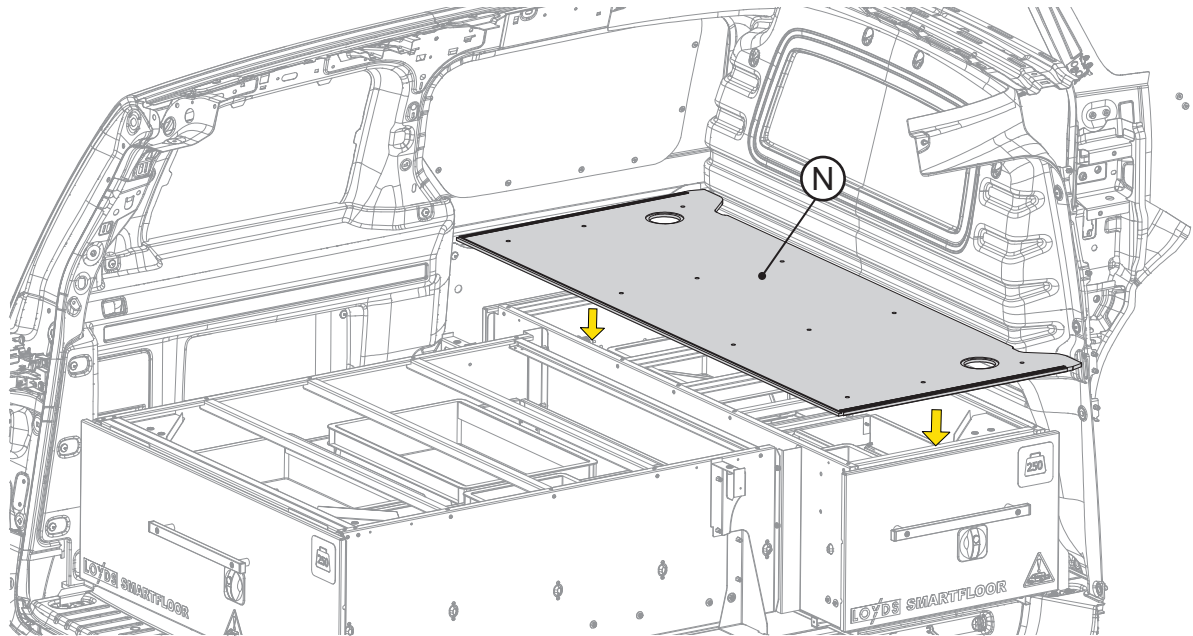


27

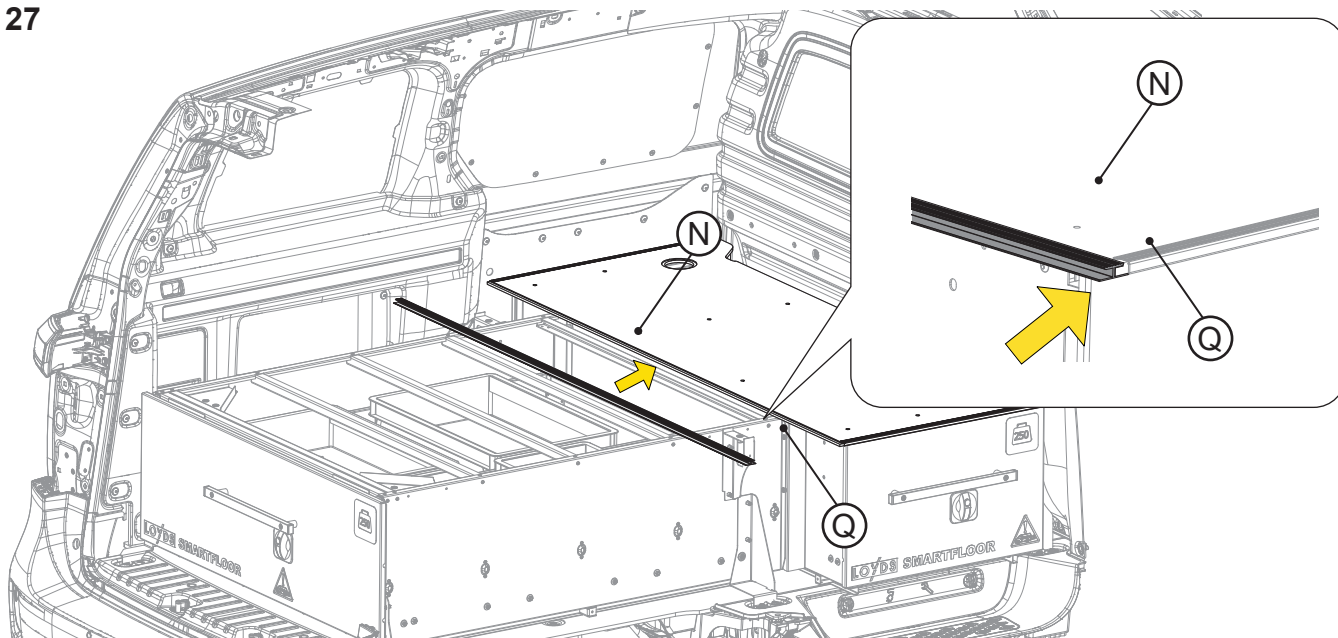




28

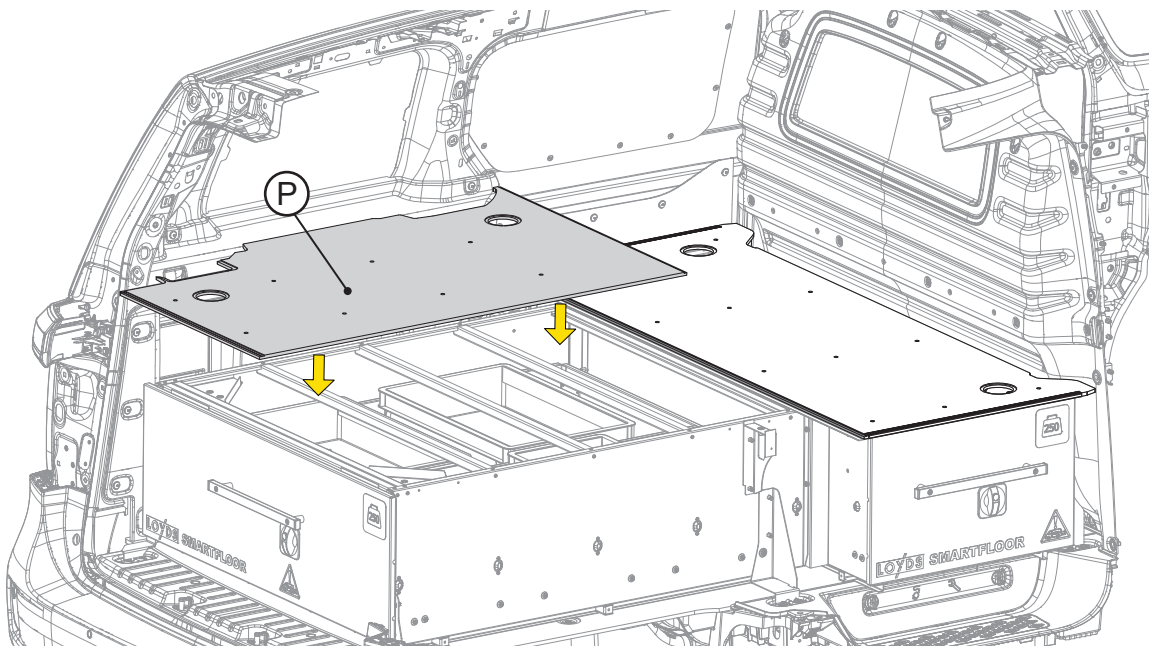




29

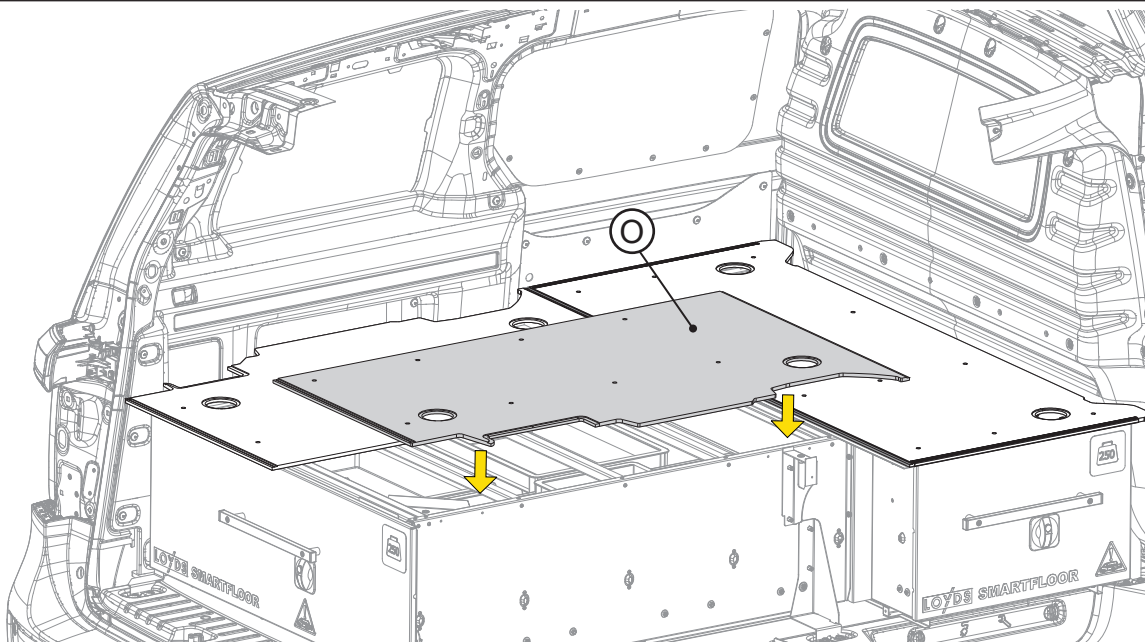


30

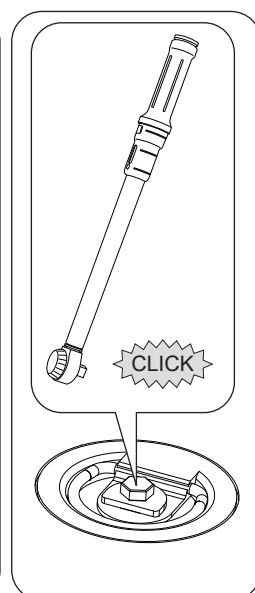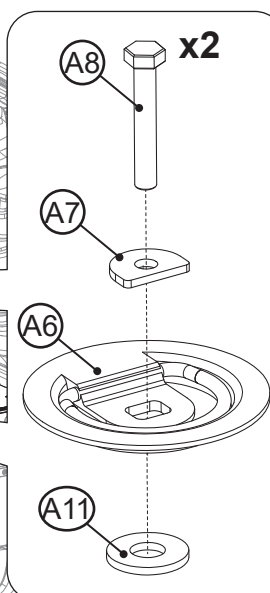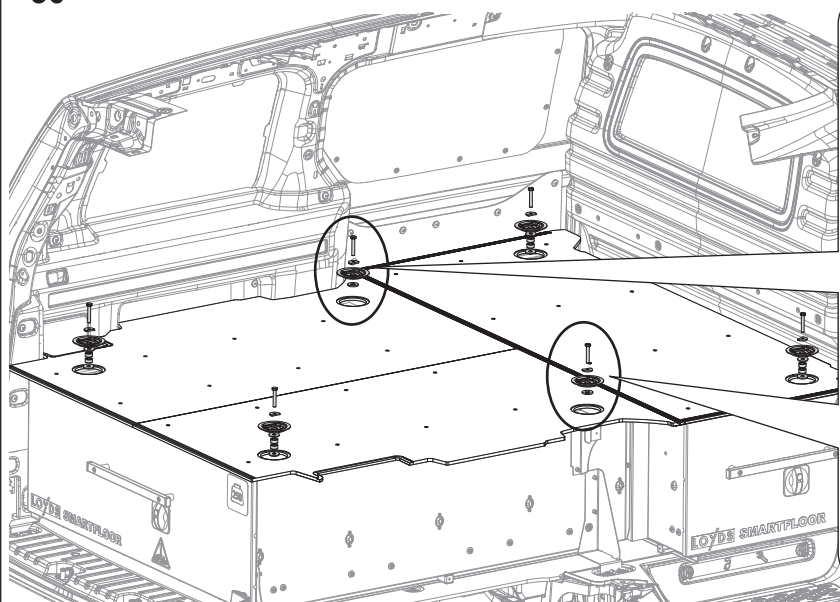


31

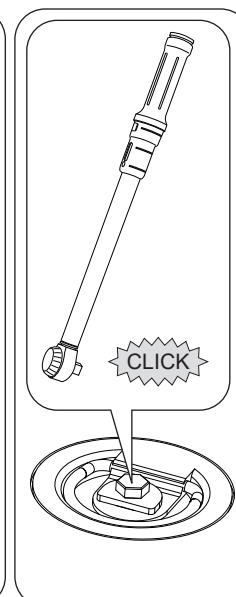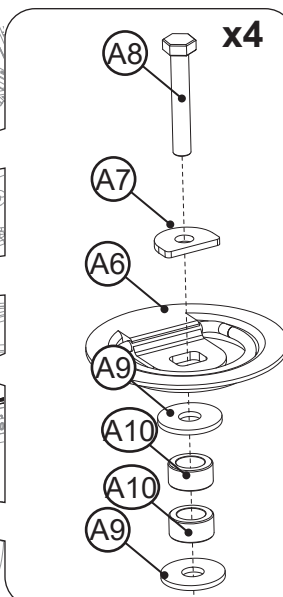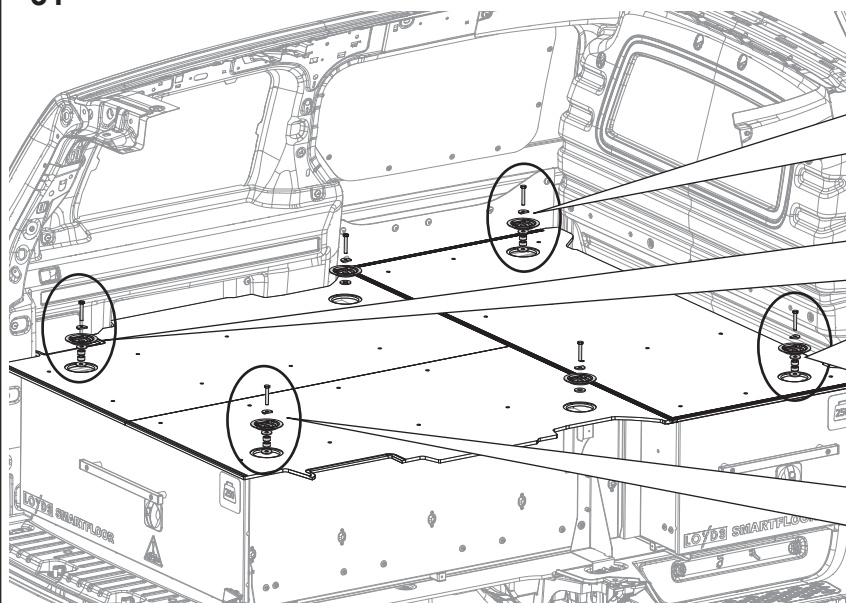


32

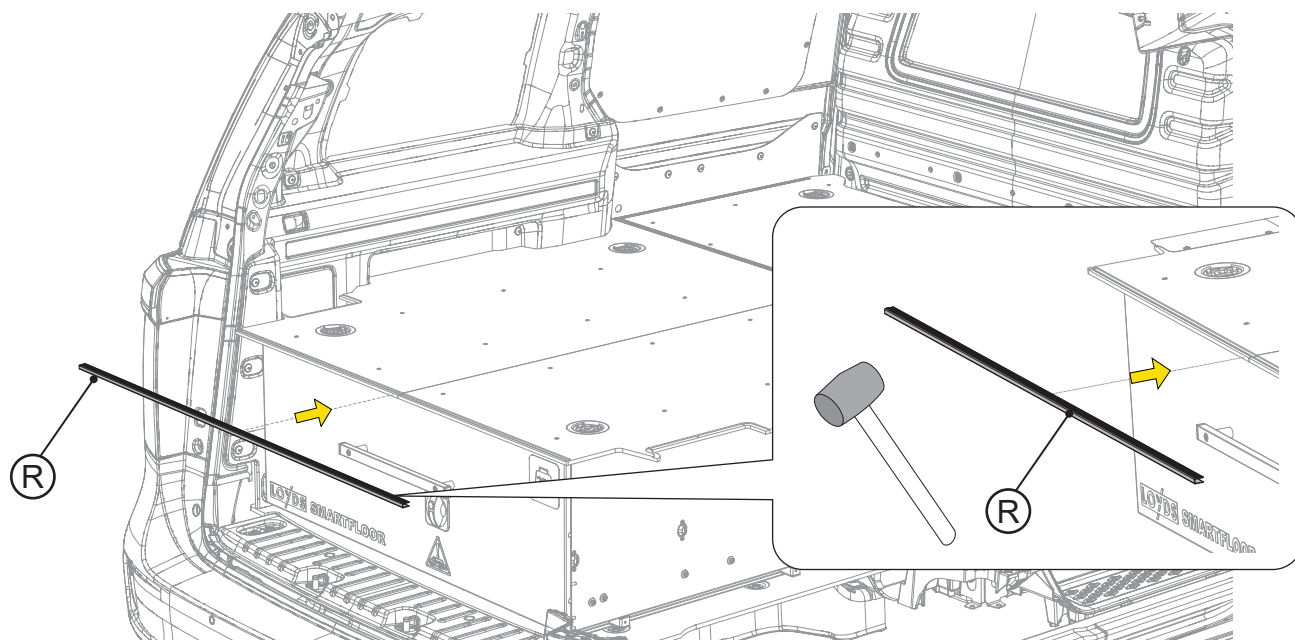



33

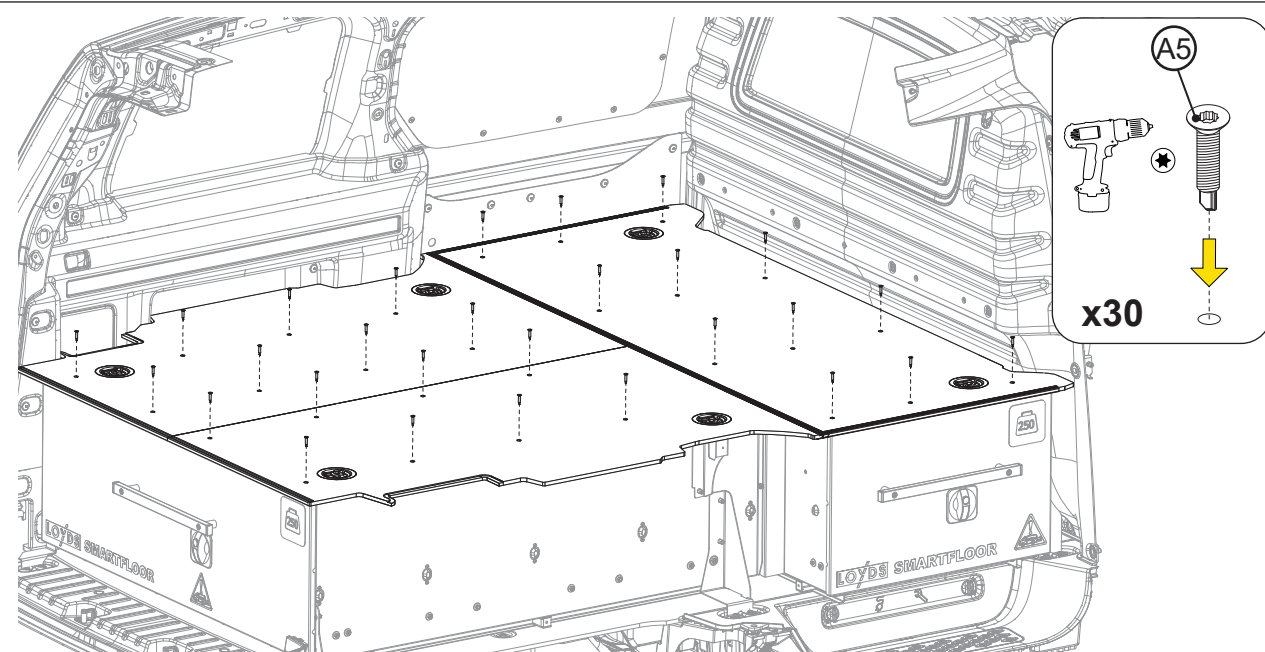



34

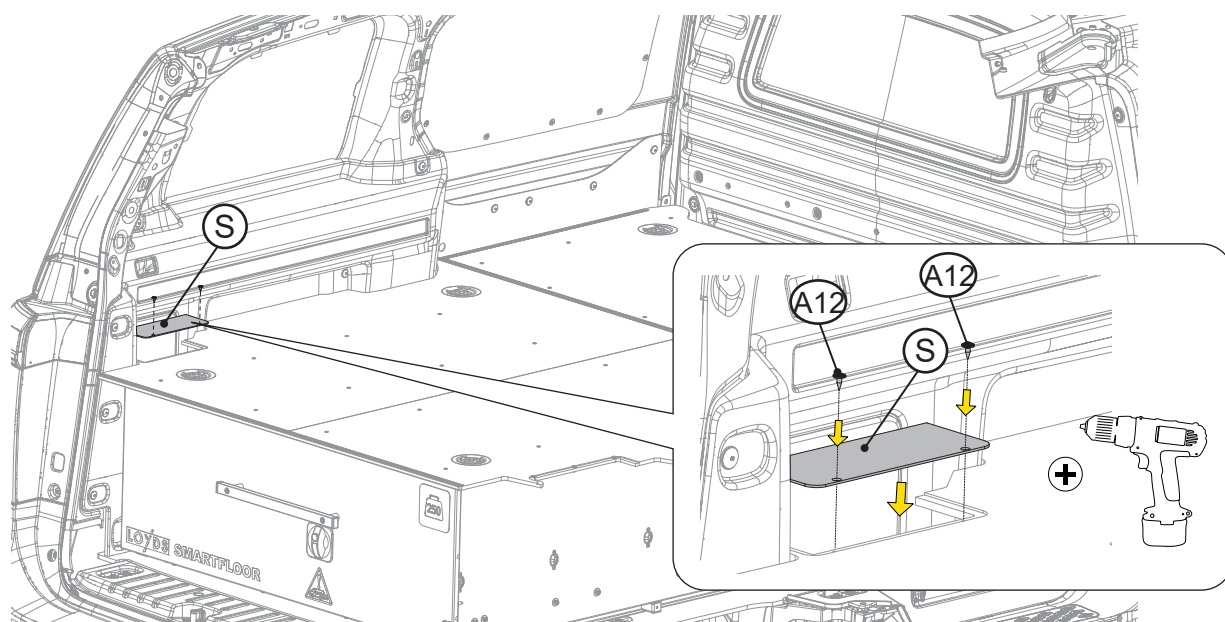


35

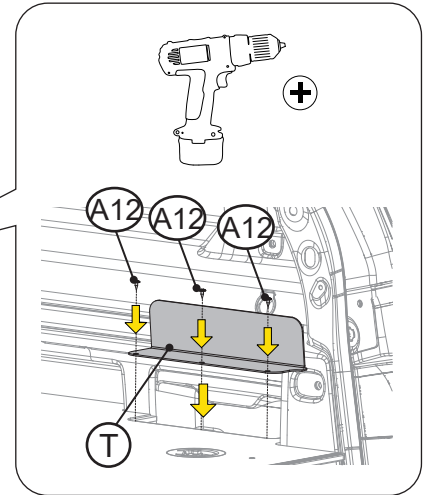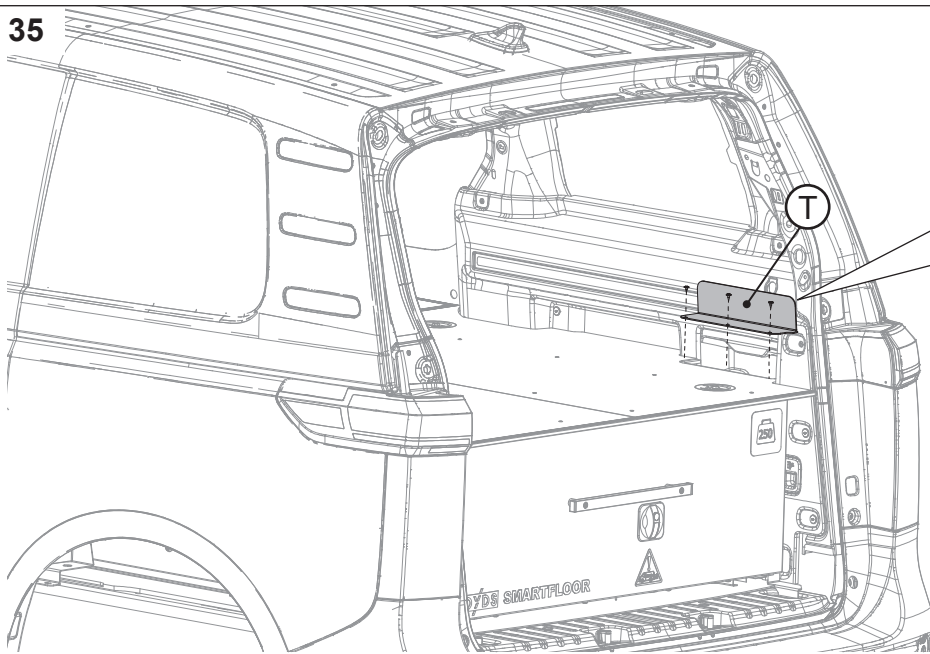

36

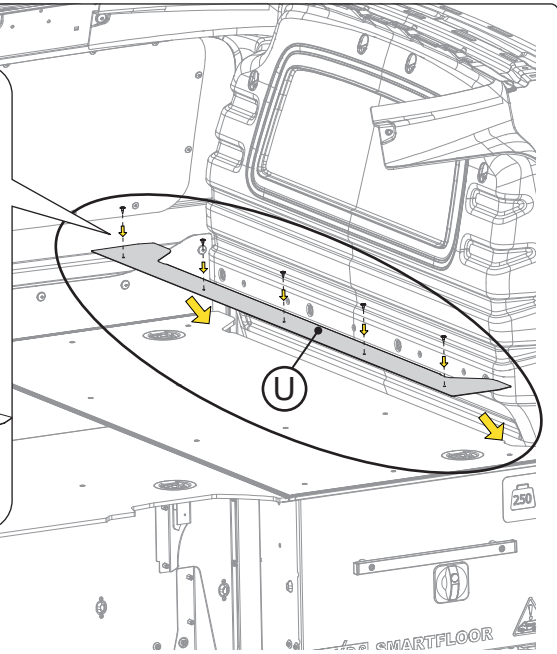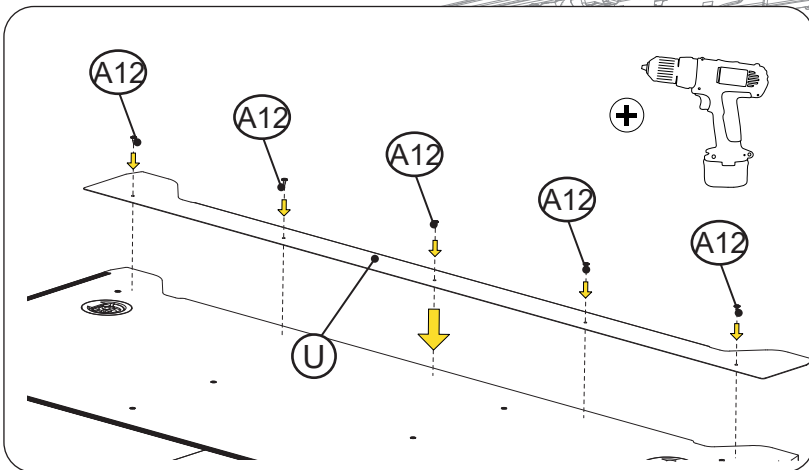

37

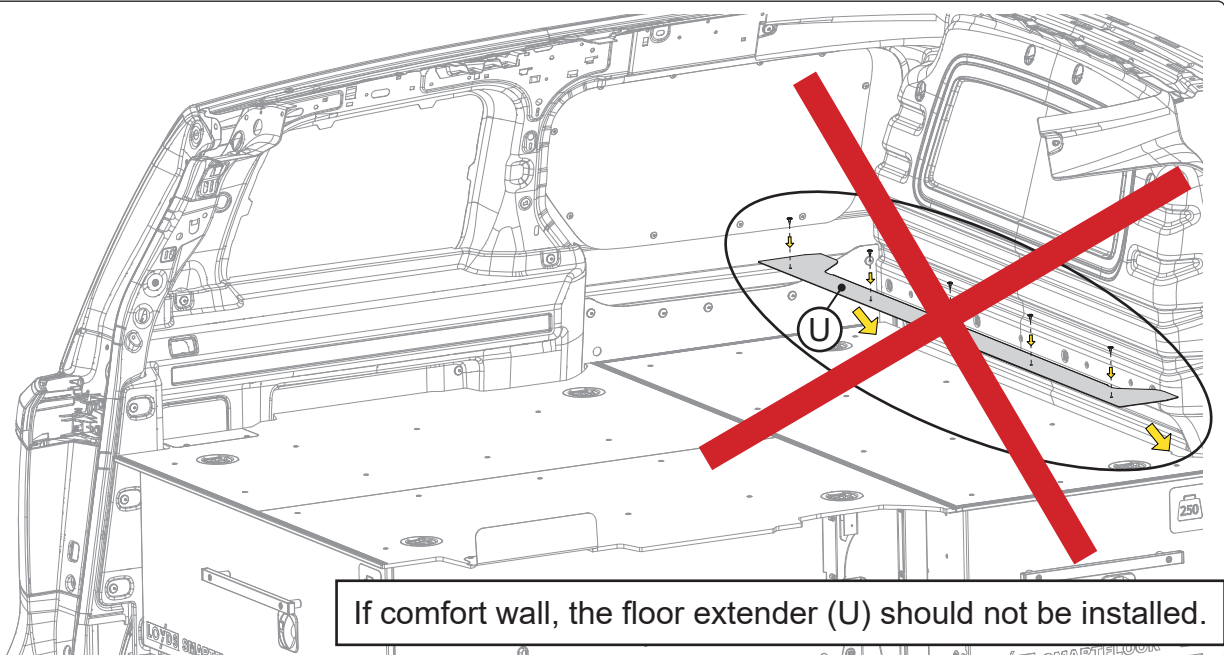

If comfort wall, the floor extender (U) should not be installed.