

SMARTFLOOR

VW Caddy 5 2020 No Installation Manual



Follow the color codes through the manual:

- 15020669 Smartfloor Caddy 5 Short **1SLD**
- 15020670 Smartfloor Caddy 5 Short **2SLD**
- ◆ 15020630 Smartfloor Caddy 5 Maxi **1SLD**
- ▲ 15020631 Smartfloor Caddy 5 Maxi **2SLD**

Revision Record

Rev nr	Date	Page	Picture	Update	New	Deleted steps

Recommended torque for screws:






4,2mm Selfdrilling: 3,6 NM

5mm: 5NM


6mm: 6 NM

8mm: 10 NM

Tools

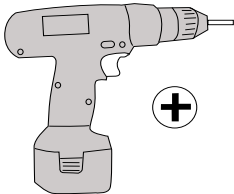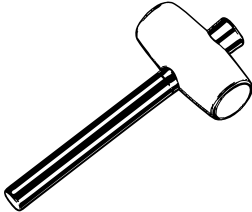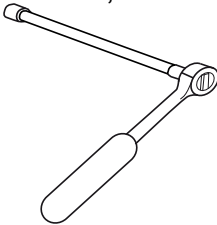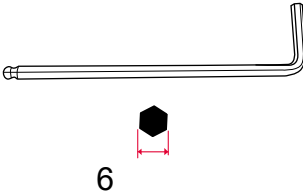
			10, 13 mm 
10, 13 mm 	Torx Bits TX 20 TX 25 TX 30 		

15020669 Kit complete Caddy 5 Short (W350)1SLD

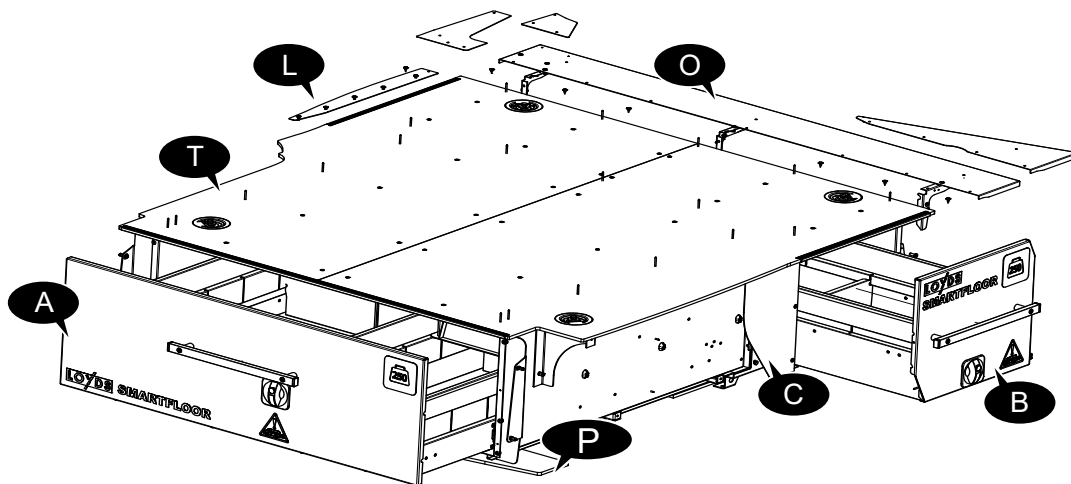


Item	Quantity	Part Number	Description
A	1	15020679	Rear Drawer W1000 L900 Main ASSY
B	1	15020641	Front Drawer FD1 W350 1200 Complete ASSY
C	1	15020673	Steelbracket Set W35 Caddy 5 Short
P	1	15020657	Floor Spacer Set SF Caddy 5
T	1	15020666	Floor Set SF W35 Caddy 5 Short
L	1	15020672	Floor Extend Side 1SLD Set Caddy 5 Short
O	1	15020613	Floor Extender Kit SF Caddy 5 Se

15020670 Kit complete Caddy 5 Short (W350) 2SLD

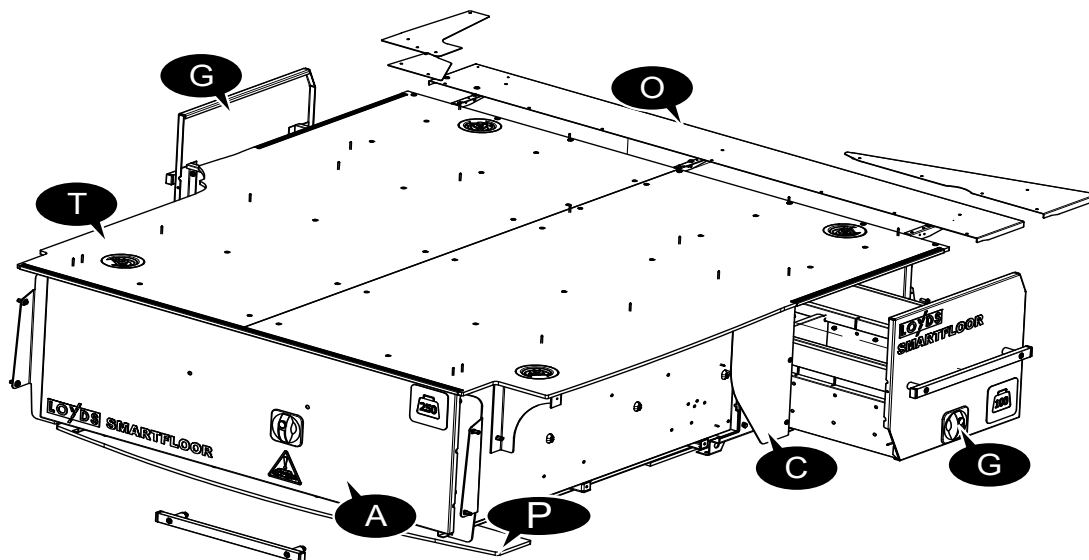


Item	Quantity	Part Number	Description
A	1	15020679	Rear Drawer W1000 L900 Main ASSY
G	1	15020640	Front Drawer FD2 W350 600 Complete ASSY
C	1	15020673	Steelbracket Set W35 Caddy 5 Short
P	1	15020657	Floor Spacer Set SF Caddy 5
T	1	15020666	Floor Set SF W35 Caddy 5 Short
O	1	15020613	Floor Extender Kit SF Caddy 5

15020630 Kit complete Caddy 5 Maxi 1SLD

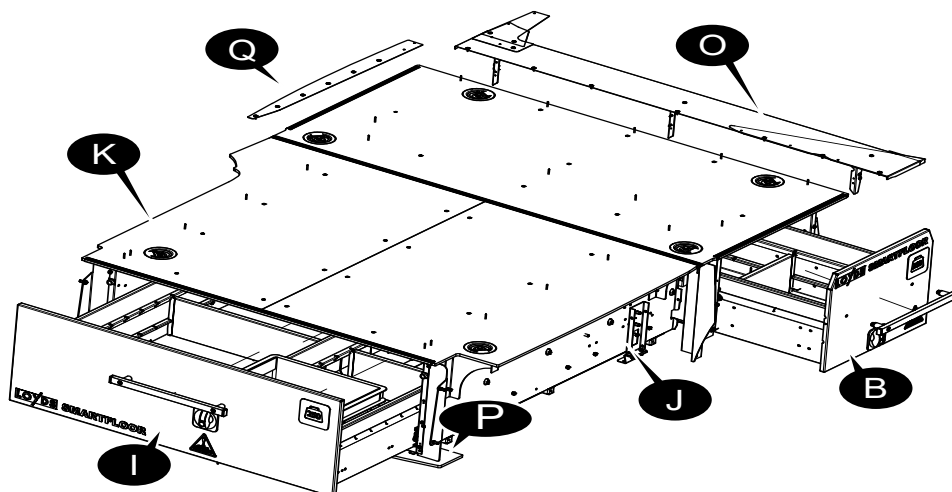

Item	Quantity	Part Number	Description
I	1	15020678	Rear Drawer W1000 L1200 Main Assy
B	1	15020687	Front Drawer FD1 W400 L1200 Complete Assy
J	1	15020094	Steelbracket Set SF Caddy 5 Maxi
K	1	15020108	Floor Set SF Caddy 5 Maxi 2SLD
P	1	15020657	Floor Spacer Set SF Caddy 5
Q	1	15020659	Floor Extend Side 1SLD Set Caddy 5 Maxi
O	1	15020613	Floor Extender Kit SF Caddy 5


15020631 Kit complete Caddy 5 Maxi 2SLD

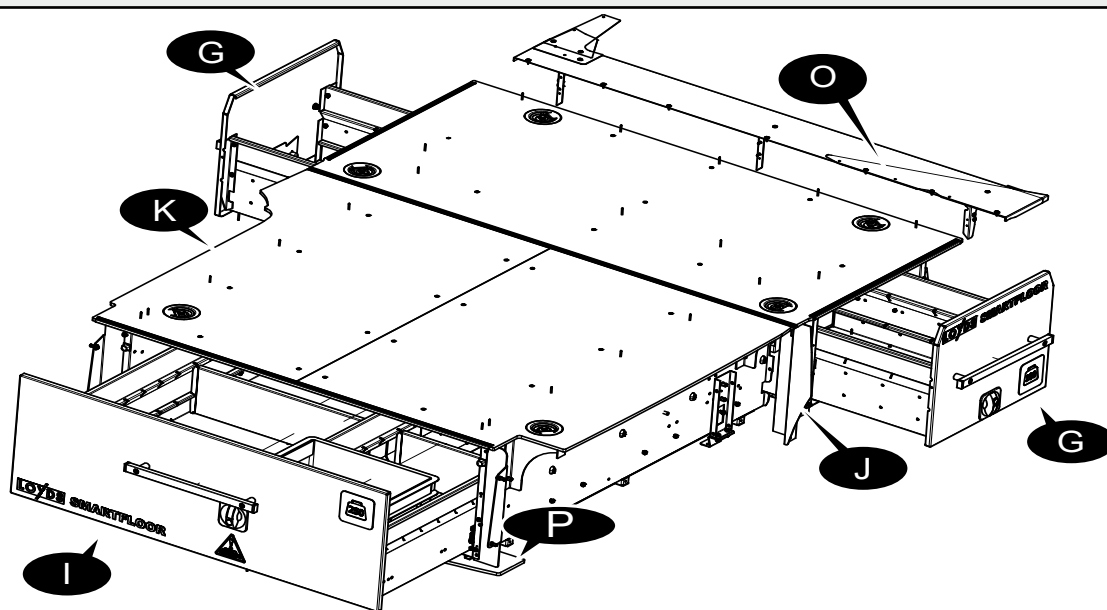

Item	Quantity	Part Number	Description
I	1	15020678	Rear Drawer W1000 L1200 Main Assy
G	1	15020688	Front Drawer FD2 W400 L600 Complete Assy
J	1	15020094	Steelbracket Set SF Caddy 5 Maxi
K	1	15020108	Floor Set SF Caddy 5 Maxi 2SLD
P	1	15020657	Floor Spacer Set SF Caddy 5
O	1	15020613	Floor Extender Kit SF Caddy 5




15020666 Floor Set SF W350 Caddy 5 Short 1&2SLD

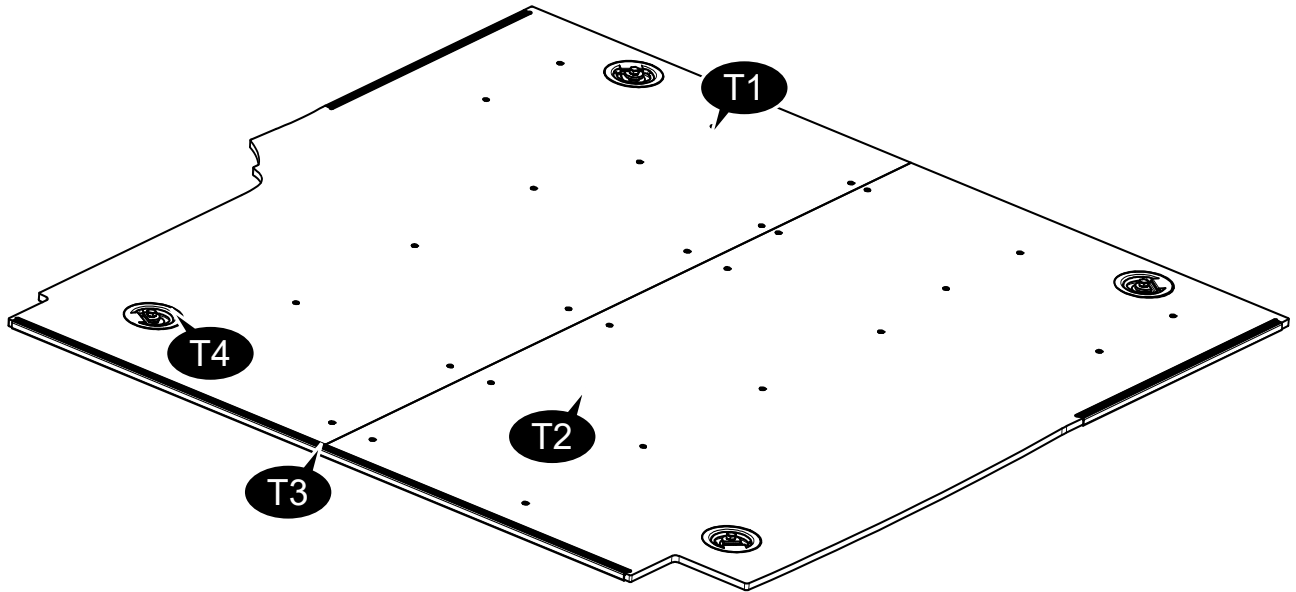

Item	Quantity	Part Number	Description
T1	1	15020667	Floor Left SF W35 Caddy 5 Short ASSY
T2	1	15020668	Floor Right SF W35 Caddy 5 Short ASSY
T3	1	15020017	U-Profile 9mm L=1197
T4	1	15020665	Fitting Kit Floor Set SF W35 Caddy 5 Short




15020672 Floor Extend 1SLD Set Caddy 5 Short

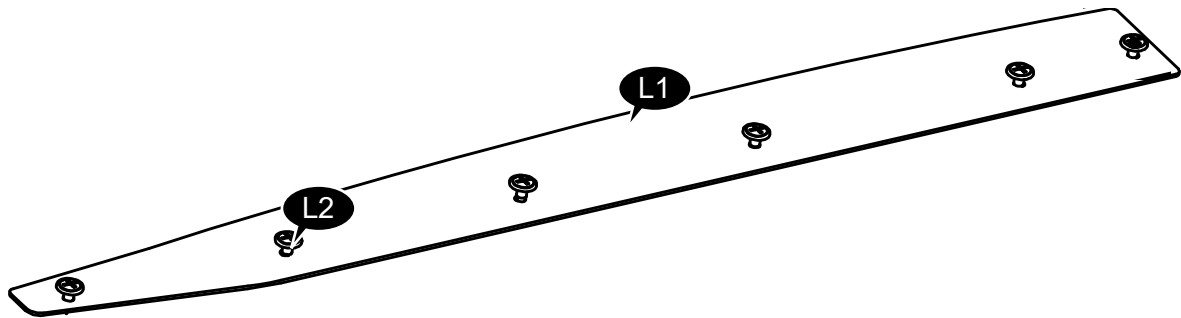

Item	Quantity	Part Number	Description
L1	1	15020651	Floor Extend Side Left Caddy 5 1SLD
L2	1	15020660	Fitting Kit Floor Extend Side 1SLD Caddy 5




15020108 Floor kit SF Caddy 5 Maxi 1SLD

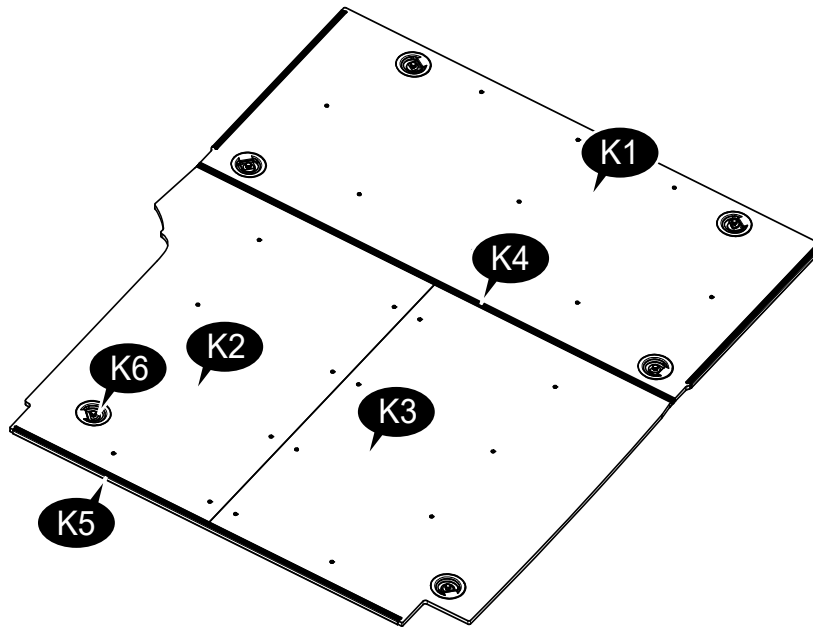

Item	Quantity	Part Number	Descriptionv
K1	1	15020615	Floor Front SF Caddy Maxi 2020 ASSY
K2	1	15020089	Floor Left SF Caddy Maxi 2020
K3	1	15020090	Floor Right SF Caddy Maxi 2020
K4	1	15020106	H-profile 9mm L=1477
K5	1	15020017	U-Profile 9mm L=1197
K6	1	15020107	Fitting Kit Floor Set SF Caddy 5 Maxi




15020659 Floor Extend Side Set 1SLD Caddy 5 Maxi

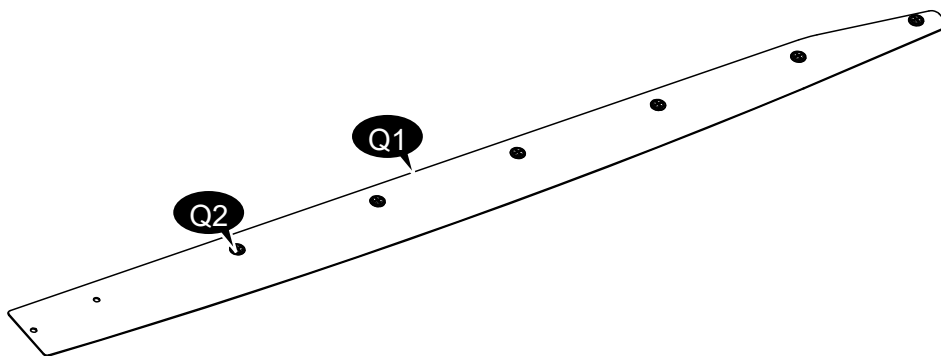

Item	Quantity	Part Number	Description
Q1	1	15020658	Floor Extend Left Side 1SLD Caddy 5 Maxi
Q2	1	15020660	Fitting Kit Floor Extend Side 1SLD Caddy 5




15020673 Steel bracket set W350 Caddy 5 Short

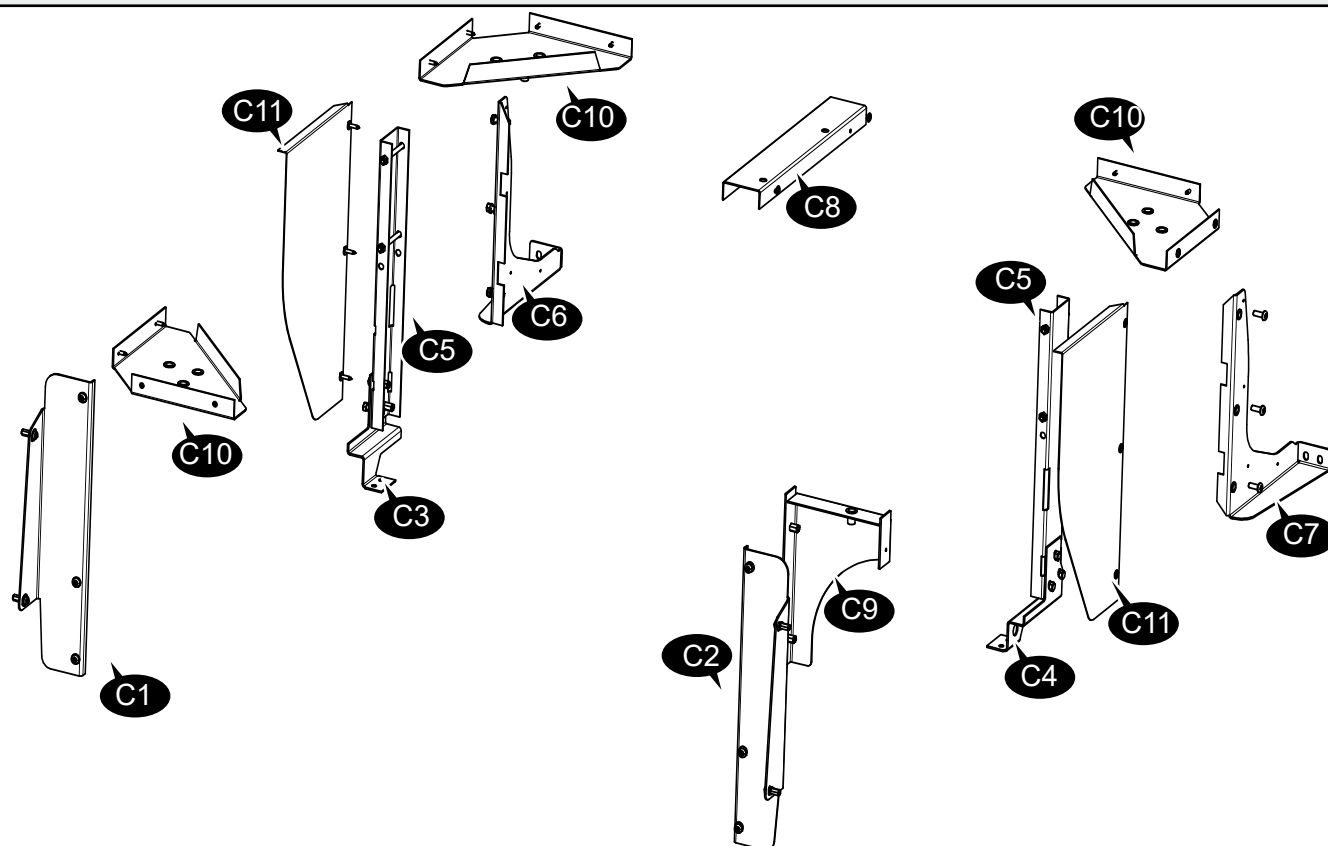


Item	Quantity	Part Number	Description
C1	1	15018465	Bracket Rear Left SF Caddy ASSY
C2	1	15018464	Bracket Rear Right SF Caddy ASSY
C3	1	15018452	Bracket Middle Left SF Caddy Short
C4	1	15018459	Bracket Middle Right SF Caddy Short
C5	2	15018462	Bracket Distance FD RD Caddy Short ASSY
C6	1	15020084	Bracket Front Left XSep SF Caddy 2020 ASSY
C7	1	15020083	Bracket Front Right XSep SF Caddy 2020 ASSY
C8	1	15020664	Bracket L&R Floor Front Connection W350
C9	1	15018461	Bracket Latchcup Side M8 SF 2020 ASSY
C10	3	15018460	Bracket Latch Inner 8mm ASSY
C11	2	15018455	Cover SLD Rear SF Caddy
	1	15020015	Fitting Kit Steelbracket Set Caddy Short 2020

 15020094 Steel bracket set Caddy Maxi

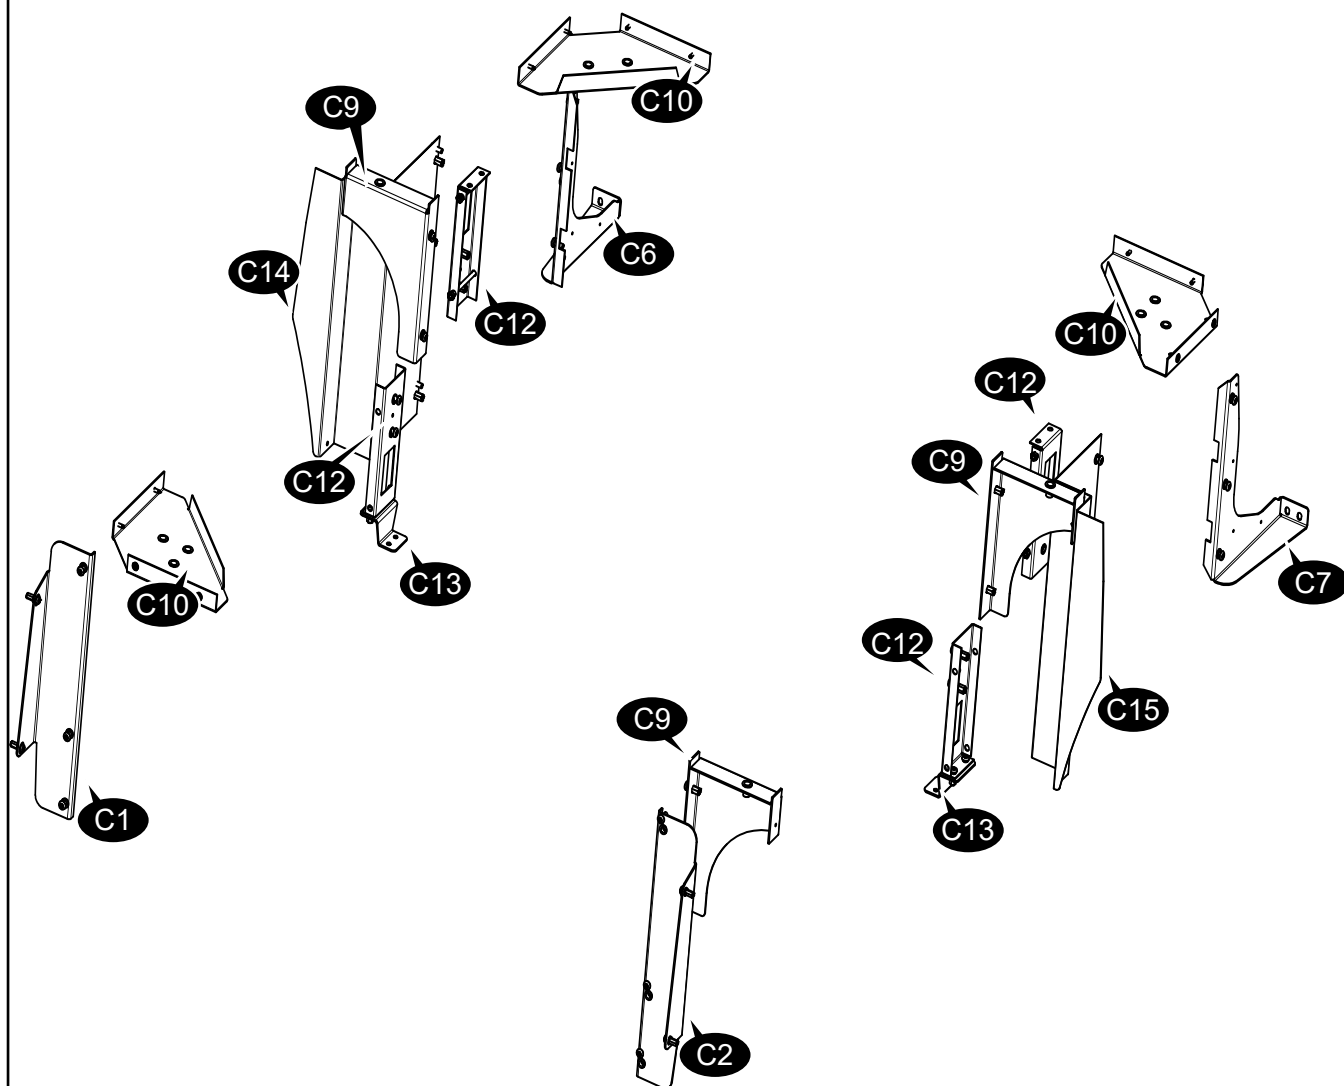

Item	Quantity	Part Number	Description
C1	1	15018465	Bracket Rear Left SF Caddy ASSY
C2	1	15018464	Bracket Rear Right SF Caddy ASSY
C12	4	15020088	Bracket Middle Upper SF Caddy Maxi ASSY
C13	2	15020086	Bracket Middle Lower SF Caddy Maxi ASSY
C7	1	15020083	Bracket Front Right XSep SF Caddy 2020 ASSY
C6	1	15020084	Bracket Front Left XSep SF Caddy 2020 ASSY
C9	3	15018461	Bracket Latchcup Side M8 SF 2020 ASSY
C10	3	15018460	Bracket Latch Inner 8mm ASSY
C6	1	15020101	Cover Slide Door Rear Left ASSY Caddy 5 Maxi
C7	1	15020102	Cover Slide Door Rear Right Caddy 5 Maxi ASSY
	1	15020095	Fitting Kit Steelbracket Set SF Caddy 5 Maxi


■
●
⬡
▲
15010236 Handle Assy

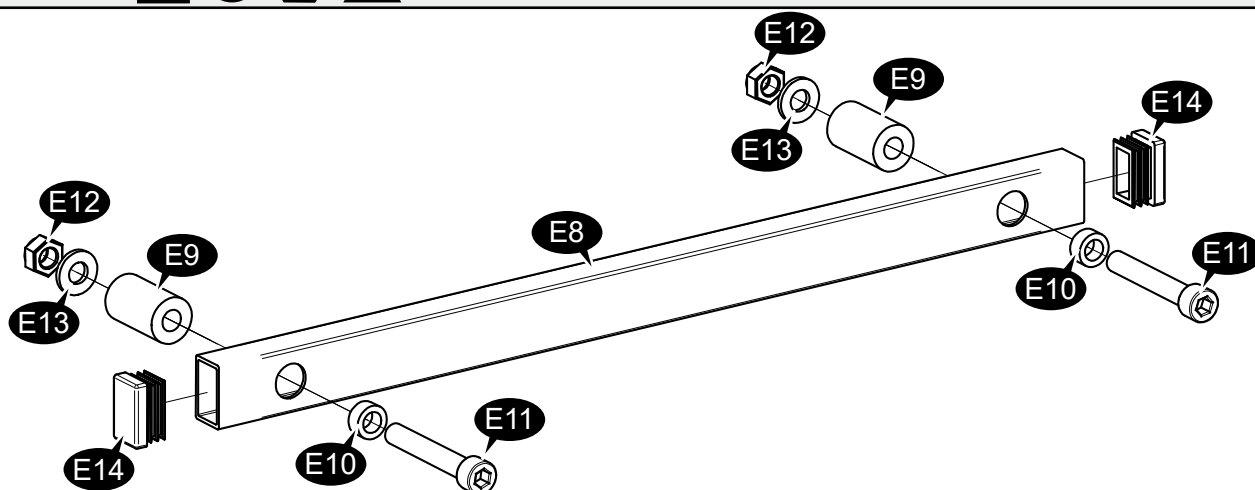

15010236 Handle Assy

Item	Quantity	Part Number	Description
E8	1	15009441	Handle Tube 25x15x286
E9	2	15009442	Spacer Ø8,3x18x30 Nylon Black
E10	2	15009443	Spacer Ø8,1x13x6mm Galv
E11	2	15009444	Screw M8x50 Cylinderh Hex
E12	2	8 NMU	Mutter M8 Nyloc DIN985
E13	2	8,4x17x2	M8 Washer, DIN 125
E14	2	15009438	End Plug Tube 25x15 Inside

15020613 Floor Extension Kit maxi Original and Loyds Asymmetric Sep 1SLD&2SLD

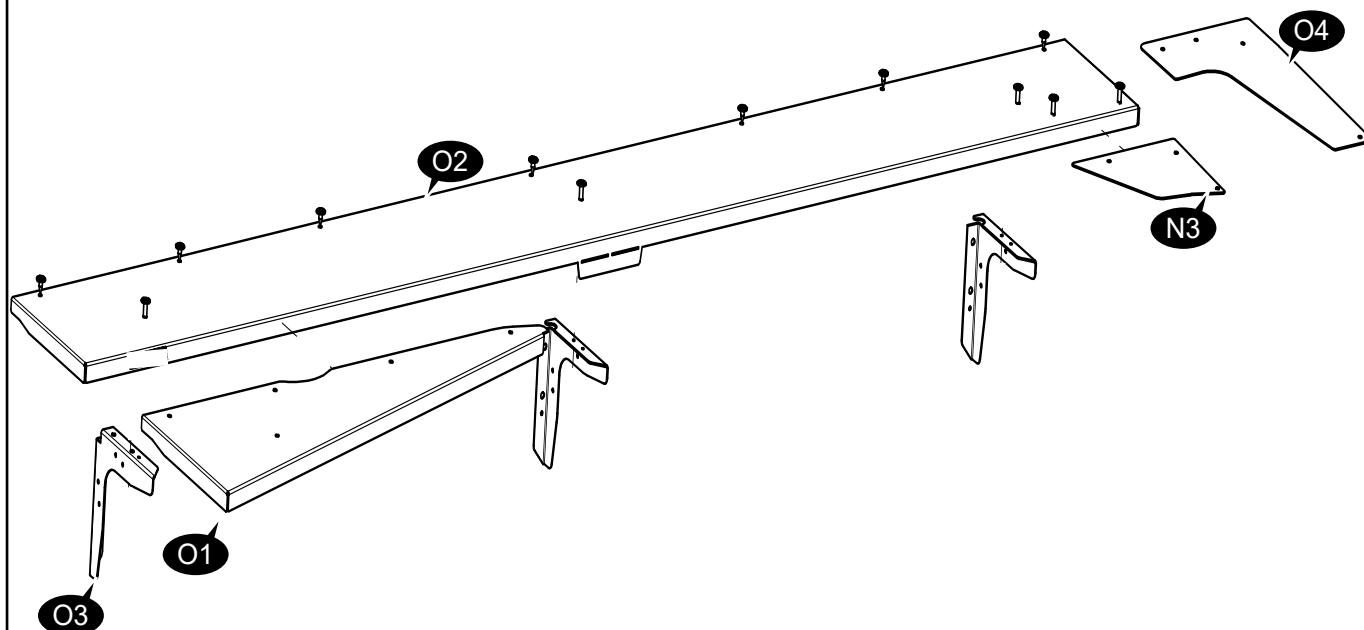


Item	Quantity	Part Number	Description
O1	1	15020612	Floor Extend SF Asy Loyds Sep Caddy 5
O2	1	15020093	Floor Extend Orig Sep Caddy 5 2021 2SLD
O3	3	15020092	Bracket Floor Extend 120mm
N3	1	15018470	Bracket Extend Orig Sep Caddy 1SLD Add
O4	1	15020614	Bracket Extend Loyds Sep Caddy 5 1SLD
	1	15020611	Fitting Kit Floor Extend Set Caddy 5




15020657 Floor Spacer Set Short and Maxi 1SLD&2SLD

Vehicle Without Wooden Floor

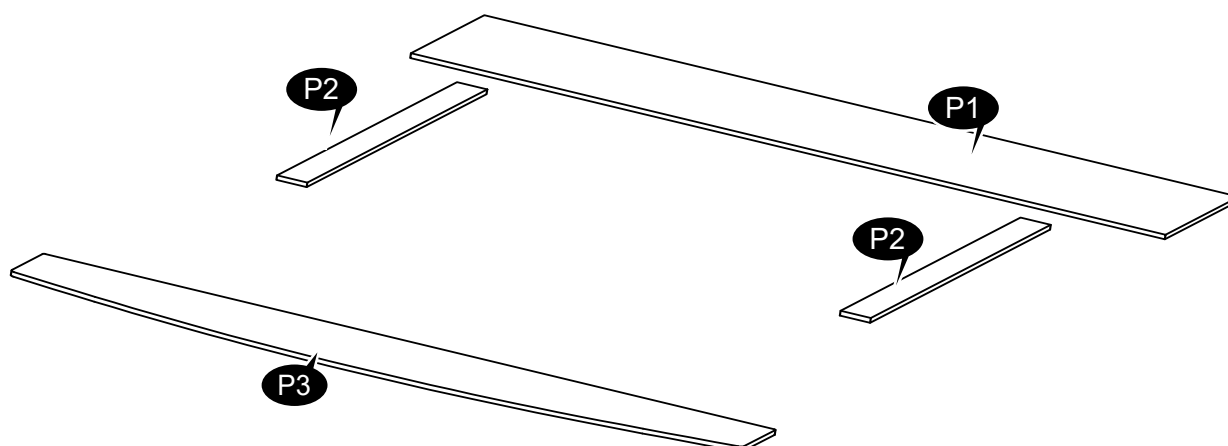


Item	Quantity	Part Number	Description
P1	1	15020656	Wooden Spacer SF 9mm Front Caddy
P2	2	15020639	Wooden Spacer SF 600x50x9mm
P3	1	15020638	Wooden Spacer SF 9mm Rear Caddy

15020703 Side Panel Set SF Caddy 2SLD PP

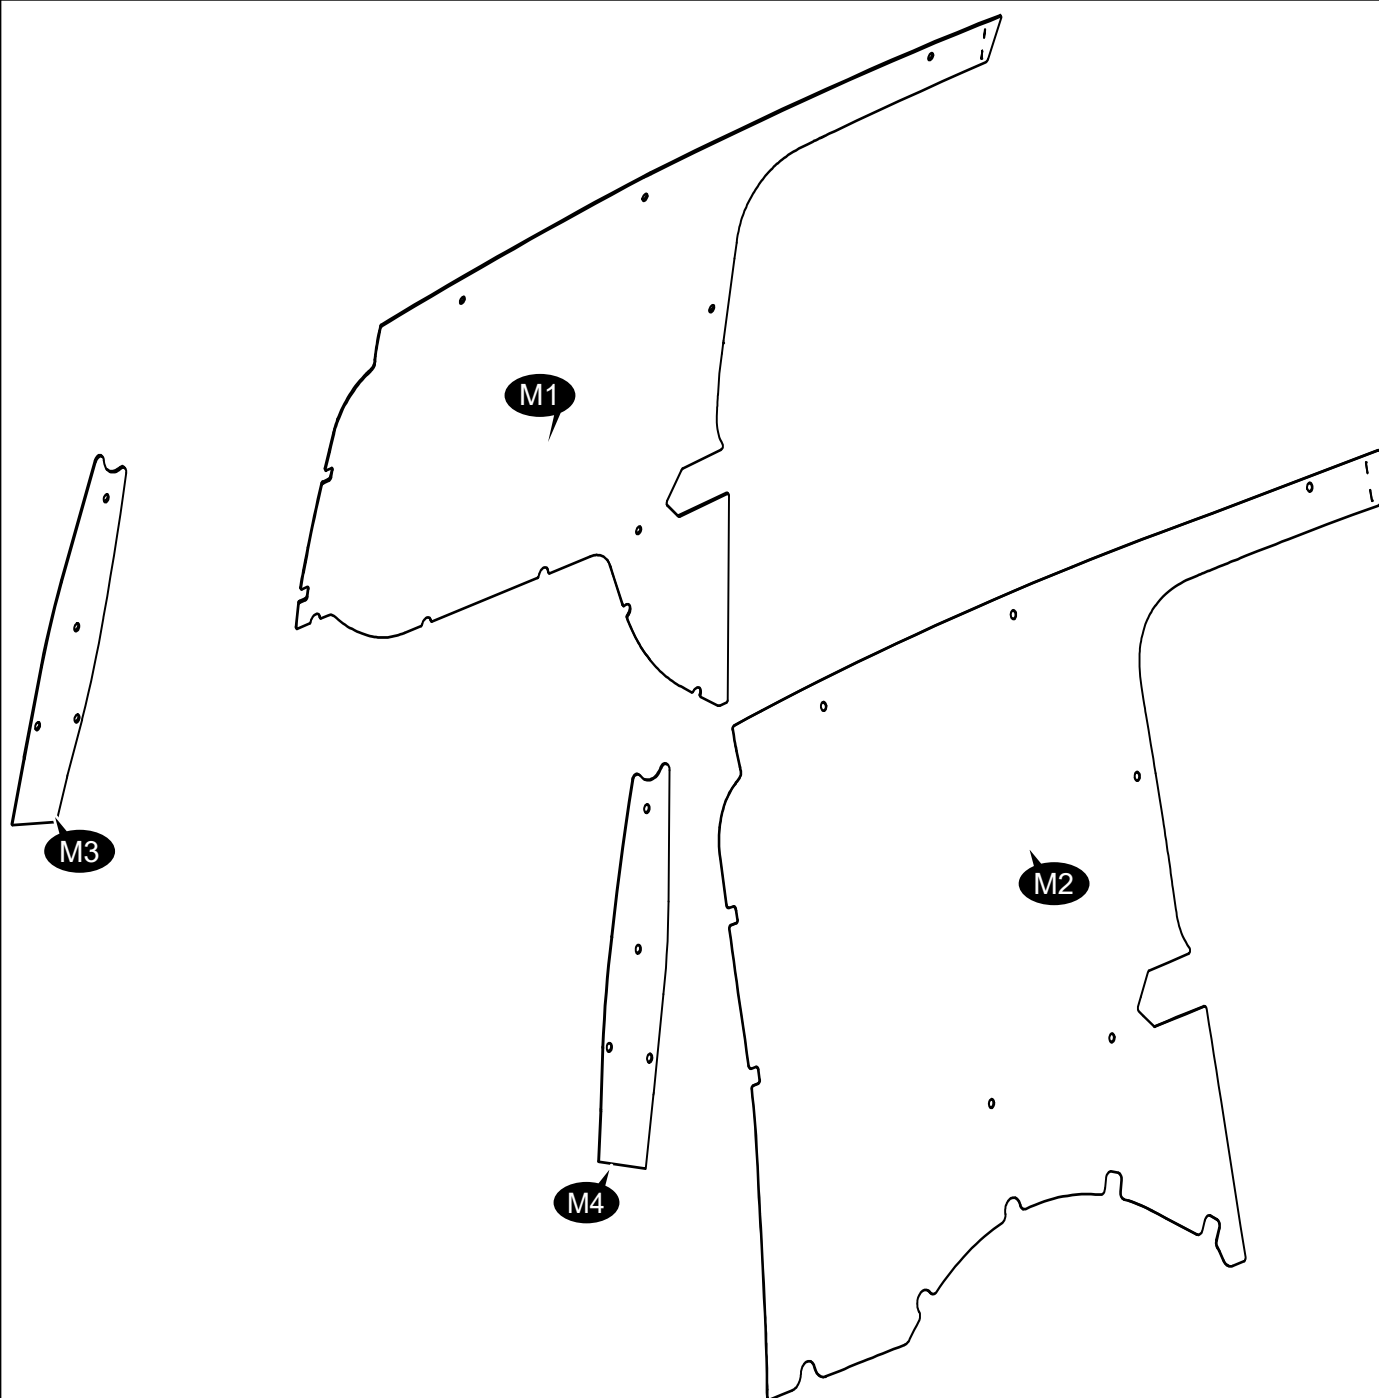


Item	Quantity	Part Number	Description
M1	1	15019084	Rear right panel
M2	1	15019085	Front left panel
M3	1	15020701	Panel SF D-pilar right
M4	1	15020702	Panel SF D-pilar left
	1	15020708	Fitting Kit Side Panel 2SLD

15020705 Side Panel Set SF Caddy 1SLD PP

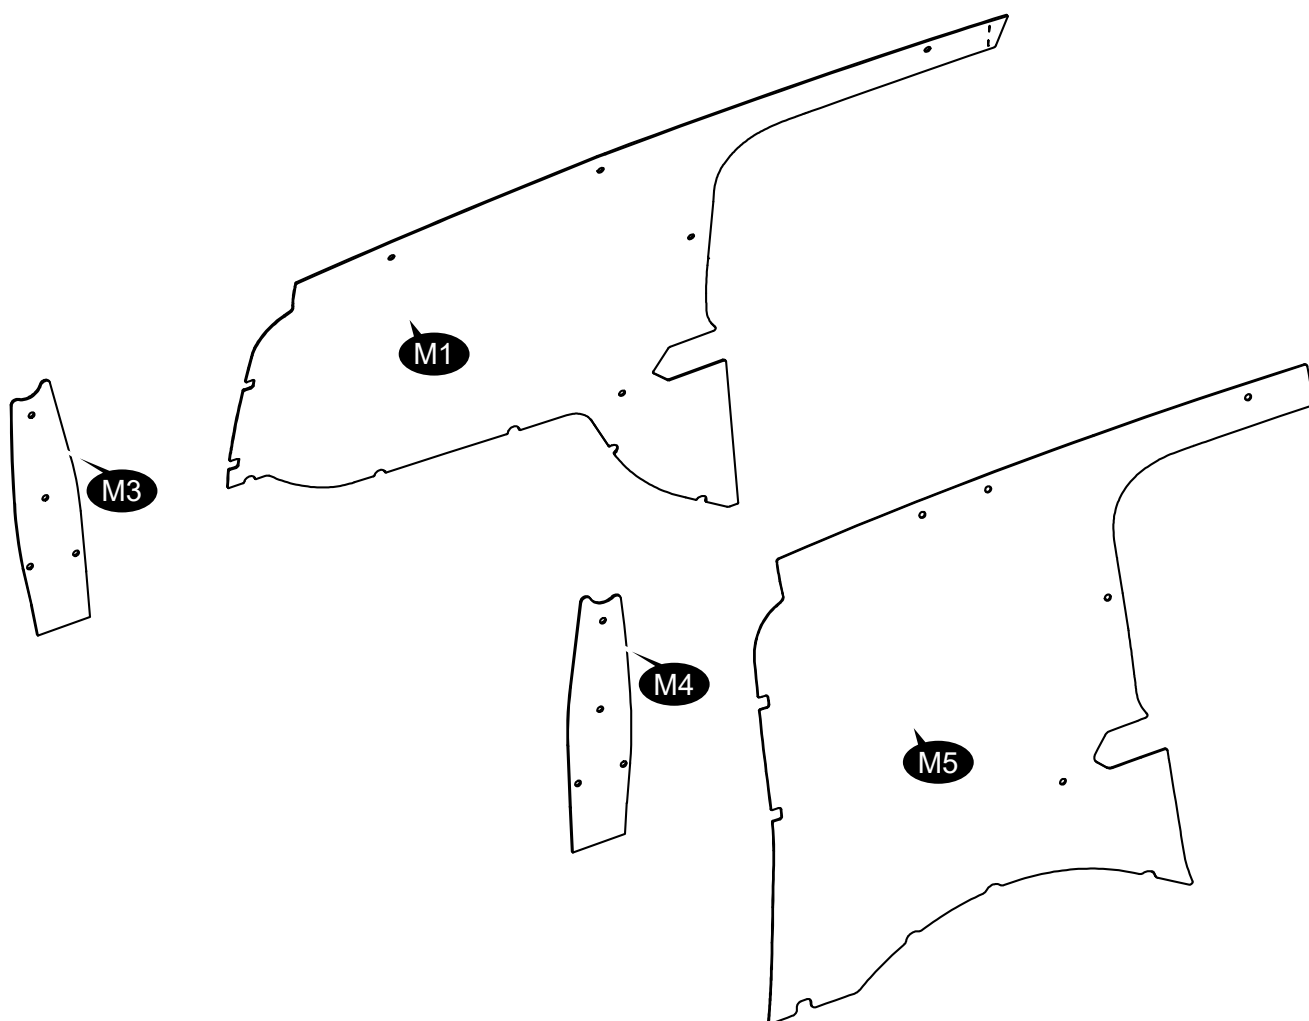


Item	Quantity	Part Number	Description
M1	1	15019084	Rear right panel
M5	1	15019086	Front left panel
M4	1	15020702	Panel SF D-pillar left
M3	1	15020701	Panel SF D-pillar right
	1	15020704	Fitting Kit side panel 1SLD

15020706 Side Panel Set SF Caddy Maxi 1SLD PP


















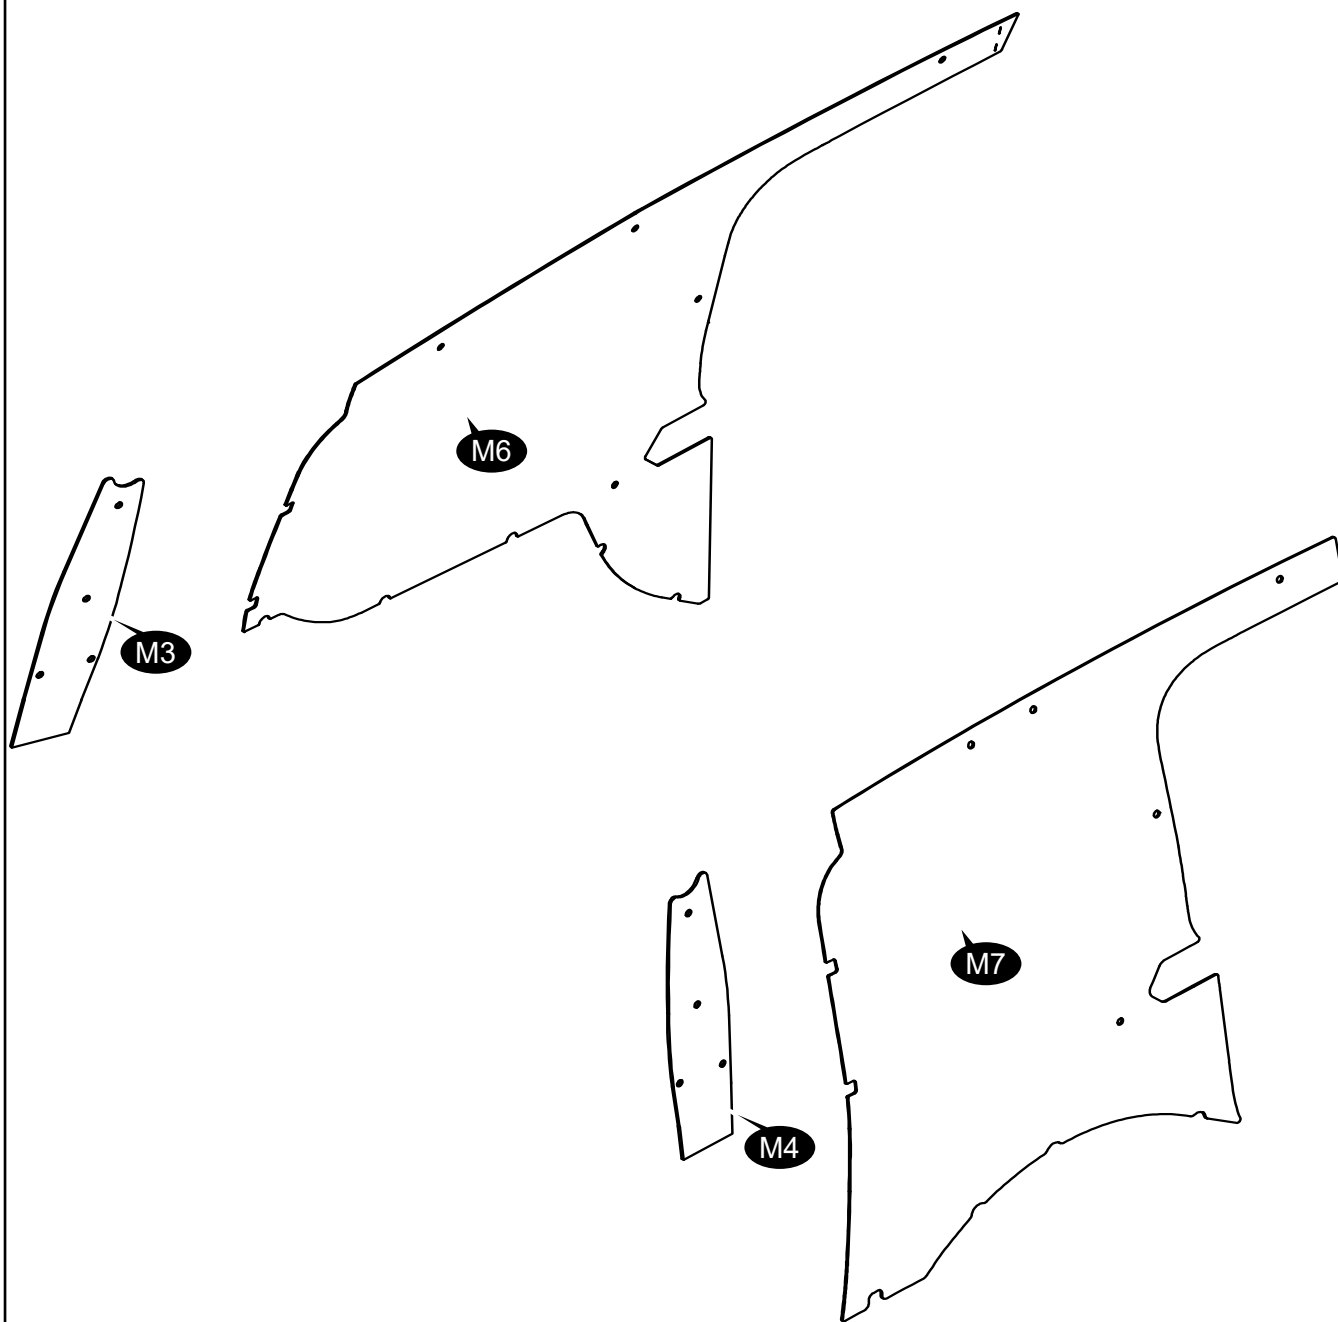


Item	Quantity	Part Number	Description
M6	1	15020194	Maxi Side panel right side
M7	1	15020195	Maxi Side panel left side 1 SLD
M3	1	15020701	Panel SF D-pilar right
M4	1	15020702	Panel SF D-pilar left
	1	15020709	Fitting Kit Maxi side panel 1SLD

15020707 Side Panel Set SF Caddy Maxi 2SLD PP

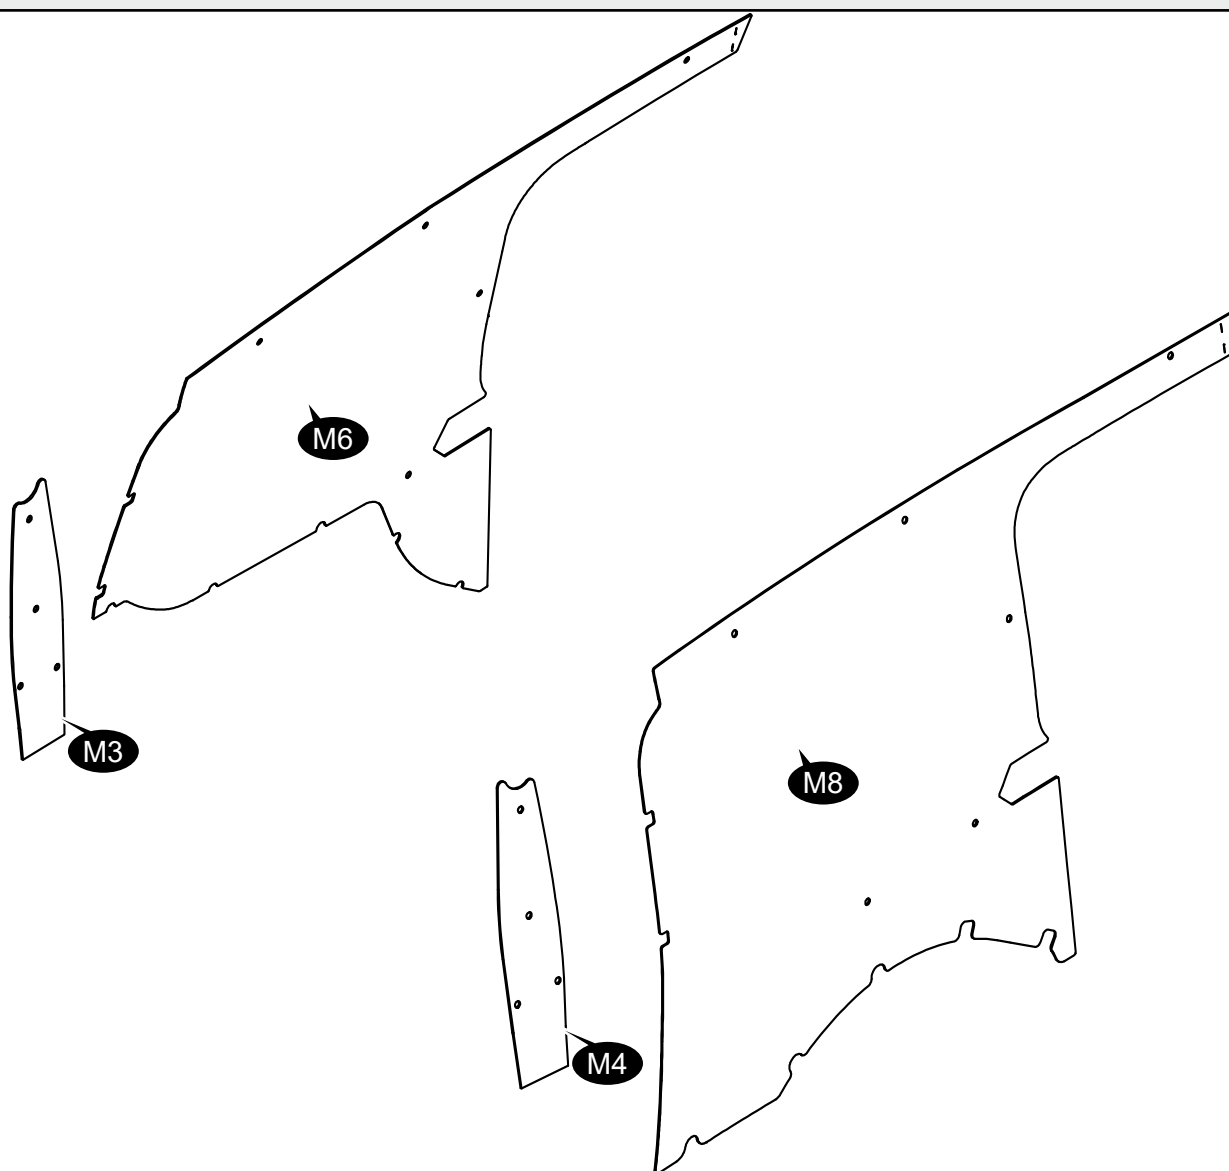


Item	Quantity	Part Number	Description
M6	1	15020194	Maxi side panel right side 2SLD
M8	1	15020196	Maxi side panel left side 2SLD
M3	1	15020701	Panel SF D-pillar right
M4	1	15020702	Panel SF D-pillar left
	1	15020991	Fitting Kit Maxi Side Panel 2SLD

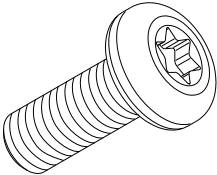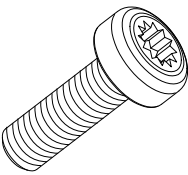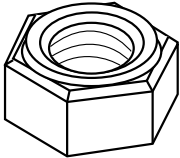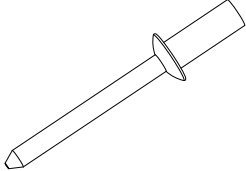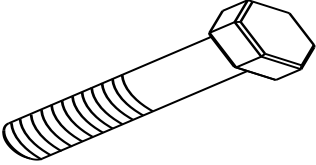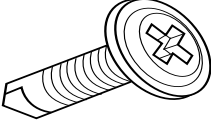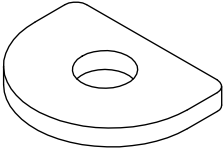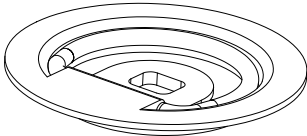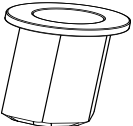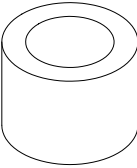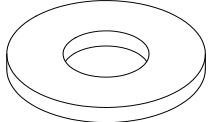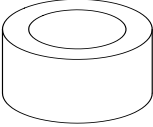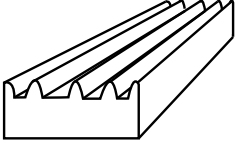Fitting Kit		
F1  15003551 M6x16 TX30 pan (DIN 7985)	F2  15004443 M5x16 TX20 pan A4	F3  6 NMU M6 Self locking nut, DIN 985-8
F4  6x16 6k	F5  5x12 NSS Poprivet Steel, Black	F6  4,2x16 FL Selvborr skruer, flathode, elzn
F7  4,2x13 S Screw needle end black, flath.	F8  15004713 M8x50 screw Black Elzn	F9  4,2x16 FLS Flath. black end
F10  15016947 Screw 4,2x25 Selfdrill Counters Torx Elz	F11  15005884 Washer Latchcup for ø8	F12  15005497 Latch Cup Black Ø90 Ø12x15 1000Kp
F13  150050527 M5 Popnut Hex-body	F14  15001584 Distansehylse D20 d13 h15	F15  5,3x15x1,2 Syrefast Skive
F16  13x20x6,4	F17  6x80 6K Hex-head bolt elzn	F18 L=1600mm  36.721004 Window rubber profile

Fitting Kit

1.A


15008180

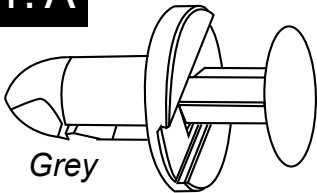

Grey

2.A


15019278

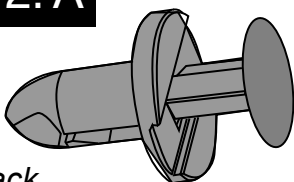

Black


3.A

15003895

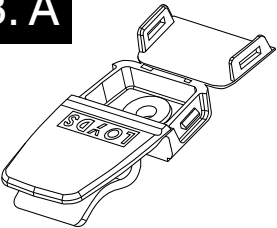


4.A

4,2x16 FLS

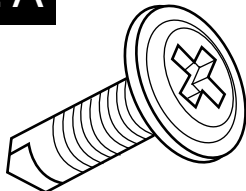


5.A

15013001

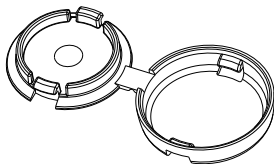


6.A

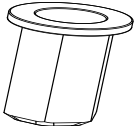


150050527 M5 Popnut
Hex-body

1. ■ ●

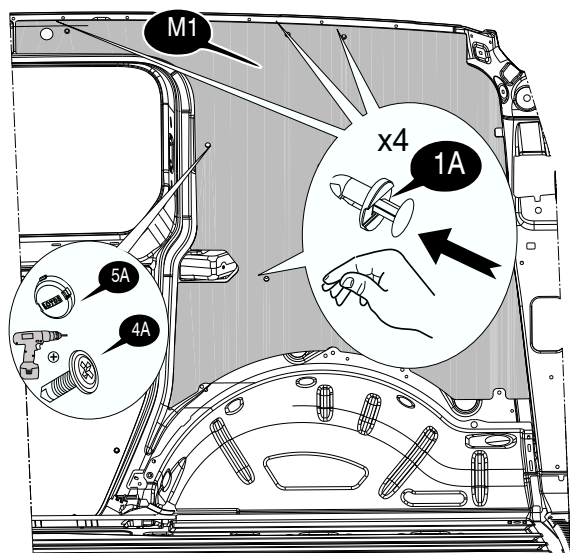


2. ■ ●

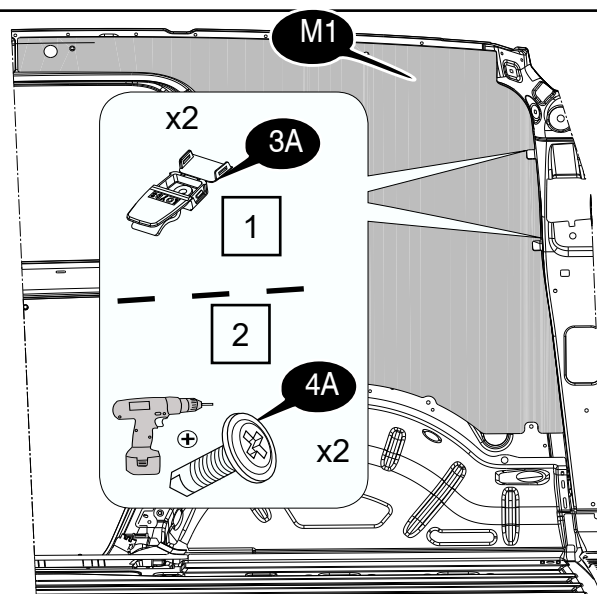


3. ■ ● ◆ ▲


See picture 4 and 5

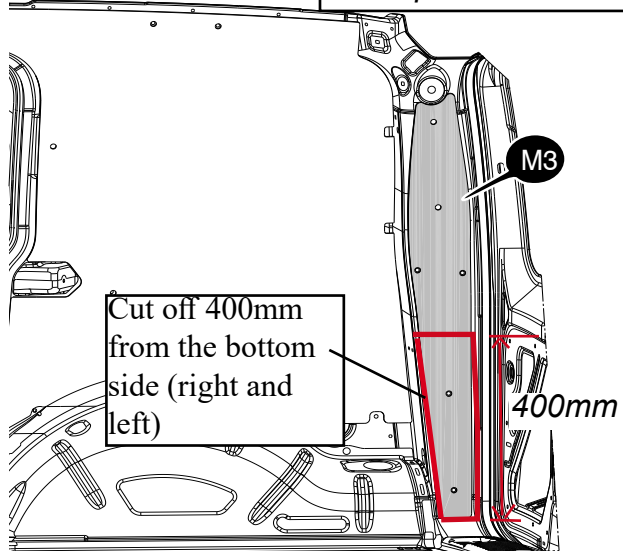


4. ■ ● ◆ ▲

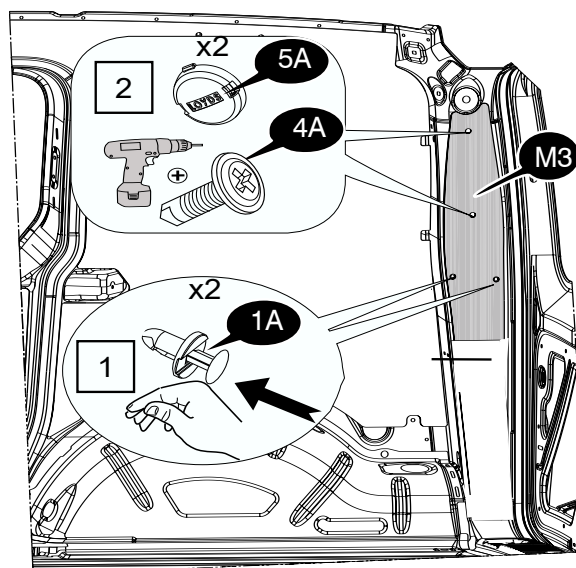


5. ■ ● ◆ ▲

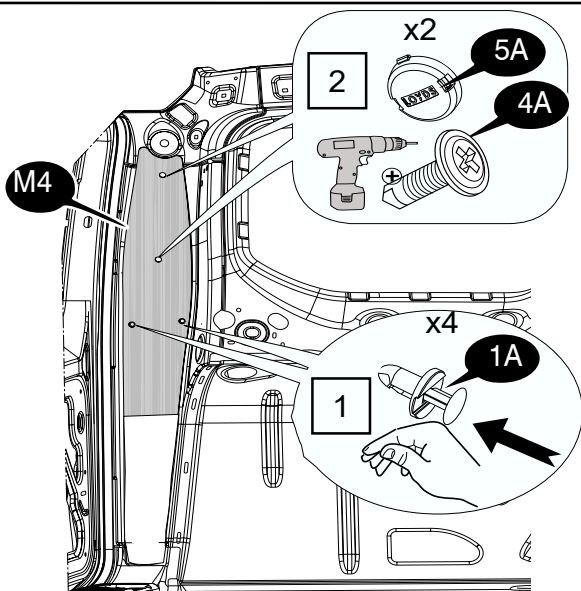


6. ■ ● ◆ ▲

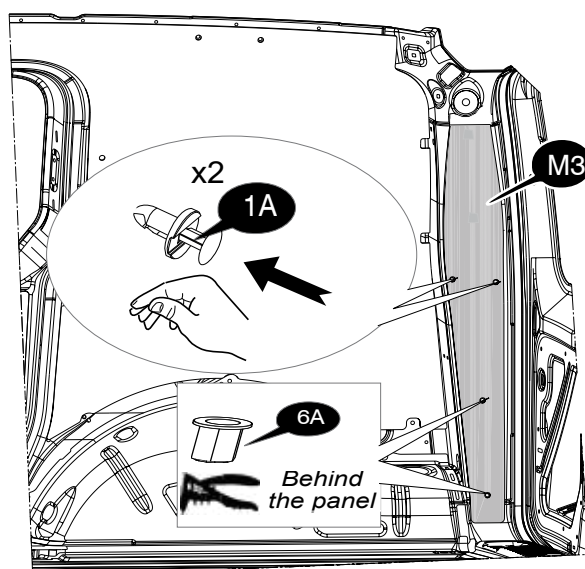


7. ■ ● ◆ ▲

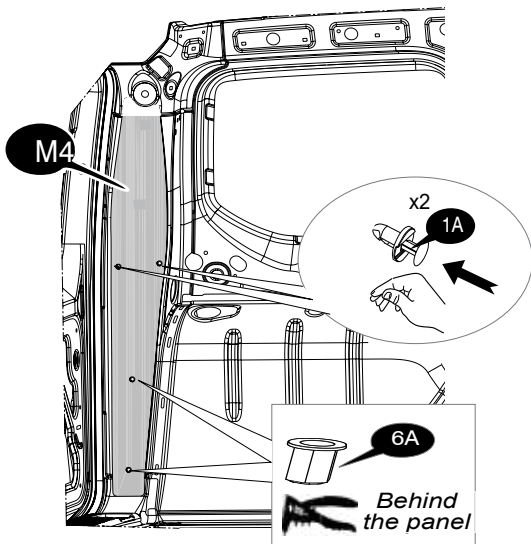


8. ■

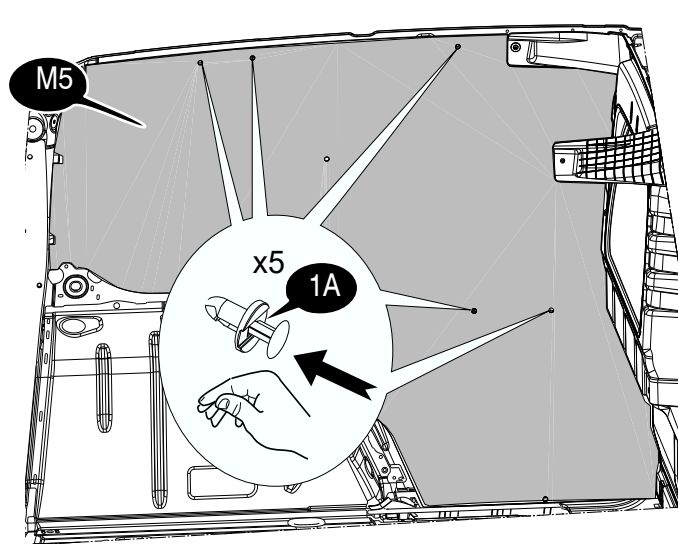


9. ■

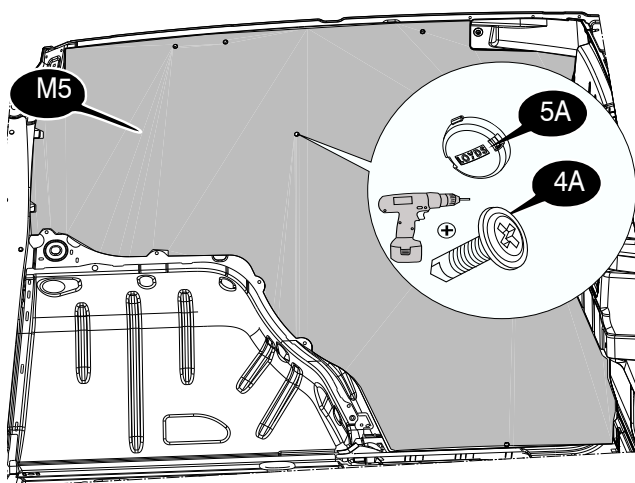


10. ■

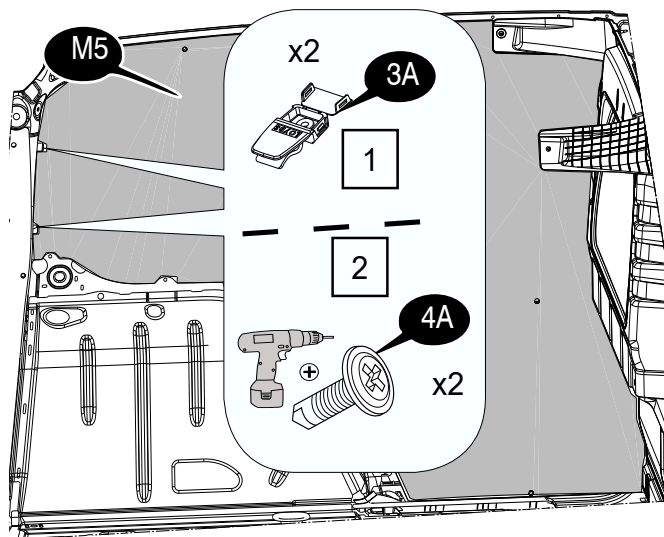


11. ●

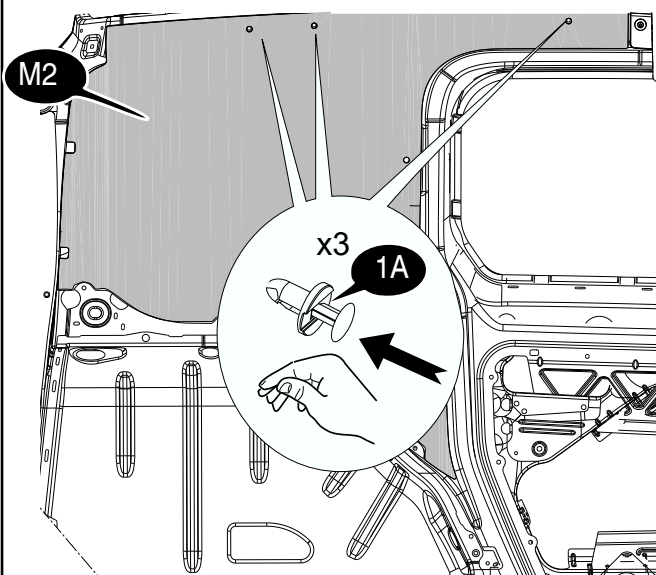


12. ●

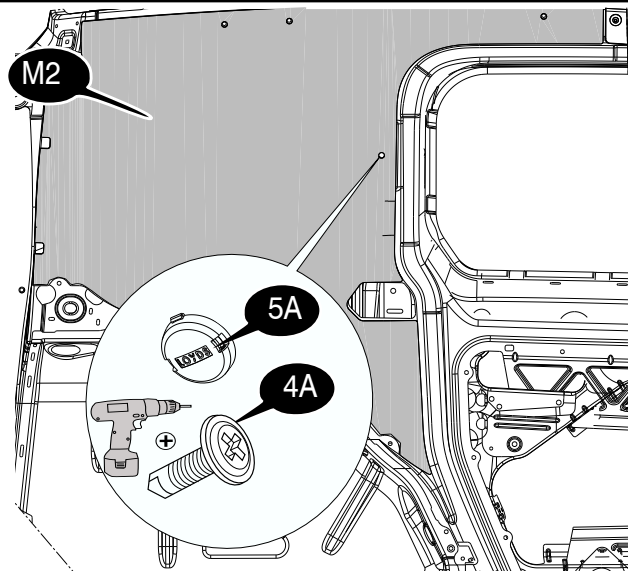


13. ●

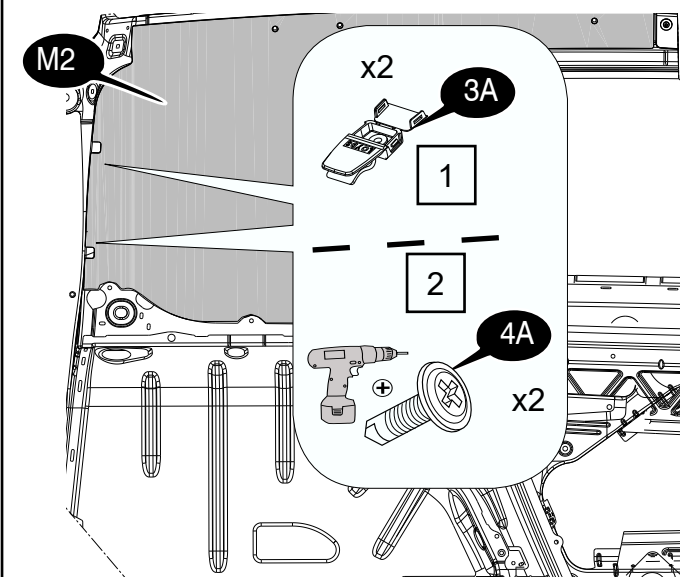


14. ● ▲

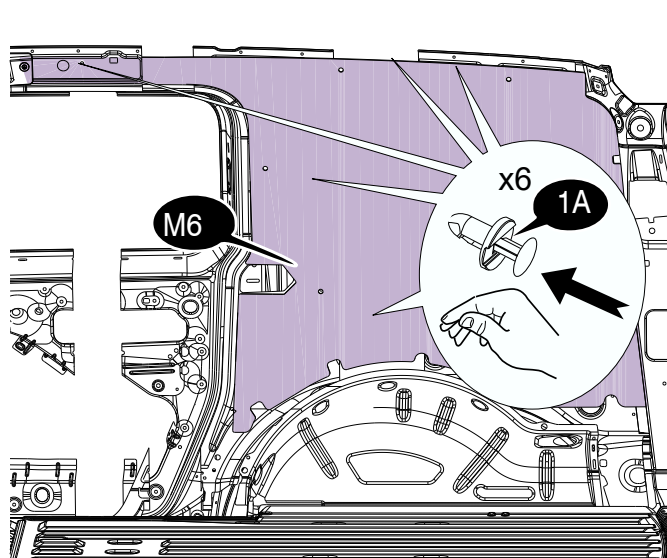


15. ● ▲

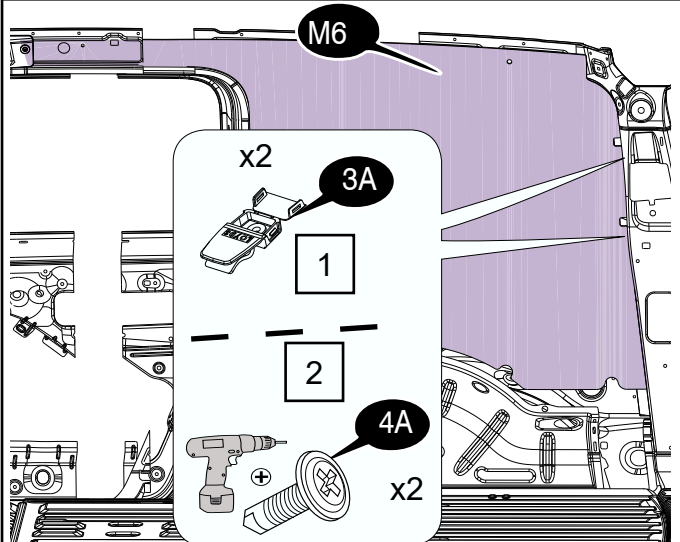


16. ●

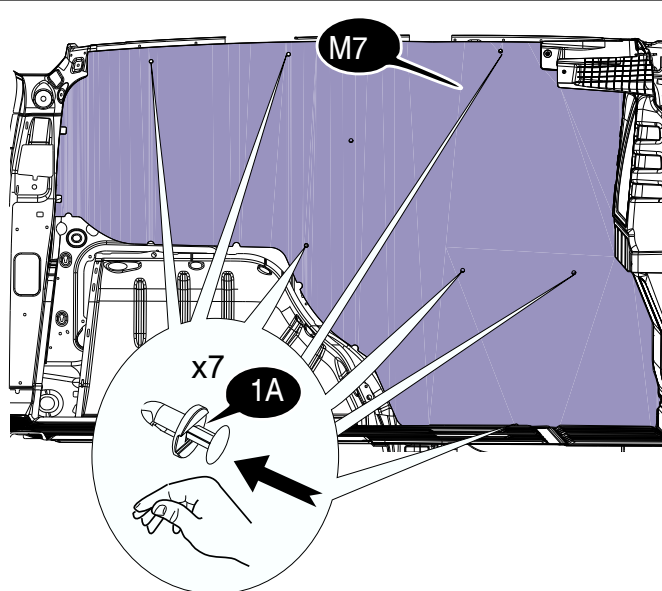


17. ●

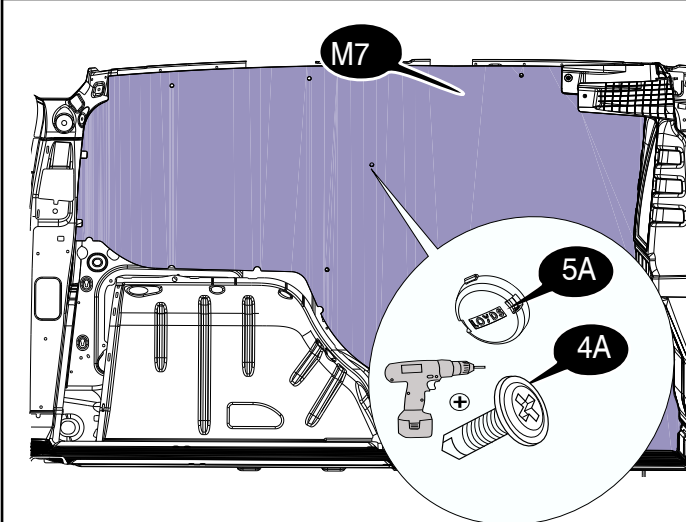


18. ●

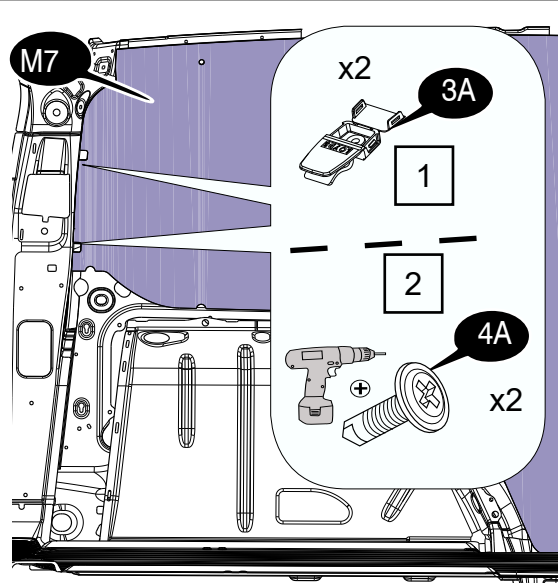

19. ▲

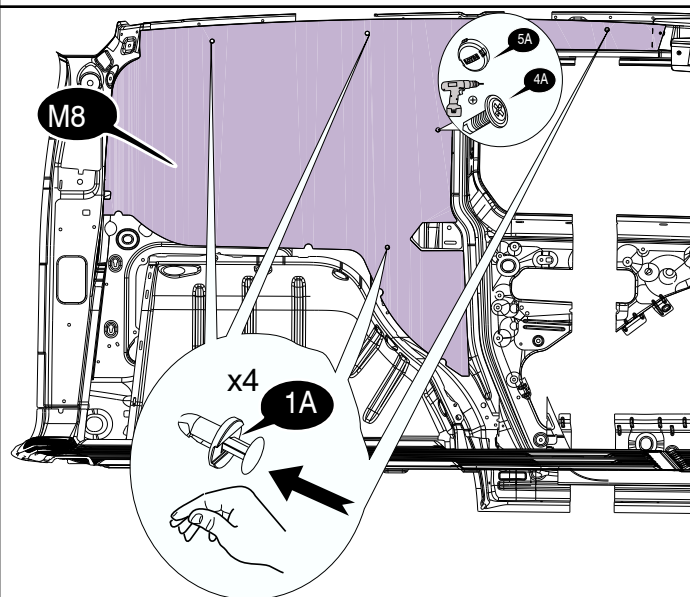


20. ▲

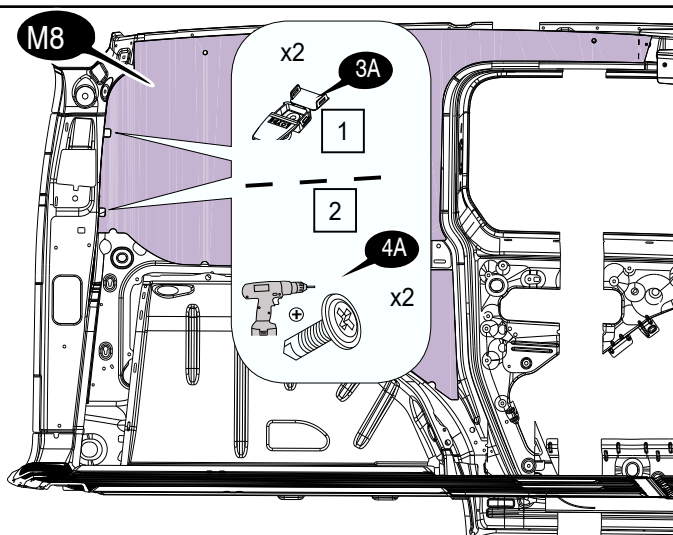

21. ■ ● ◆ ▲

L&R

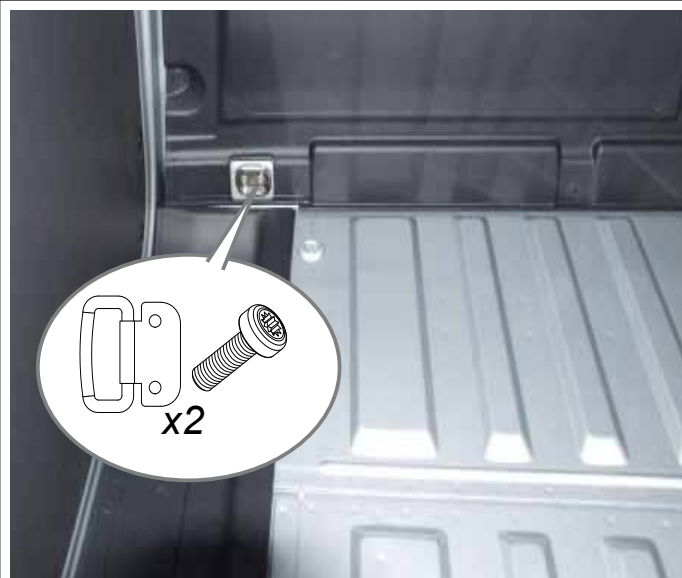


22. ■ ● ◆ ▲

L&R




23. ■ ● ◆ ▲

L&R

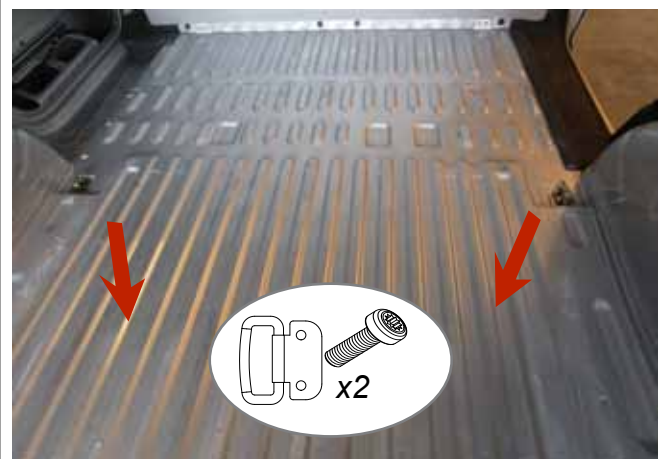

24. ■ ● ◆ ▲

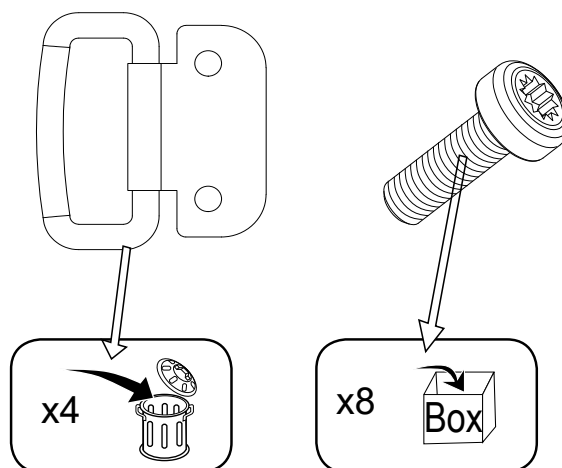

25. ■ ● ◆ ▲




26. ■ ● ◆ ▲




27. ■ ●

L&R

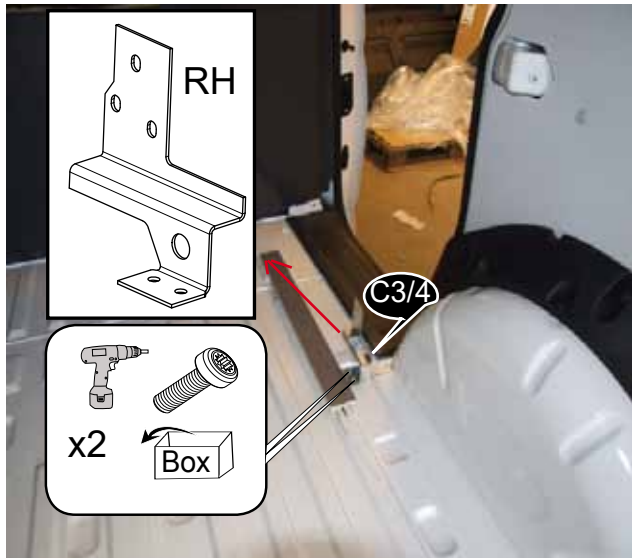


28. ◆ ▲

L&R

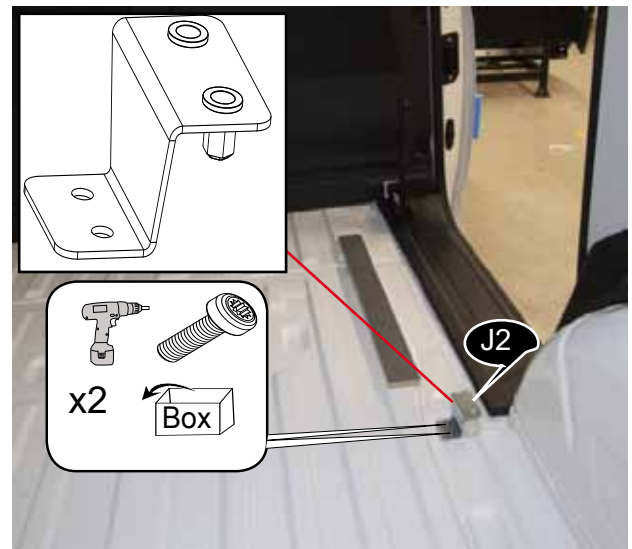


29. ■ ● ◆ ▲


L&R

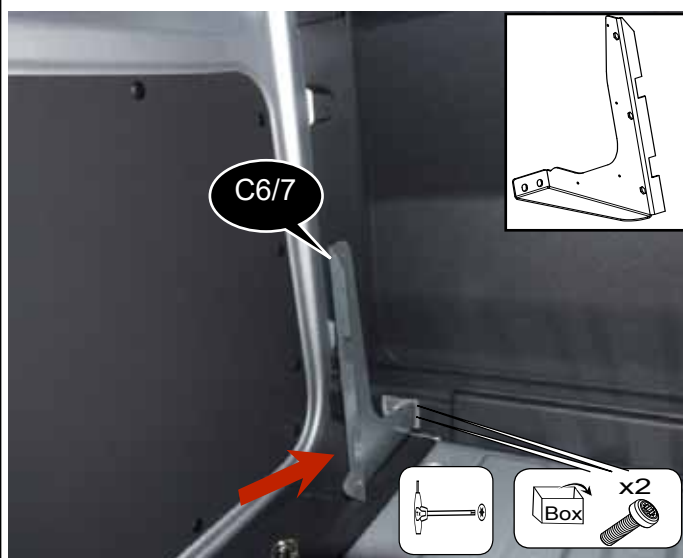


30. ■ ●

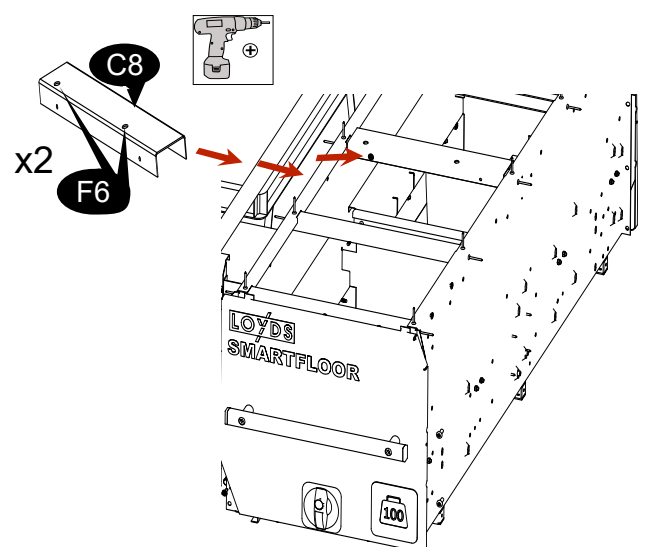

31. ■ ● ◆ ▲

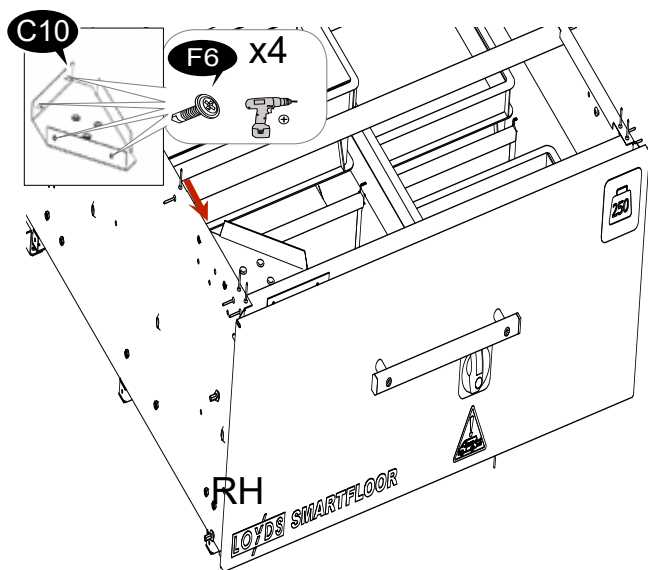

32. ■ ● ◆ ▲

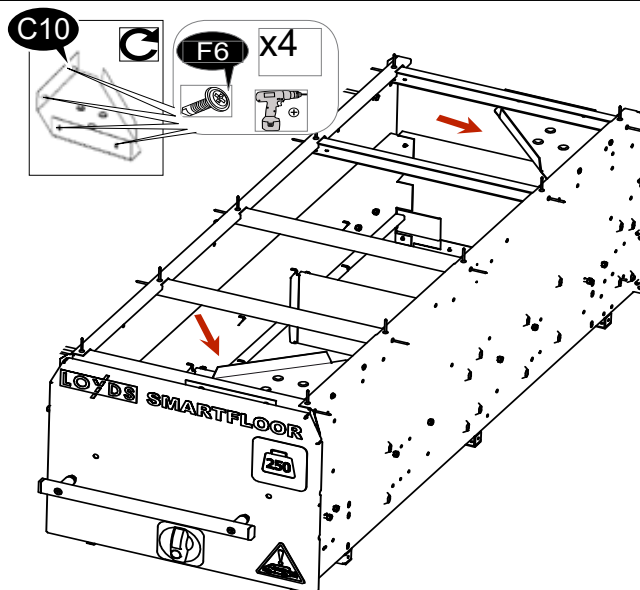

33. ■ ● ◆ ▲




34. ■ ● ◆ ▲

L&R



35. ■ ● ◆ ▲

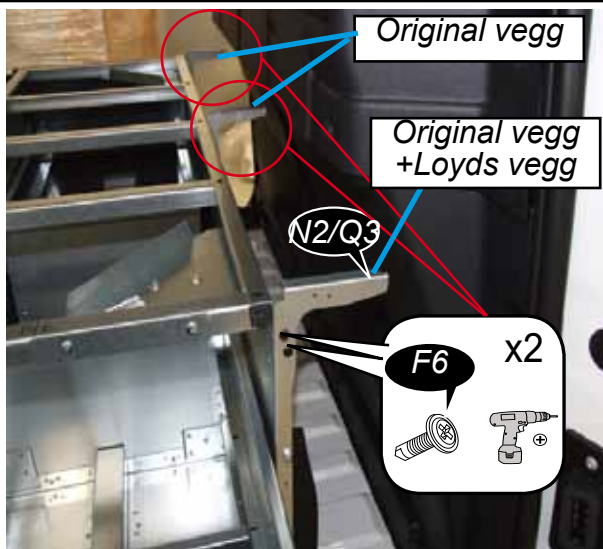


36. ■ ● ◆ ▲




37. ■ ●

L&R

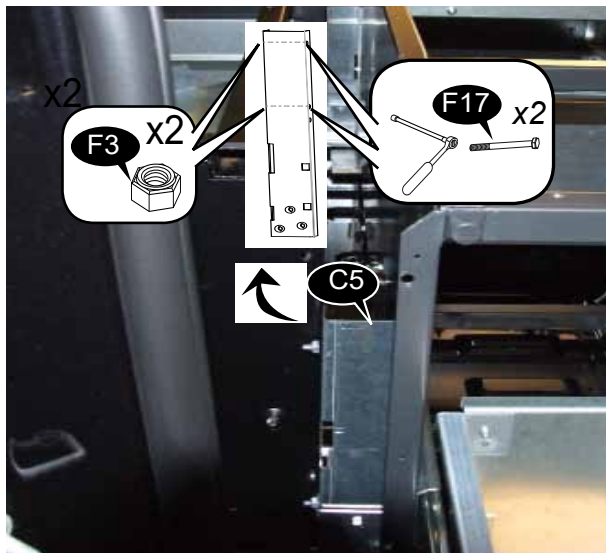


38. ■ ●

L&R

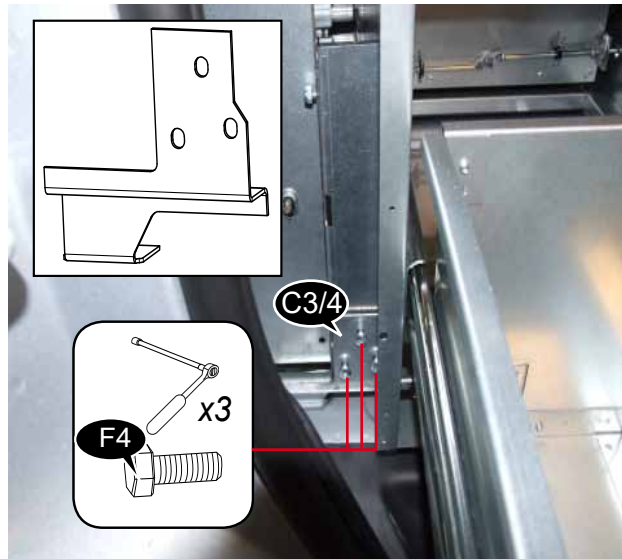


39. ■ ▲

L&R

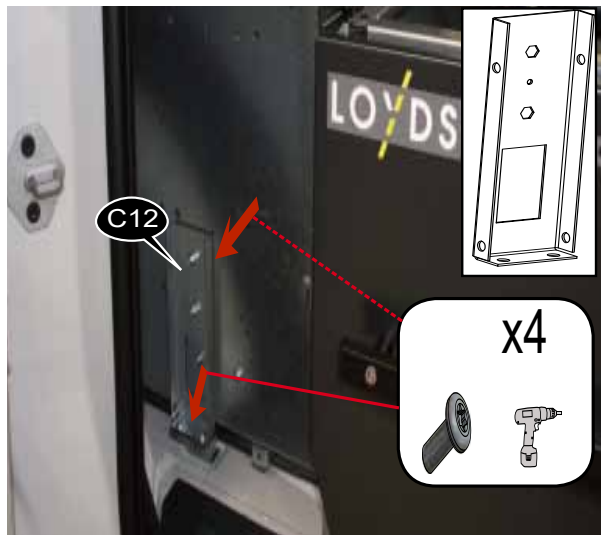


40. ■ ▲

L&R

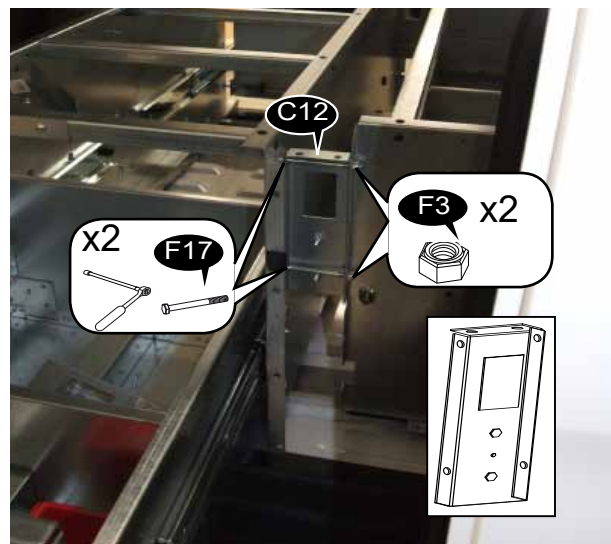


41. ■ ●

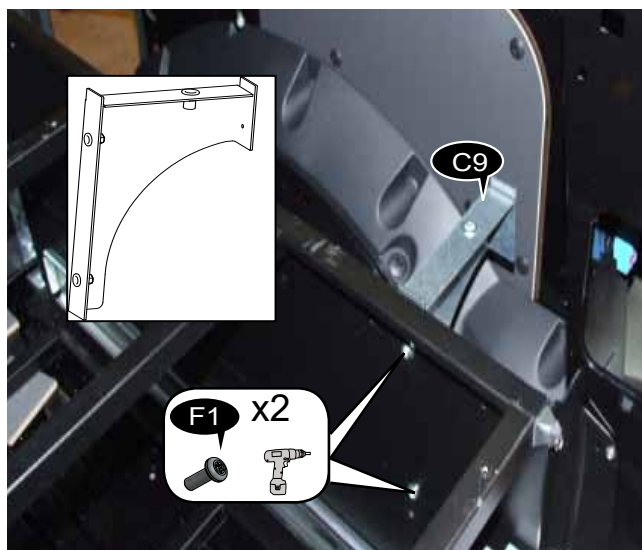


42. ■ ▲

See picture 41

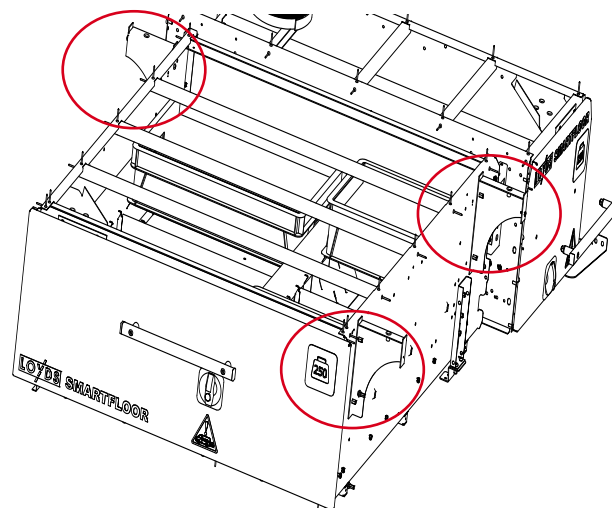


43. ■ ●

L&R

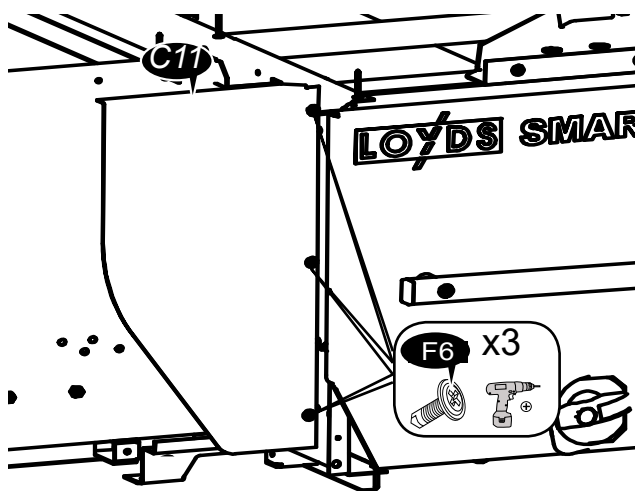


44. ■ ● ◆ ▲

L&R

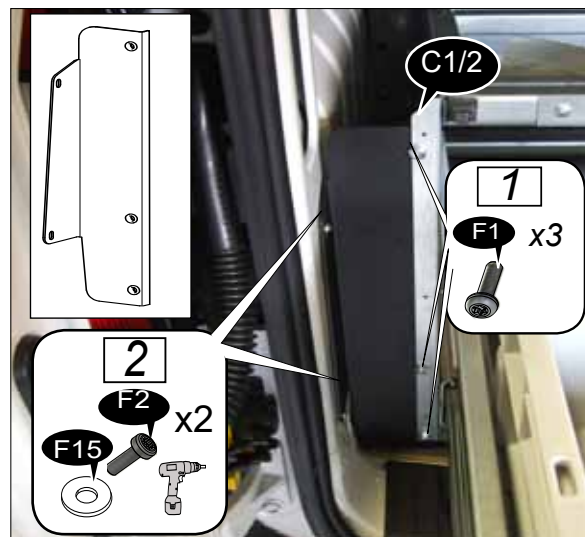


45. ◆ ▲


L&R

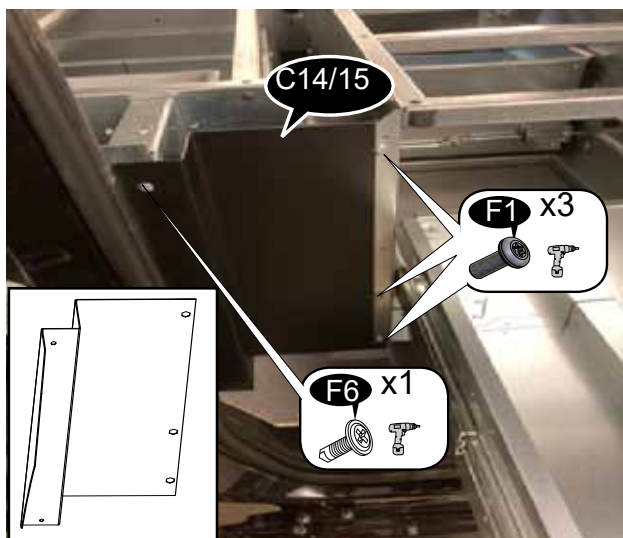


46. ■ ●

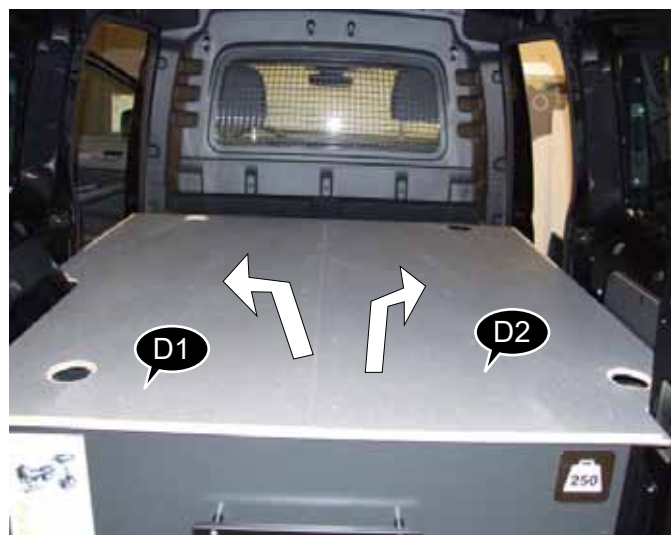

47. ◆ ▲

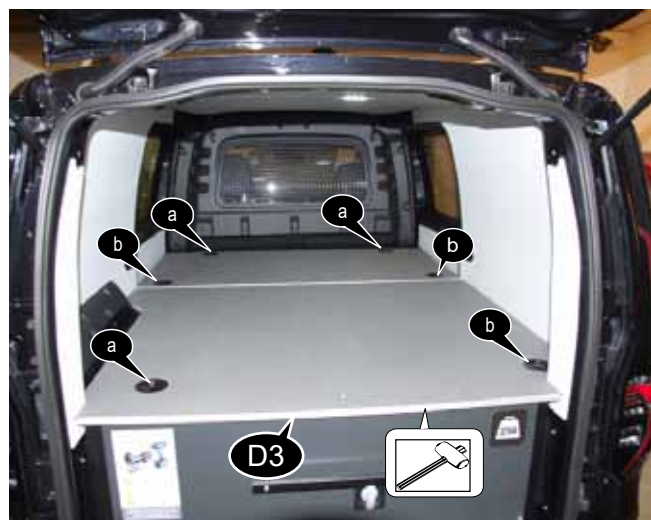


48. ◆ ▲

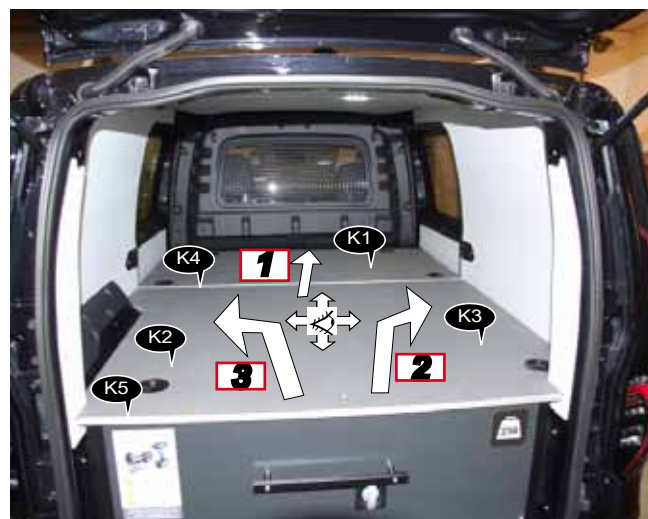


48.A  



49.B    

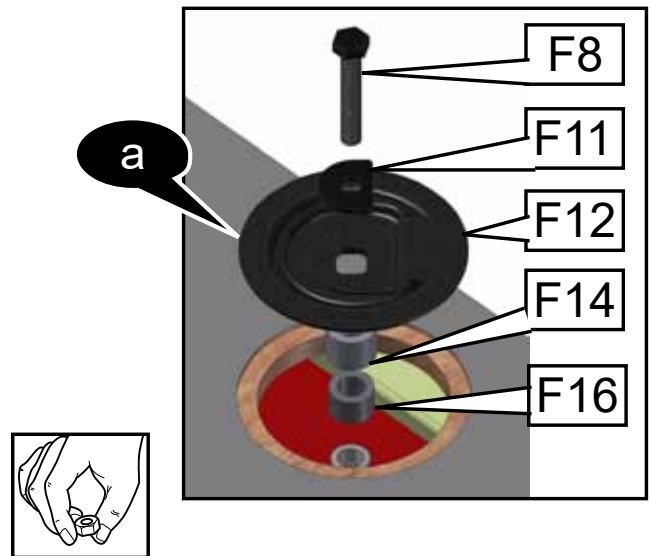


49.C    

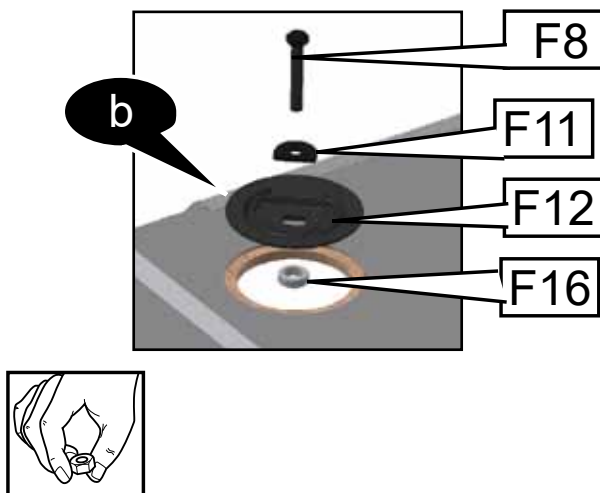


50.    








51.  

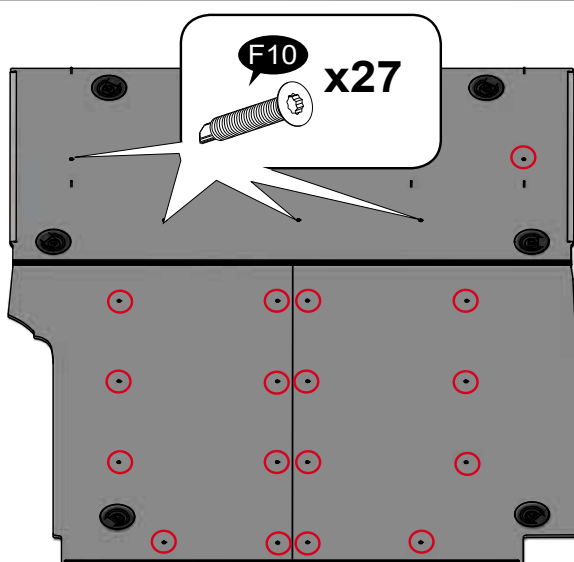

52.  

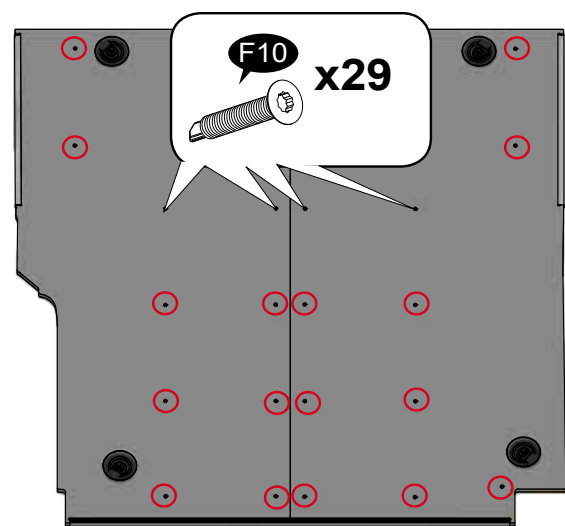

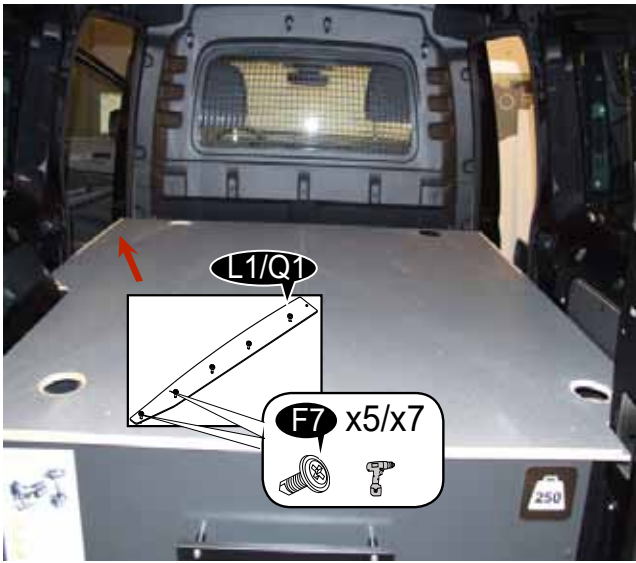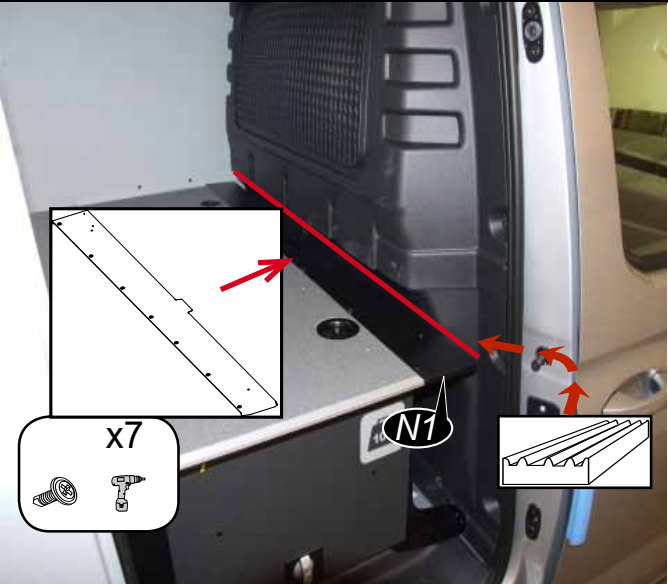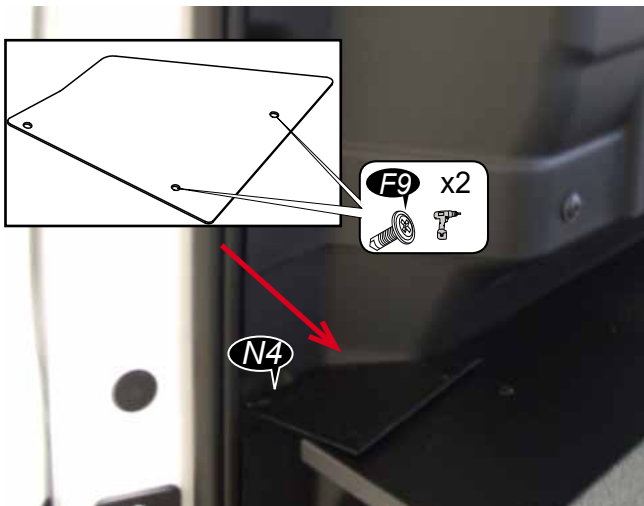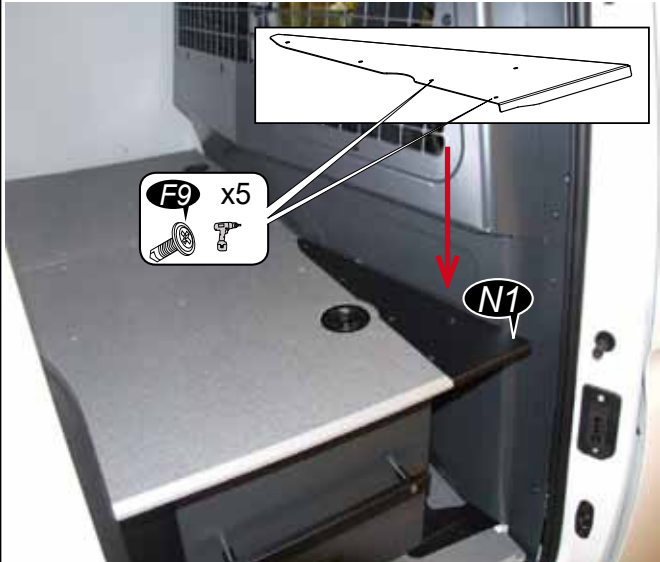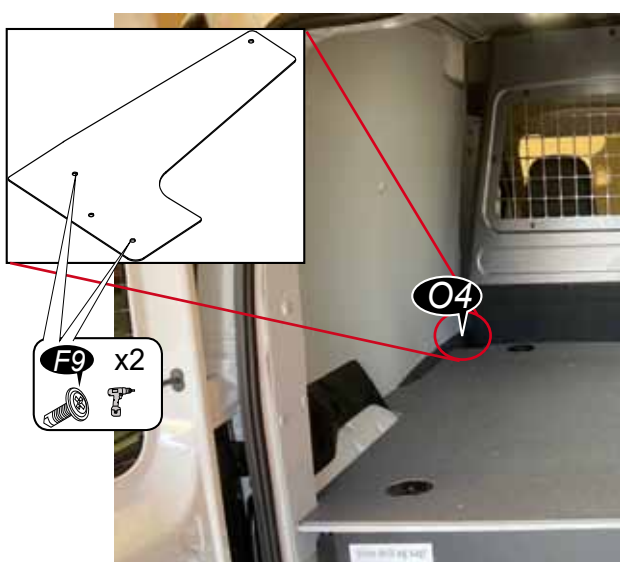52.   1 SLD  L1/Q1 F7 x5/x7	53. Original vegg
54.     Original vegg  x7 N1	55.   Original vegg  F9 x2 N4
56.     Loyds Asym-vegg  F9 x5 N1	57.   Loyds Asym-vegg  F9 x2 O4