

SMARTFLOOR 2020

VW T6 D-Cab Installation Manual



Contents




-  Left hand side
-  Right hand side
-  Left and right hand side
-  With heater

Revision Record						
Rev nr	Date	Page	Picture	Update	New	Deleted steps


Recomended attractrion moments screws:

4,2mm Selfdrilling: 3,6 NM
 6mm: 6 NM
 8mm: 10 NM
 10mm: 42 NM

Tools

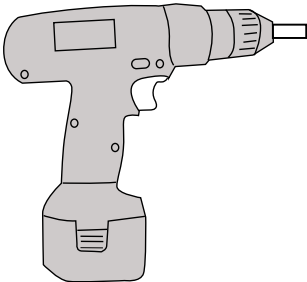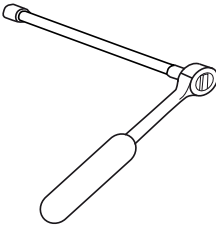
	 Bits PH2 T20 T25 T30 T45 12-kant 10 mm 	10,13 mm 	10,13, 16, 17 mm 

15022550_A Kit Complete T6 D-cab SF2020

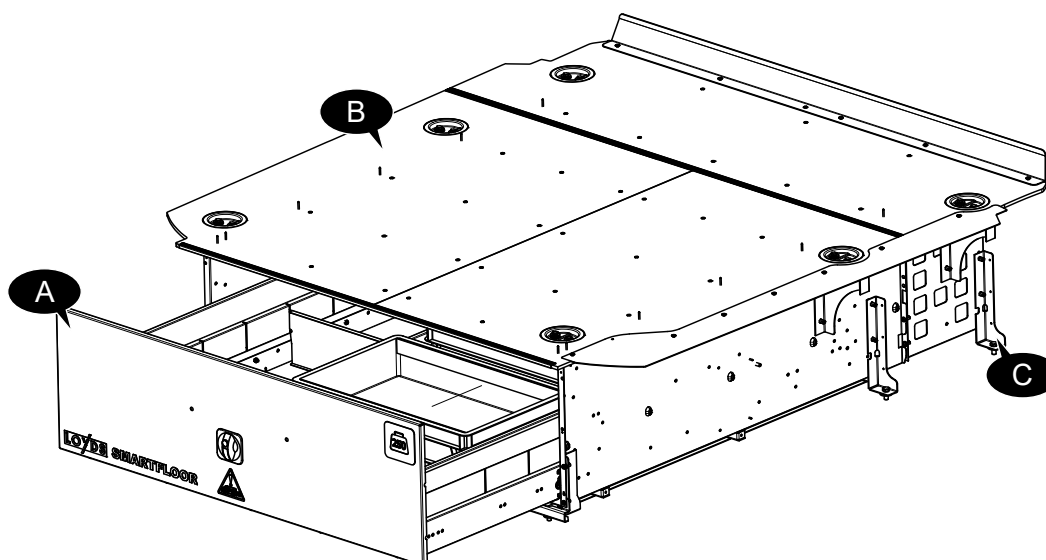


Item	Quantity	Part Number	Description
A	1	15022501	Rear Drawer RD W1140 L1200
B	1	15023497	Floor Kit T6 D-Cab SF2020
C	1	15022552	Steelbracket Set T6 D-Cab SF2020 Long

15023497_A Floor Kit T6 D-cab SF2020

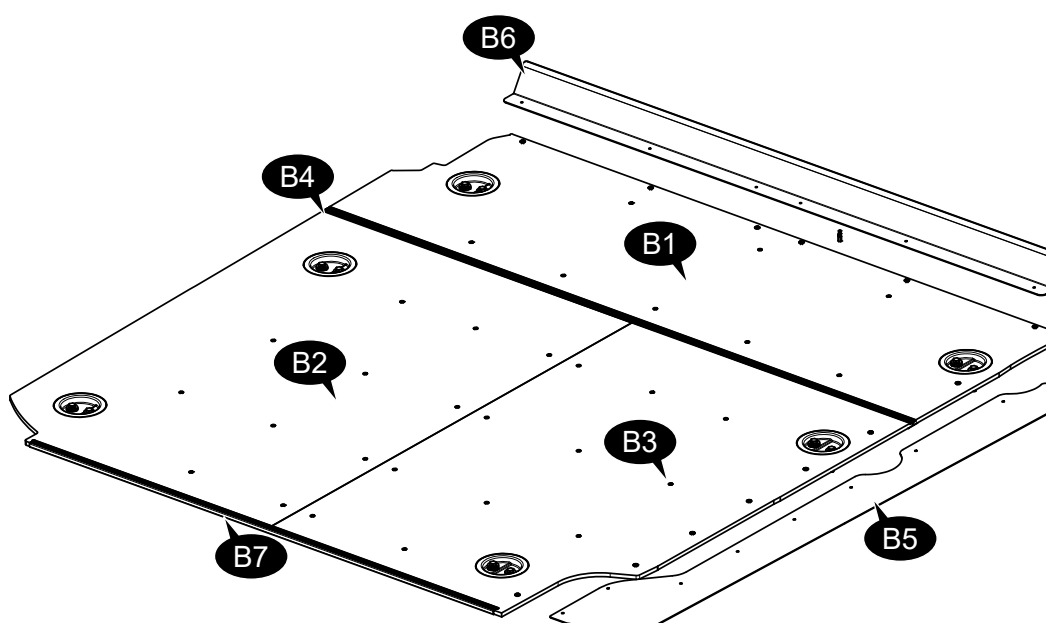


Item	Quantity	Part Number	Description
B1	1	15022554	Front Floor 9mm T6 D-cab SF2020
B2	1	15022557	Floor Left T6 D-Cab SF2020
B3	1	15022556	Floor Right T6 D-Cab SF2020
B4		15022757	H-profile 9mm L=1596
B5		15023495	Floor Extend Right Veh wo Heater T6 D-Cab SF2020
B6		15014503	Front Air Circulation Angle T6 D-cab
B7		15022754	U-profile 9mm L=1260
		15023496	Fitting Kit Floor Set T6 D-Cab SF2020

15014509 Kit Complete T6 D-cab Se w Heater












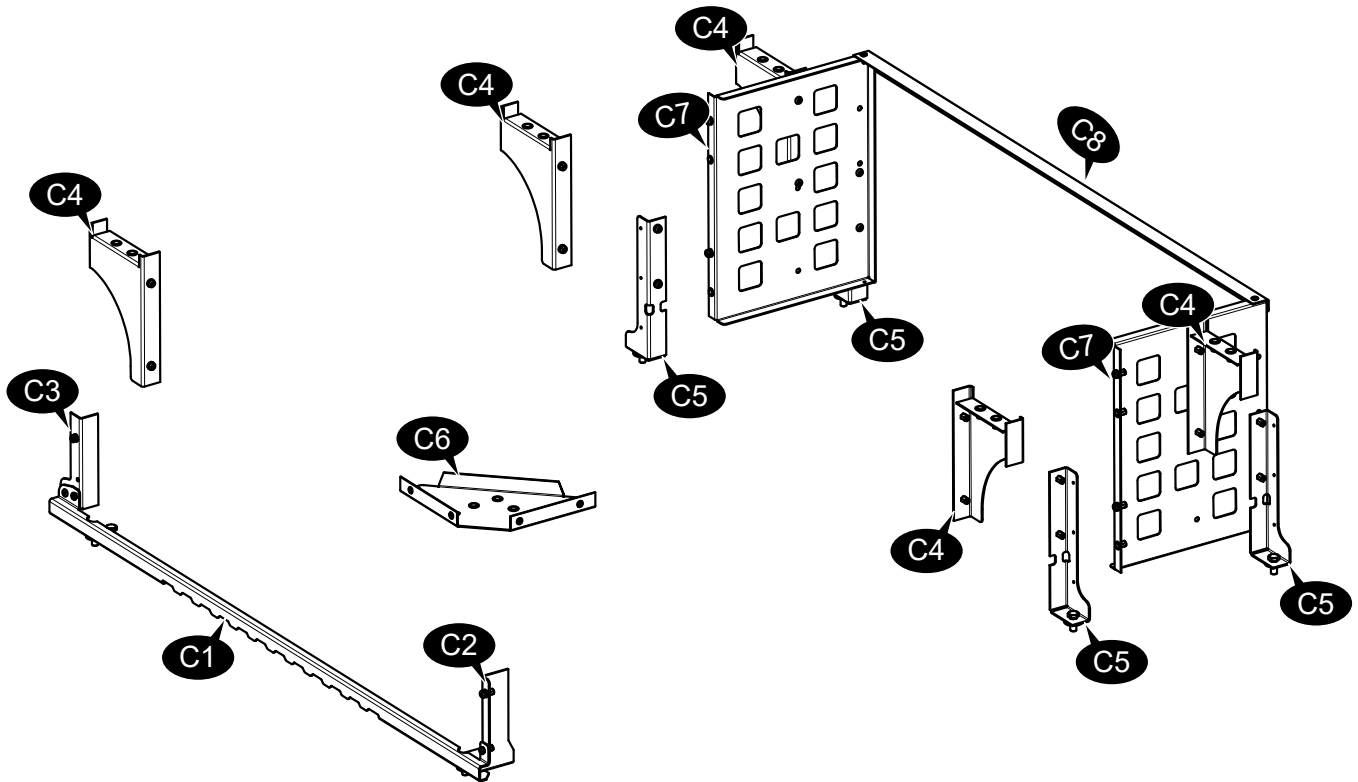


Item	Quantity	Part Number	Description
C1	1	15018443	Bracket Lower Rear Middle T6
C2	1	15021172	Bracket Lower Rear Right T6 ASSY
C3	1	15021171	Bracket Lower Rear Left T6 ASSY
C4	5	15020618	Bracket Latchcup Side M8 T6 ASSY
C5	4	15020617	Bracket Veh Floor Short Latchfix T6 ASSY
C6	1	15018460	Bracket Latch Inner 8mm ASSY
C7	2	15023492	Bracket Front T6 D-Cab SF2020 ASSY
C8	1	15023493	Angle Front T6 D-Cab SF2020
	1	15023494	Fitting Kit Steelbracket Set T6 D-Cab SF2020


15010236 Handle Assy

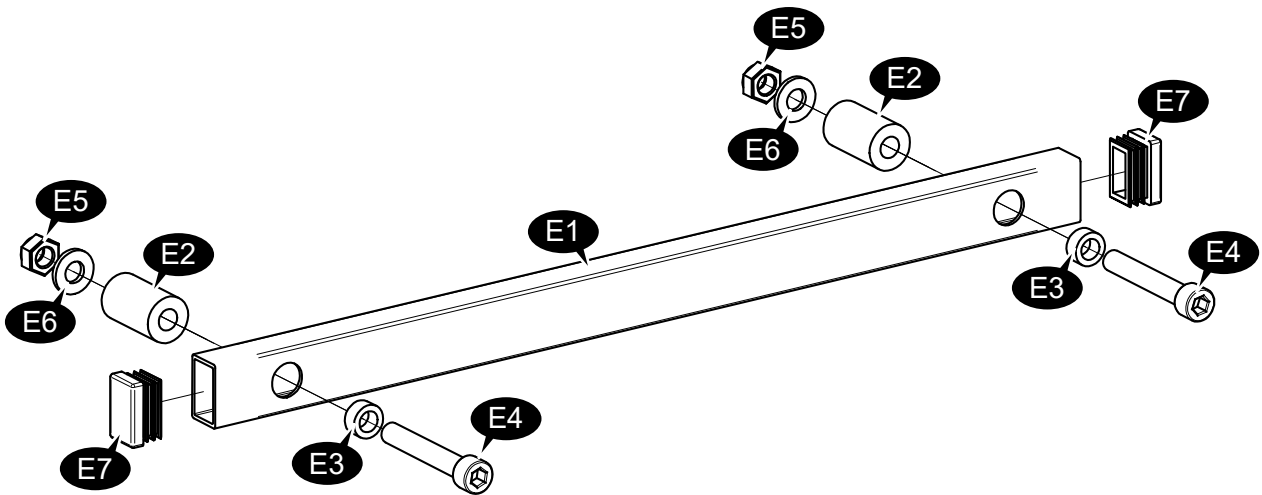


Item	Quantity	Part Number	Description
E1	1	15009441	Handle Tube 25x15x286
E2	2	15009442	Spacer Ø8,3x18x30 Nylon Black
E3	2	15009443	Spacer Ø8,1x13x6mm Galv
E4	2	15009444	Screw M8x50 Cylinderh Hex
E5	2	8 NMU	Mutter M8 Nyloc DIN985
E6	2	8,4x17x2	M8 Washer, DIN 125
E7	2	15009438	End Plug Tube 25x15 Inside

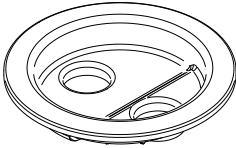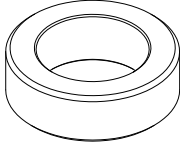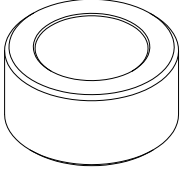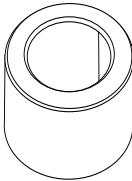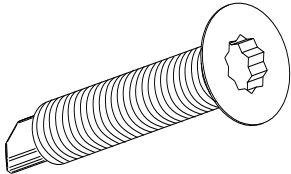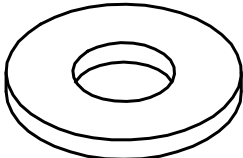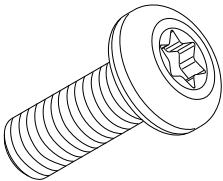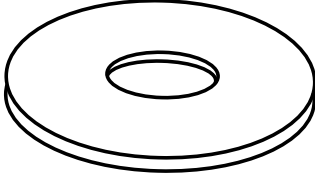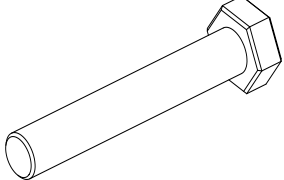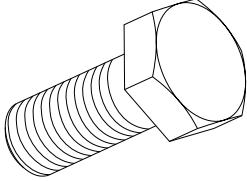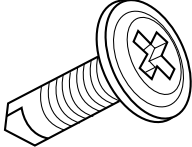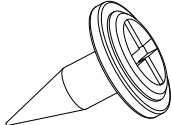Fitting kit		
F1  15006240 Plastic Cover Latchcup VW 2012	F2  13x20x6,4 Spacer U-709	F3  13x20x10 Spacer U-710
F4  15001584 Distance Sleeve D20 d13 h15	F5  15016947 4,8x25 Selfdrill CS RW25 Elz	F6  15004714 Washer 4,8x23x2mm Black
F7  15003551 M6x16 TX30 pan (DIN 7985)	F8  15009916 Washer 30x13x3 Elz	F9  15004713 M8x50 Screw 6K Black DIN933
F10  10x25 6K Screw, M10x25 DIN933 6K, ElZn	F11  4,2x16FLS Black Selftapping Screw	F12  4,2x13 S Platescrew flathead Black Needlepin
F13	F14	F15
F16		F18


15017989 Supplement One-eye Latch Kit SF T6

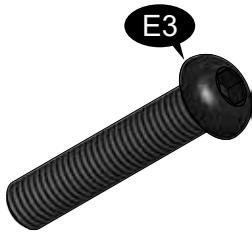

15001595
M10x50 Panh UNB Black

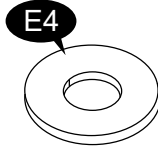

29,5x11x2,5
Stoppskive M10 DIN 9021

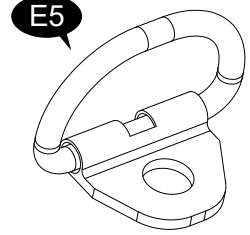


6794
Fixation Eye BHF

Item	Quantity	Part Number	Description
E3	1	15001595	M10x50 Panh UNB Black
E4	1	29,5x11x2,5	Stoppskive M10 DIN 9021
E5	1	6794	Fixation Eye BHF

15017958 Fitting Kit SF T6 for Vehicles w single latchscrews



15001595
M10x50 Panh UNB Black

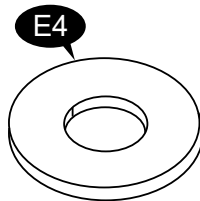


29,5x11x2,5
Stoppskive M10 DIN 9021




10x30 UNB sort
Maskinskrue Panhode

Item	Quantity	Part Number	Description
E3	6	15001595	M10x50 Panh UNB Black
E4	8	29,5x11x2,5	Stoppskive M10 DIN 9021
E6	2	10x30 UNB sort	Maskinskrue Panhode

1.

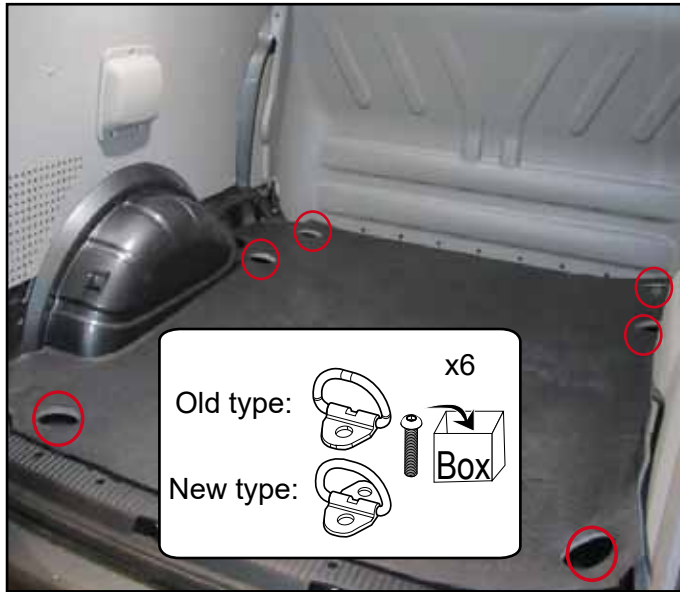


2.

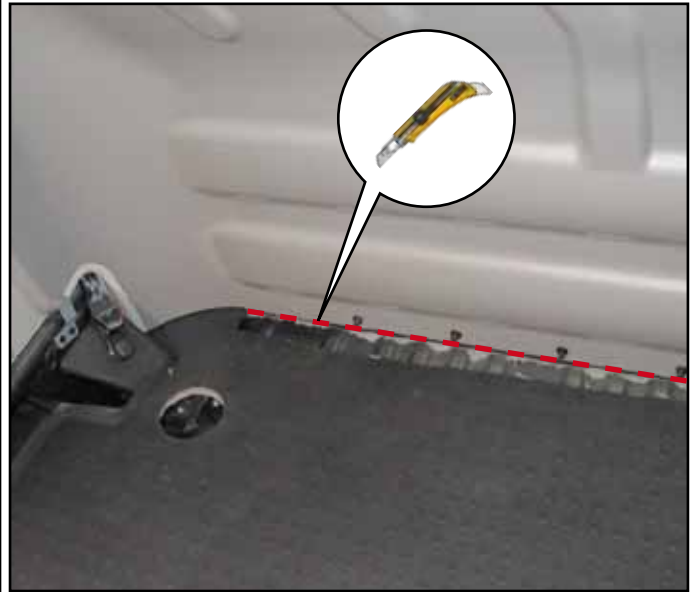

3.





4.

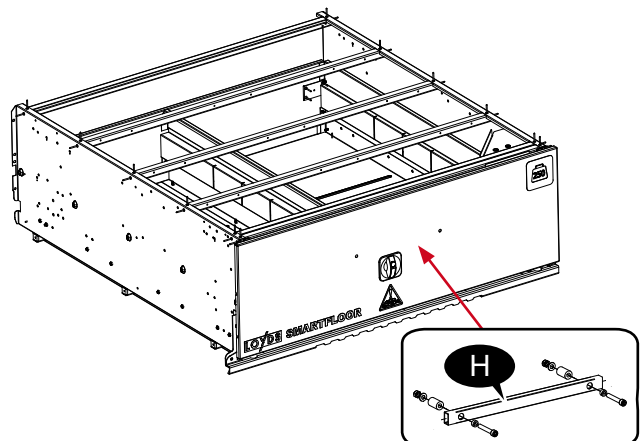



5.

L&R

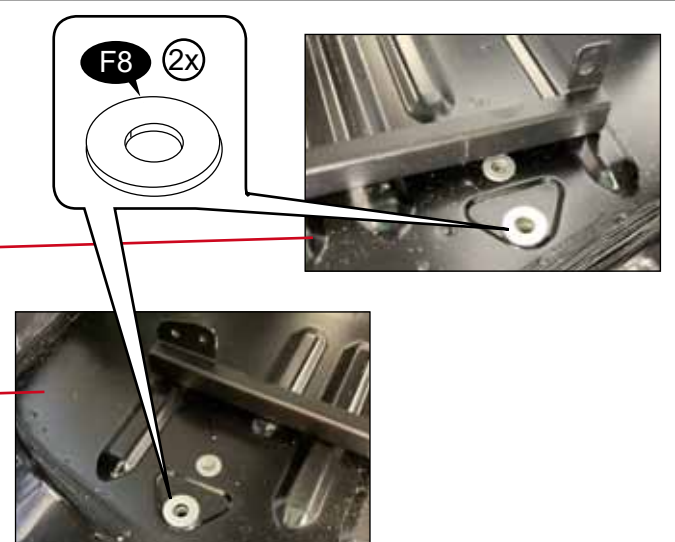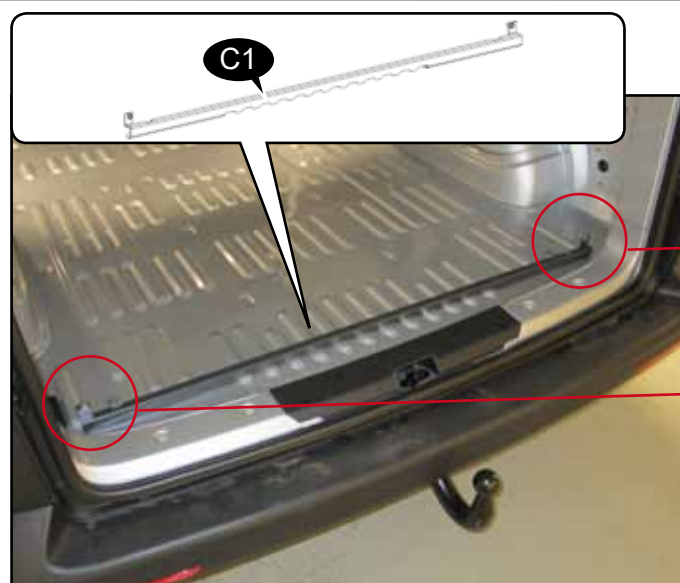


6.

LH

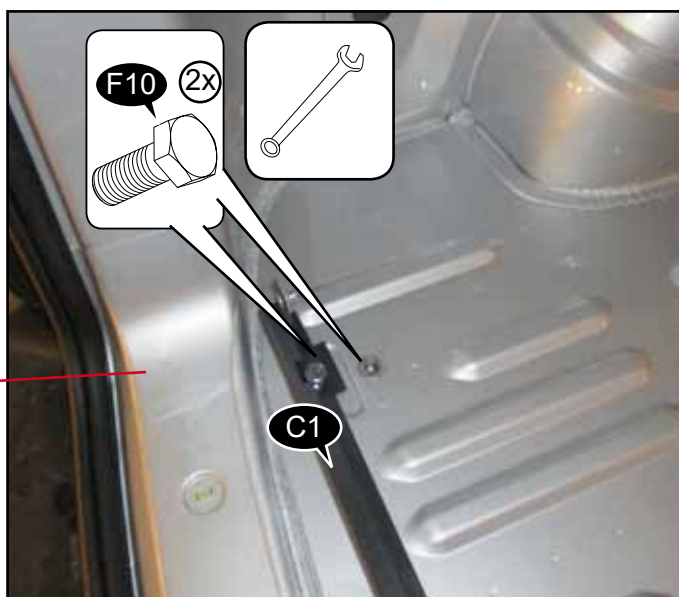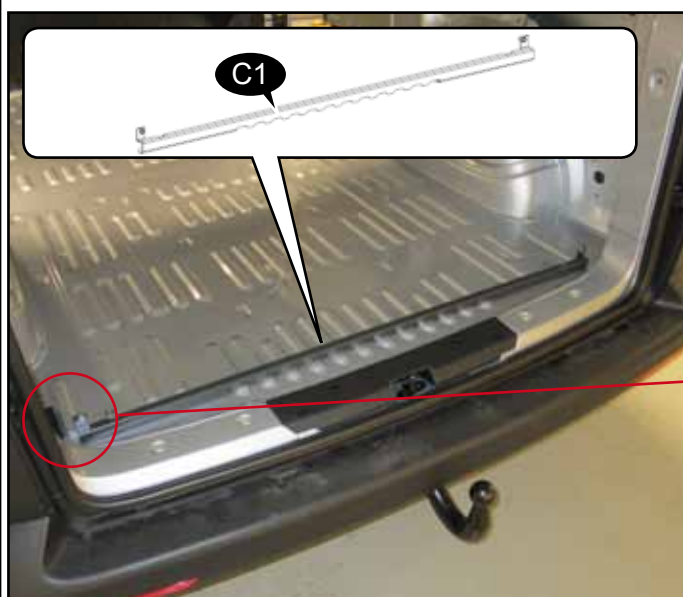


7.

RH

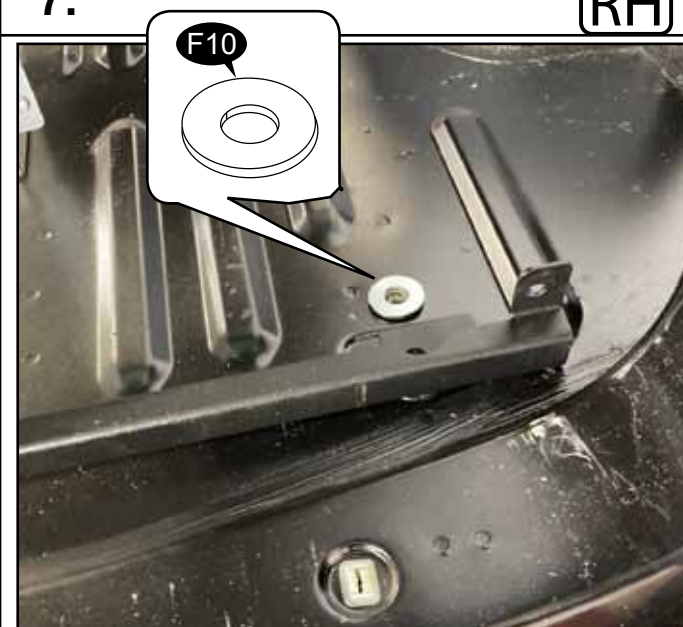


8.

RH



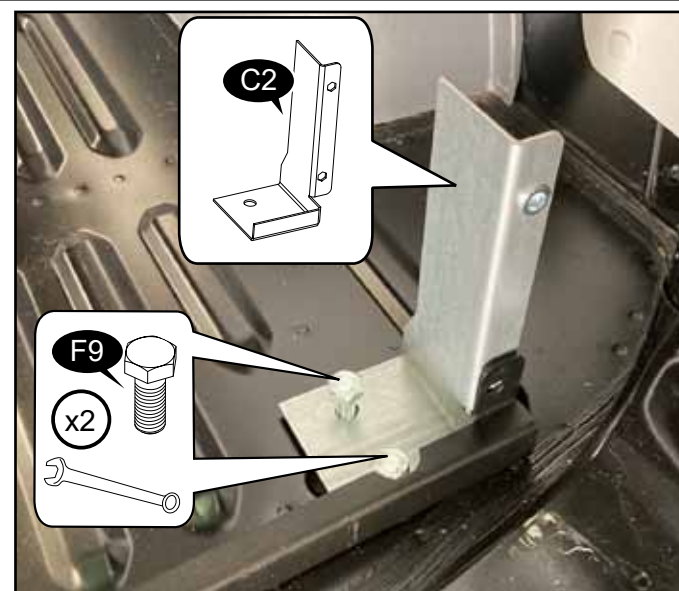


9.

10.

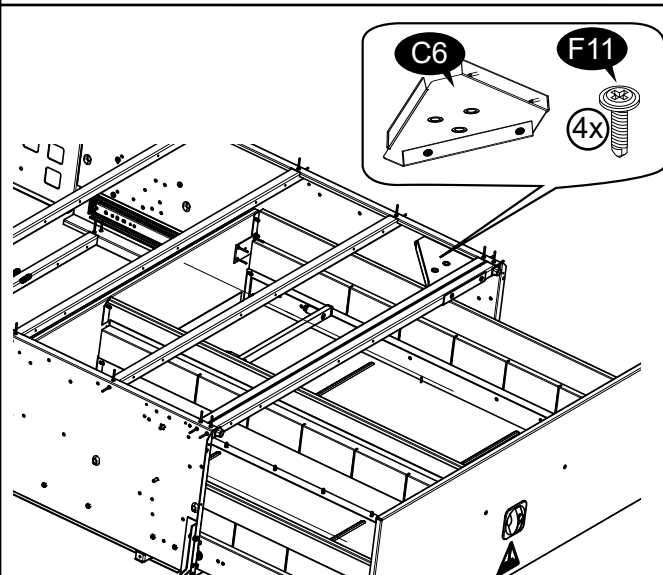


11.

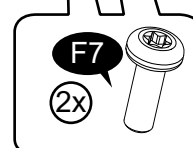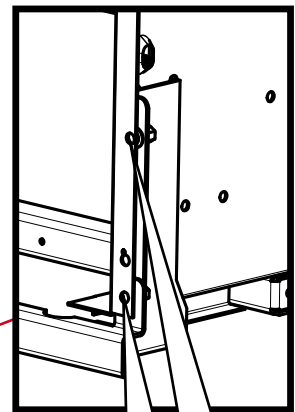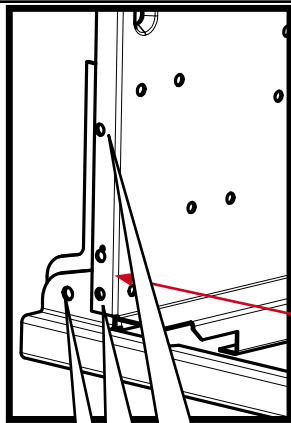


12.


L&R

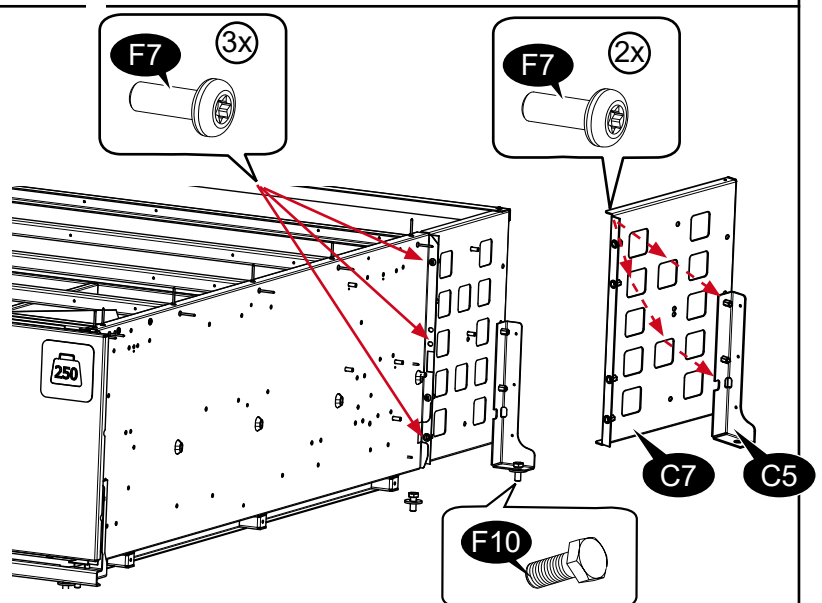

13.

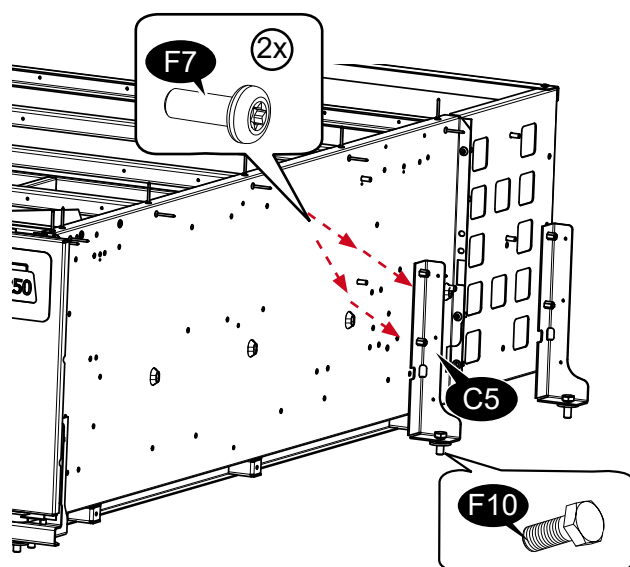


14.

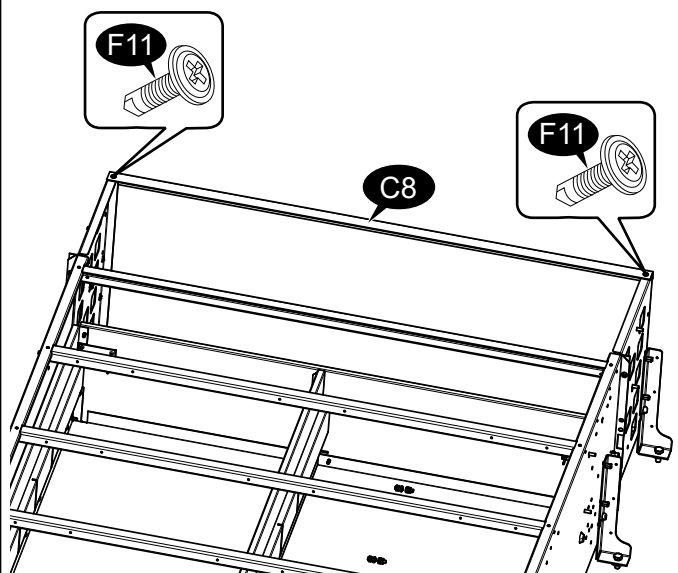


15.

RH

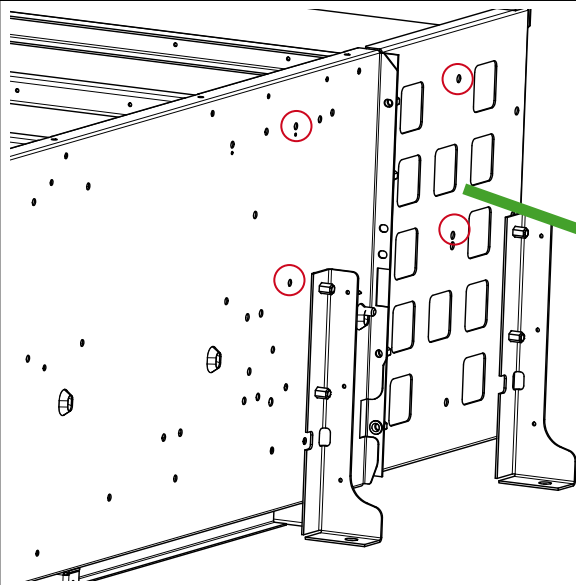


16.

RH

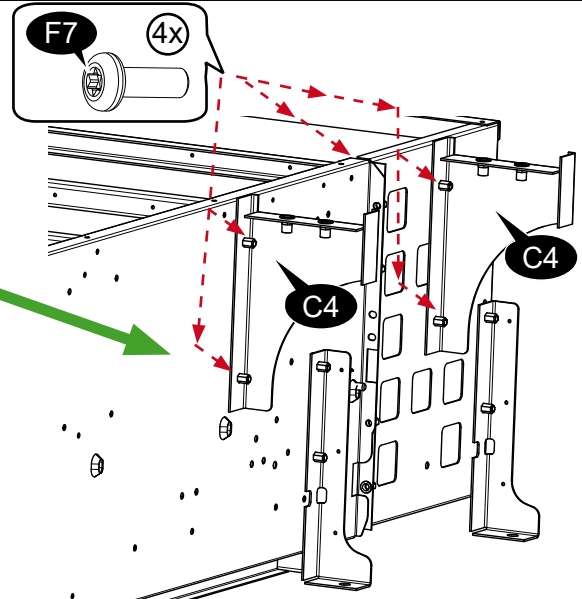


17.

LH

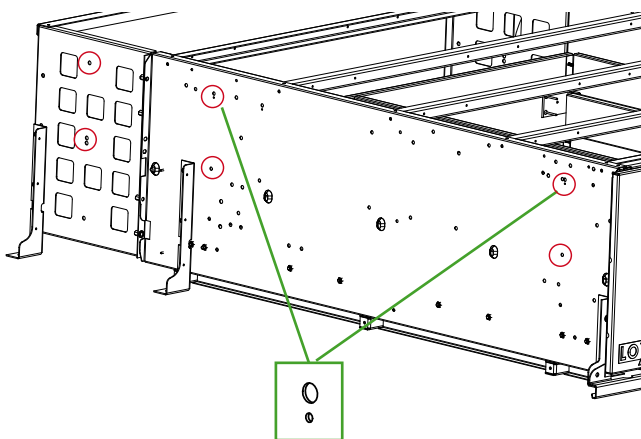


18.


LH

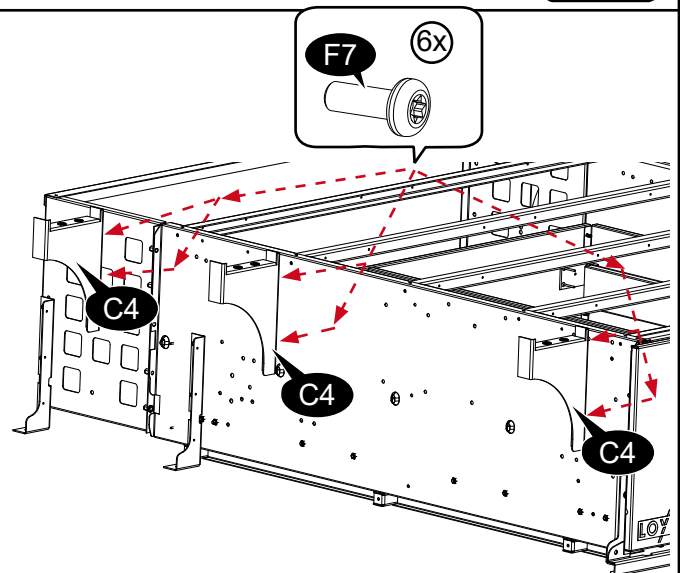


19.

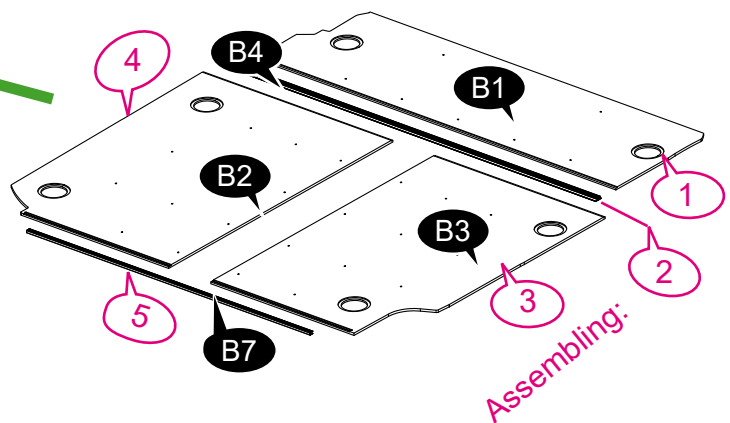

20.

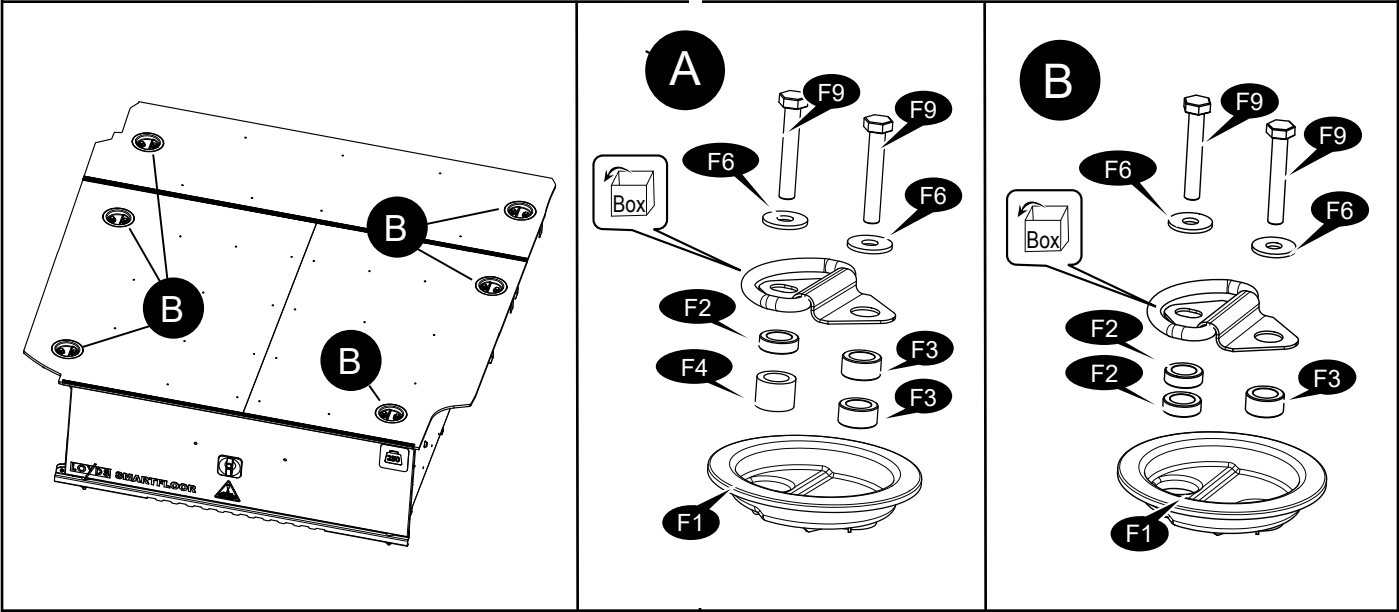


21.

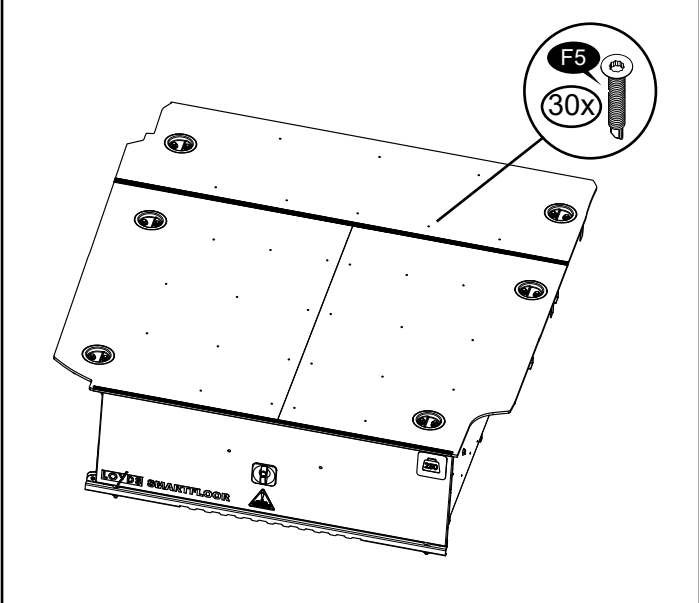


22.

RH

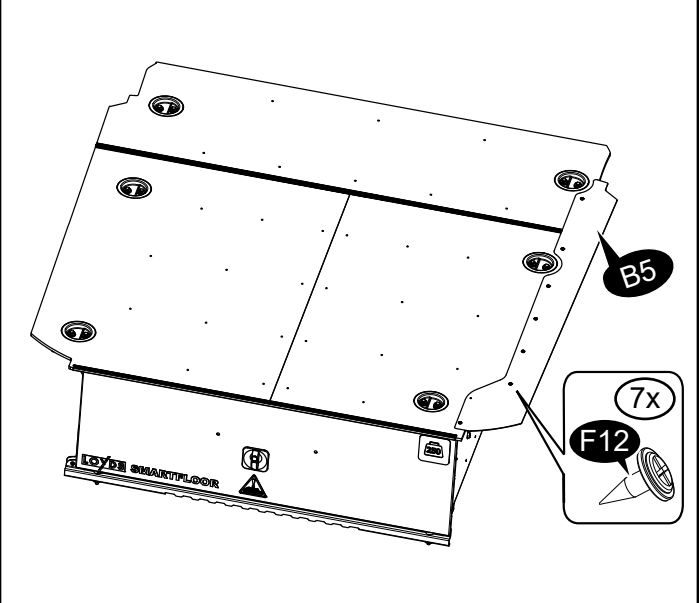

23.

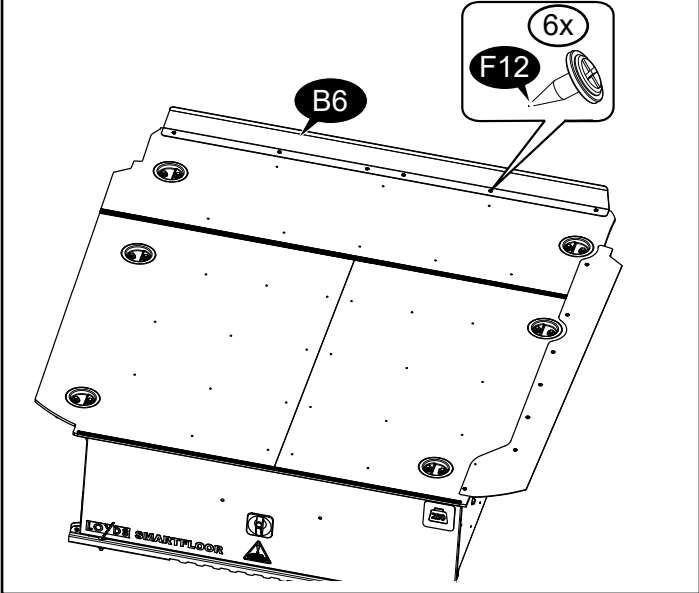

24.

