


VW ID. Buzz Cargo
Smartfloor Front Module 2SLD

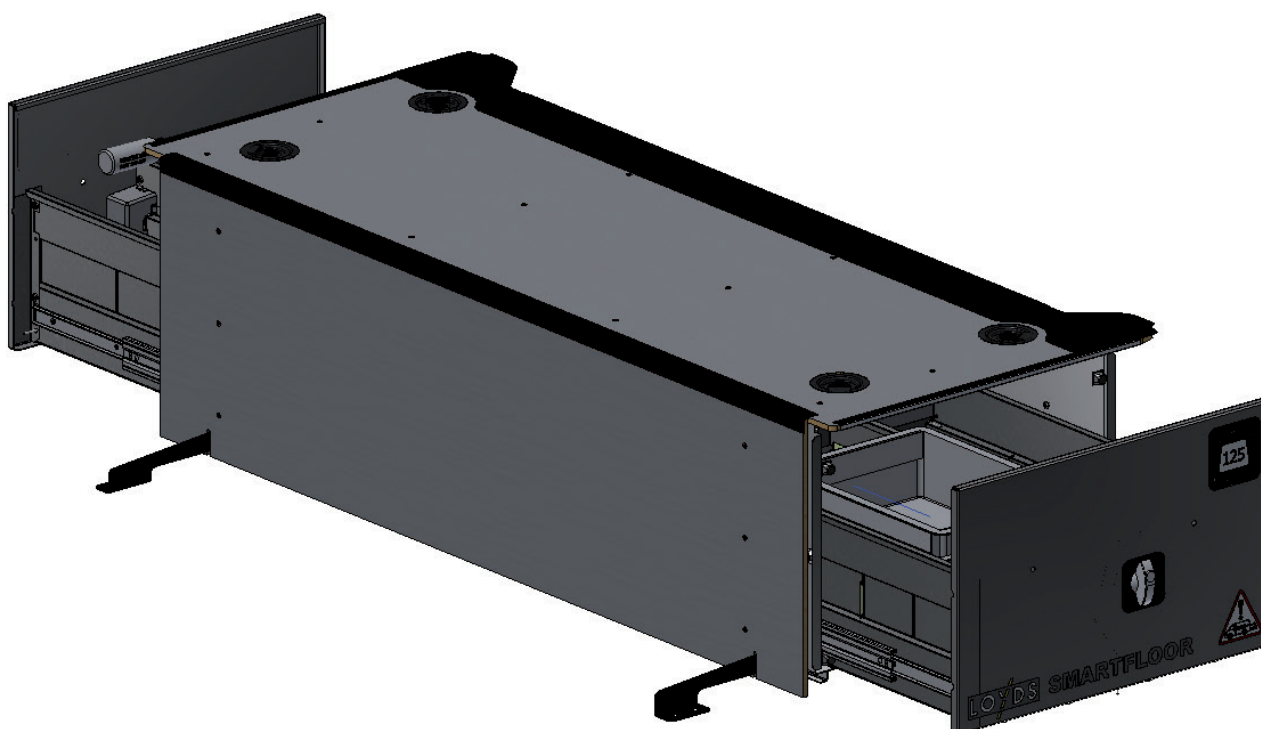

Installation Manual

Manual 15023963_B

Loyds Industri AS - 2024-03-06





Revision Record						
Rev nr	Date	Page	Picture	Update	New	Deleted steps
A	2023-01-30				X	
B	2024-03-06			X		




Use colors when printing this installation manual. / Ved utskrift, bruk farger.

Tools

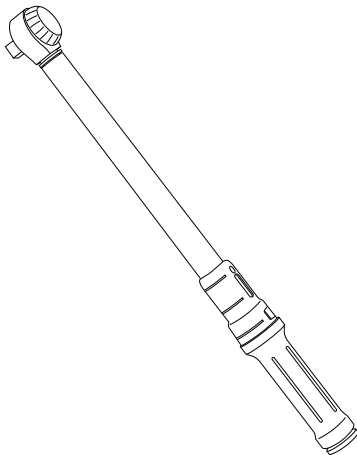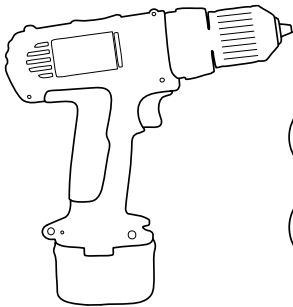


15025070 Front Module 2SLD

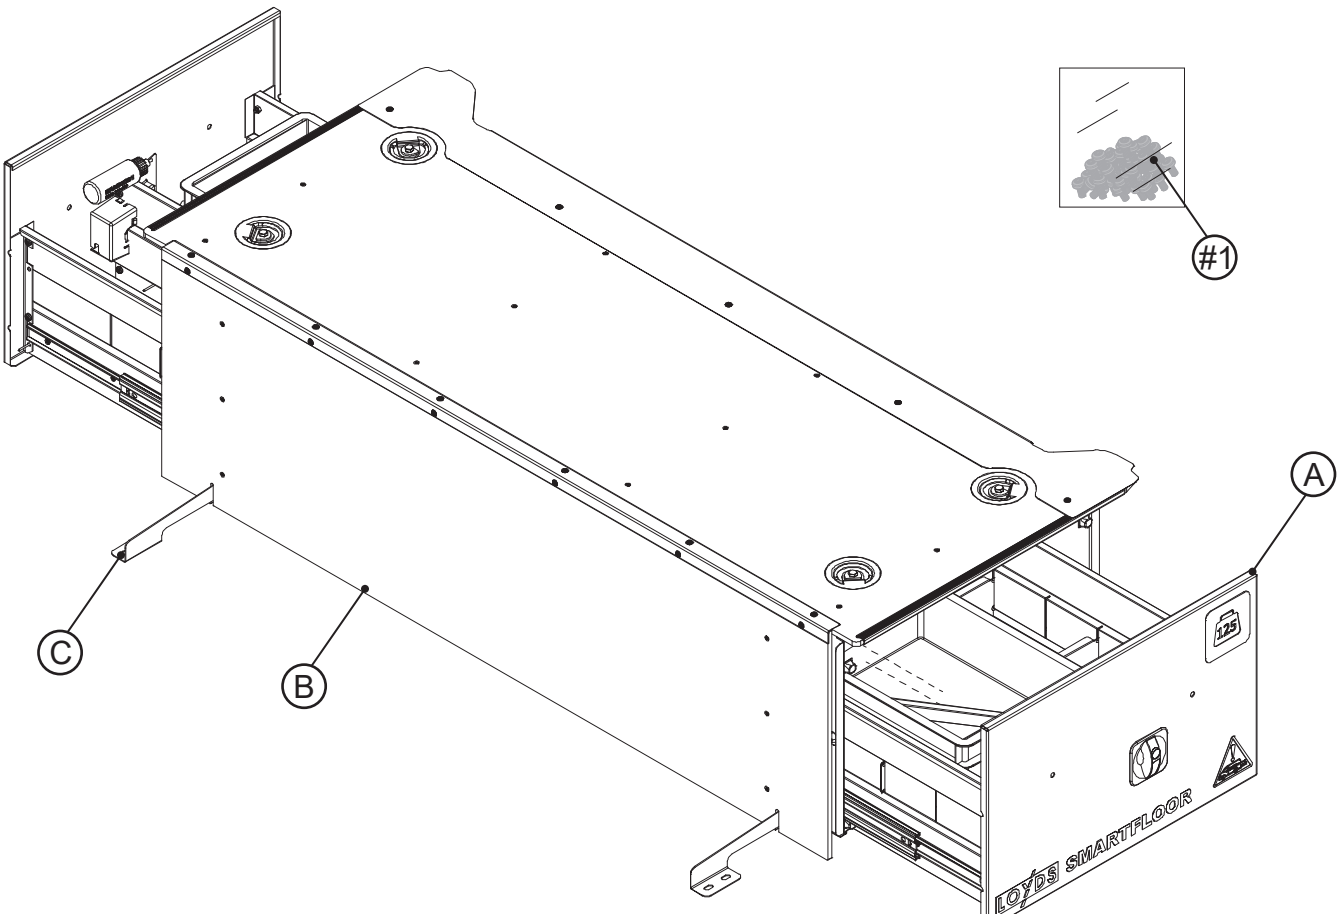


Number	Quantity	Part Number	Definition
A	1	15023421	Smartfloor Front Drawer Electric 2SLD W500 x L750
B	1	15025056	Smartfloor Front Module Floor Kit VW ID Cargo Assembly
C	1	15025063	Smartfloor Front Module Bracket Kit VW ID Cargo Assembly
#1	1	15023280	Bracket Fitting Kit FM. SF ID Cargo ASSY

15025063 Smartfloor Front Module Bracket Kit VW ID Cargo Assy

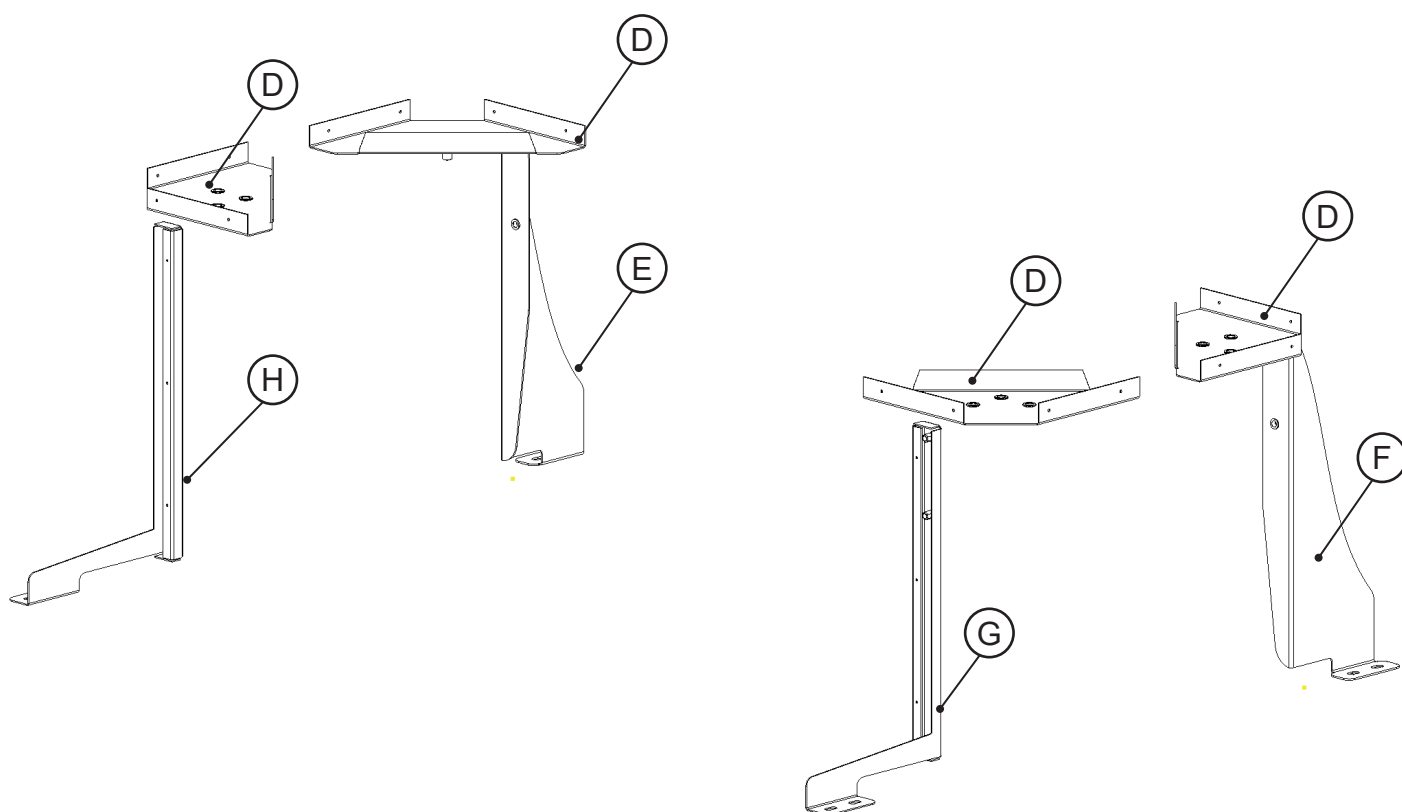


Number	Quantity	Part Number	Definition
D	4	15018460	Bracket Latch Inner 8mm ASSY
E	1	15023413	Smartfloor Front Left Bracket Front drawer W500 Assy ID Cargo
F	1	15023417	Smartfloor Front Right Bracket Front drawer W500 Assy ID Cargo
G	1	15025064	Smartfloor Front Module Rear Right Bracket VW ID Cargo Assy
H	1	15025065	Smartfloor Front Module Rear Left Bracket VW ID Cargo Assy

#1 15023280 Bracket Fitting Kit FM. SF

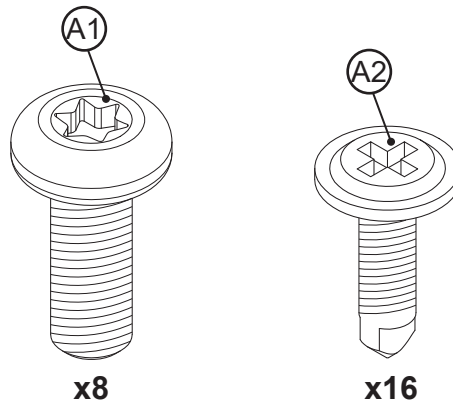


A1	15003551 M6x16 TX30 pan (DIN 7985)
A2	4,2x16 FLS Platescrew selfdrilling E45759 Black

15025056 Smartfloor Front Module Floor Kit VW ID Cargo Assy

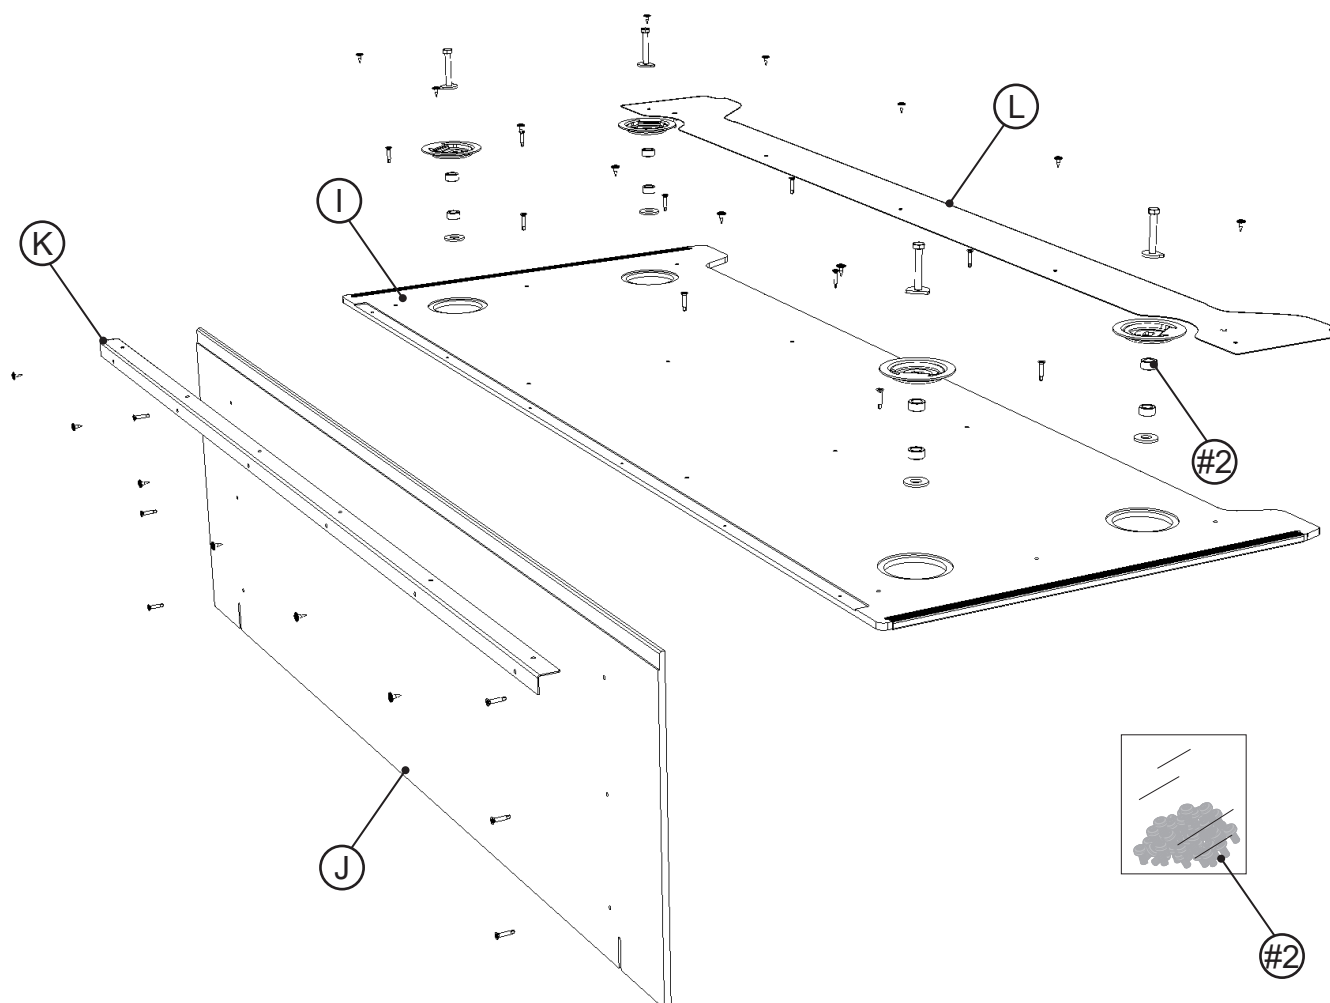


Number	Quantity	Part Number	Definition
I	1	15025057	Smartfloor Front Module Floor VW ID Cargo Assembly
J	1	15025060	Smartfloor Front Module Floor Vertical VW ID Cargo
K	1	15025061	Smartfloor Front Module Floor Angle VW ID Cargo
L	1	15023426	Smartfloor Front Floor Extender ID Cargo
#2	1	15025062	Smartfloor Front Module Floor Fitting Kit VW ID Cargo Assy

#2 15025062 Smartfloor Front Module Floor Fitting Kit VW ID Cargo Assembly

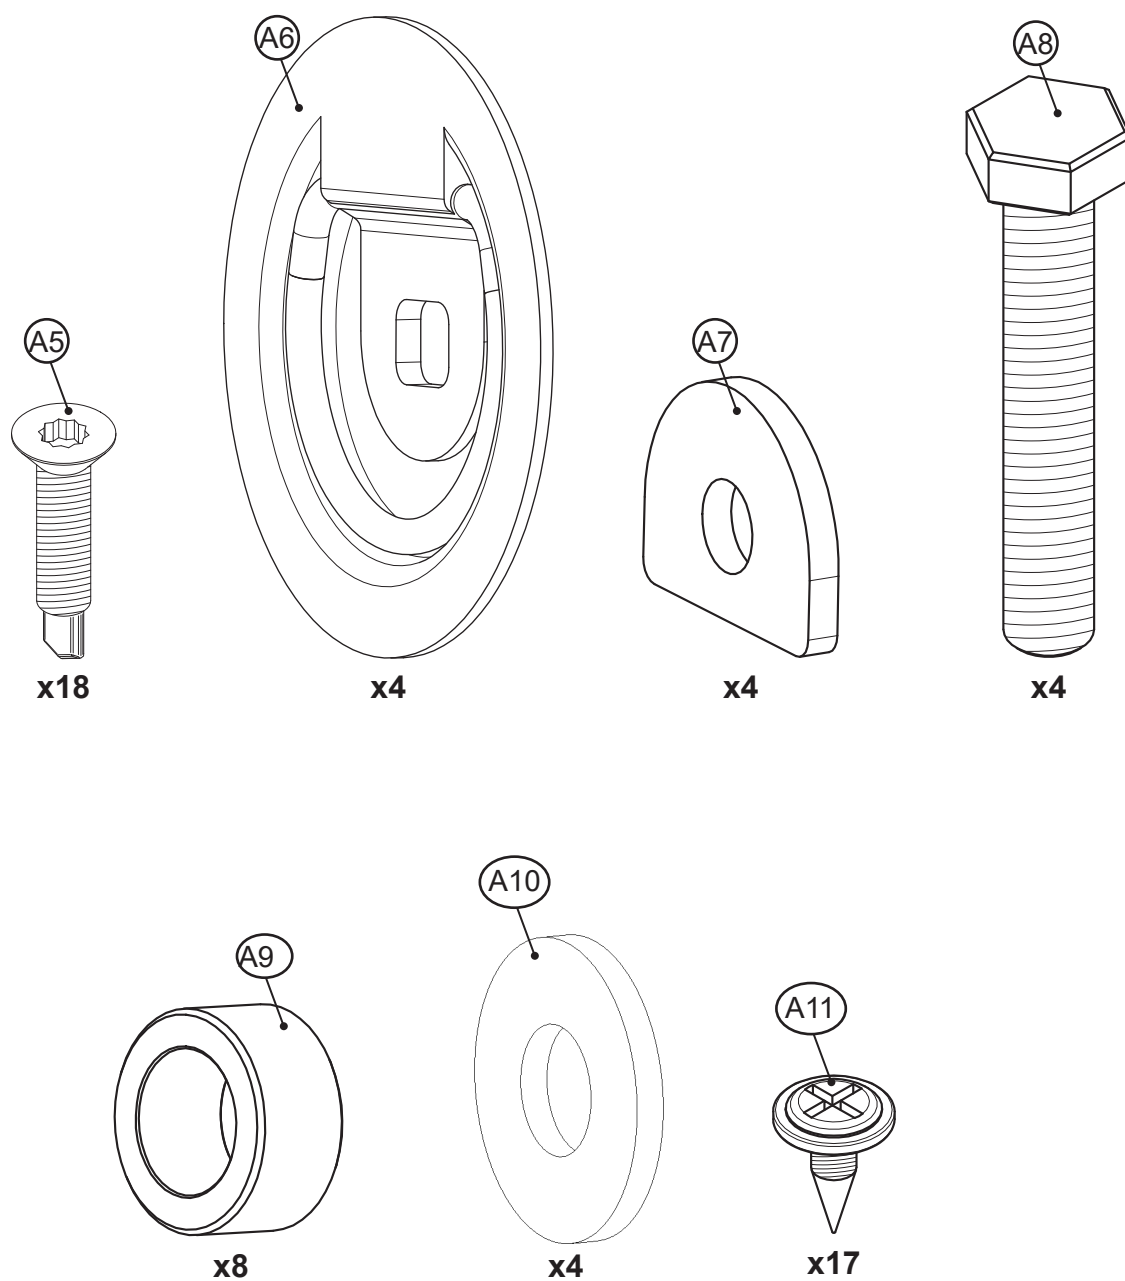


A5	15016947 Screw 4,8x25 Selfdrill Counters Torx Elz
A6	15005497 Latch Cup Black Ø90 Ø12x15 1000Kp
A7	15005884 Washer Latchcup for Ø8
A8	15004713 M8x50 screw, 6K DIN 933 Black, ElZn+Cr3
A9	13x20x10 Spacer, U-710
A10	15009916 Washer 30x13x3 Elz
A11	4,2 x 13 S Plateskrue Flathode Svart

1501036 Handle Assy (x2)

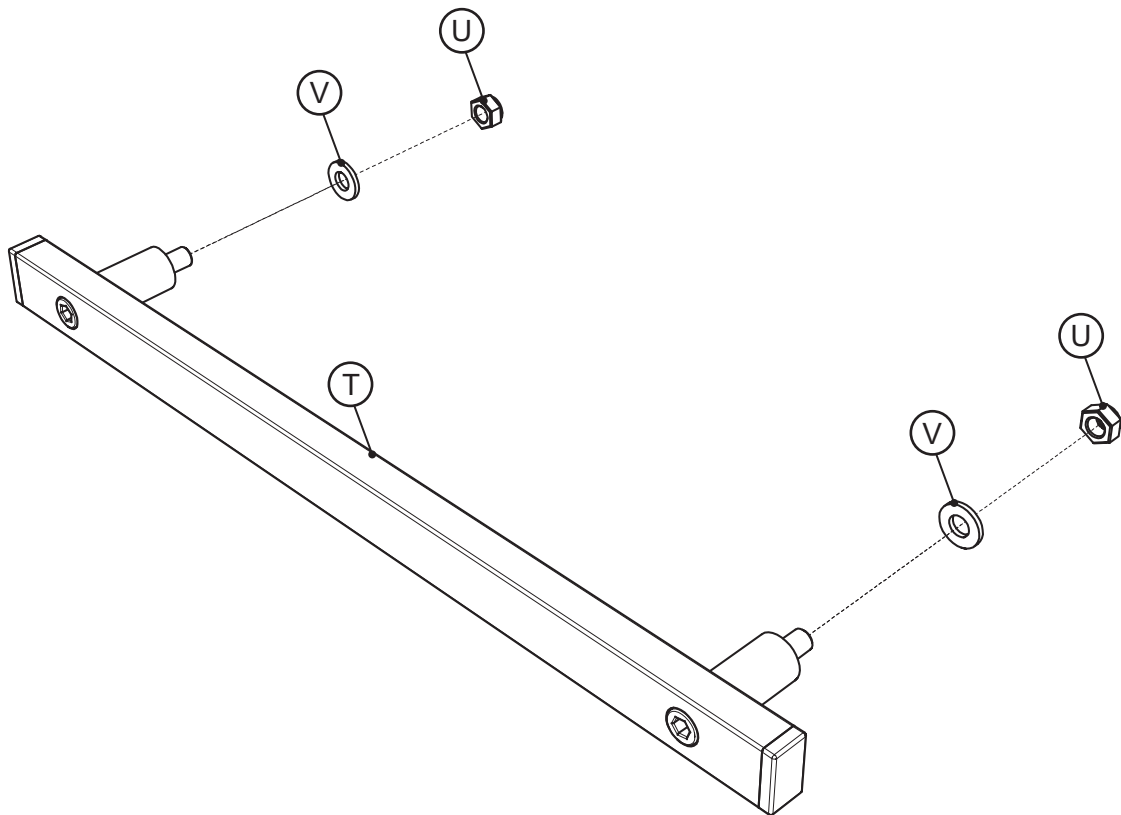


Number	Quantity	Part Number	Definition
T	1	15009441	Handle Tube 25x15x286
	2	15009442	Spacer Ø8,3x18x30 Nylon Black
	2	15009443	Spacer Ø8,1x13x6mm Galv
	2	15009444	Screw M8x50 Cylinderh Hex
	2	15009438	End Plug Tube 25x15 Inside
U	2	8 NMU	Mutter M8 nyloc DIN985
V	2	8,4x17x2	M8 Washer, DIN 125


1



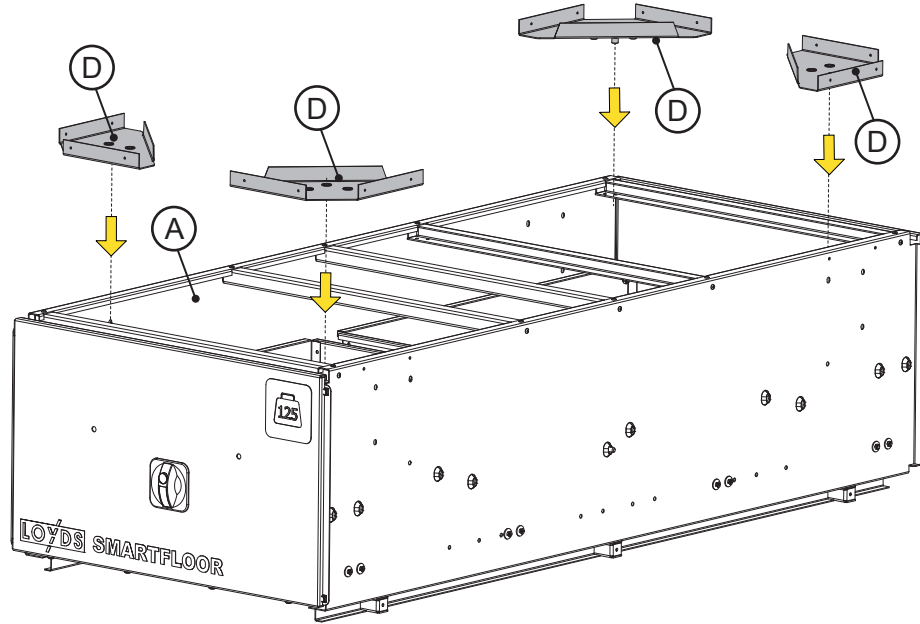


2

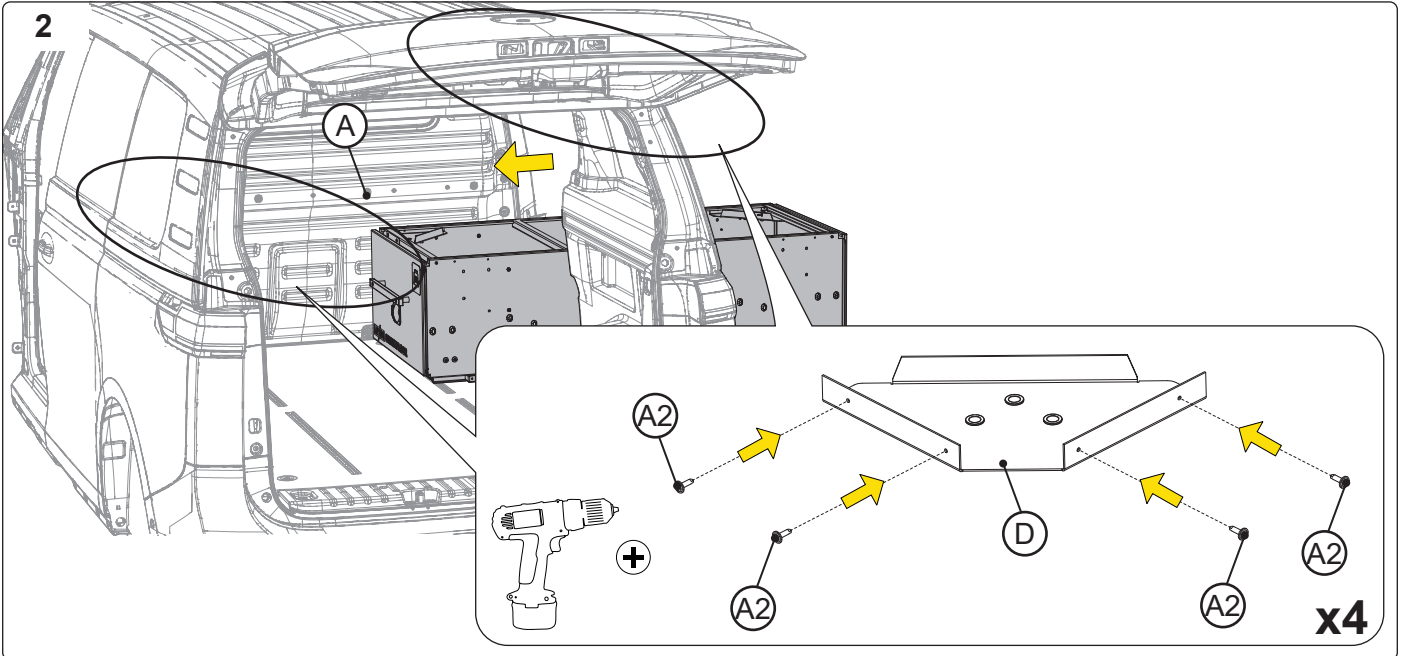


3

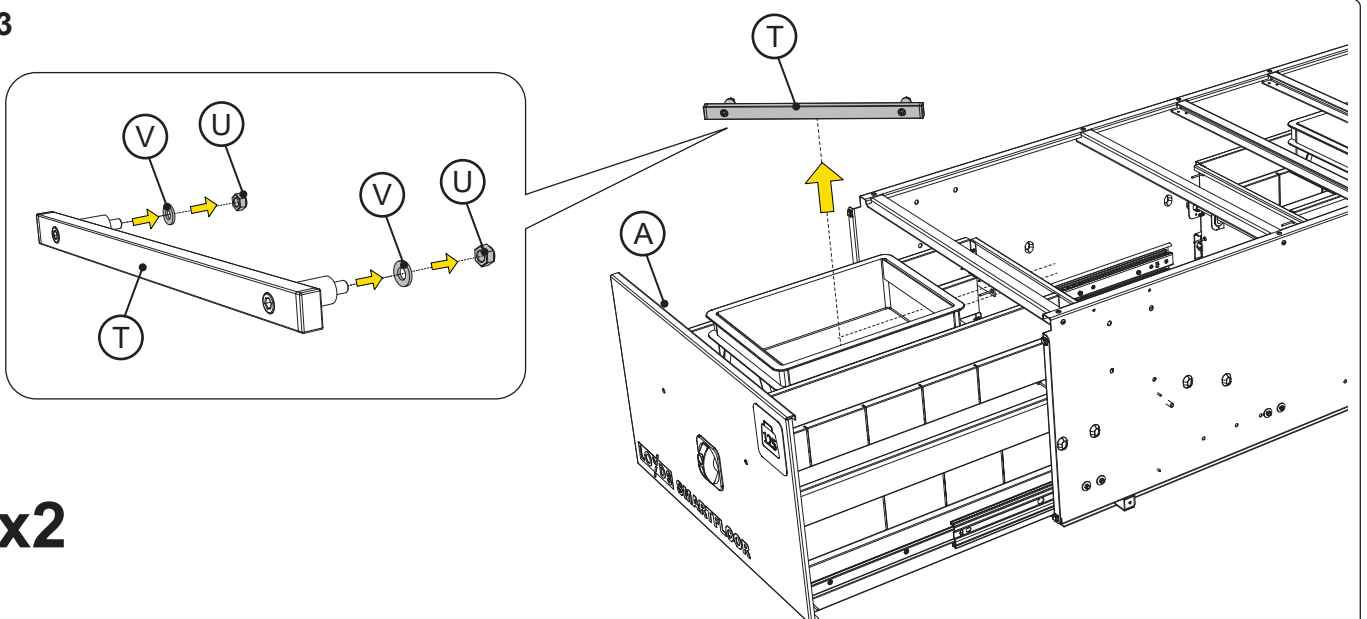


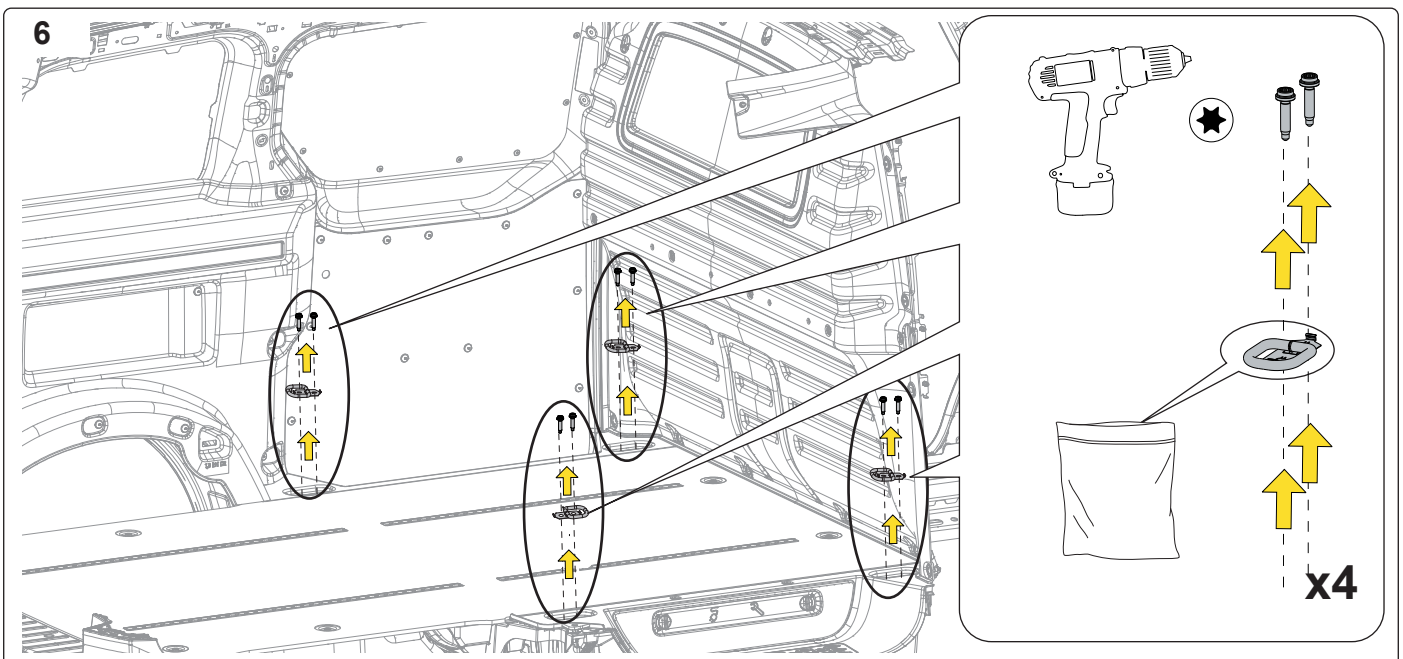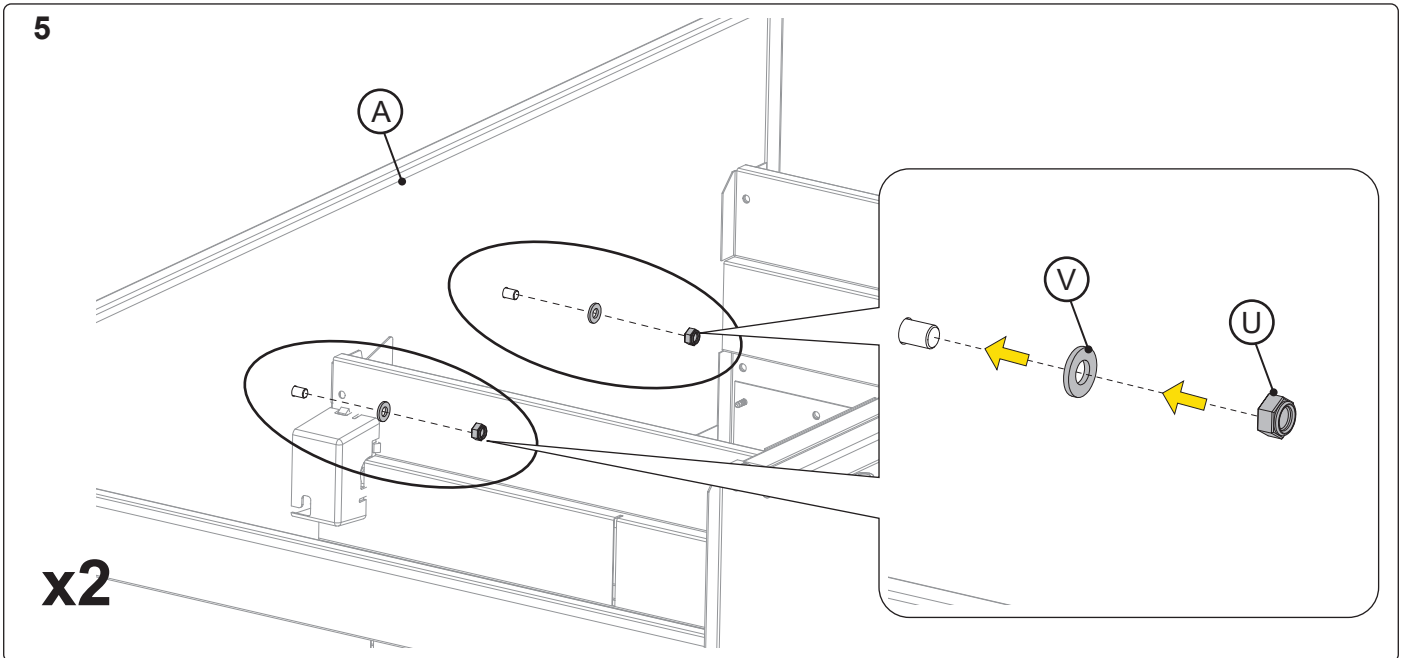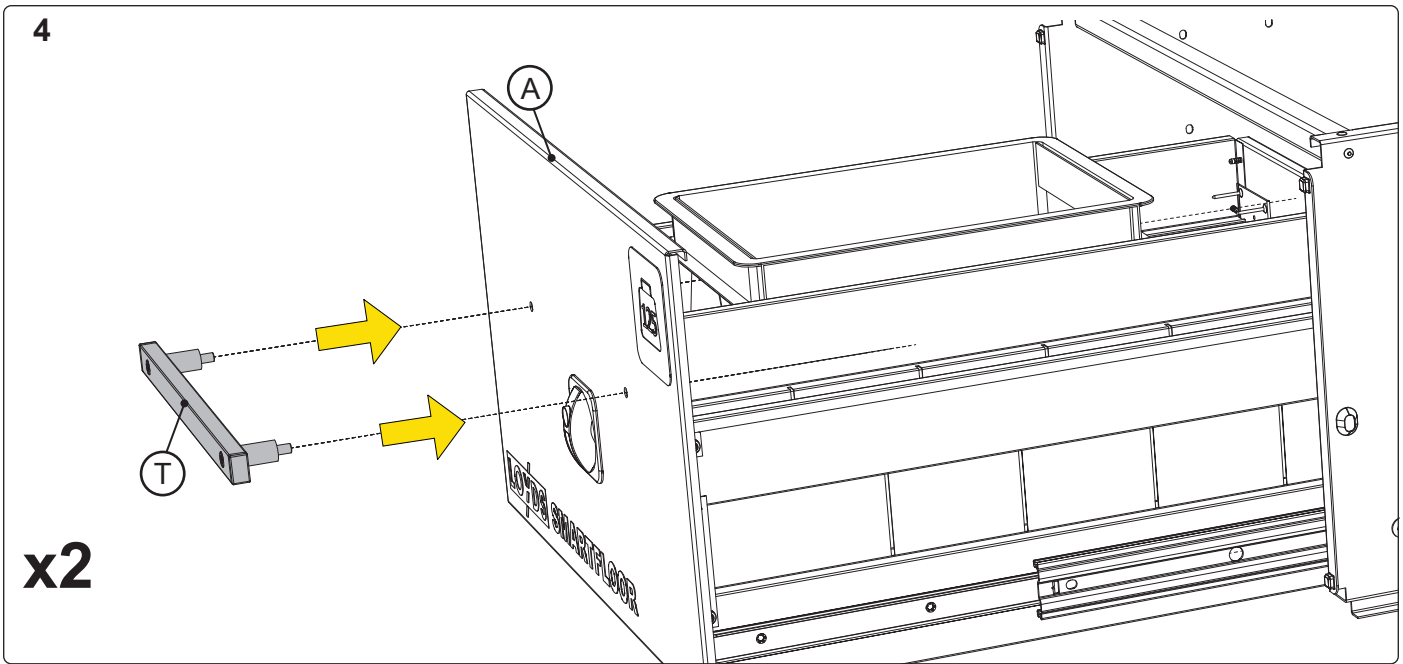


7

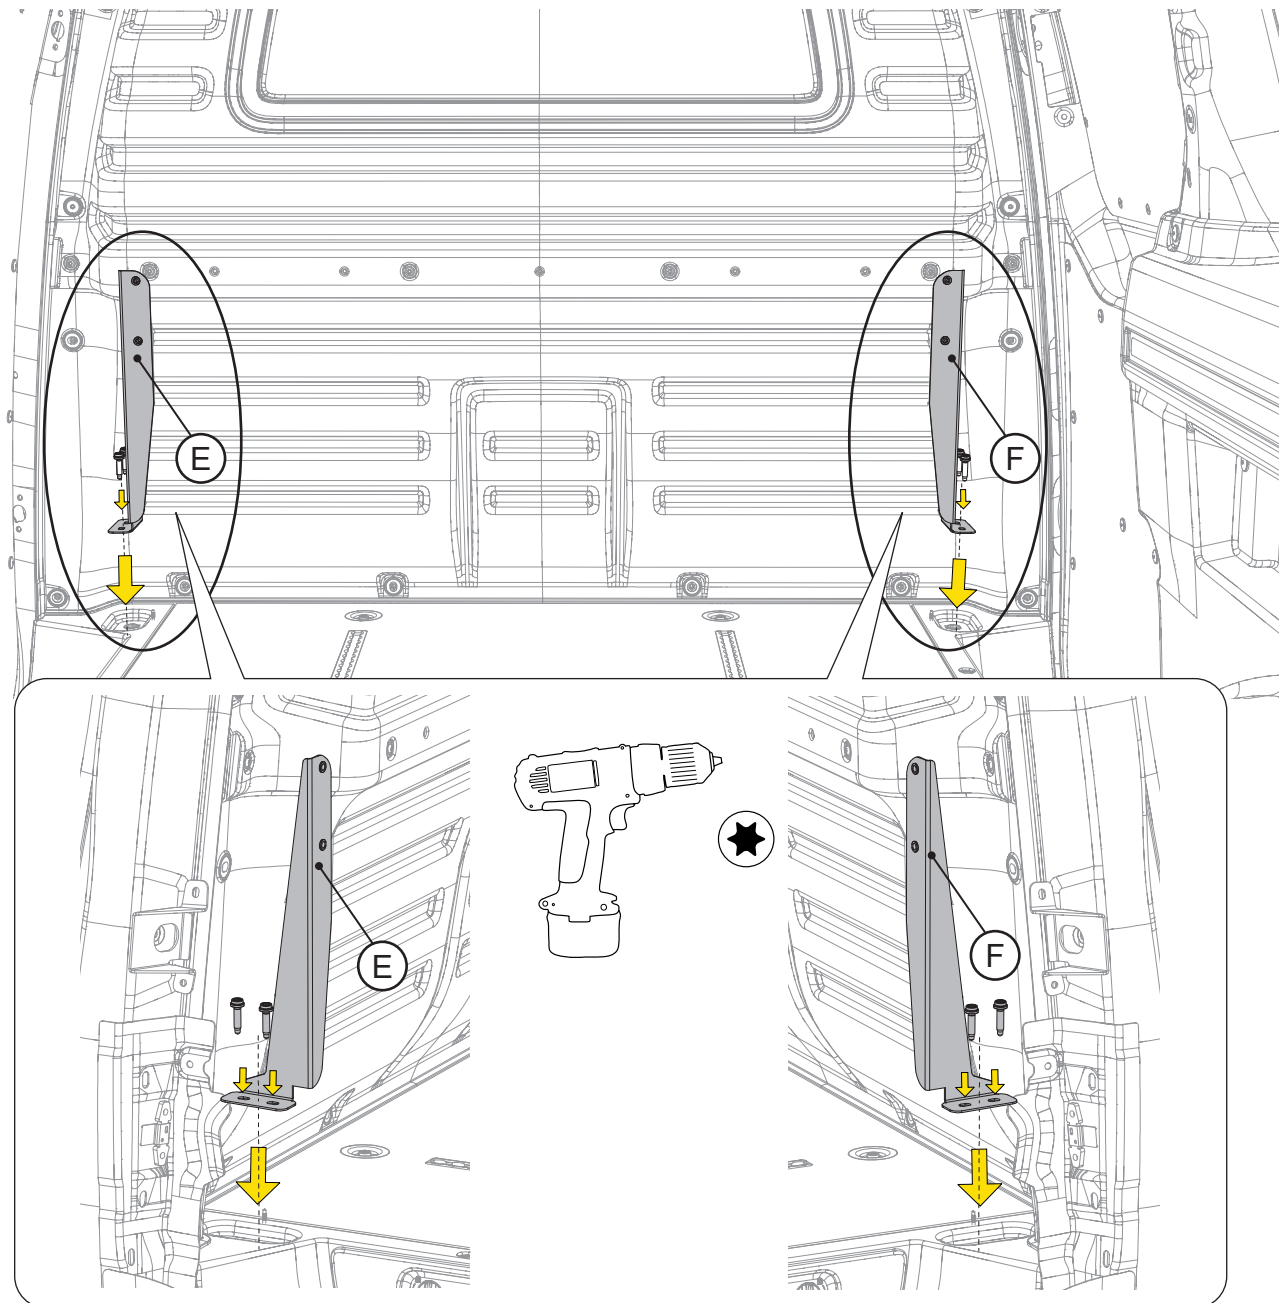




8

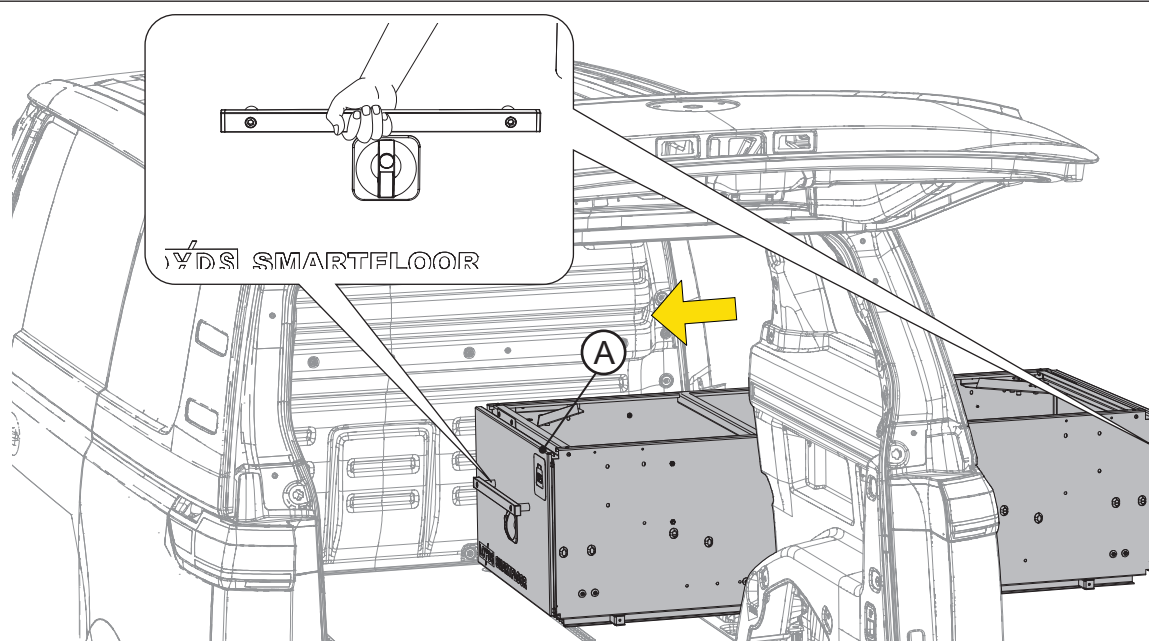

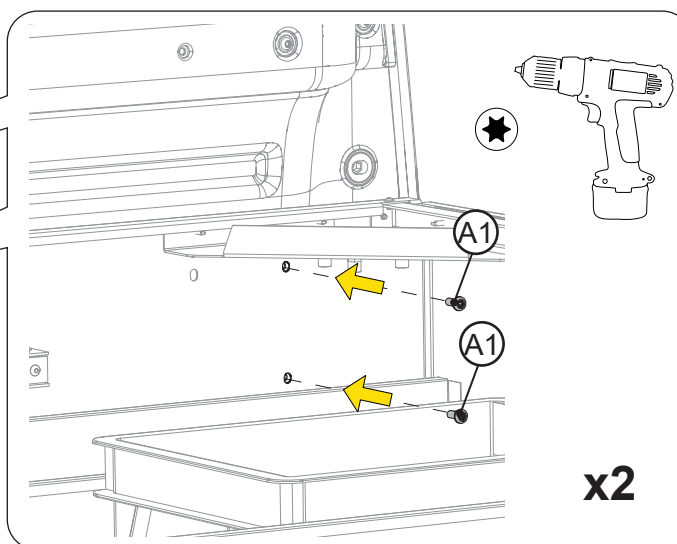


11


This diagram shows the floor plate being lowered into place. Two yellow arrows indicate the downward movement of the plate. Callout 'H' points to the left side of the floor plate, and callout 'G' points to the right side. The floor plate has 'LOYDS SMARTFLOOR' and the number '125' printed on it.

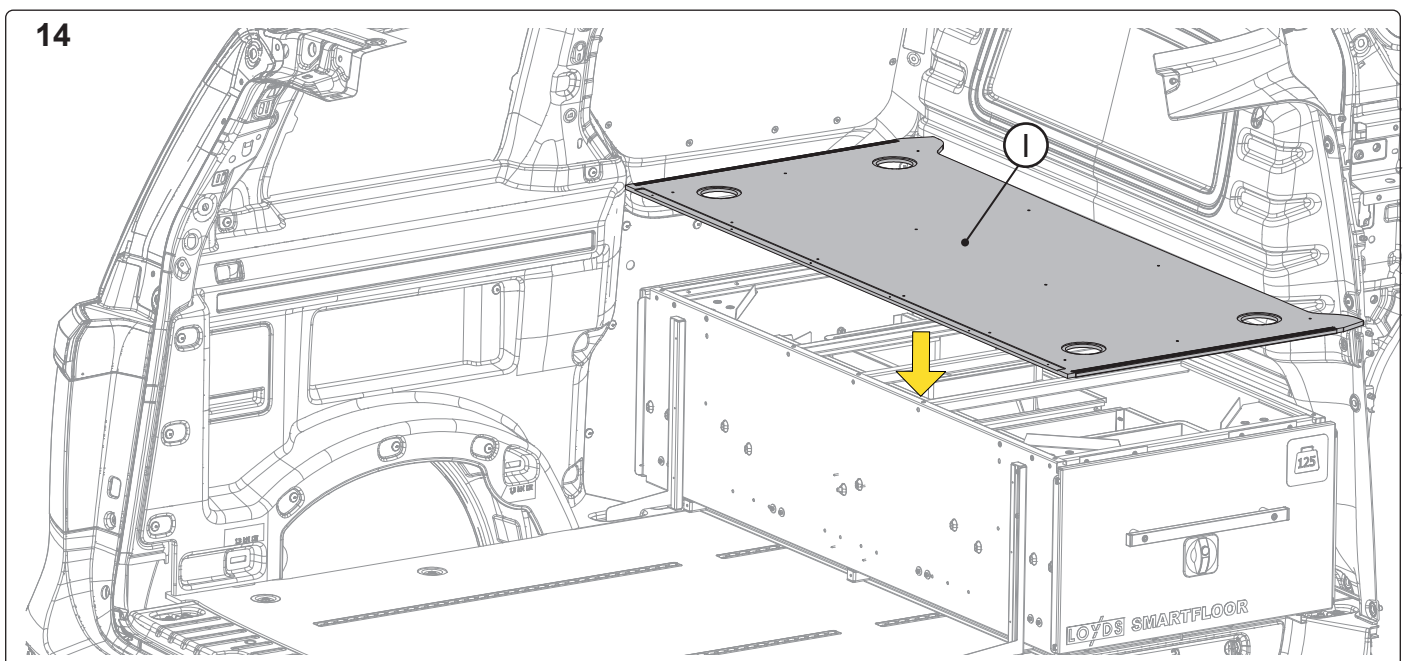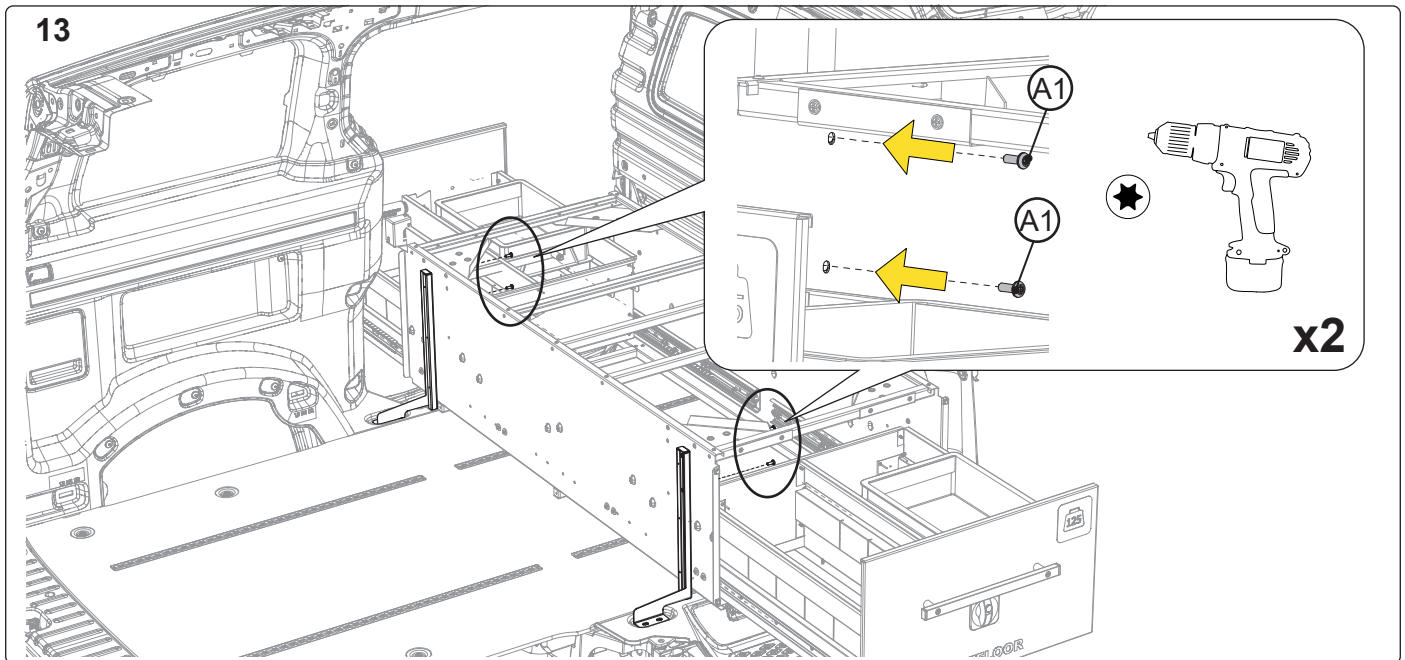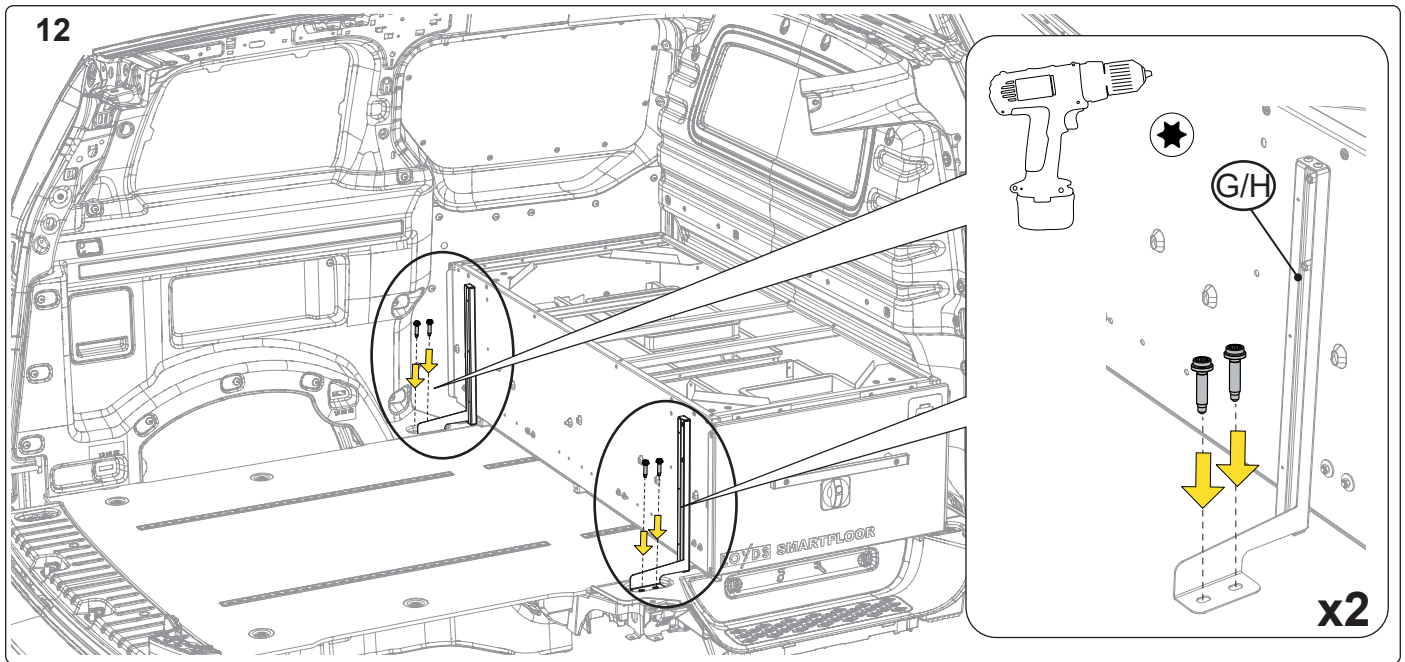


15

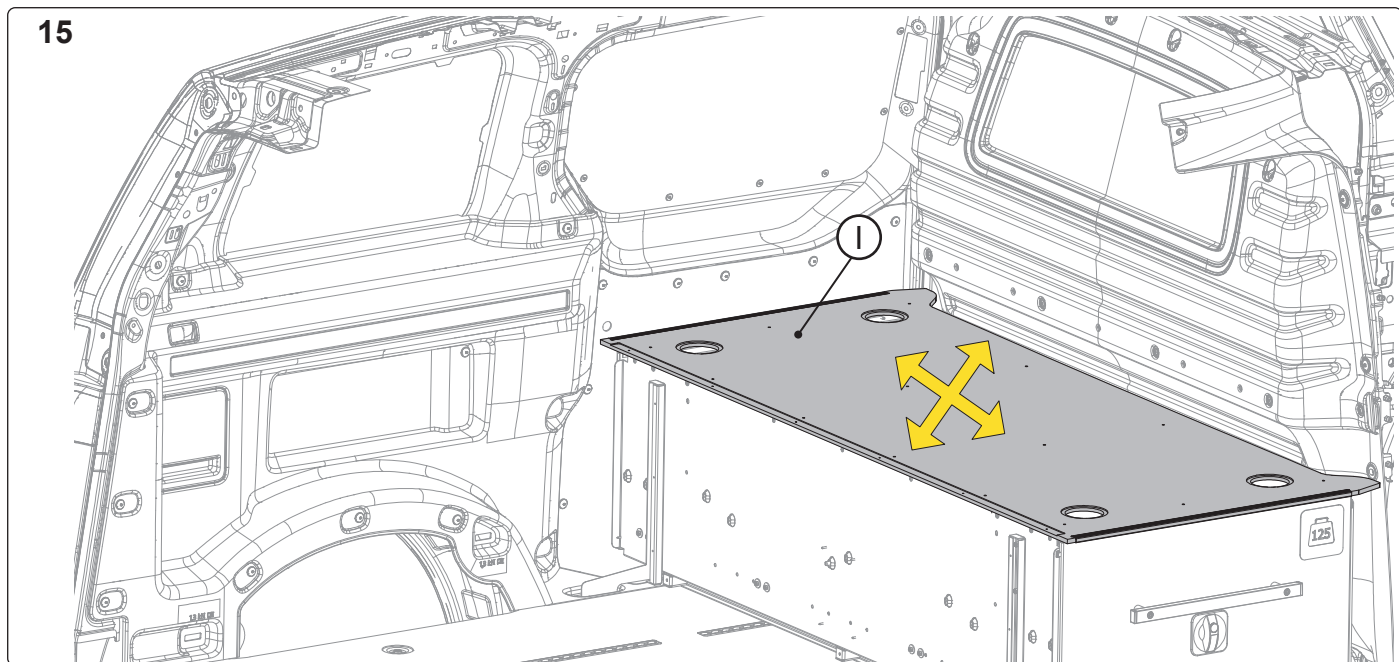


16

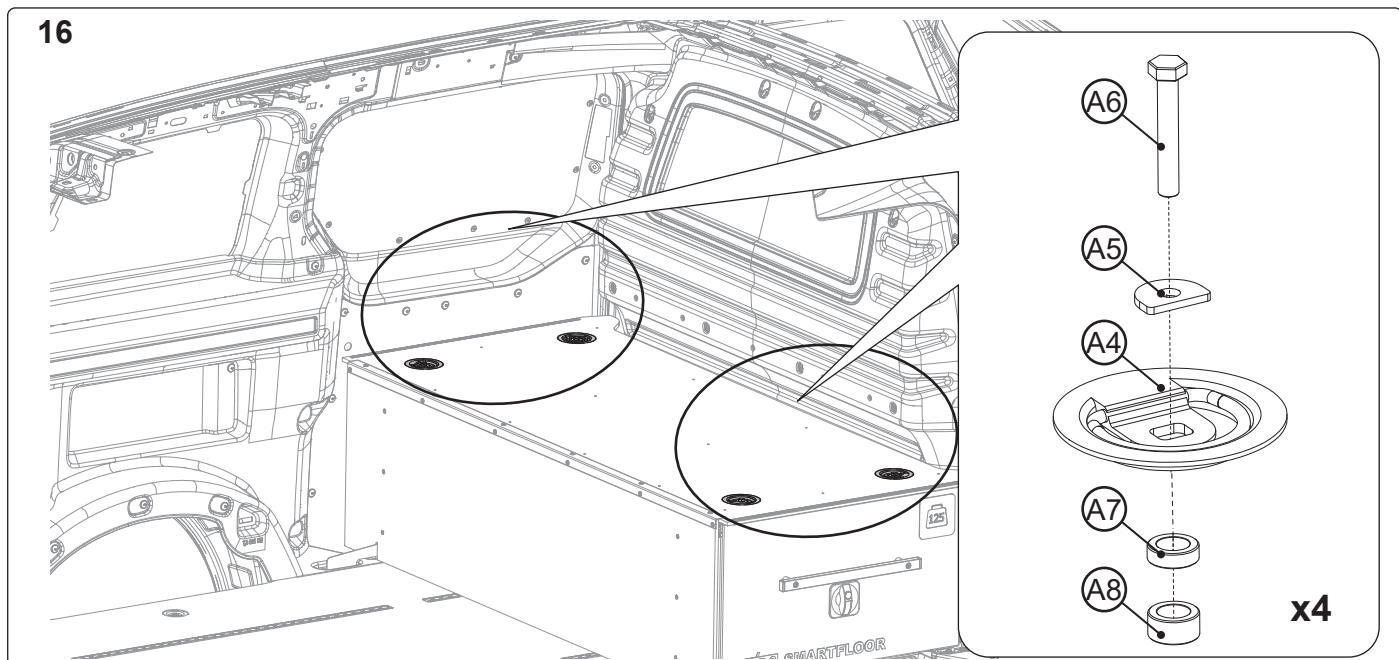


17

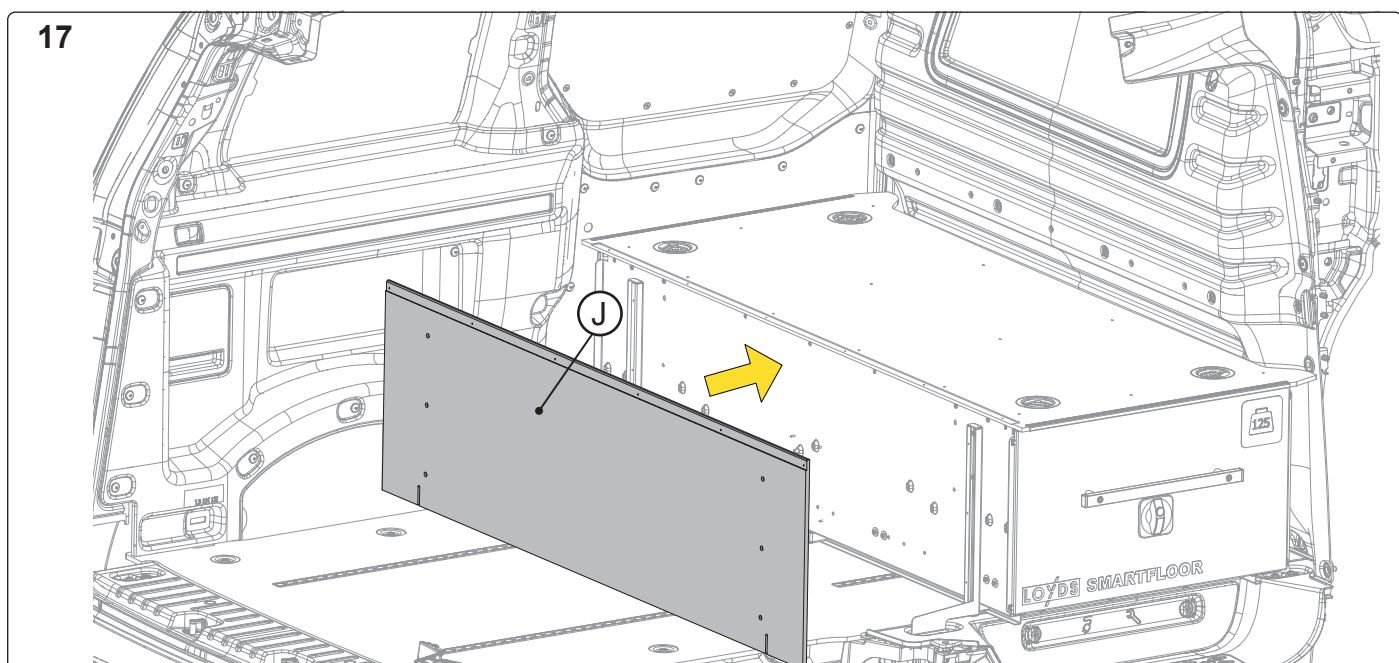


18

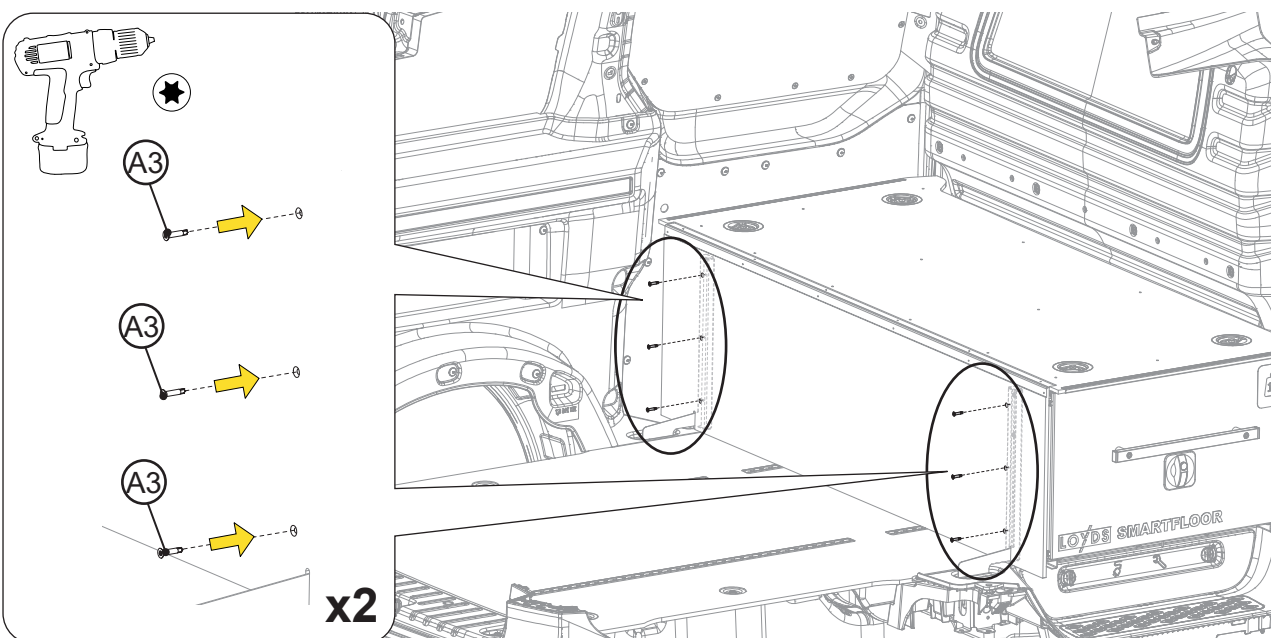


19

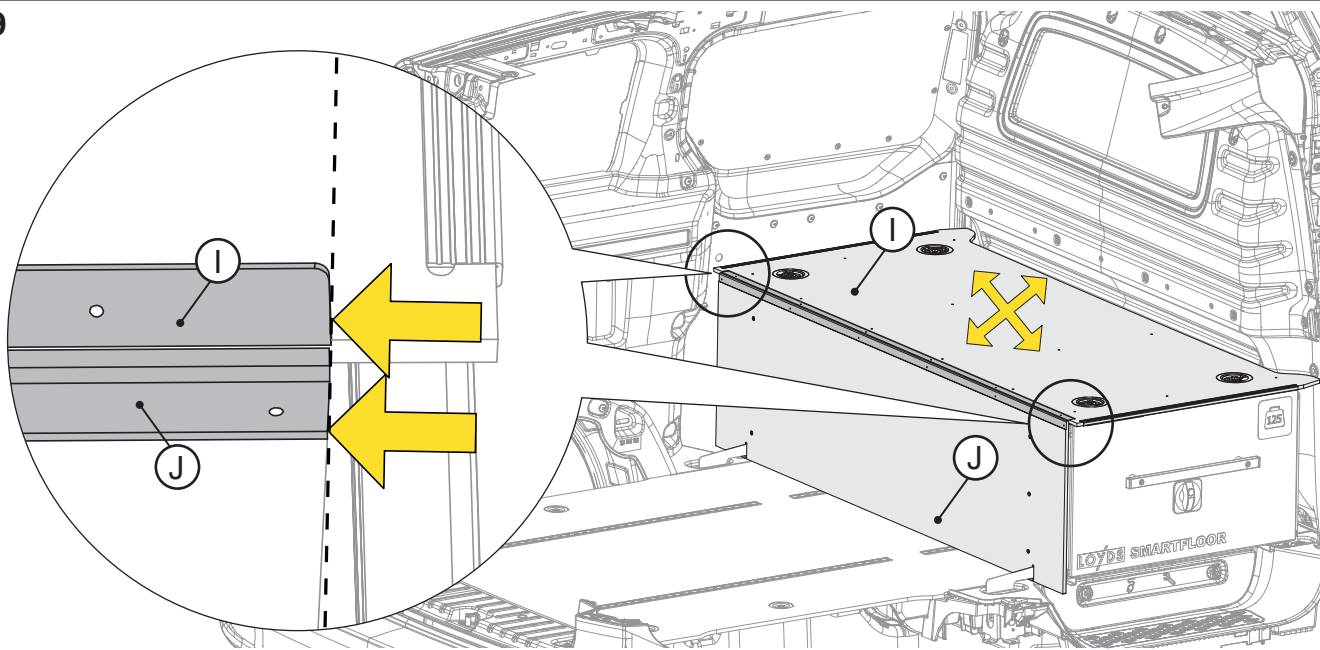


20

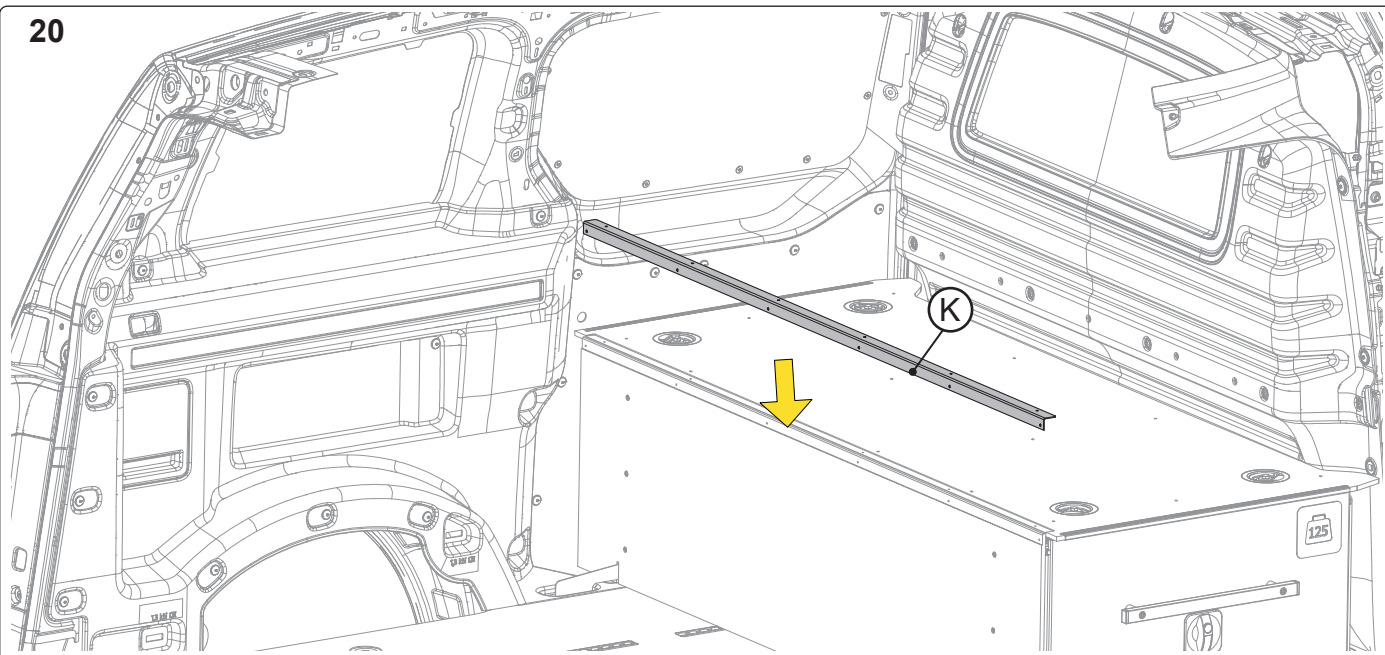


21

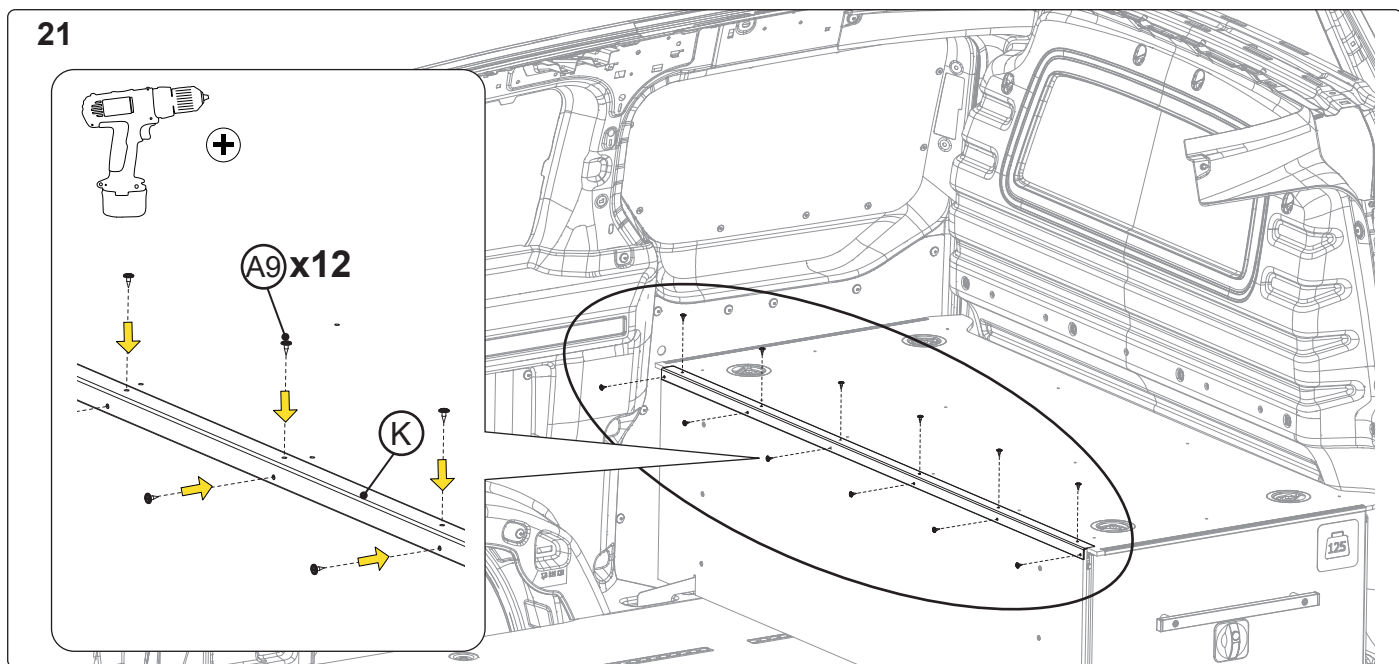


22

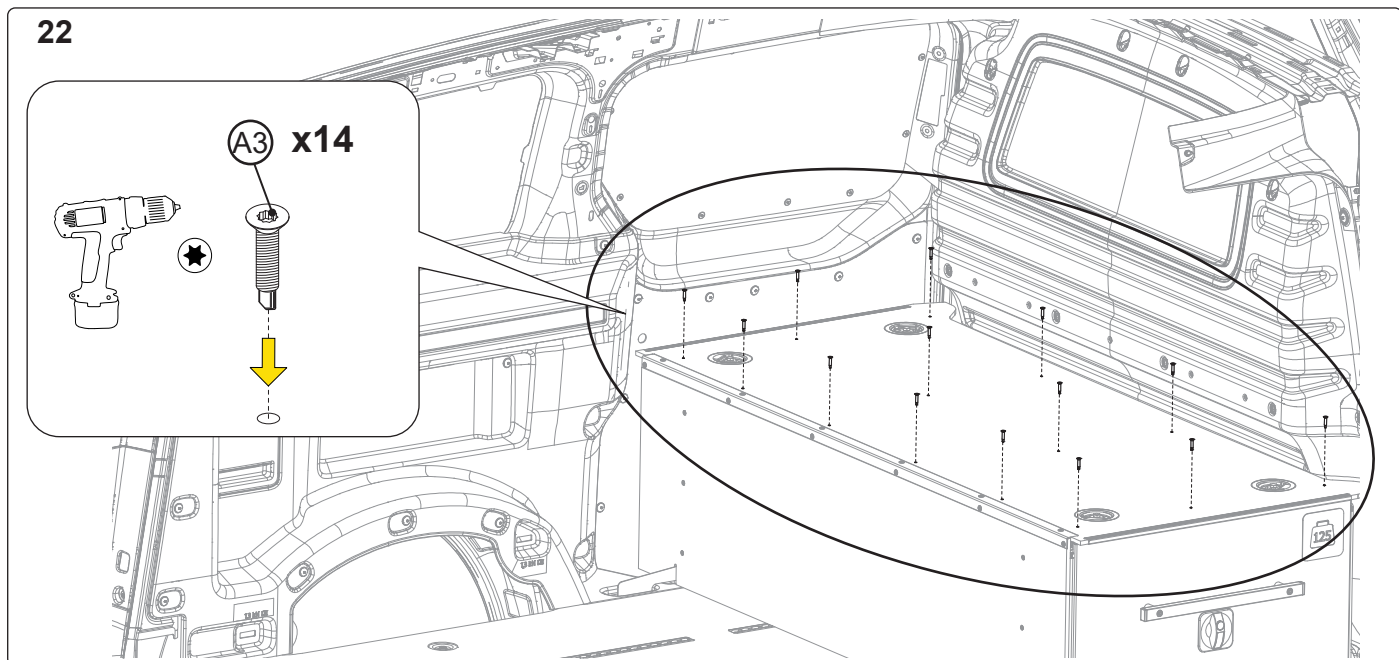

23

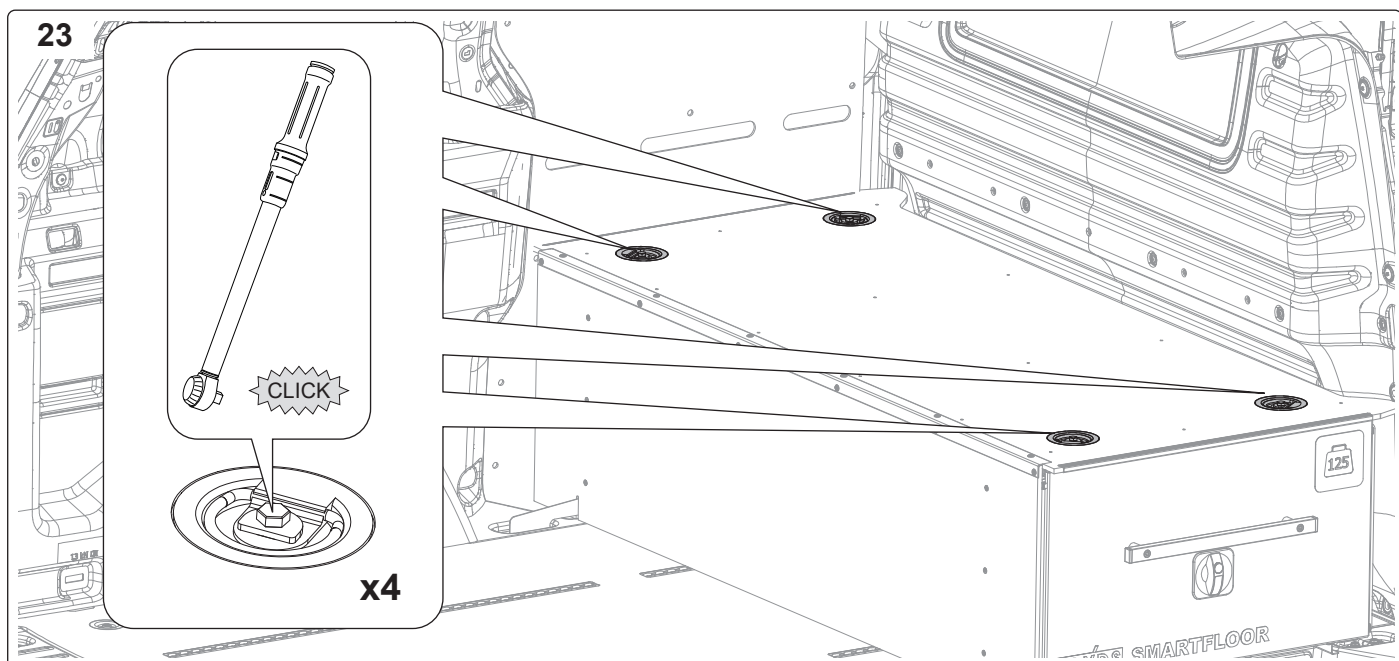

24 Only for ID Buzz Cargo with open space between smartfloor and separator wall

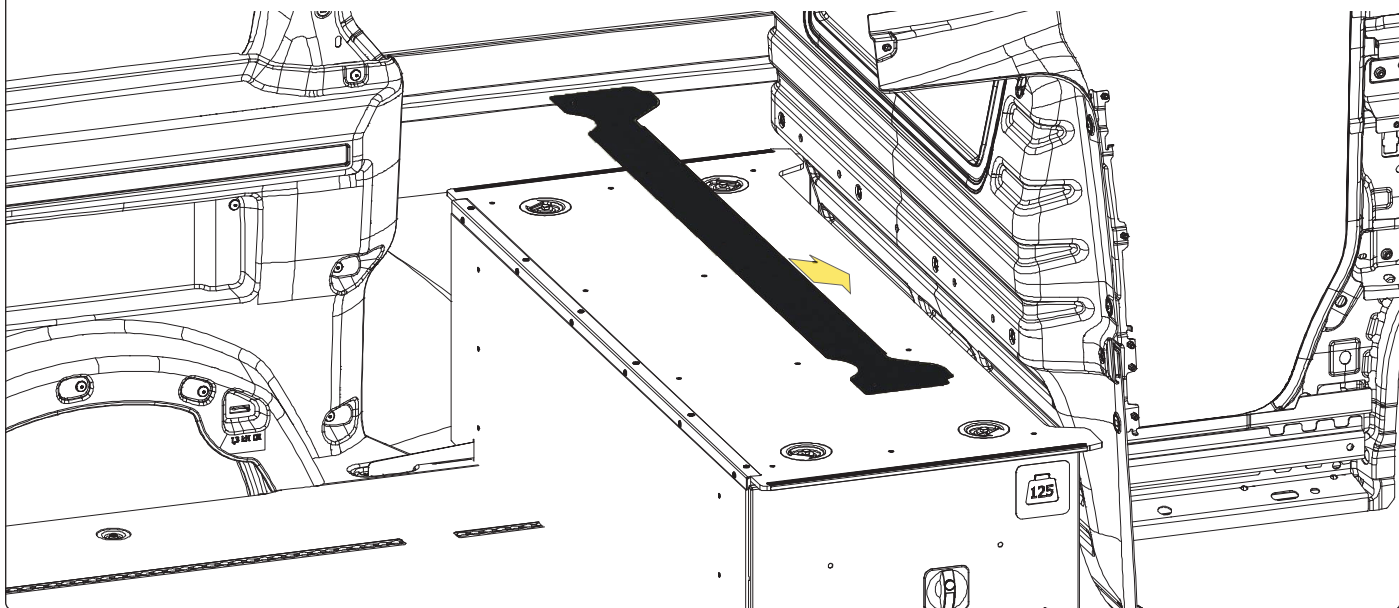

25

