


VW T6 Short/Long with/without heater
Smartfloor Rear Module

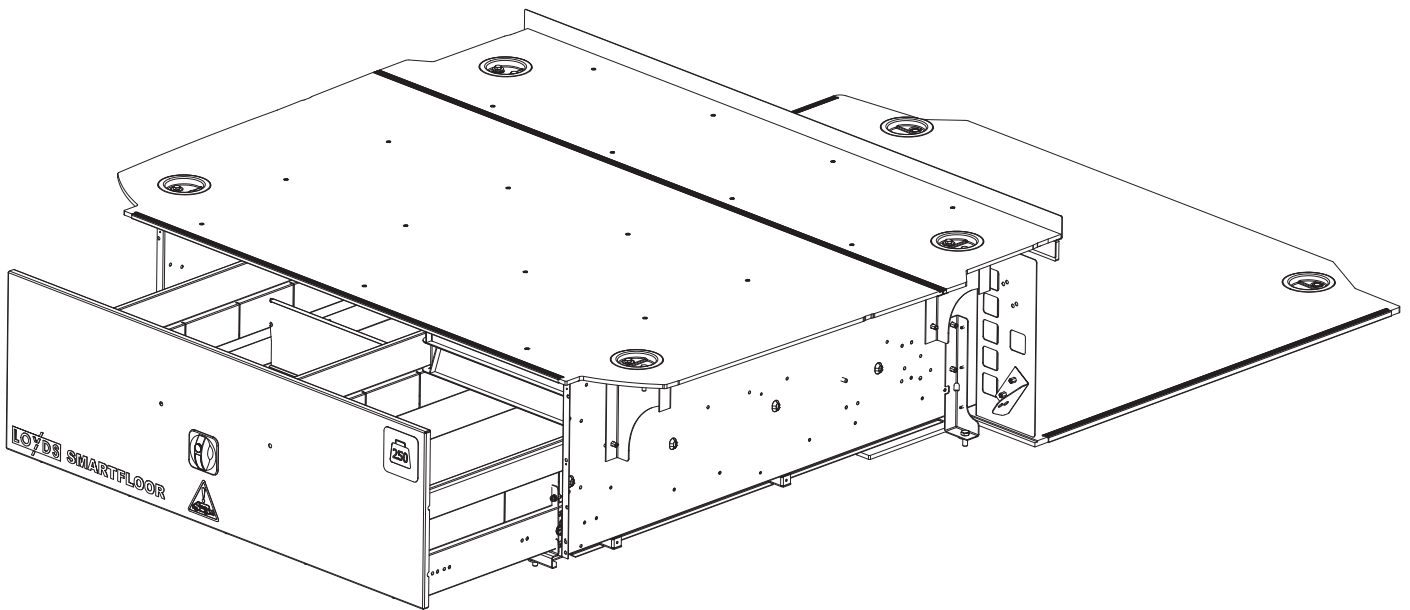

Installation Manual

Manual 15023967_A

Loyds Industri AS - 2023-03-06






Revision Record						
Rev nr	Date	Page	Picture	Update	New	Deleted steps
A	2023-03-06				X	




Use colors when printing this installation manual. / Ved utskrift, bruk farger.

Tools

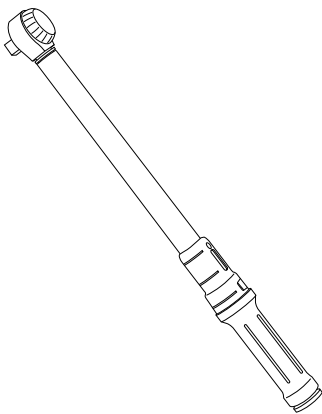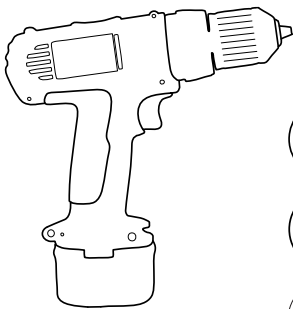


15022540 Rear Module Drawer T6 Short wo Heater SF2020

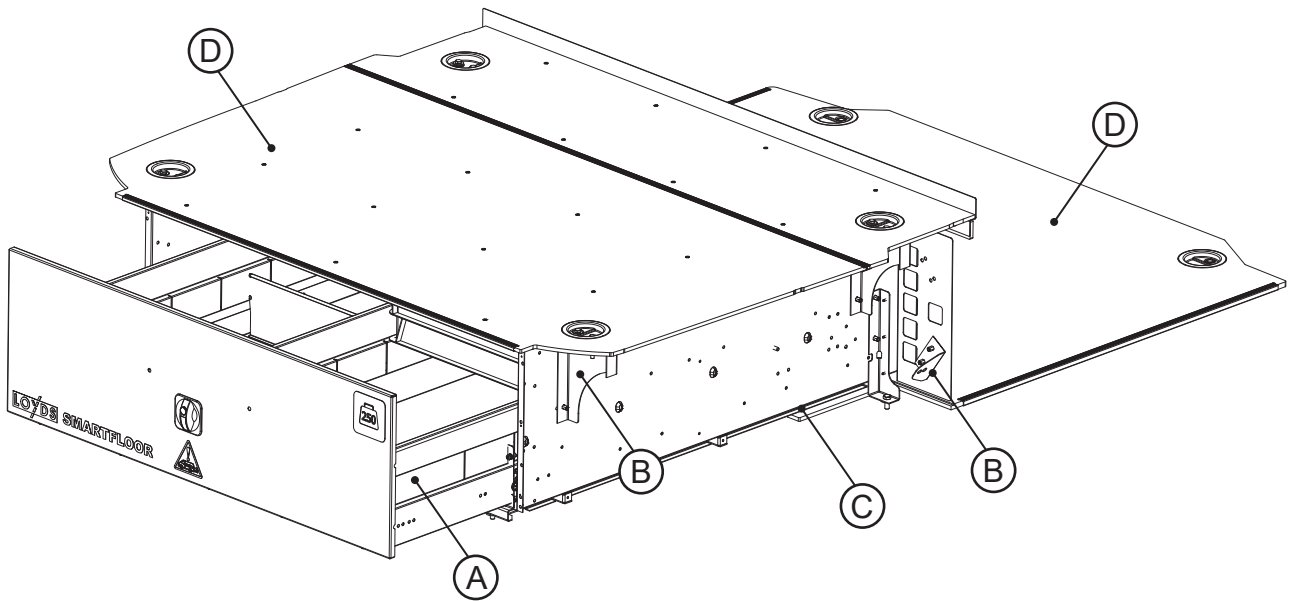


Number	Quantity	Part Number	Definition
A	1	15022501	Rear Drawer RD W1140 L1200
B	1	15022547	Steelbracket Set Rear Mod Drawer T& SF2020
C	1	15022539	Floor Spacer Set Rear Mod Drawer T6 SF2020
D	1	15022548	Floor Set Rear Mod Drawer T6 Short wo Heater SF2020

15022541 Rear Module Drawer T6 Short w Heater SF2020

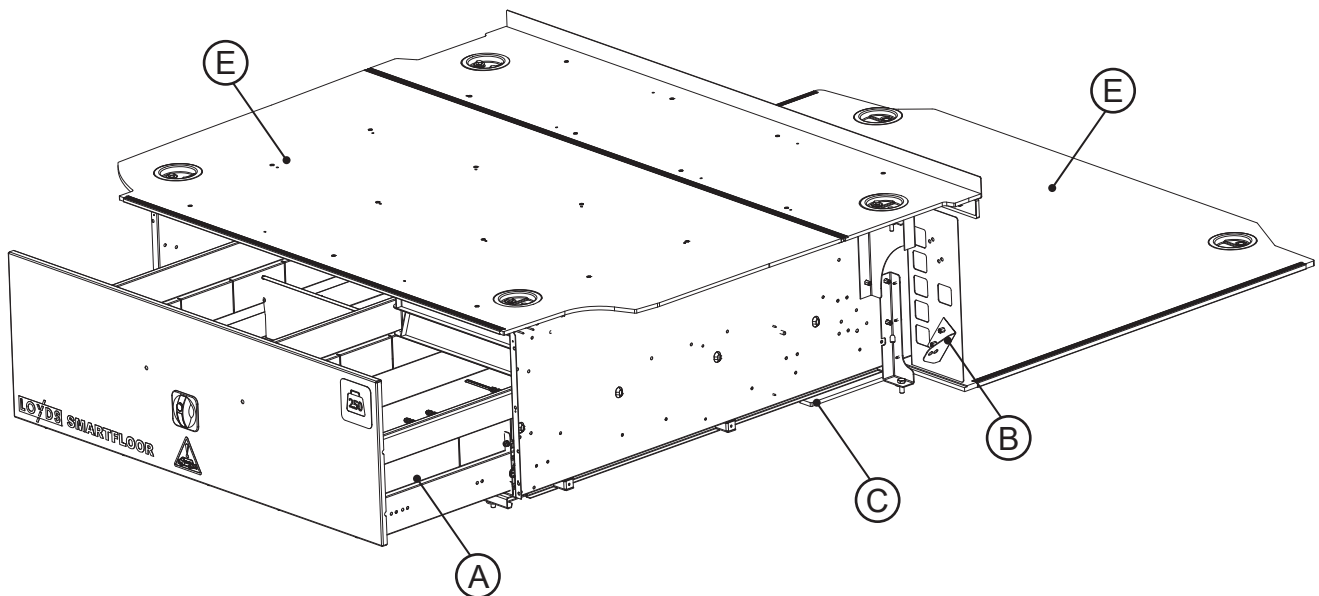


Number	Quantity	Part Number	Definition
A	1	15022501	Rear Drawer RD W1140 L1200
B	1	15022547	Steelbracket Set Rear Mod Drawer T& SF2020
C	1	15022539	Floor Spacer Set Rear Mod Drawer T6 SF2020
E	1	15022551	Floor Set Rear Mod Drawer T6 Short w Heater SF2020

15022542 Rear Module Drawer T6 Long wo Heater SF2020

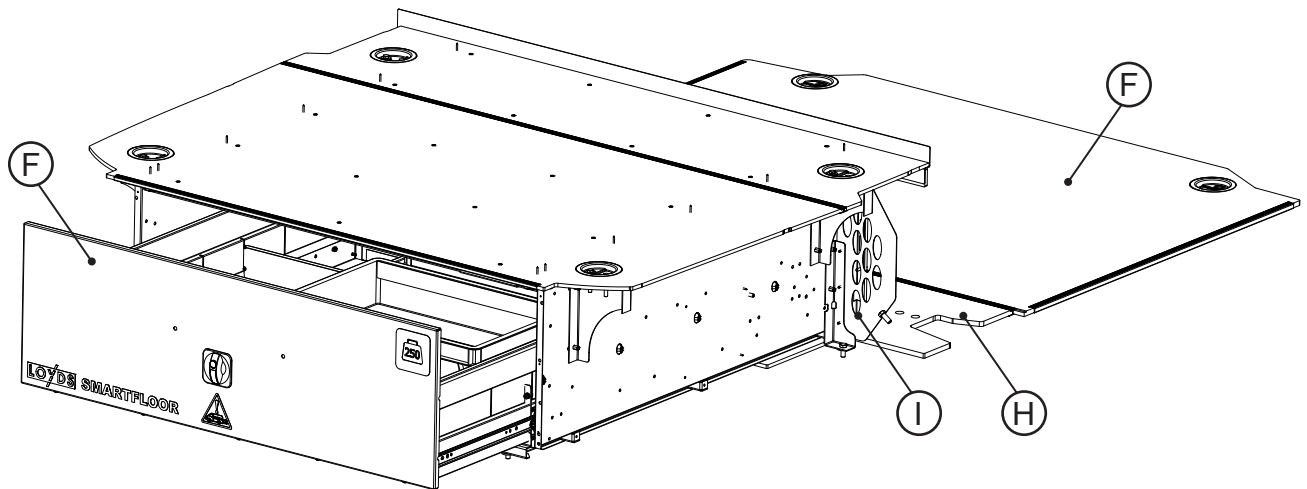


Number	Quantity	Part Number	Definition
F	1	15022540	Rear Module Drawer T6 Short wo Heater SF2020
H	1	15022537	Floor Support Set T6 Long SF2020
I	1	15023539	Side Cover Set SLD T6 Long SF2020

15022549 Rear Module Drawer T6 Long w Heater SF2020

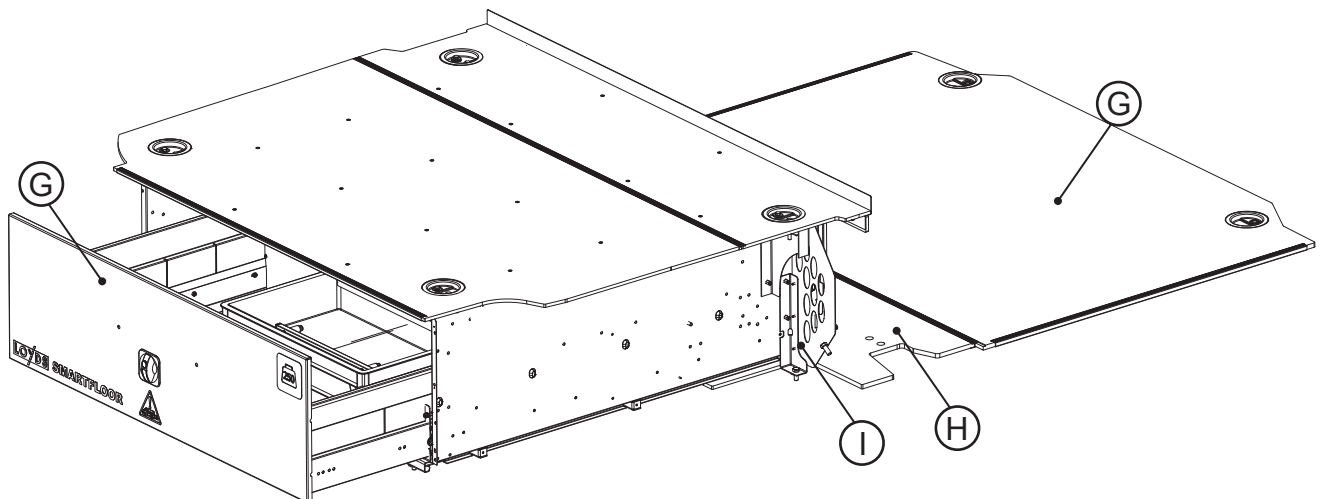



Number	Quantity	Part Number	Definition
G	1	15022541	Rear Module Drawer T6 Short w Heater SF2020
H	1	15022537	Floor Support Set T6 Long SF2020
I	1	15023539	Side Cover Set SLD T6 Long SF2020

15022547 Steelbracket Set Rear Mod Drawer T6 SF2020

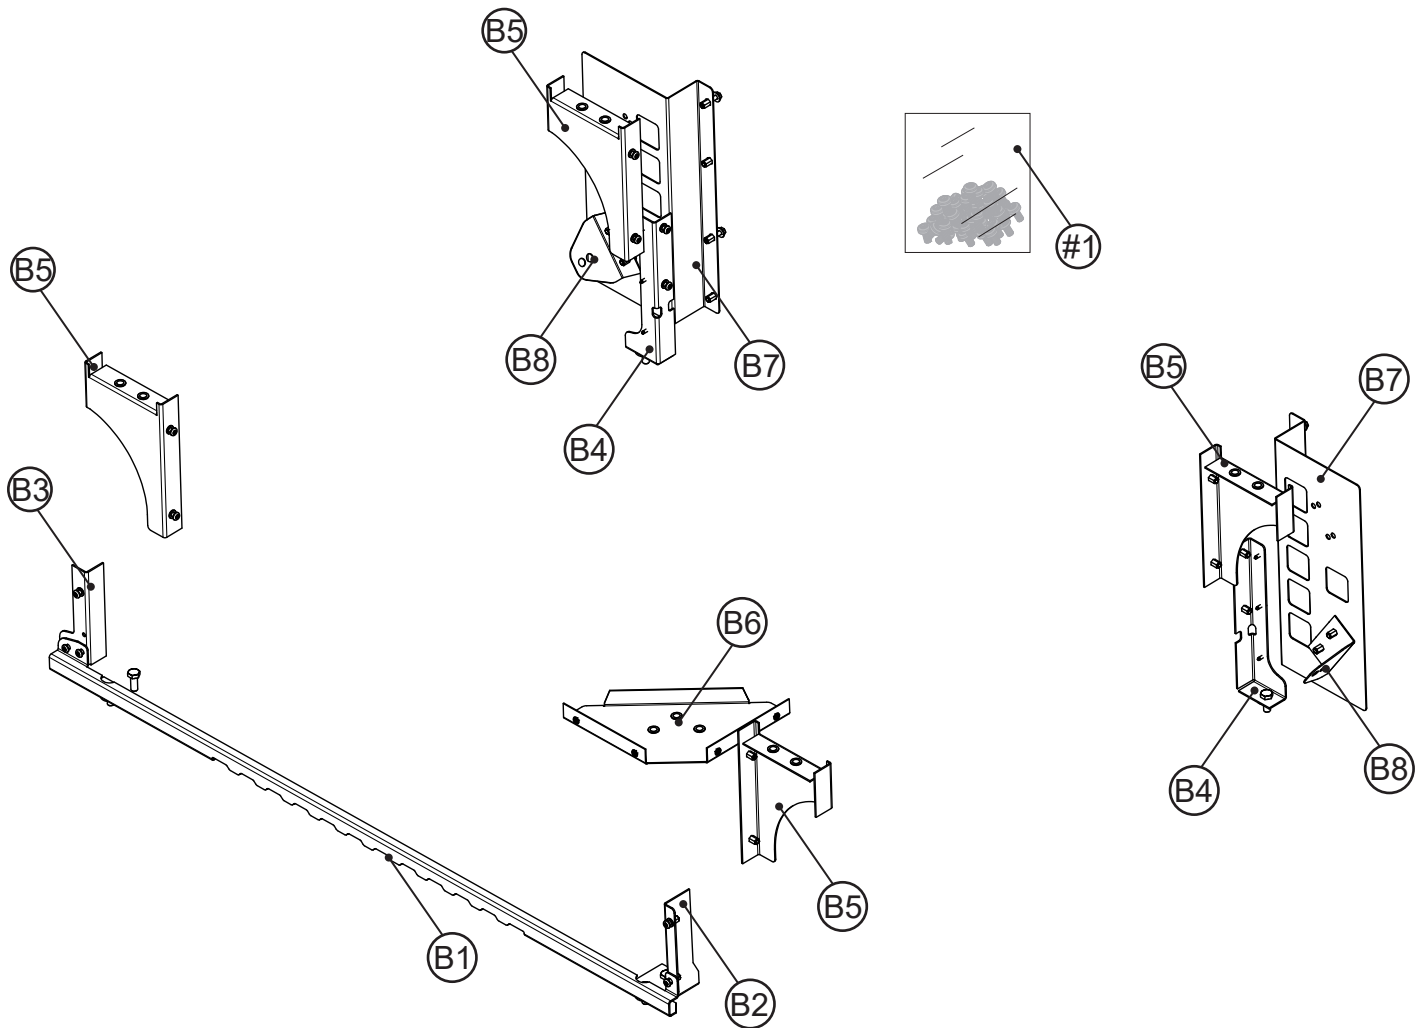



Number	Quantity	Part Number	Definition
B1	1	15018443	Bracket Lower Rear Middle T6
B2	1	15021172	Bracket Lower Rear Right T6 ASSY
B3	1	15021171	Bracket Lower Rear Left T6 ASSY
B4	2	15020617	Bracket Veh Floor Short Latchfix T6 ASSY
B5	4	15020618	Bracket Latchcup Side M8 T6 ASSY
B6	1	15018460	Bracket Latch Inner 8mm ASSY
B7	2	15021199	Bracket Rear Rear Mod Drawer ASSY
B8	2	15022538	Bracket Latch-fix Rear Mod Drawer T6 SF2020 ASSY
#1	1	15022546	Fitting Kit Steelbracket Set Rear Mod Drawer T6 SF2020

15023539 Side Cover Set SLD T6 Long SF2020

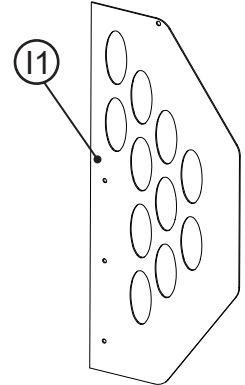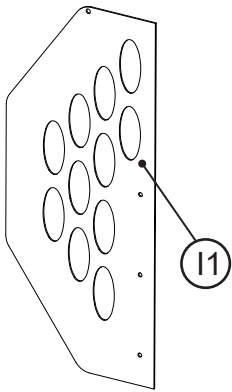


Number	Quantity	Part Number	Definition
I1	2	15022511	Cover SLD Rear L&R T6 Long 2020

15022539 Floor Spacer Set Rear Mod Drawer T6 SF2020

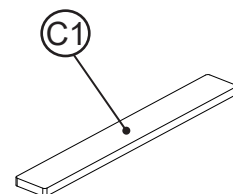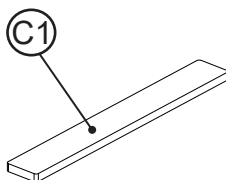


Number	Quantity	Part Number	Definition
C1	2	05-99626	Avstandskloss 300x40x9

15022537 Floor Set Rear Mod Drawer T6 Short wo Heater SF2020

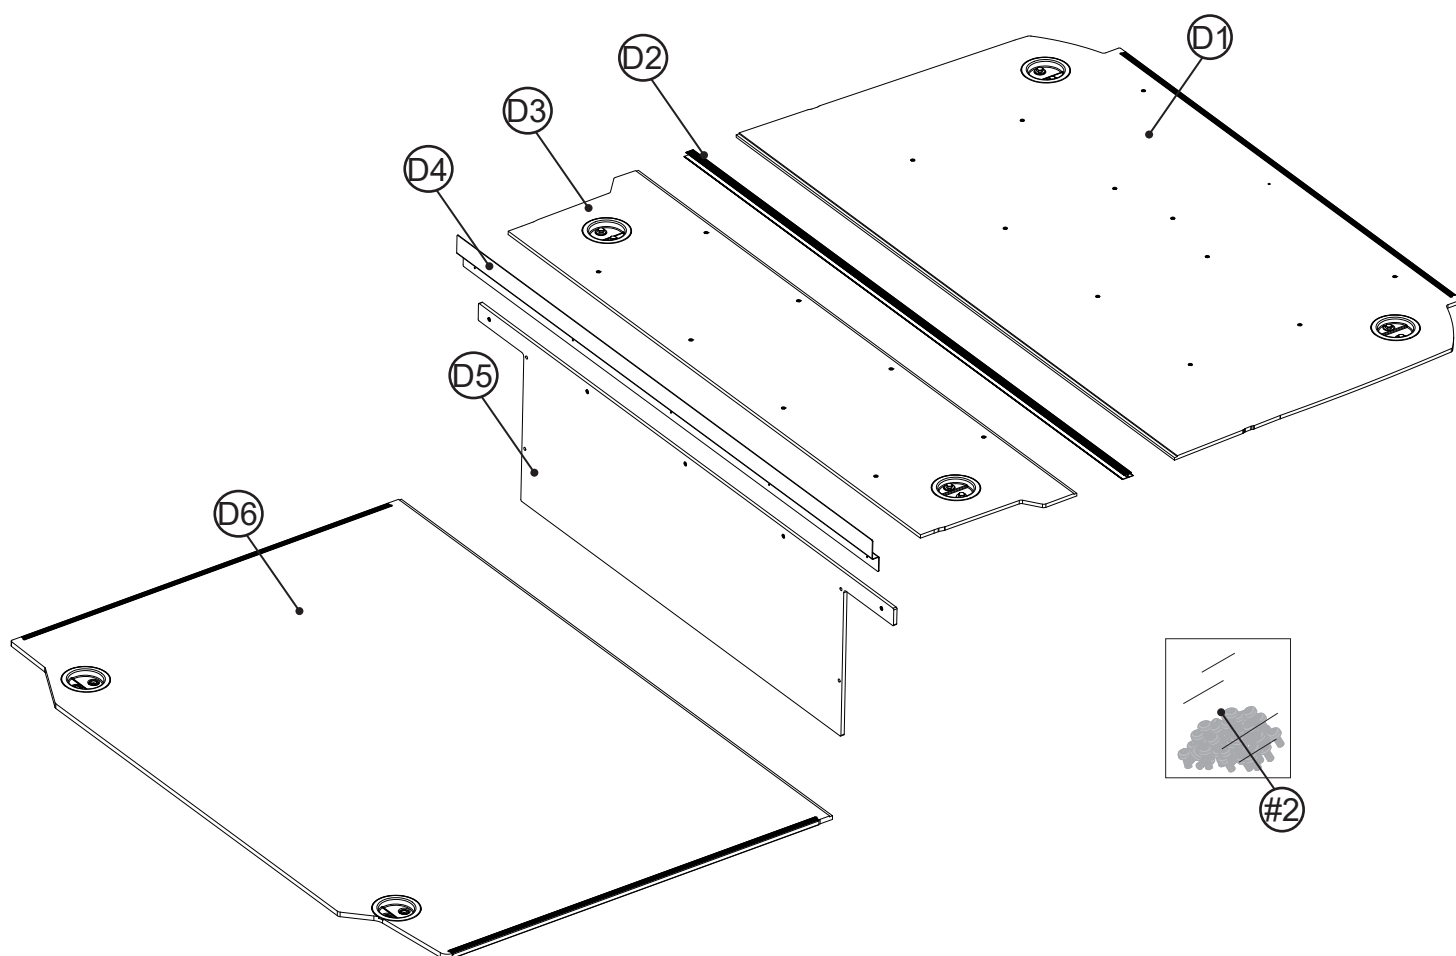


Number	Quantity	Part Number	Definition
D1	1	15022758	Floor Rear 9mm T6 Assy
D2	1	15022756	H-profile 9mm L=1676
D3	1	15021208	Floor Middle 9mm Rear Mod Drawer T6 Short wo Heater
D4	1	15021207	Stopper Bracket Rear Mod Drawer T6
D5	1	15021206	Vertical Floor 9mm Rear Mod Drawer wo Heater
D6	1	15022544	Floor Front 12mm Rear Mod Drawer T6 Short ASSY
#2	1	15022545	Fitting Kit Floor Set Rear Mod Drawer Short T6 SF2020

15022551 Floor Set Rear Mod Drawer T6 Short w Heater SF2020

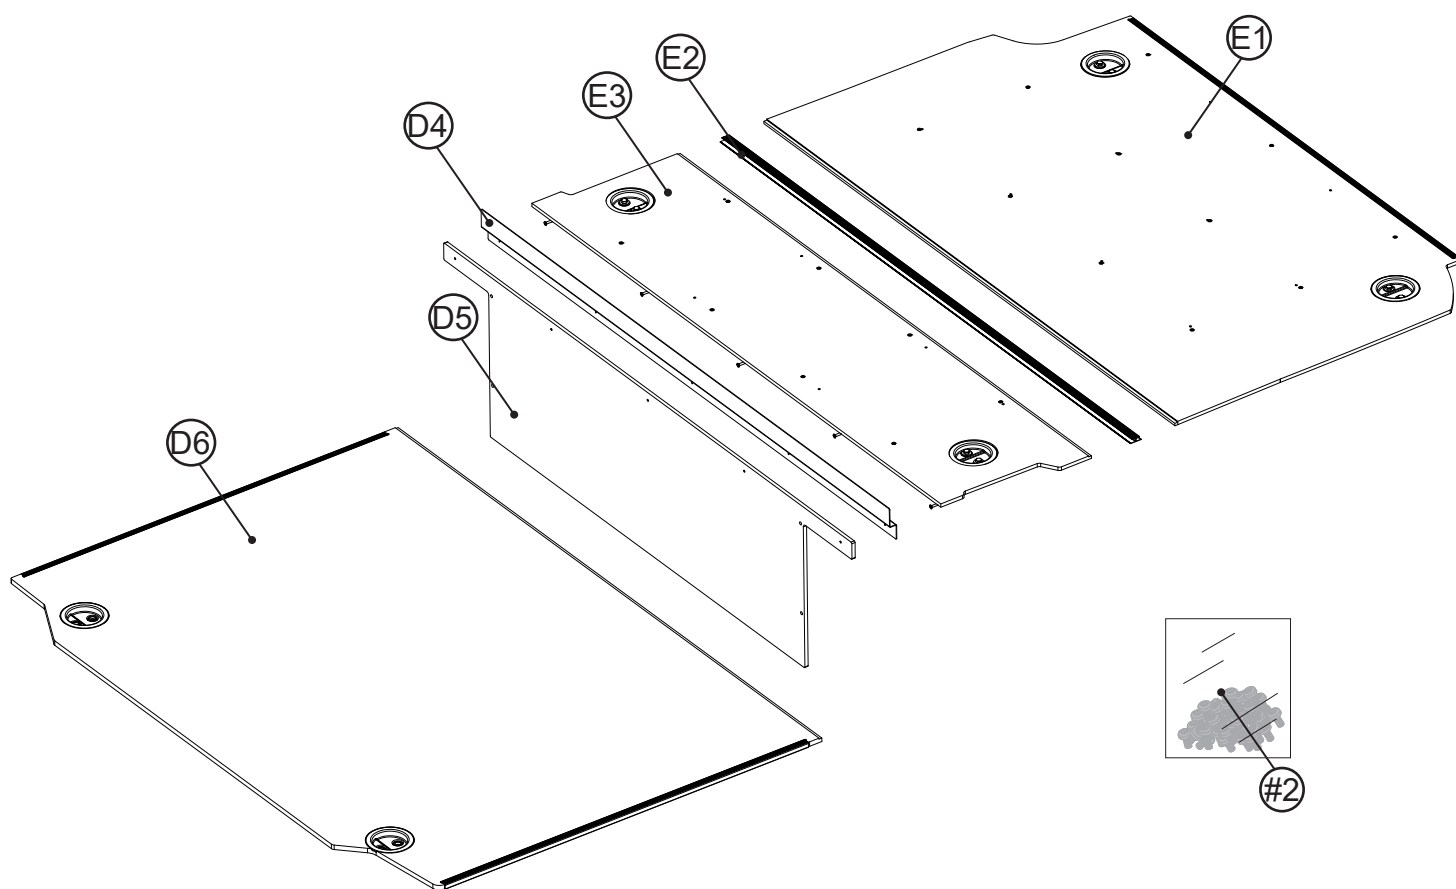


Number	Quantity	Part Number	Definition
E1	1	15022491	Floor Rear 9mm w Heater T6 ASSY
E2	1	15022757	H-profile 9mm L=1596
E3	1	15021209	Middle Floor 9mm Rear Mod Drawer T6 Short w Heater
D4	1	15021207	Stopper Bracket Rear Mod Drawer T6
D5	1	15021206	Vertical Floor 9mm Rear Mod Drawer wo Heater
D6	1	15022544	Floor Front 12mm Rear Mod Drawer T6 Short ASSY
#2	1	15022545	Fitting Kit Floor Set Rear Mod Drawer Short T6 SF2020

15022537 Floor Support Set T6 Long SF2020

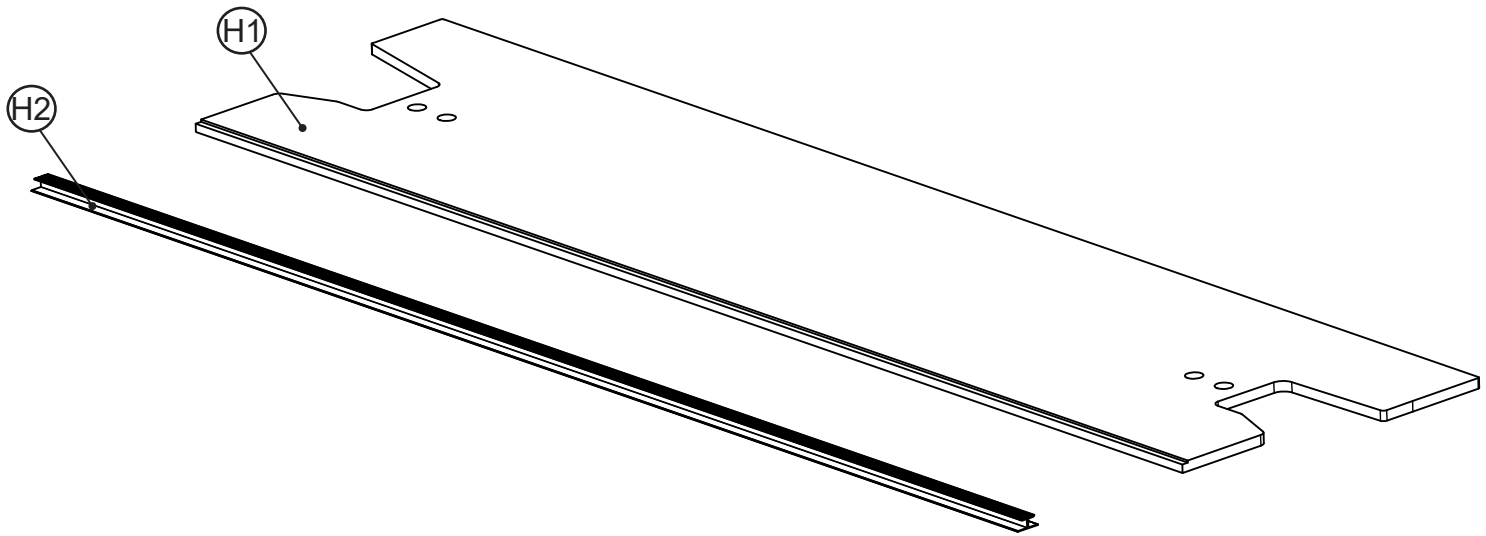


Number	Quantity	Part Number	Definition
H1	1	15022506	Floor Middle 12mm Front Mod Drawer T6 SF 2020
H2	1	15022529	H-profile 12mm L=1563

15010236 Handle Assy

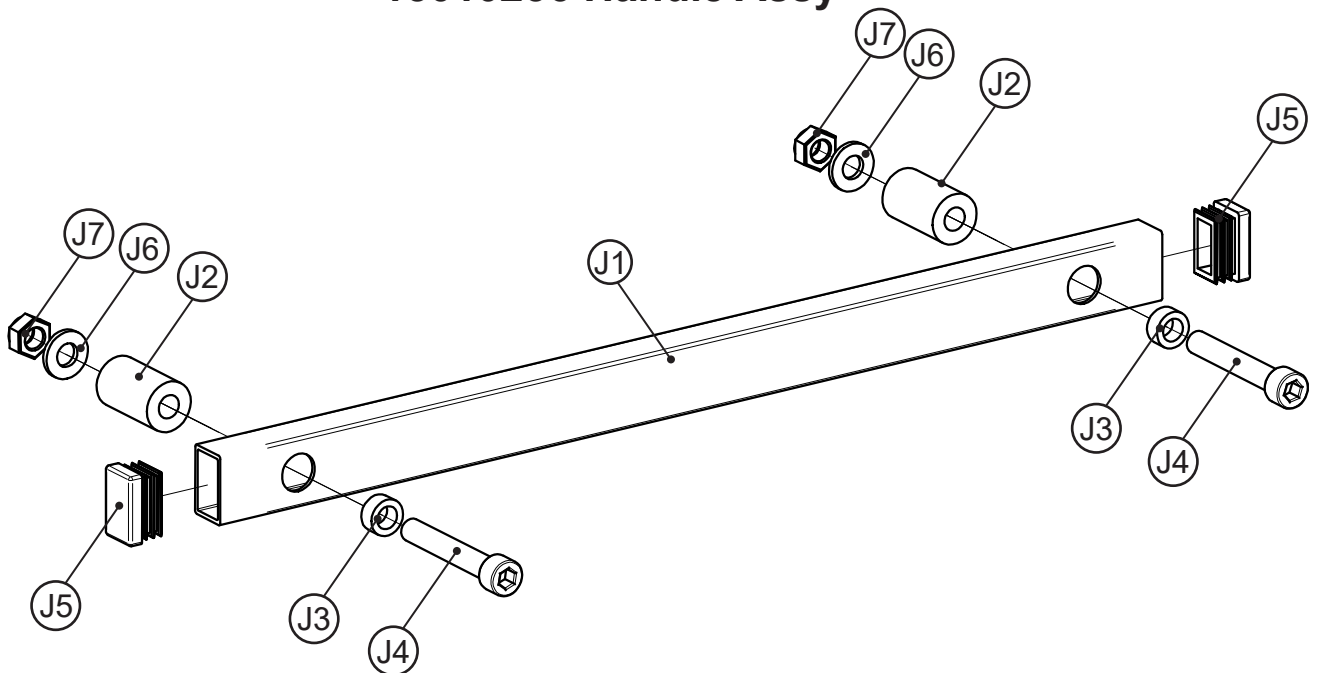


Number		Quantity	Part Number	Definition
J	J1	1	15009441	Handle Tube 25x15x286
	J2	2	15009442	Spacer Ø8,3x18x30 Nylon Black
	J3	2	15009443	Spacer Ø8,1x13x6mm Galv
	J4	2	15009444	Screw M8x50 Cylinderh Hex
	J5	2	15009438	End sleeve Black
	J6	2	8,4x17x2	M8 Washer, DIN 125
	J7	2	8 NMU	Mutter M8 Nyloc DIN985

#1 15022546 Fitting Kit Steelbracket Set Rear Mod Drawer T6 SF2020

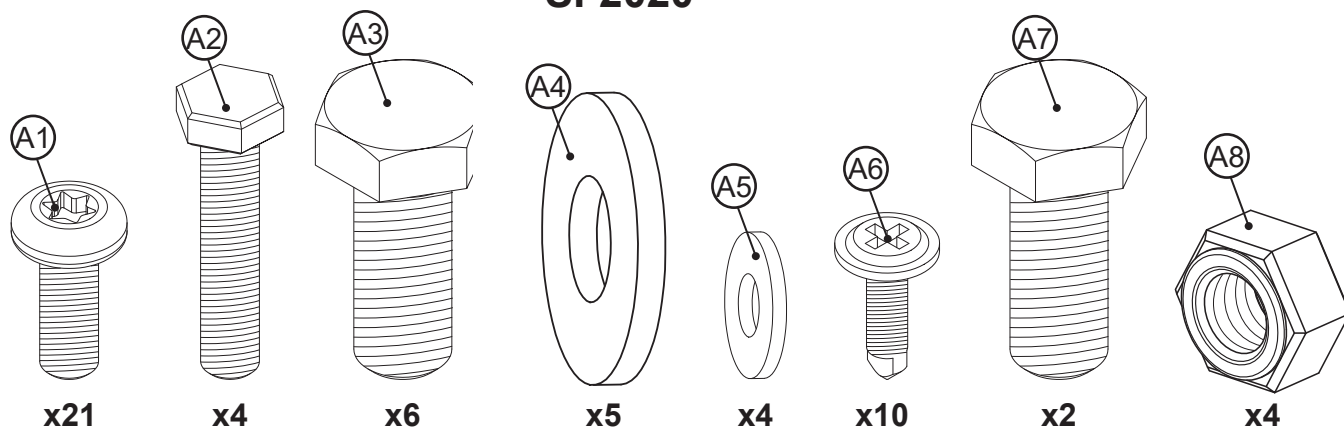

A1	15003551 M6x16 TX30 pan (DIN 7985)
A2	6x30 6K Skrue 6x30 6-K S-127, Din 933, Elz
A3	10X25 6K Skrue, M10x25 Din933 6K , ElZn
A4	15009916 Washer 30x13x3 Elz
A5	6,4x15x1,5 M6 Washer, DIN 522
A6	4,2x16 FLS Platescrew selfdrilling E45759 Black
A7	7-16x25 7/16X1' UNF Bolt, S-82
A8	6 NMU M6 Self locking nut, DIN 985-8

#2 15022545 Fitting Kit Floor Set Rear Mod Drawer Short T6 SF2020




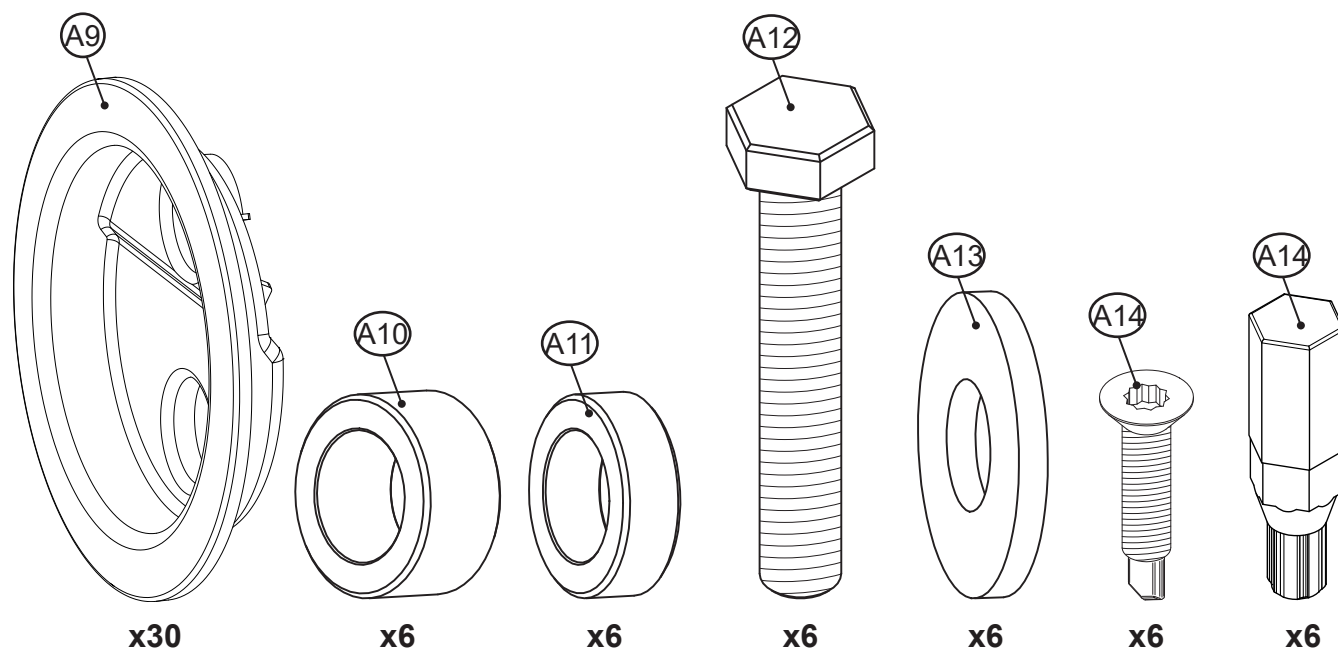


A9	15006240 Plastic Cover Latchcup VW 2013
A10	13x20x10 Spacer, U-710
A11	13x20x6,4 Spacer, U-709
A12	15004713 M8x50 screw, 6K DIN 933 Black, ElZn+Cr3
A13	15004714 Washer 8,4x23x2mm DIN 9021 Black, ElZn+Cr3
A14	15016947 Screw 4,8x25 Selfdrill Counters Torx Elz
A15	15022494 Bits Skrue RW25 L25mm


1

Old type:




New type:

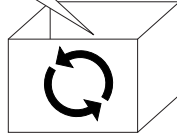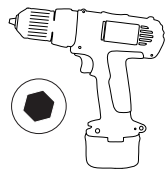



x4

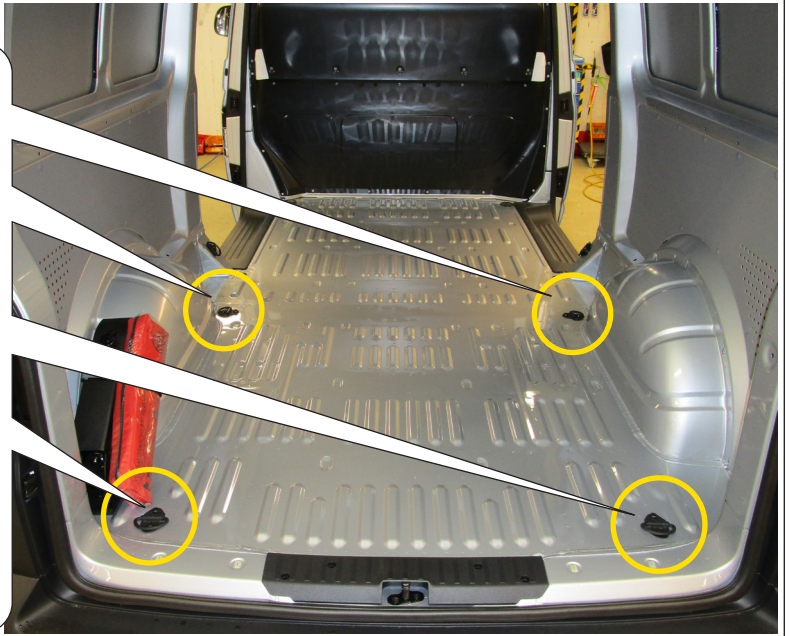

2

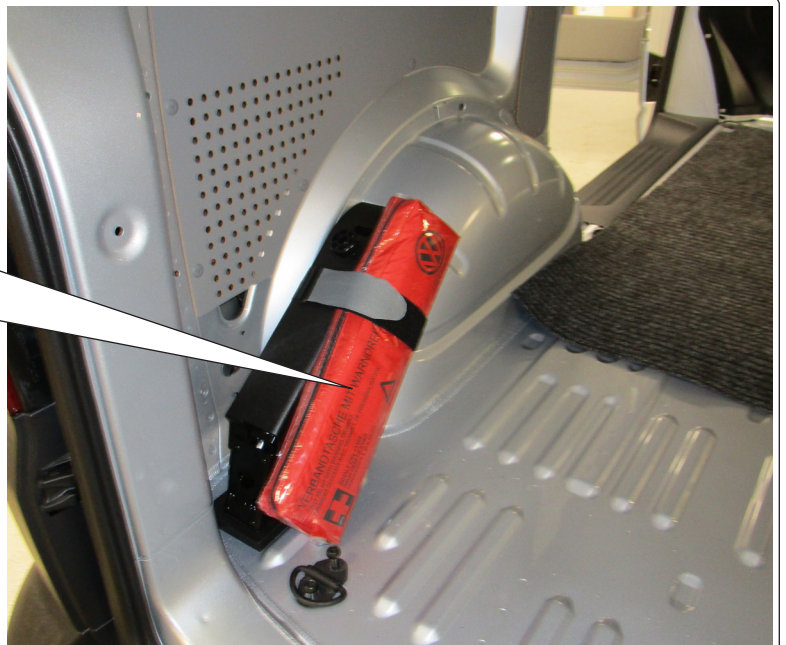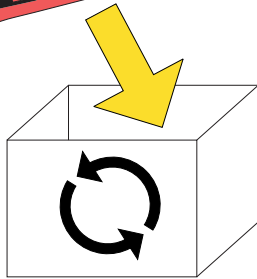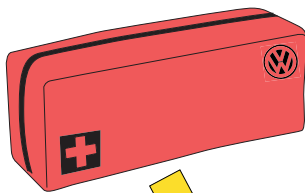


3

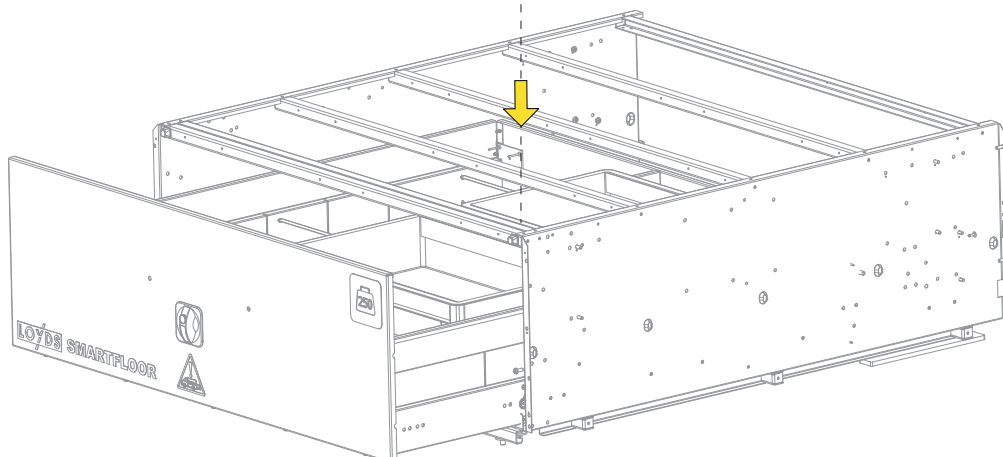





FOR T6 WITH HEATER ONLY




4

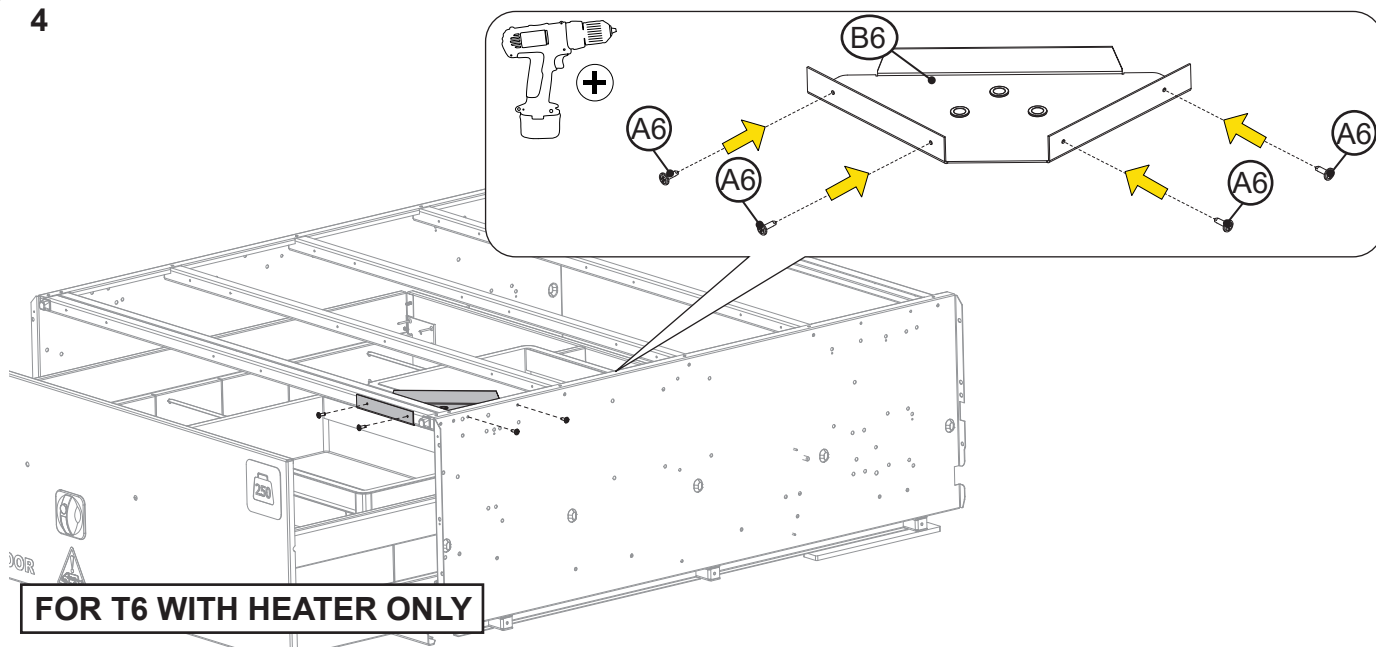

5

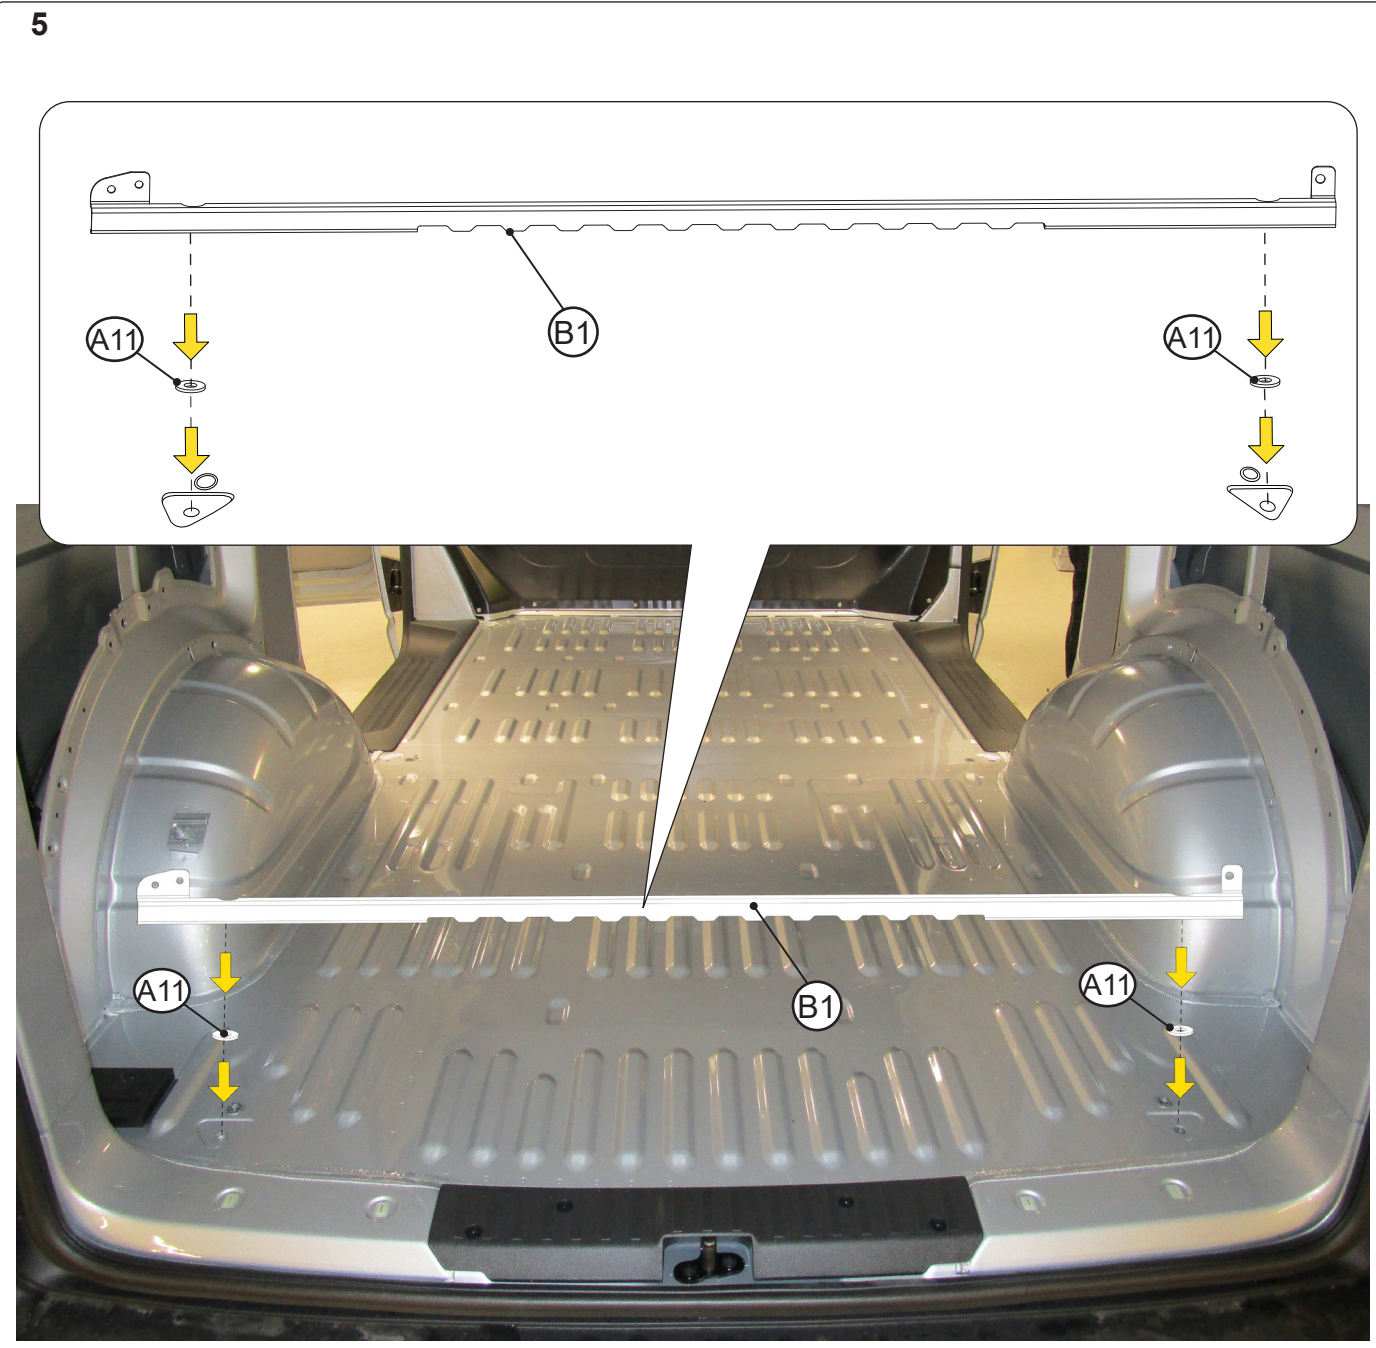

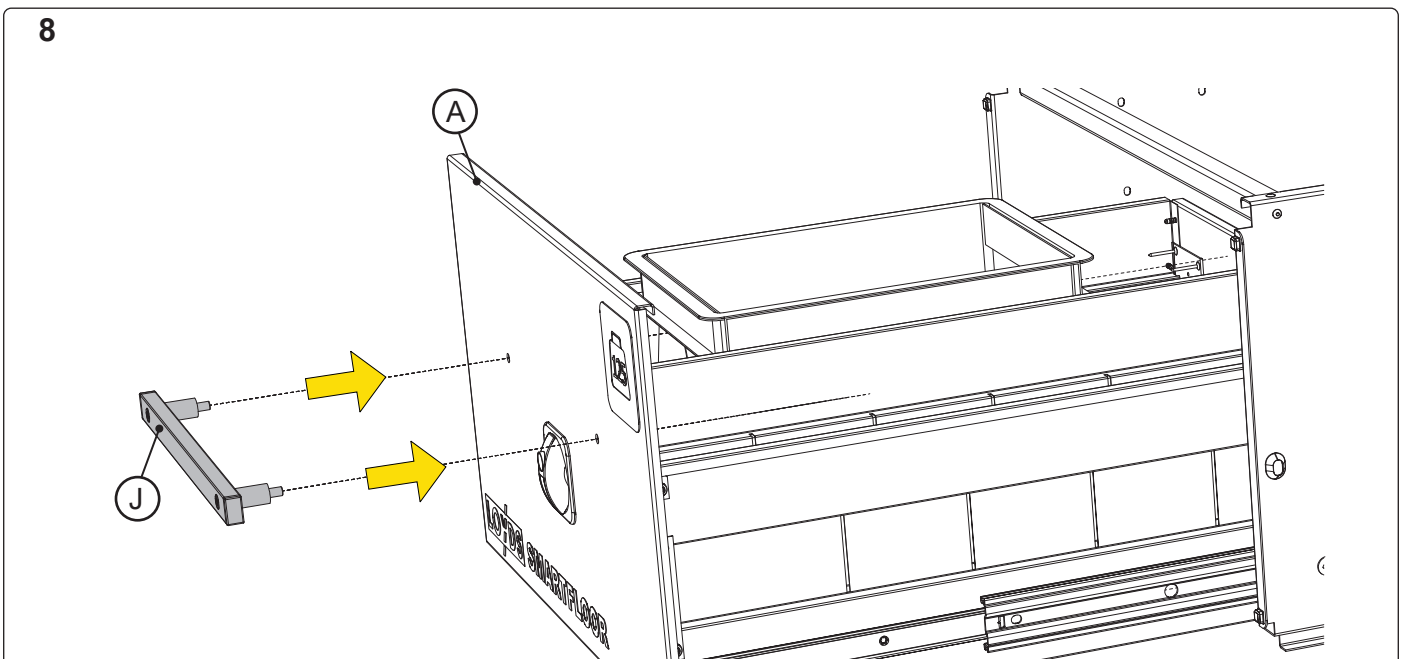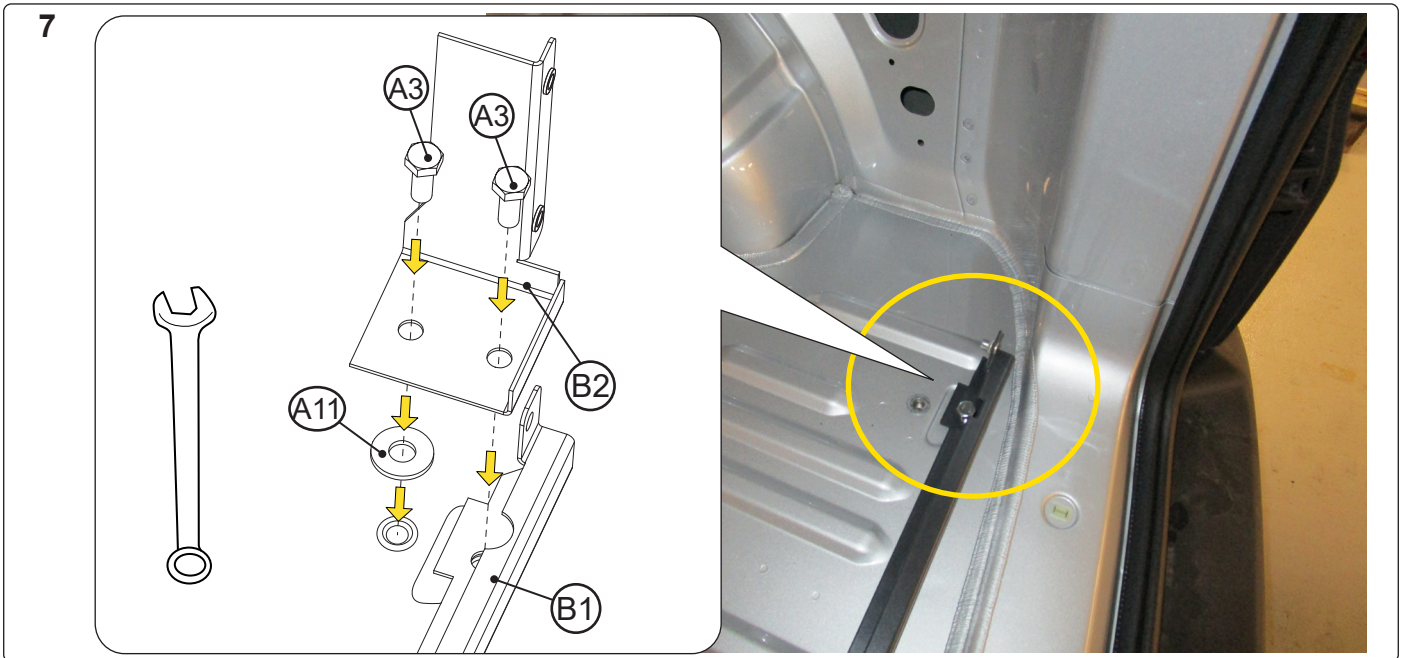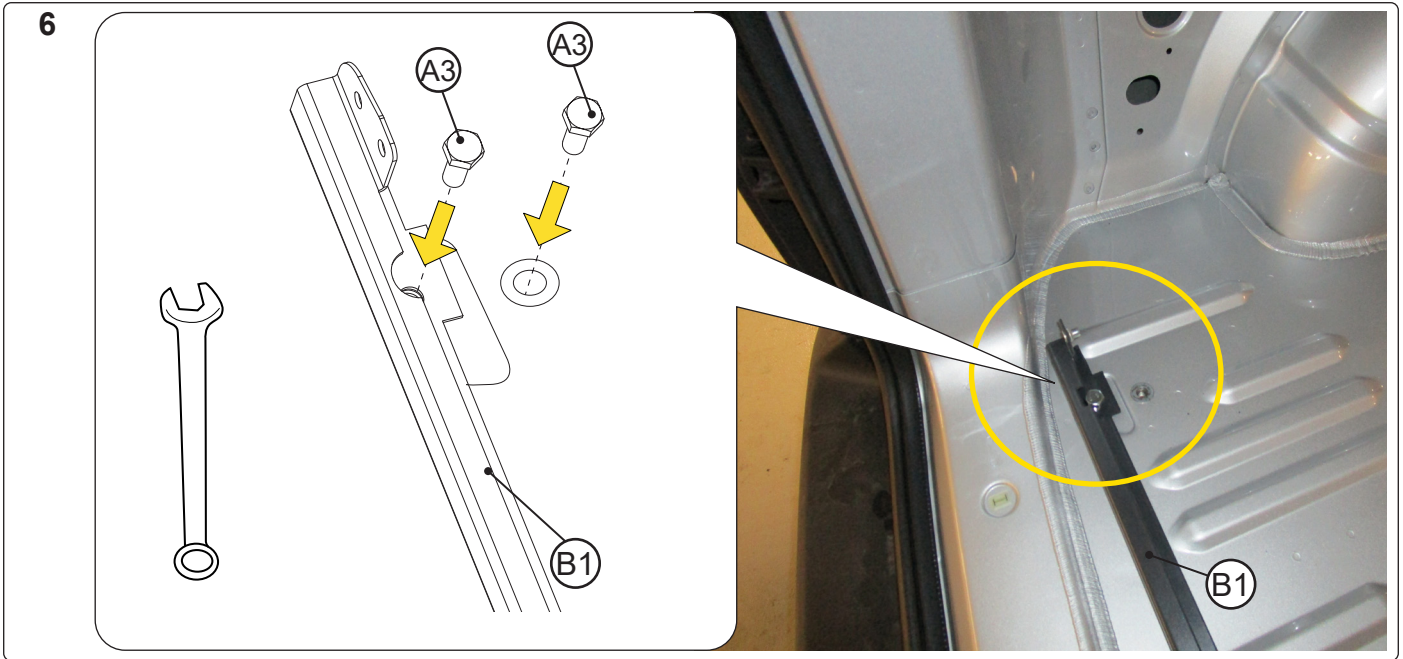


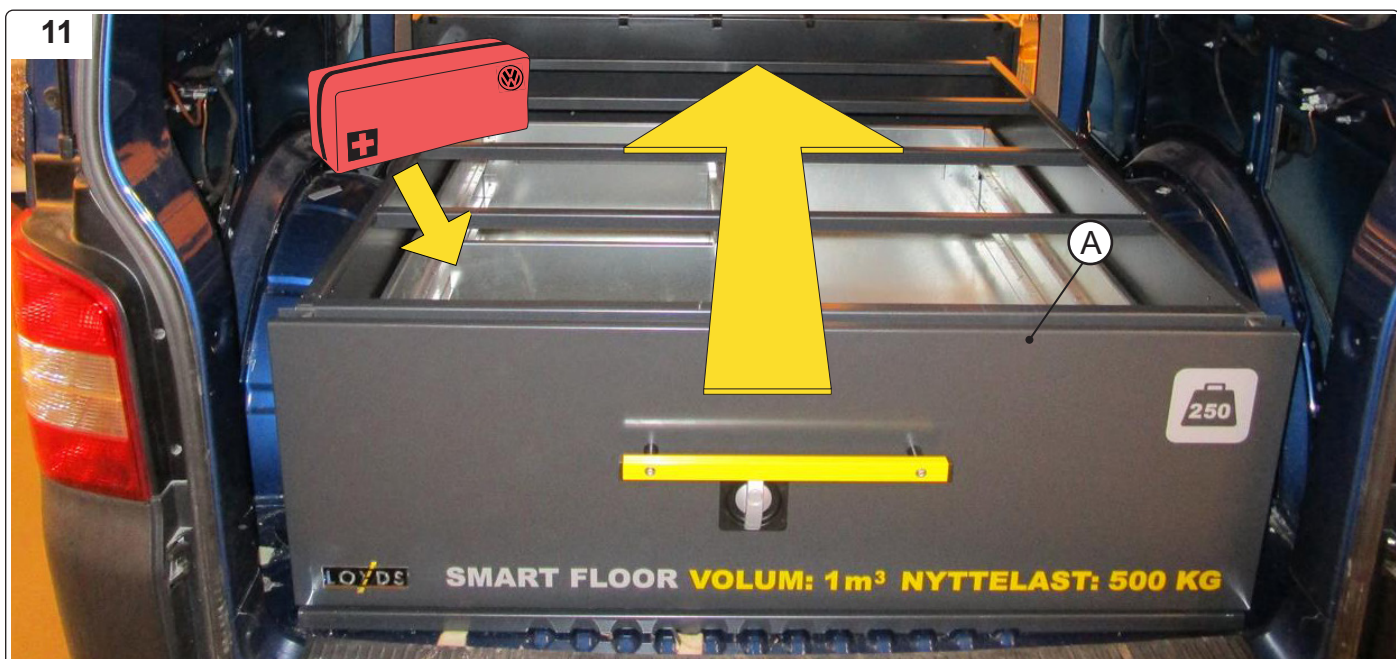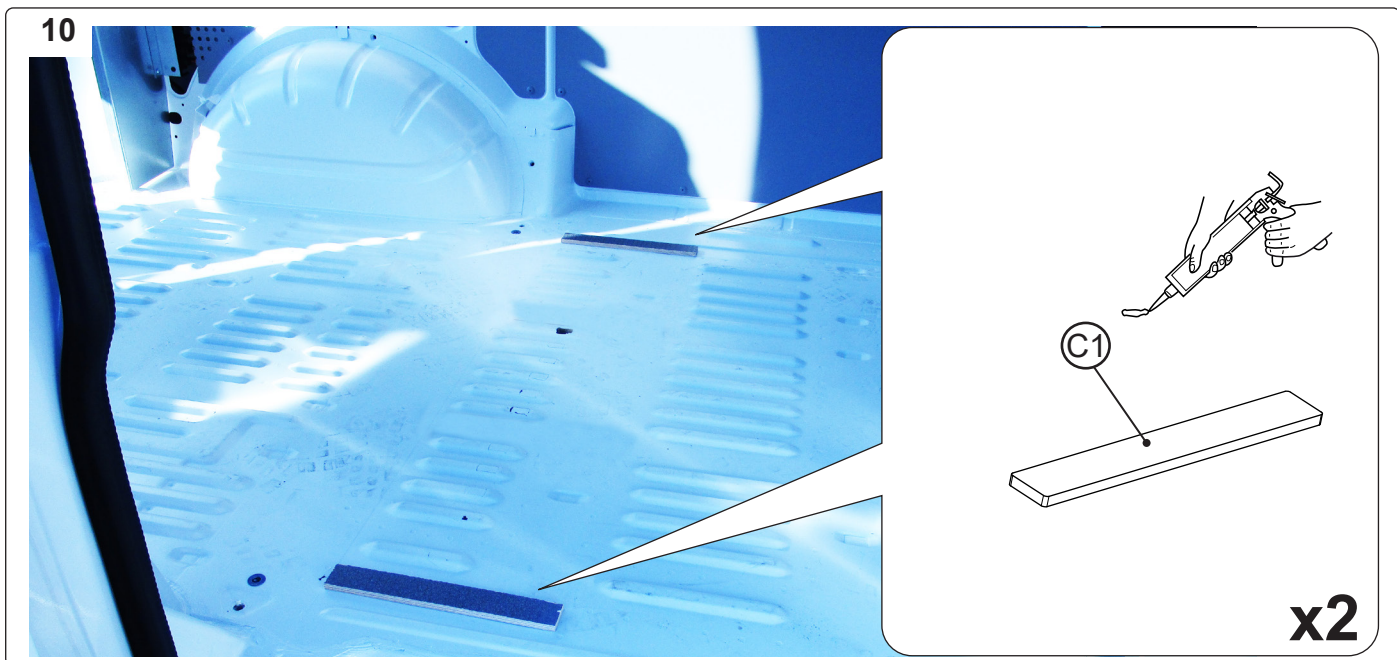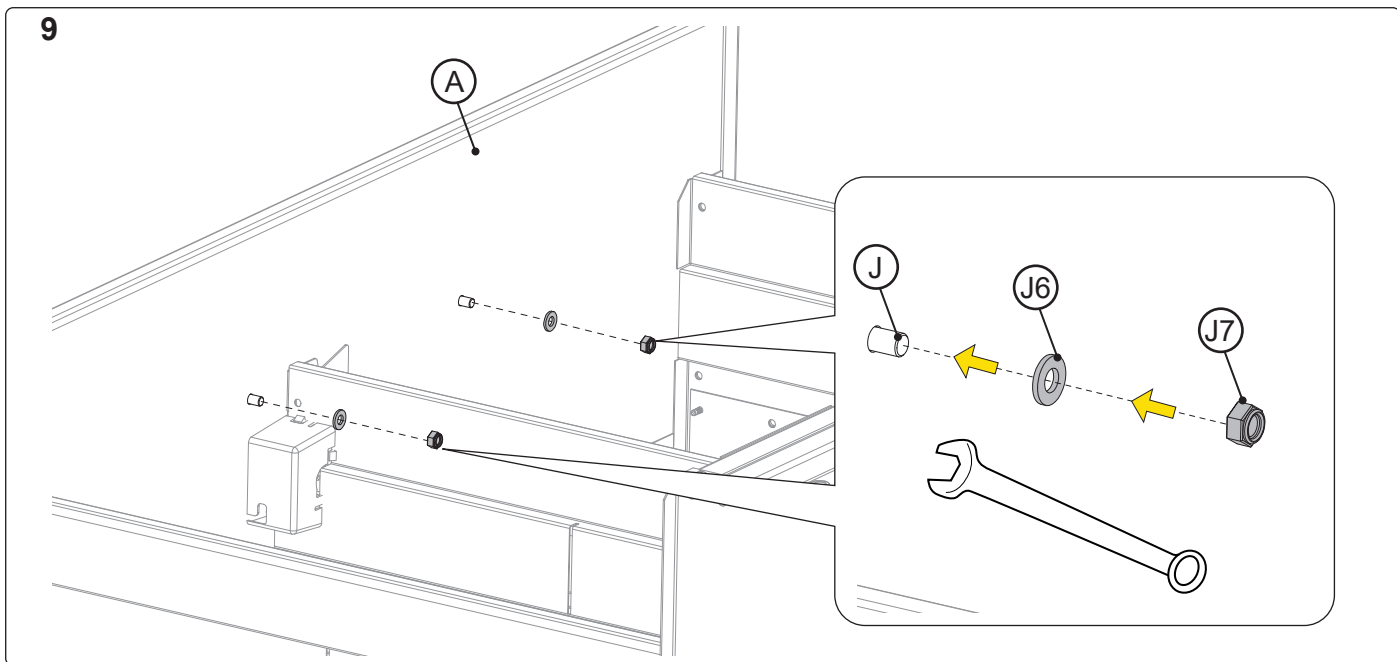


12










13

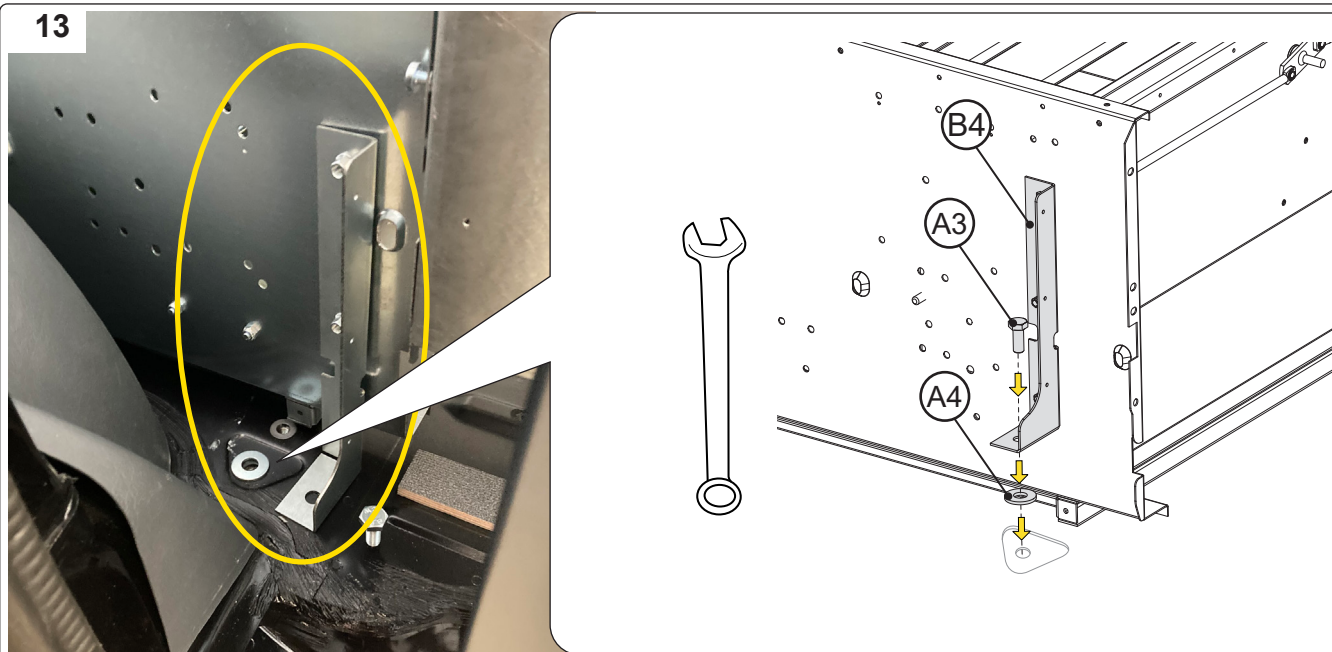



14

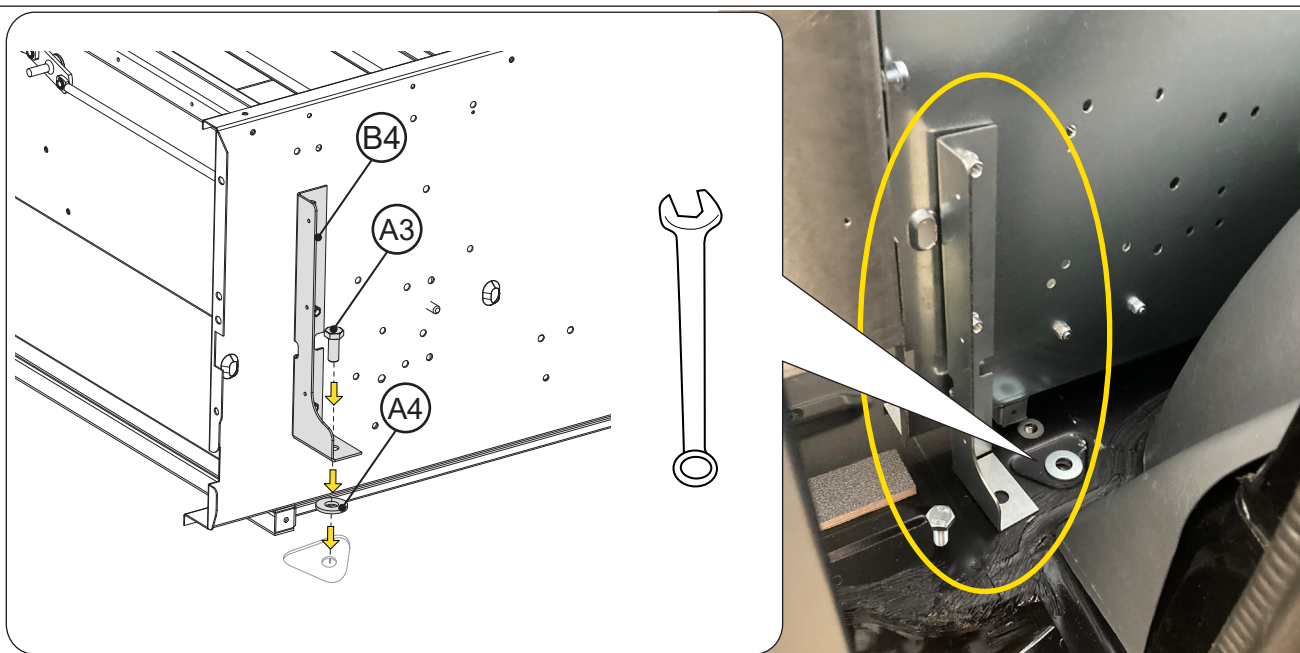

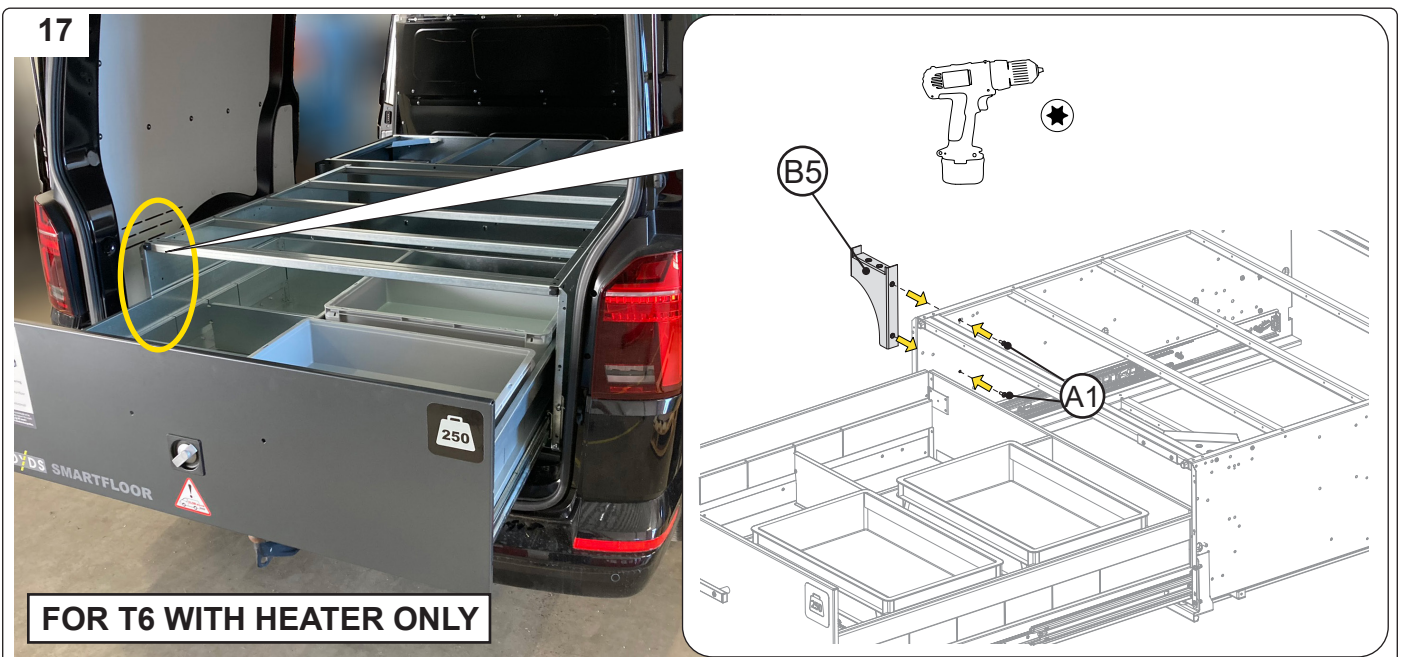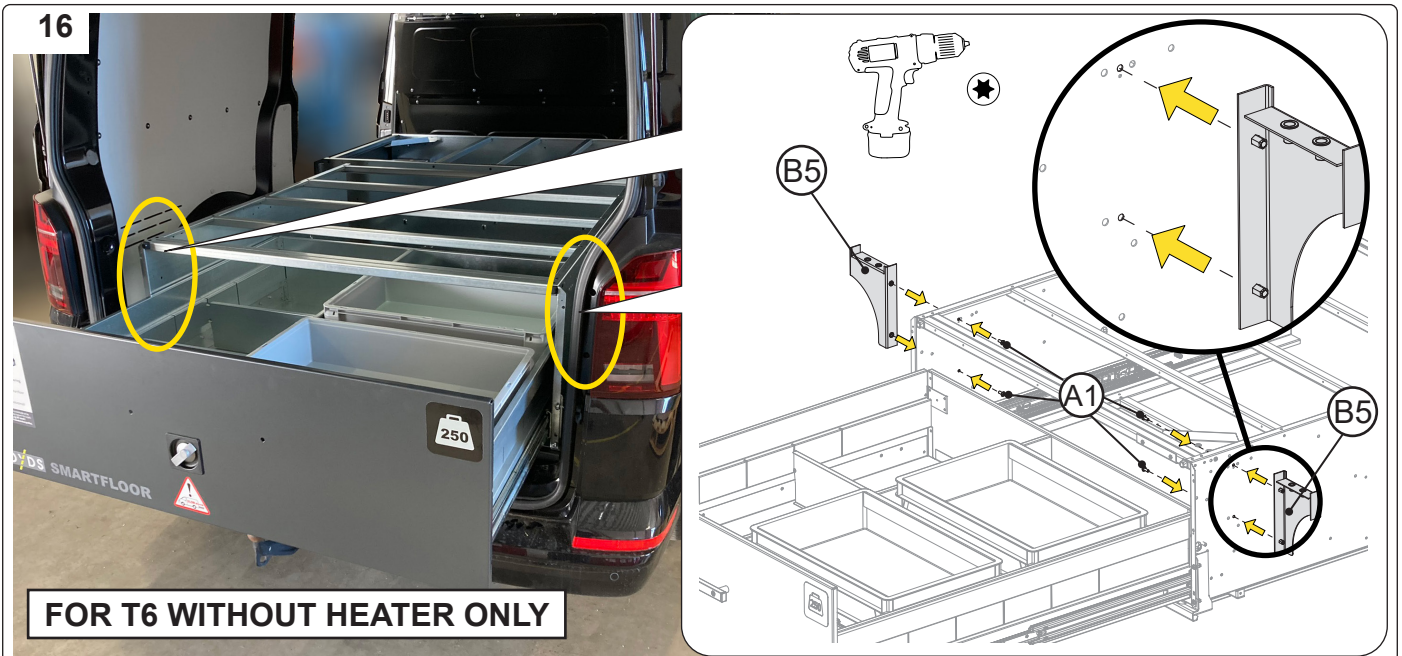
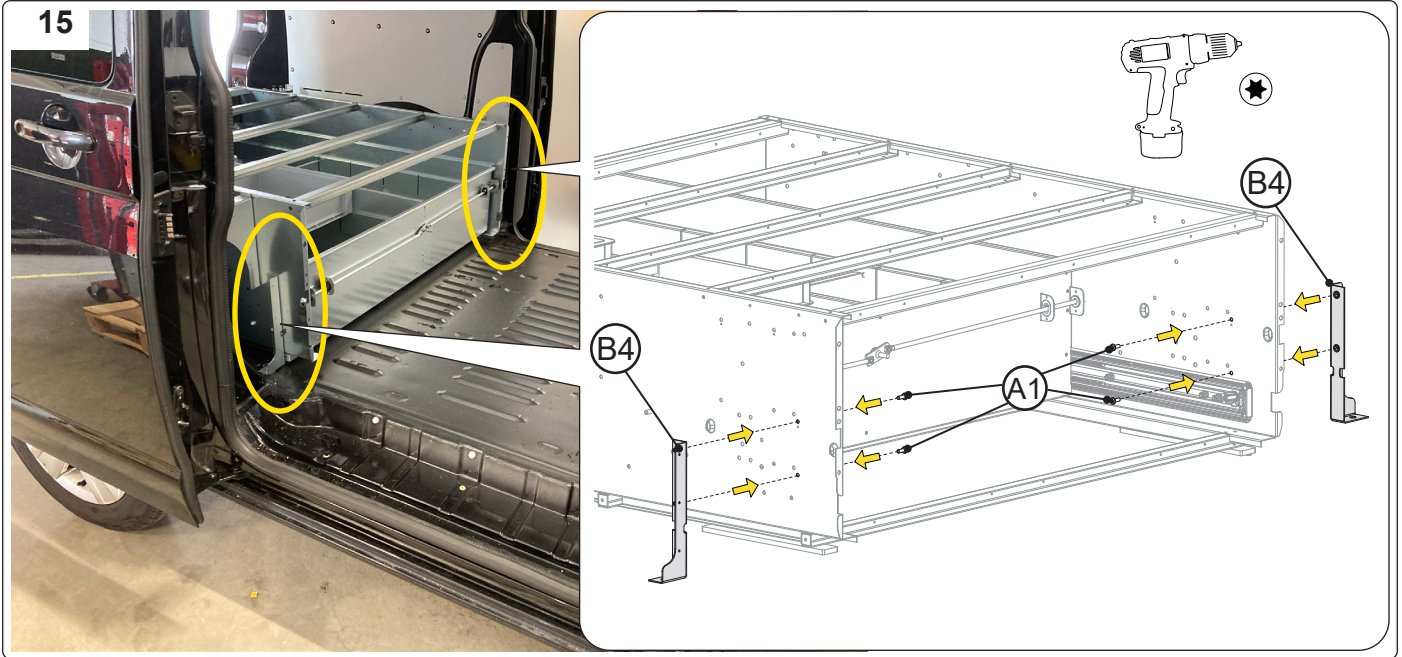


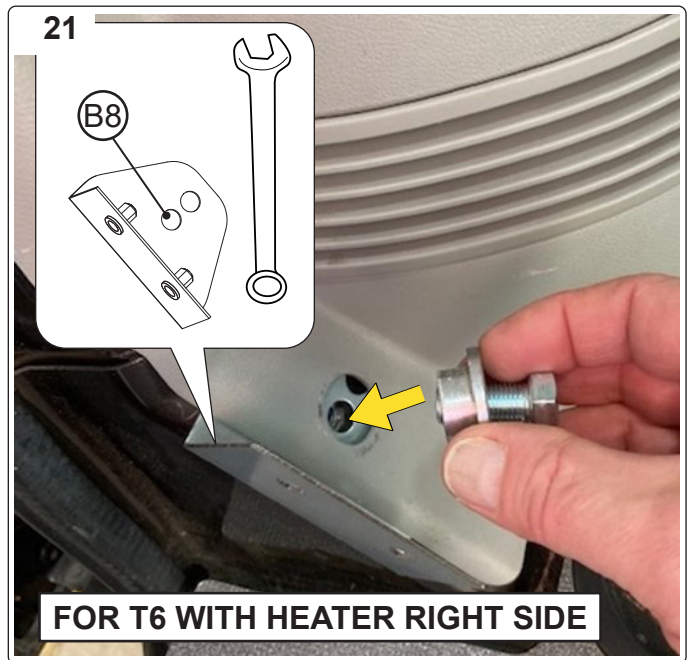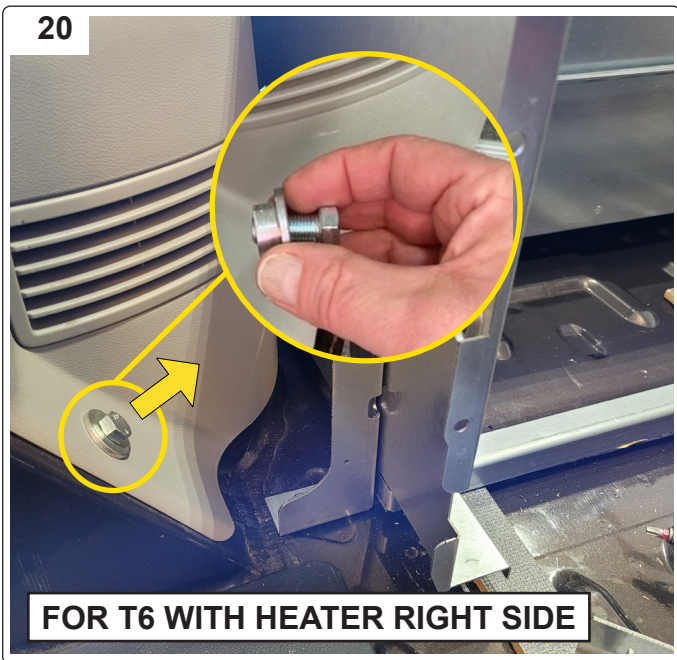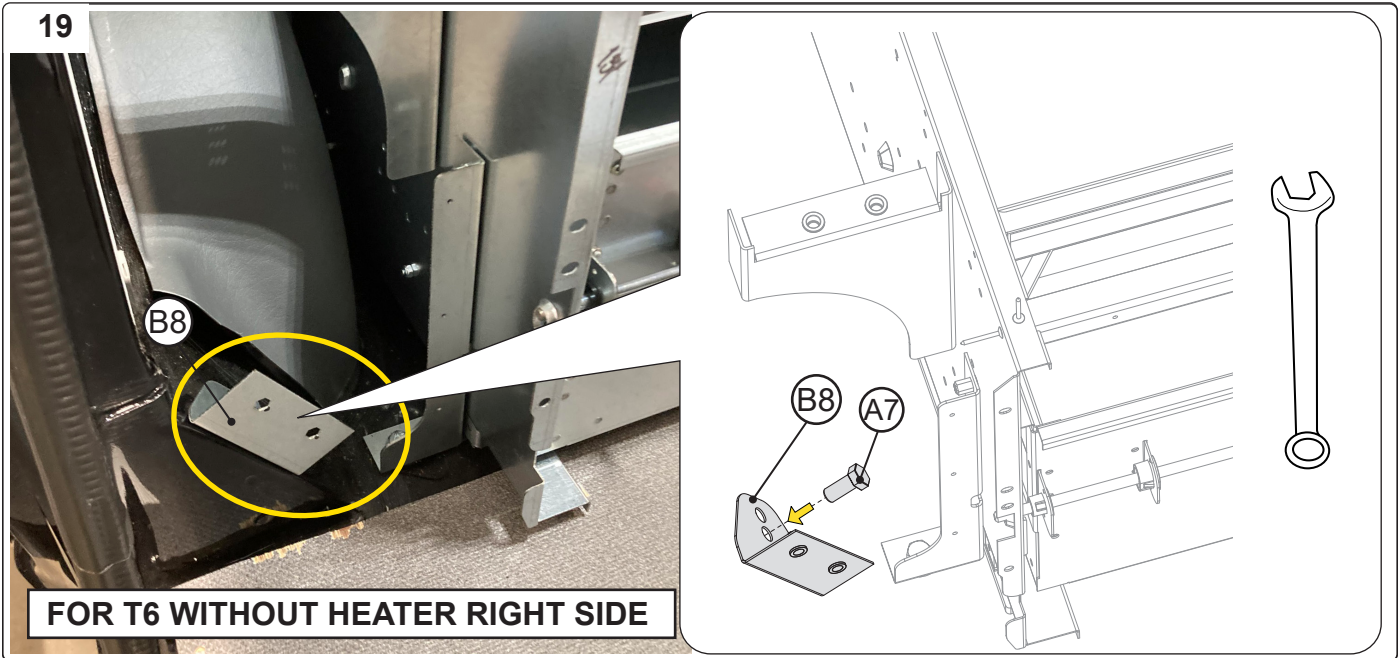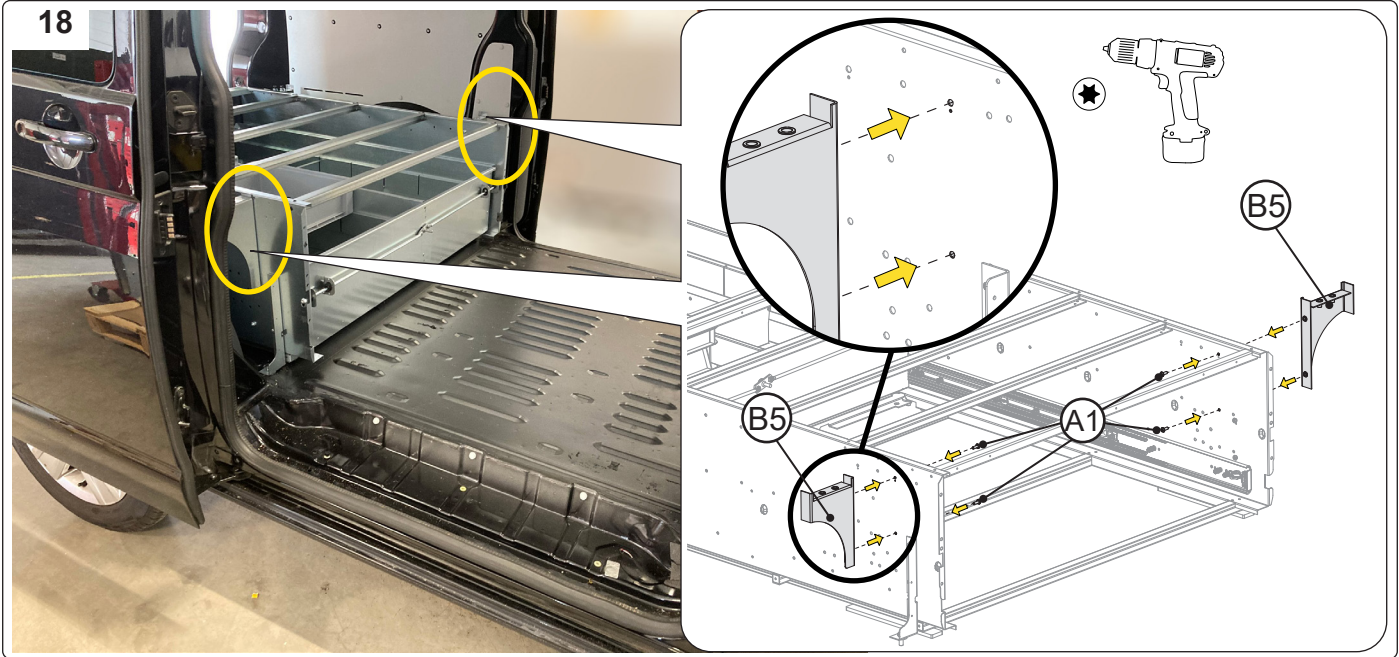

22

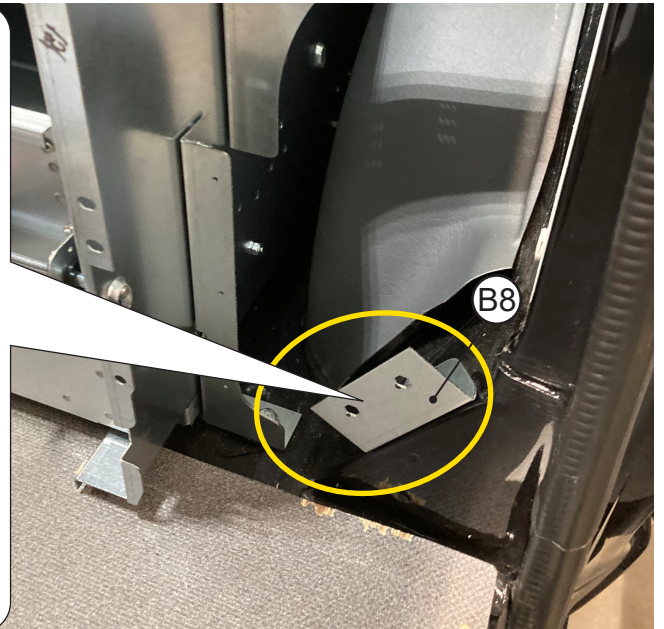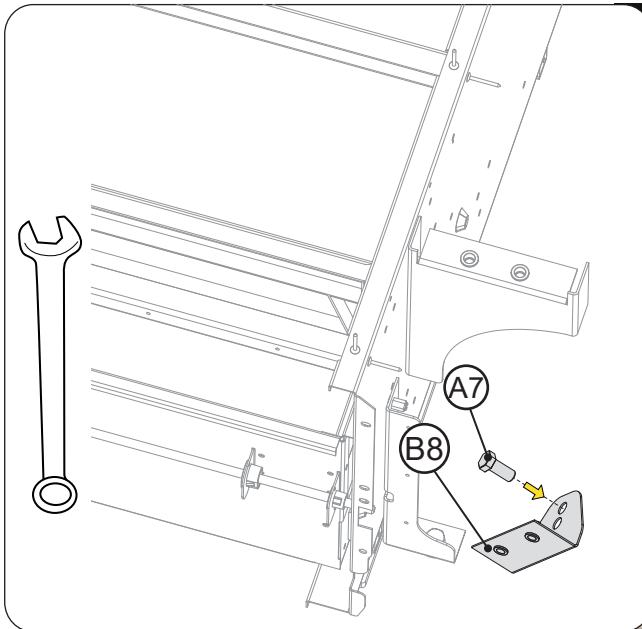


23

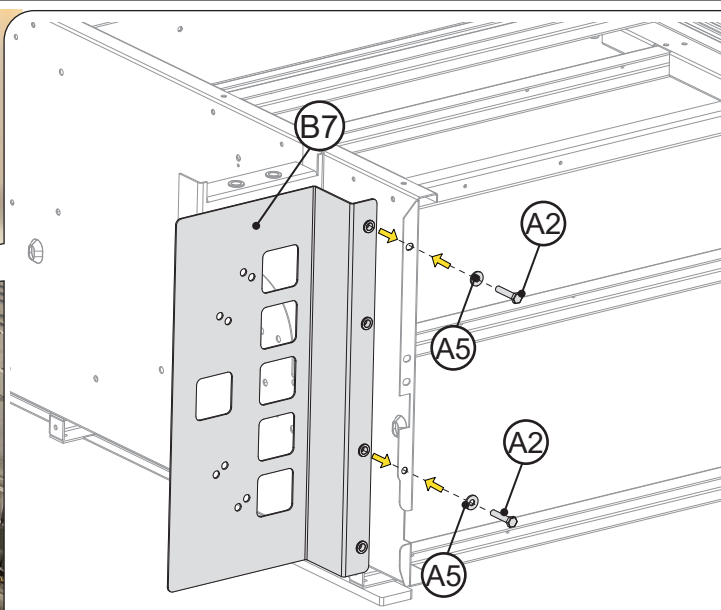


FOR T6 SHORT ONLY

24

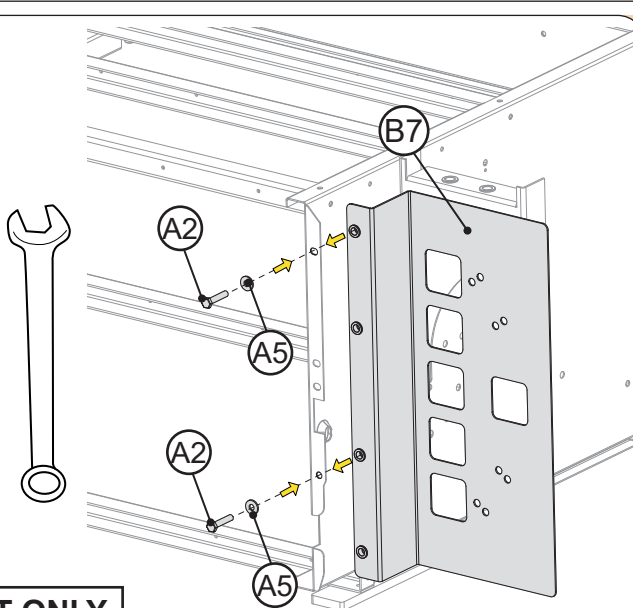


FOR T6 SHORT ONLY


25

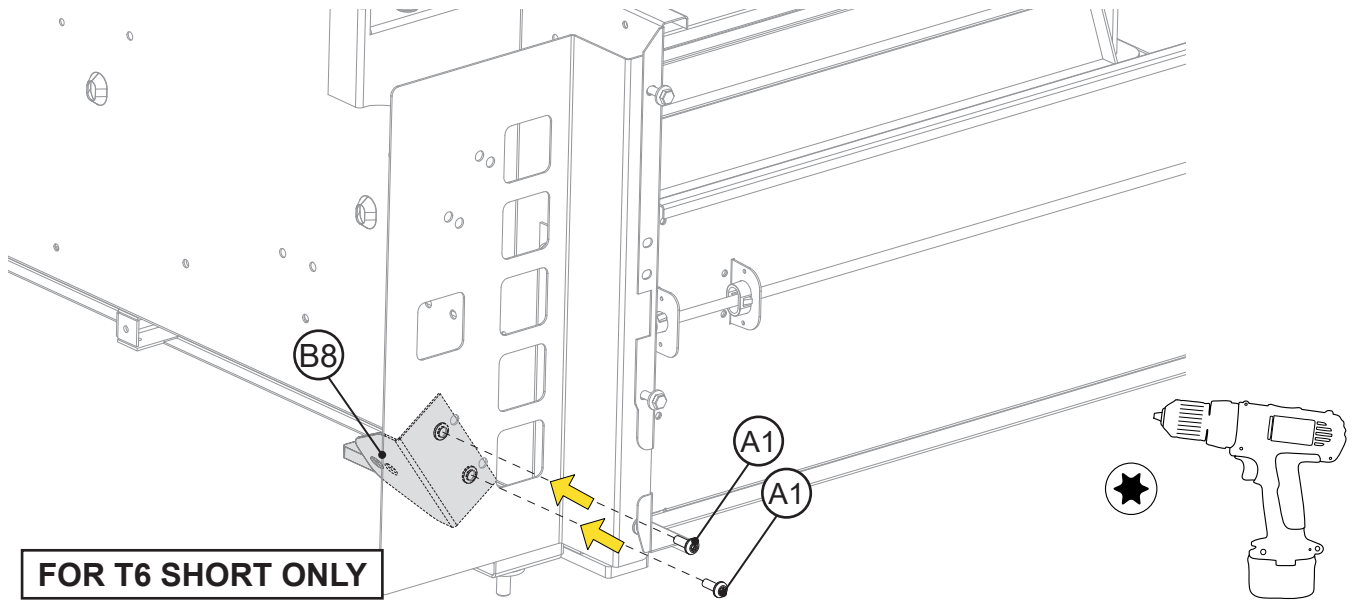


26

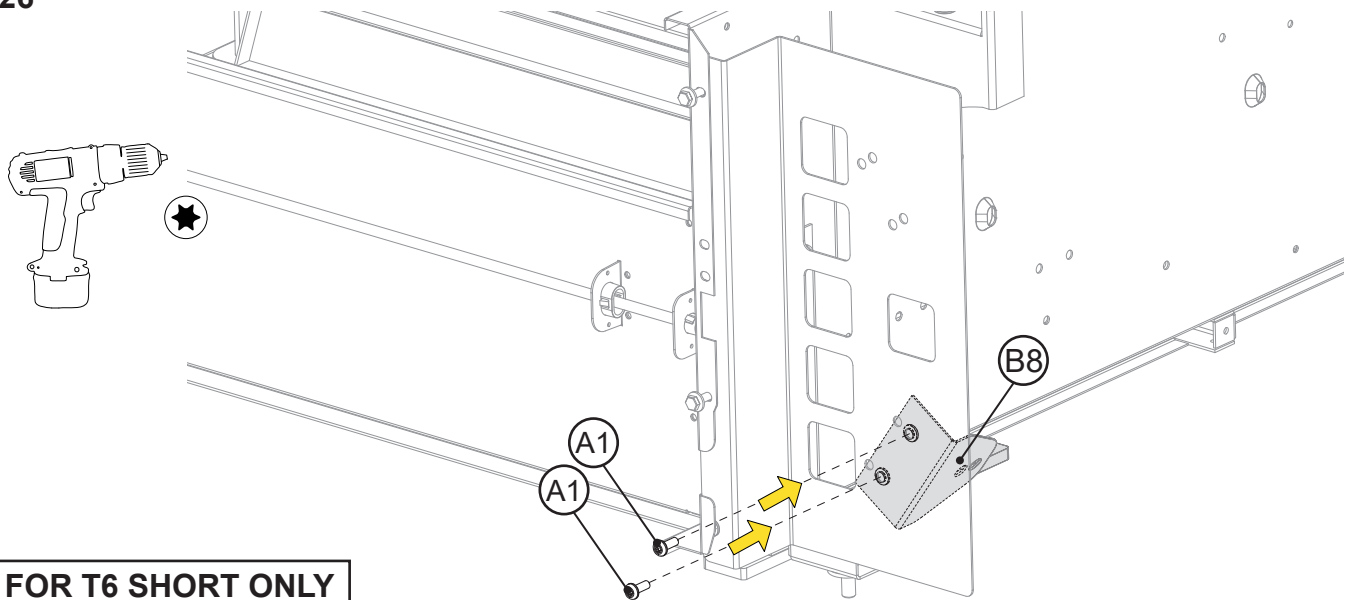

27

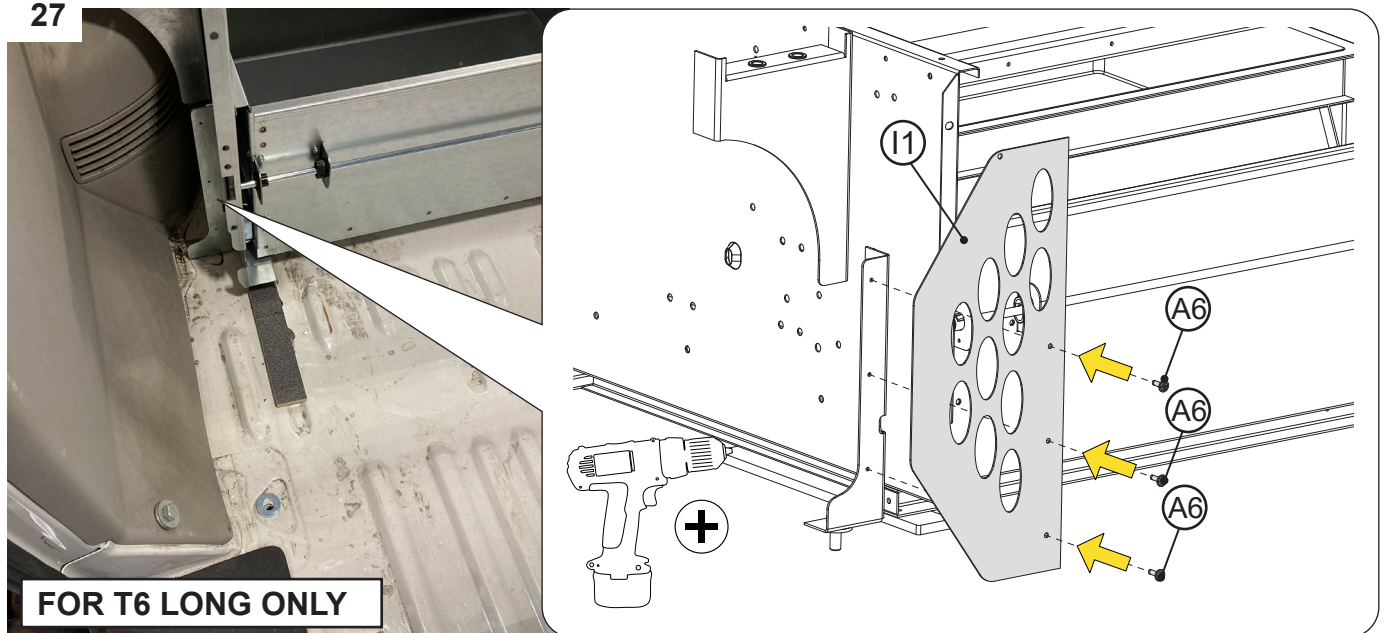


28

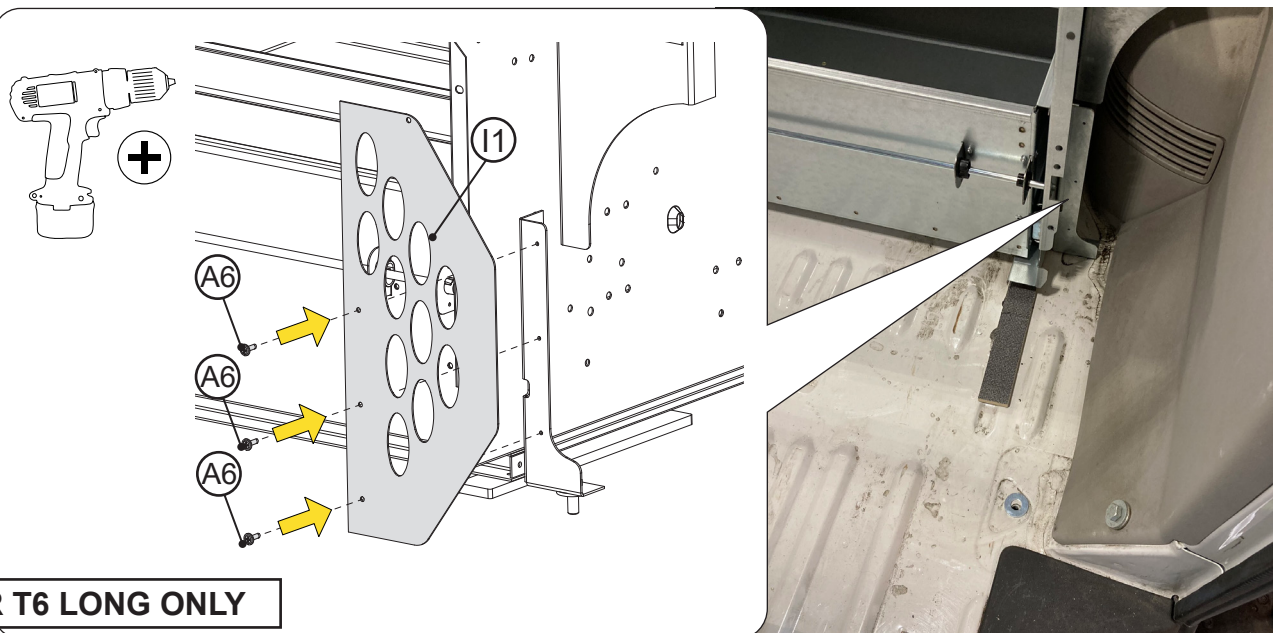


FOR T6 LONG ONLY

29

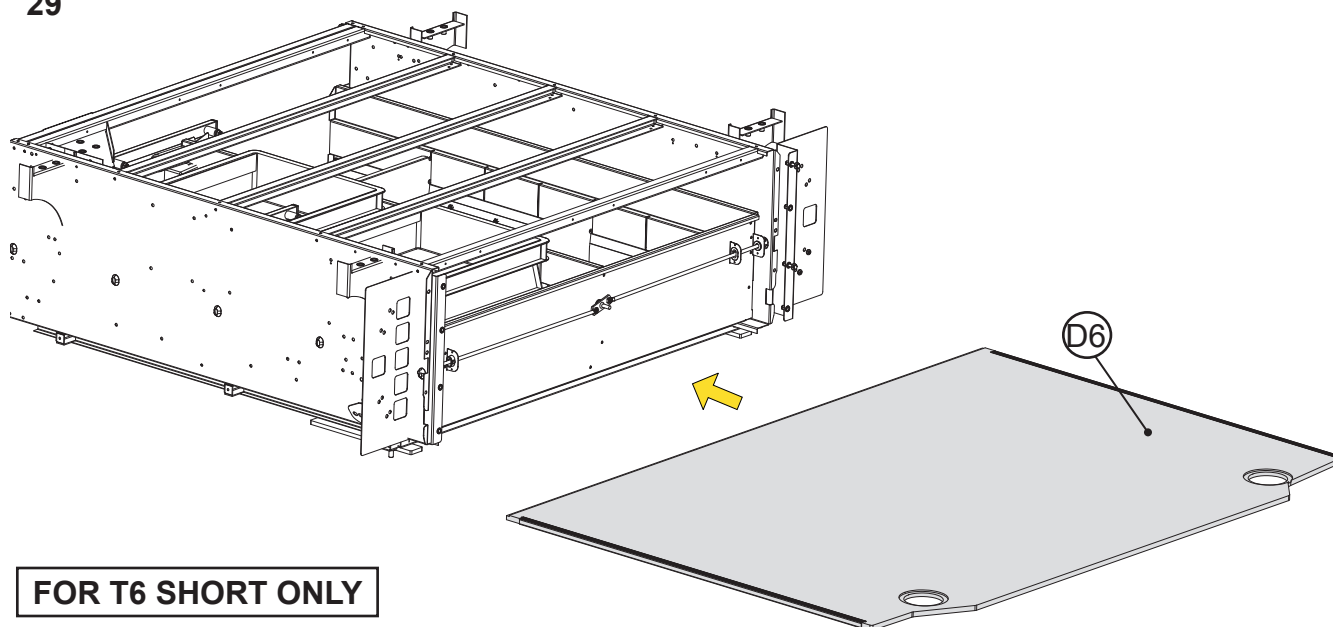


FOR T6 SHORT ONLY

30

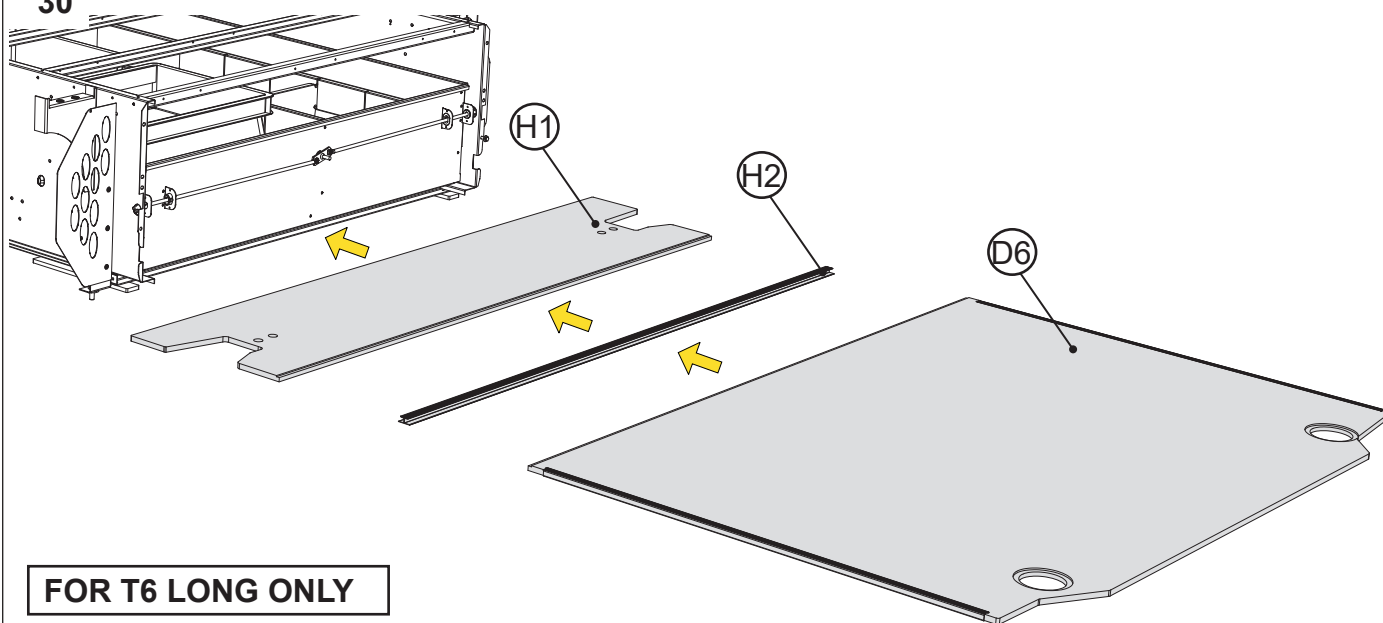


FOR T6 LONG ONLY


31

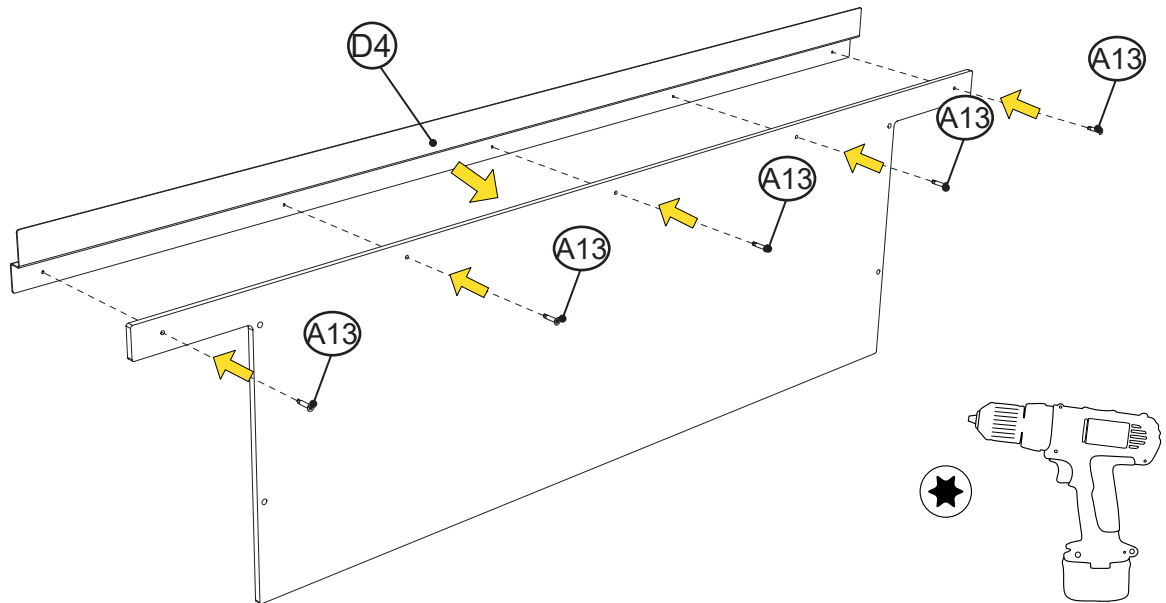


32

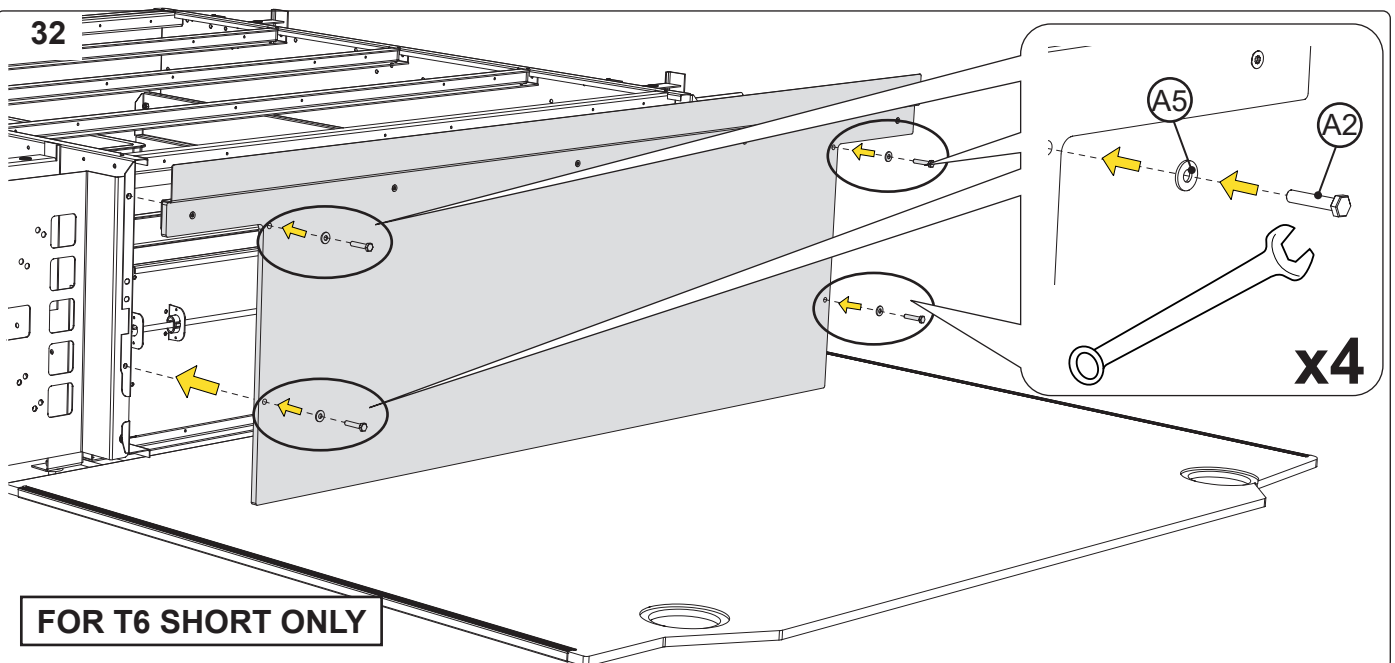

33

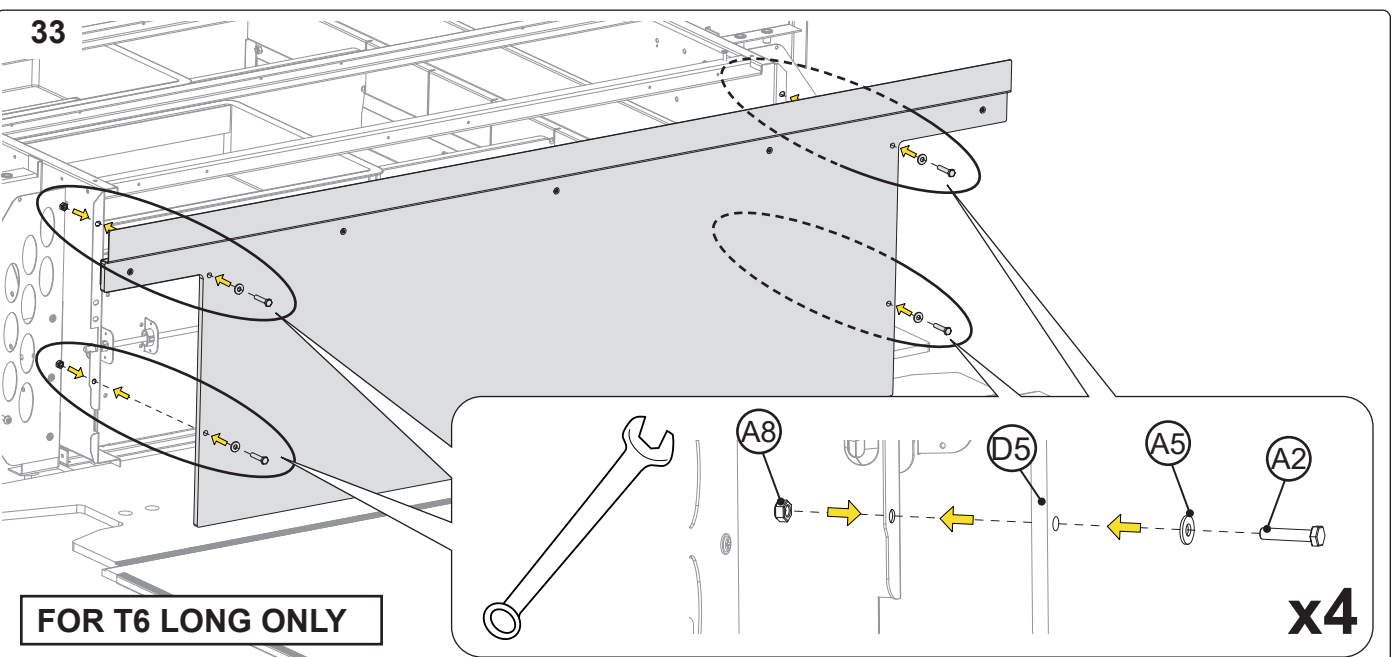


34

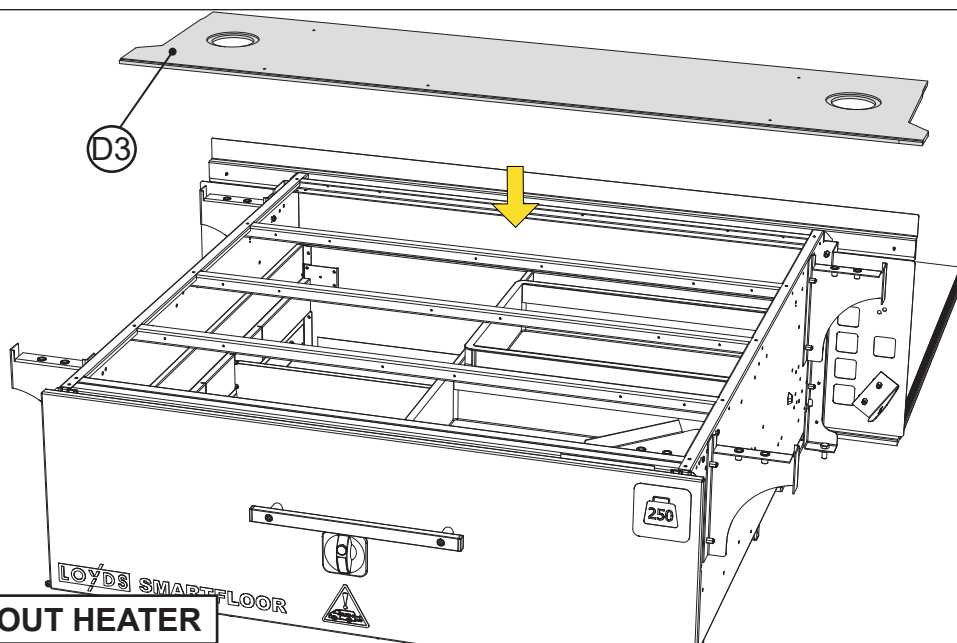


FOR T6 WITHOUT HEATER

35

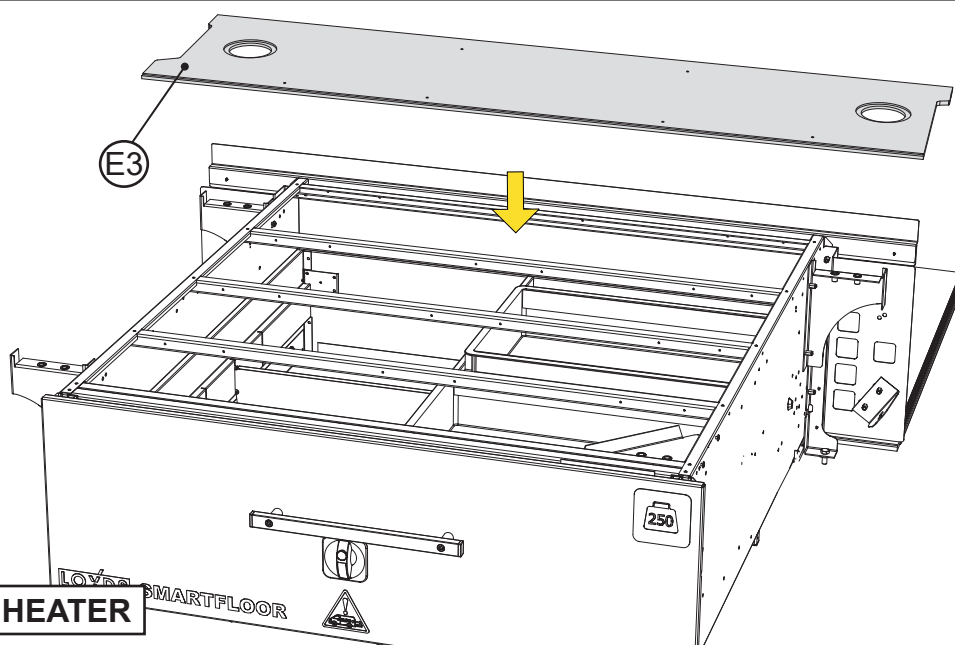


FOR T6 WITH HEATER

36

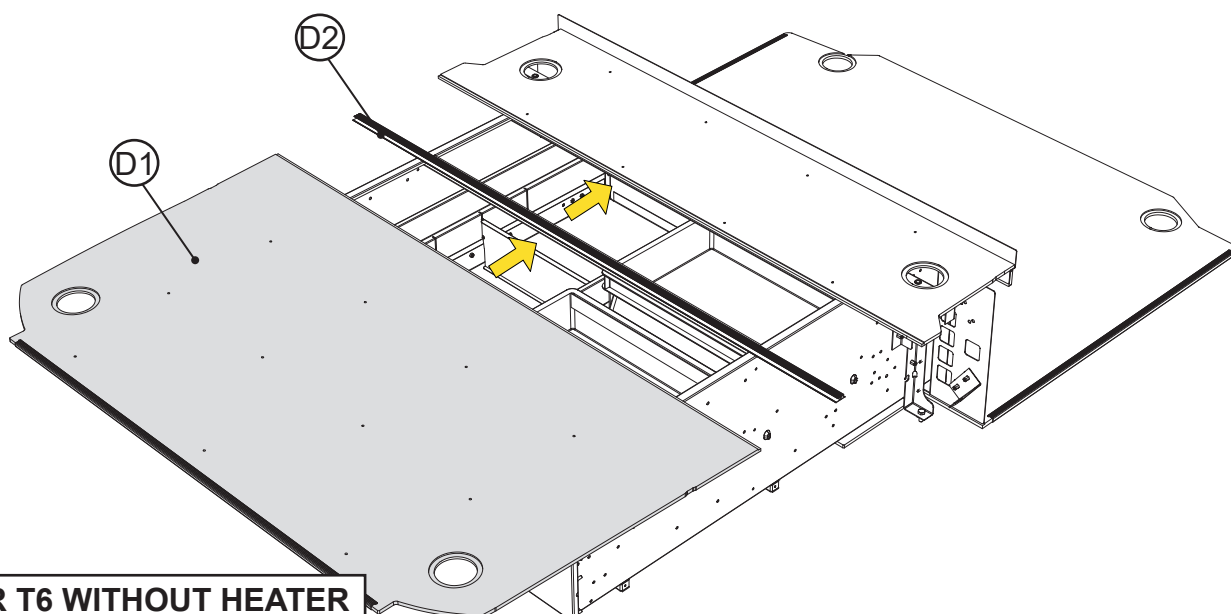


FOR T6 WITHOUT HEATER

37

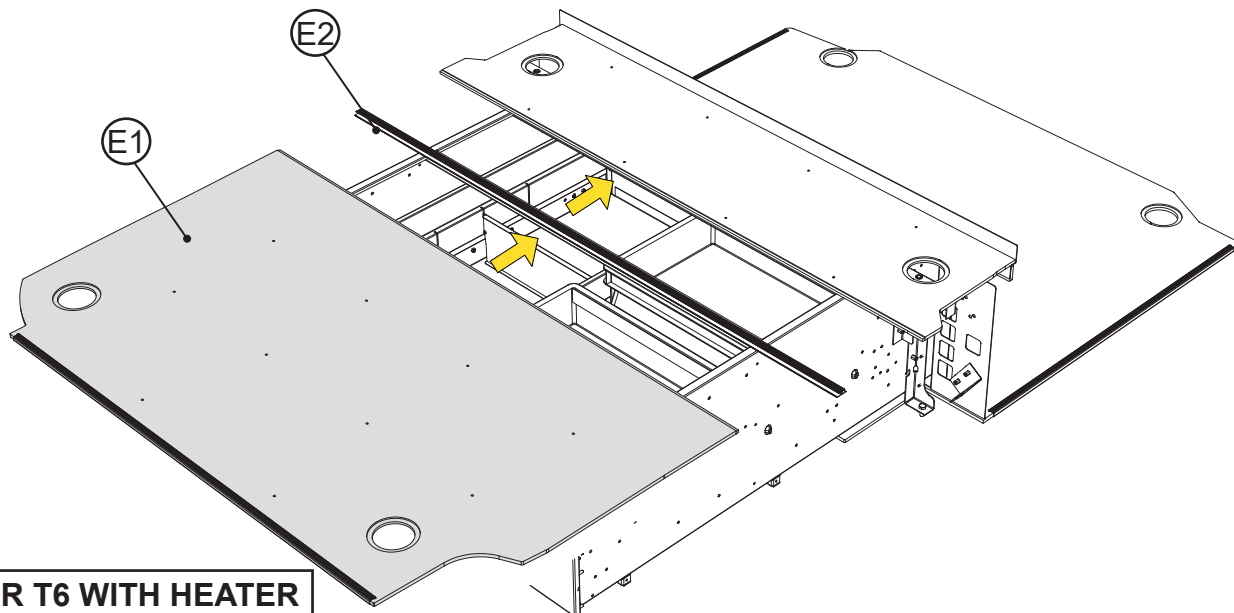


FOR T6 WITH HEATER



38

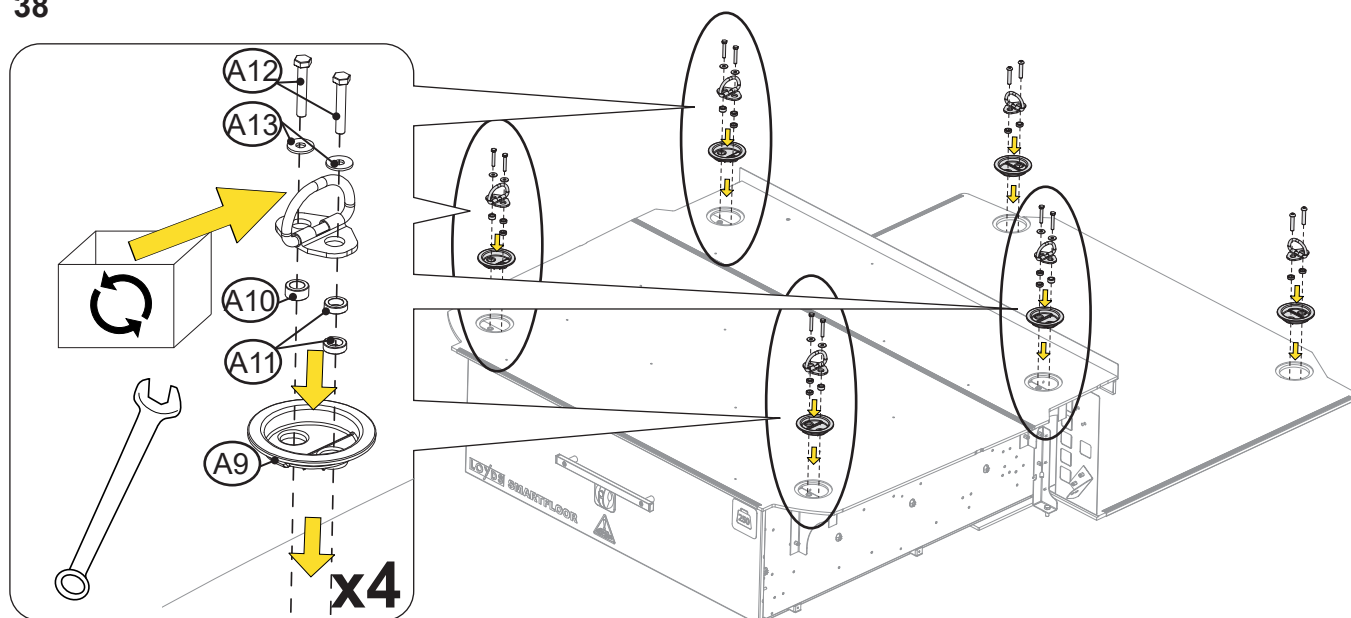

39

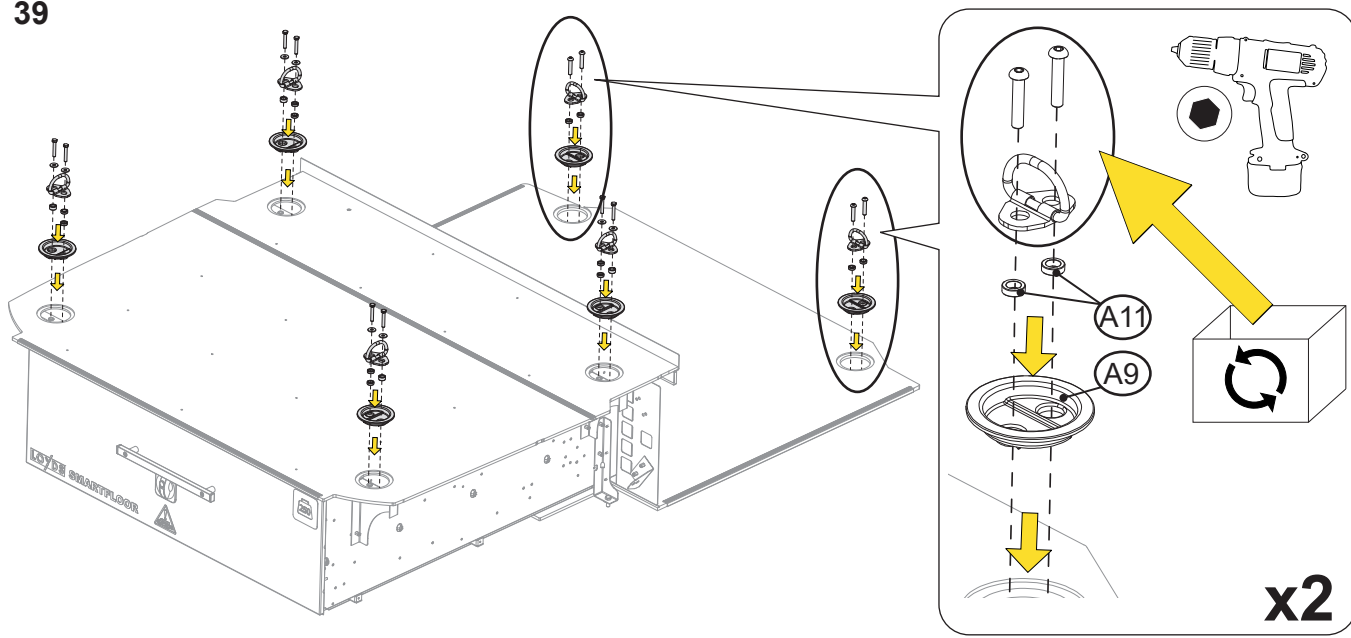

40

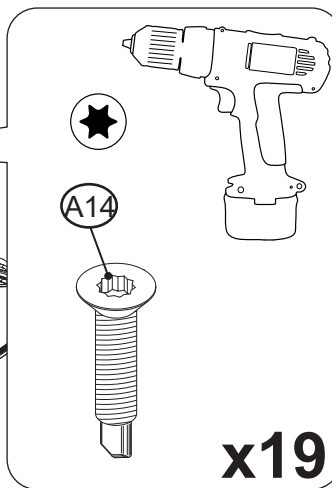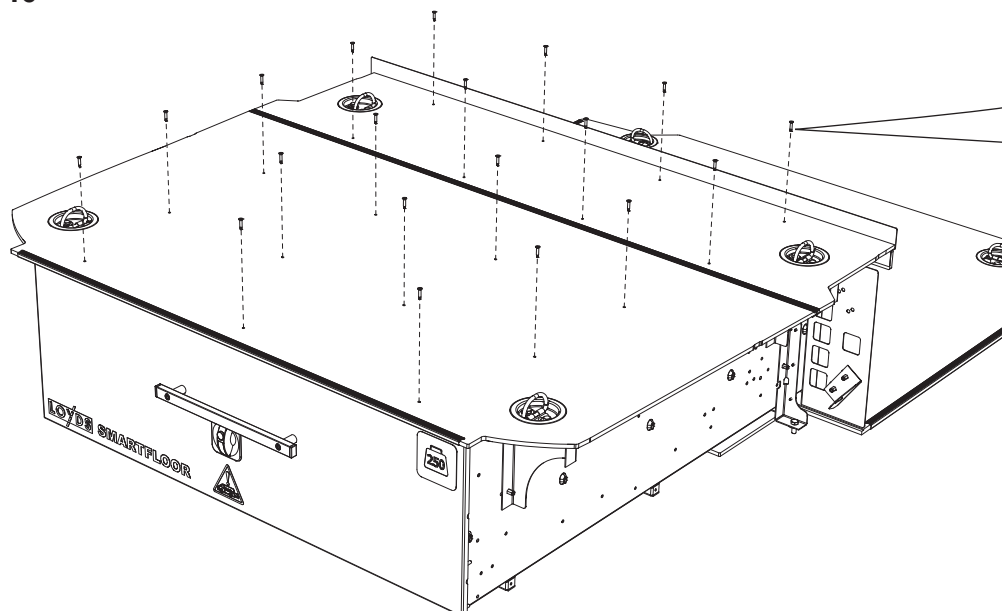

41

