

SMARTFLOOR 2020

Complete Front Module
Complete Rear Module
Ford Transit Custom / VW T7



Manual nr 15026934 Rev D
Loyds Industri AS 2025-10-14

Contents

15026920 Complete Front Module L1 L2 2SLD Custom/T7
15028790 Complete Front Module L1 L2 1SLD Custom/T7
15026922 Complete Rear Module L2 2SLD Custom/T7
15028112 Complete Rear Module Drawer L1 2SLD Custom/T7

LH

RH

Left hand side

L&R

Right hand side

1SLD

Left and right side

2SLD

1 slide door

L1

Length 1

L2

Length 2





L1/L2

Both length


Revision Record						
Rev nr	Date	Page	Picture	Update	New	Deleted steps
A	2025-02-20				New	
B	2025-08-06	21-23			Rear module L1	
C	2025-09-09				SF Rear Module L1&L2 customized for converter/heater	
D	2025-10-14				Included Front module 1SLD	

Recomended attraction moments screws:

4,2mm Selfdrilling: 3,6 NM
6mm: 6 NM
8mm: 10 NM
10mm: 42 NM

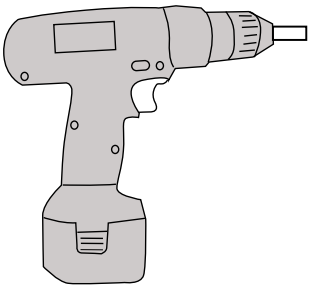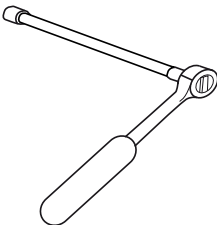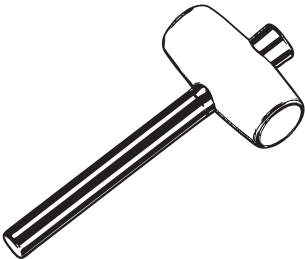
Tools			
			
 Bits T30  			

15026920 Complete Front Module Drawer L1 L2 2SLD Custom/T7

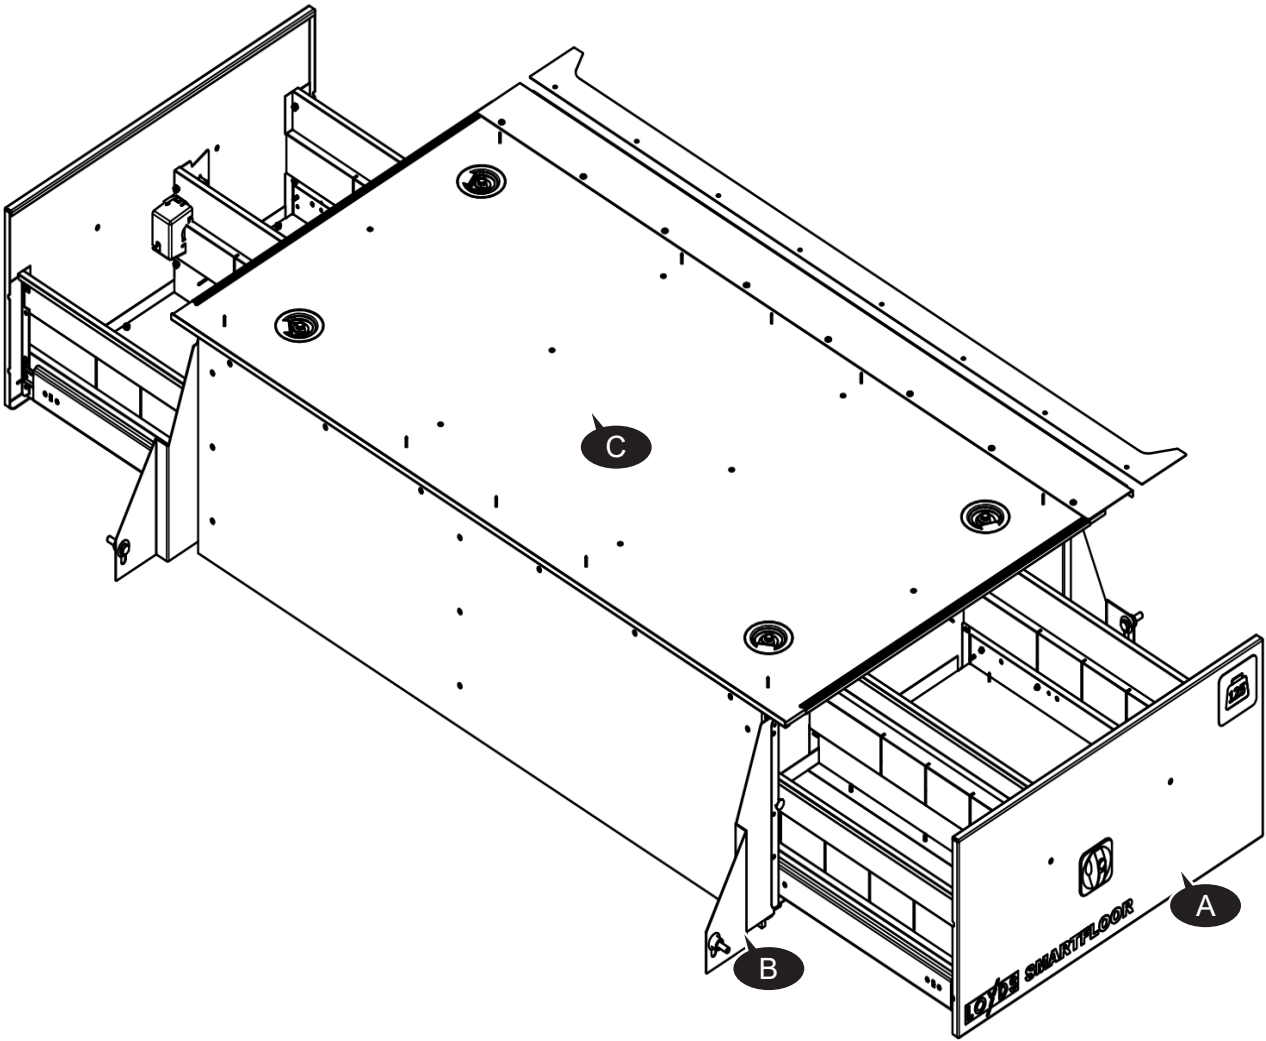


Item	Quantity	Part Number	Description
A	1	15022500	Front Drawer FD2 W770 L1550
B	1	15026918	Steel Bracket Set Front MoD L1 L2 2SLD CustomT7
C	1	15026916	Floor Set Front Mod L1 L2 2SLD CustomT7

15028790 Complete Front Module Drawer L1 L2 1SLD Custom/T7

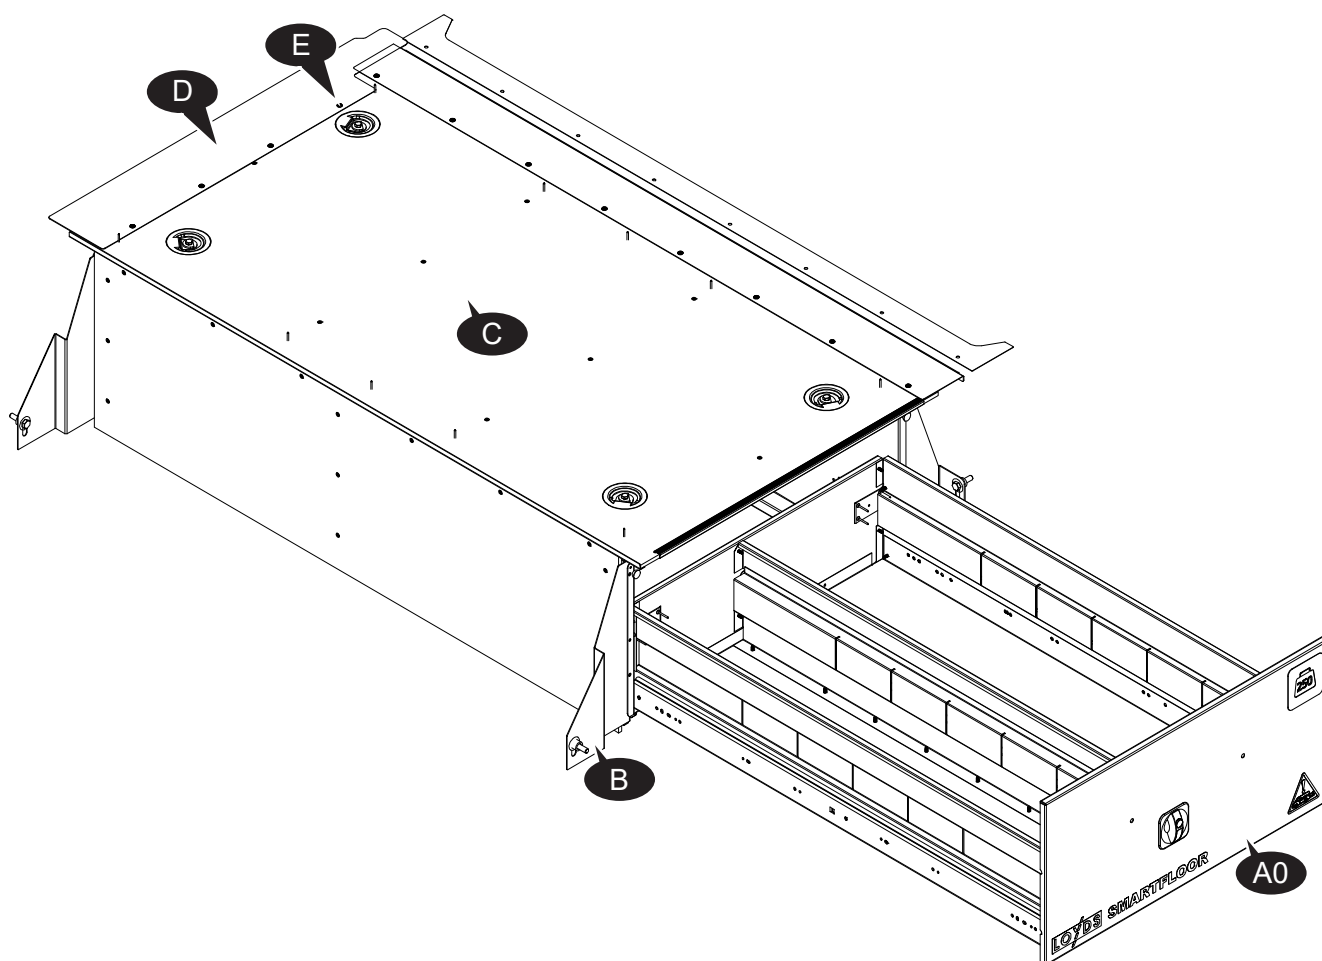


Item	Quantity	Part Number	Description
A0	1	15021296	Front Drawer FD1 W770 L1550
B	1	15026918	Steel Bracket Set Front MoD L1 L2 2SLD CustomT7
C	1	15026916	Floor Set Front Mod L1 L2 2SLD CustomT7
D	1	15028788	SF Ford Transit Custom 1SLD Cover Plate Front Mo
E	1	15028789	Fitting Kit Transit CustomT7 1SLD Cover plate

15026922 Complete Rear Module Drawer L2 2SLD Custom/T7

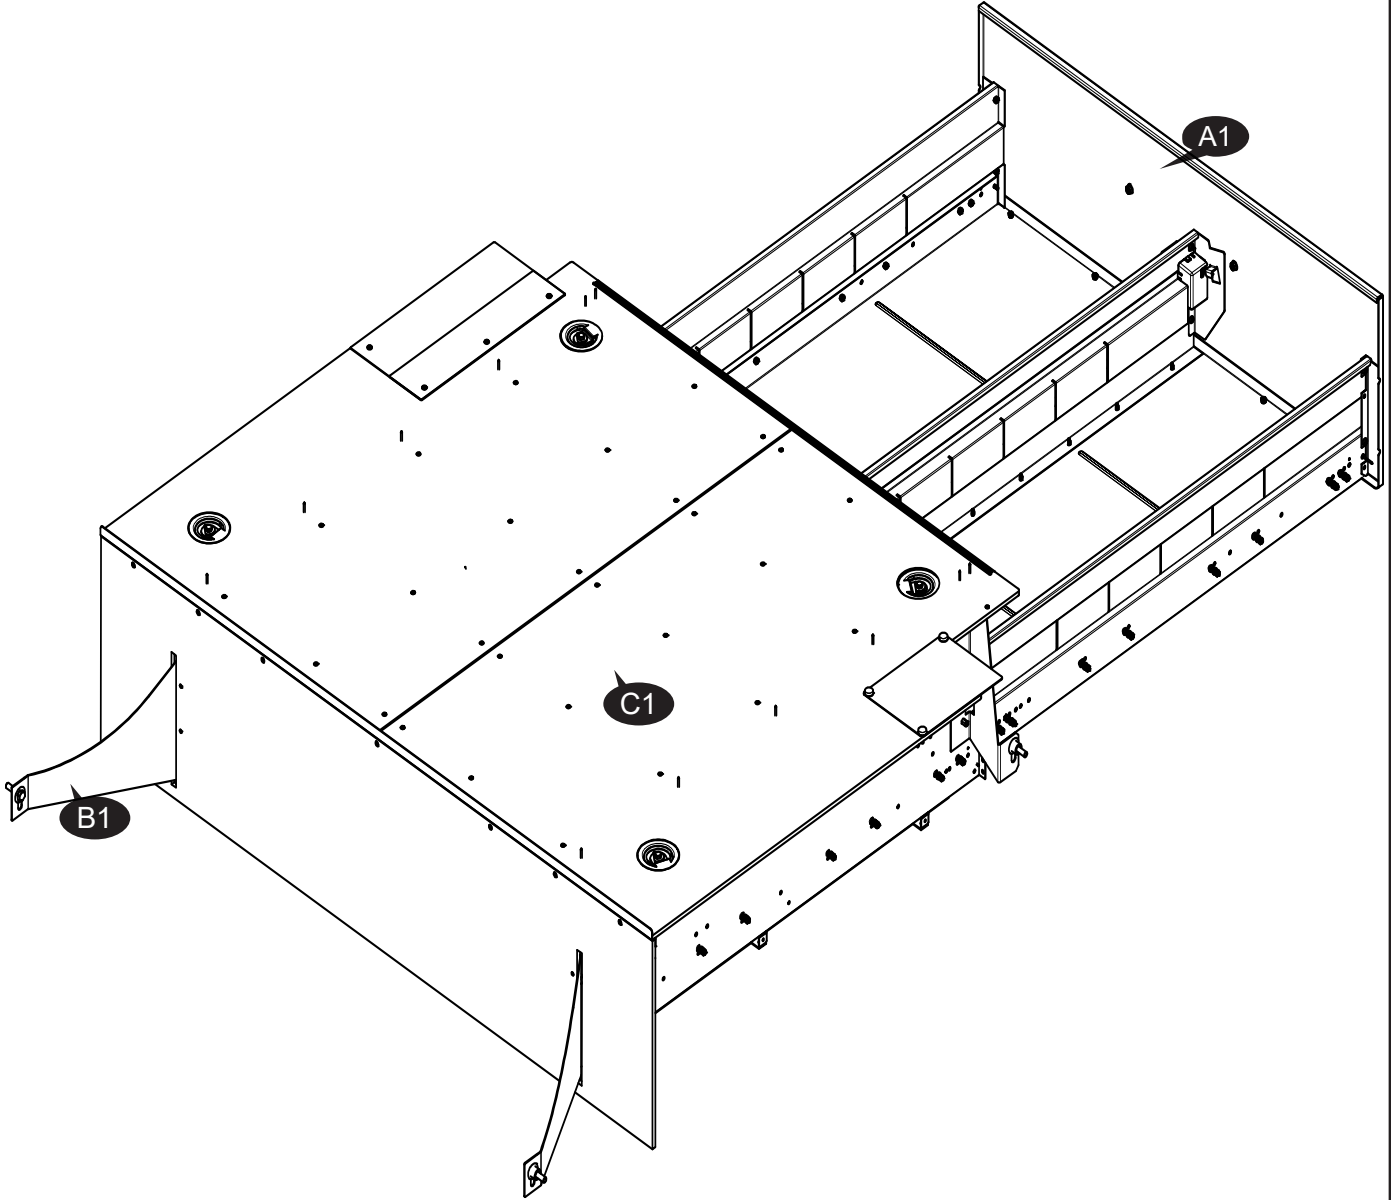


Item	Quantity	Part Number	Description
A1	1	15022501	Rear Drawer RD W1140 L1200
B1	1	15026930	Steelbracket Set Rear Module Mod 2SLD CustomT7
C1	1	15026932	Floor Set Rear Module Mod 2SLD CustomT7

15028112 Complete Rear Module Drawer L1 2SLD Custom/T7

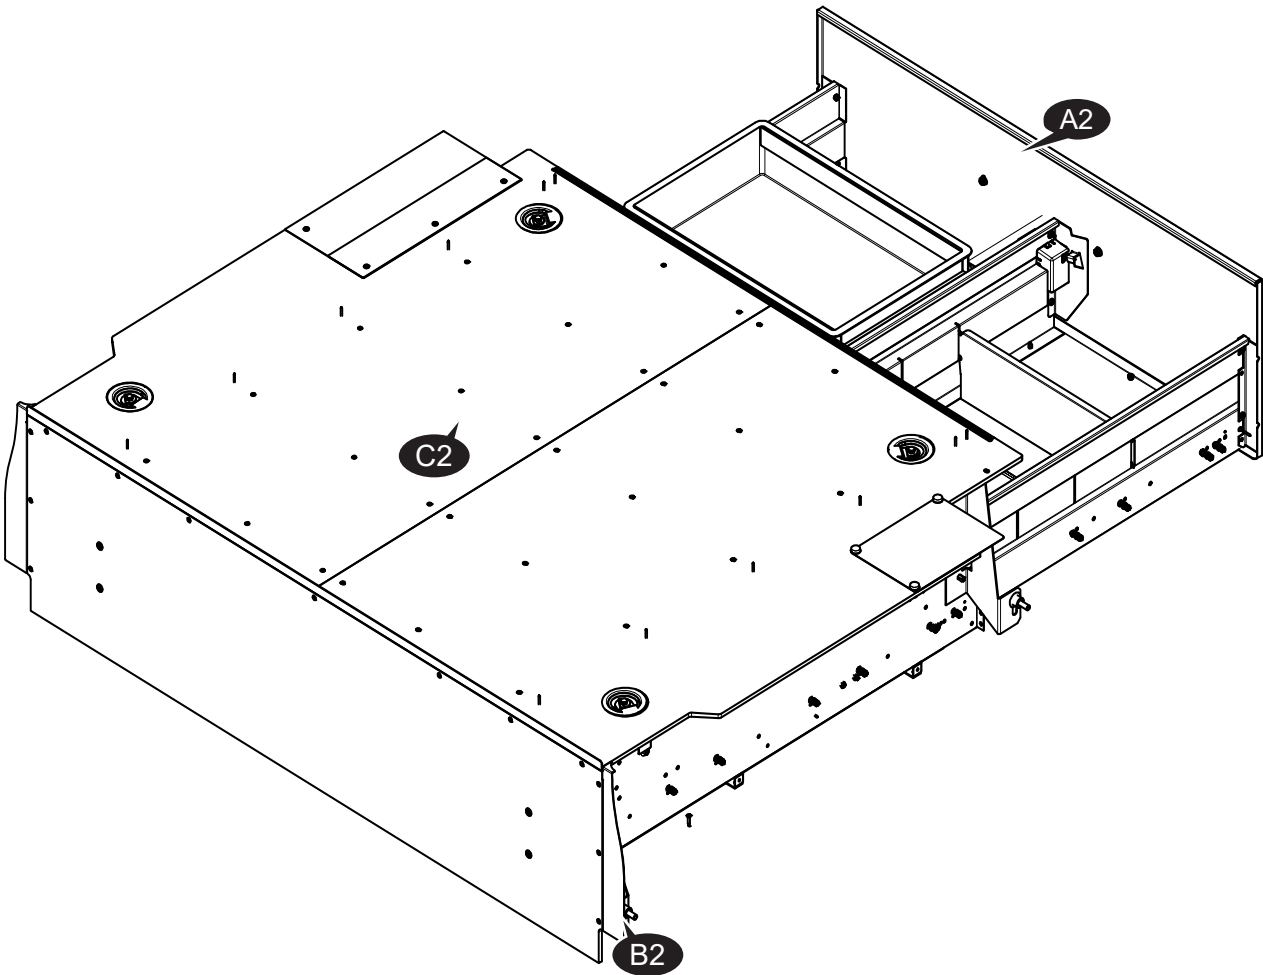


Item	Quantity	Part Number	Description
A2	1	15022501	Rear Drawer RD W1140 L1200
B2	1	15028106	Steelbracket Set Rear Module Mod 2SLD CustomT7
C2	1	15028111	Floor Set Rear Module Mod 2SLD CustomT7

15026916 Floor Set Front L1 L2 2SLD Custom/T7

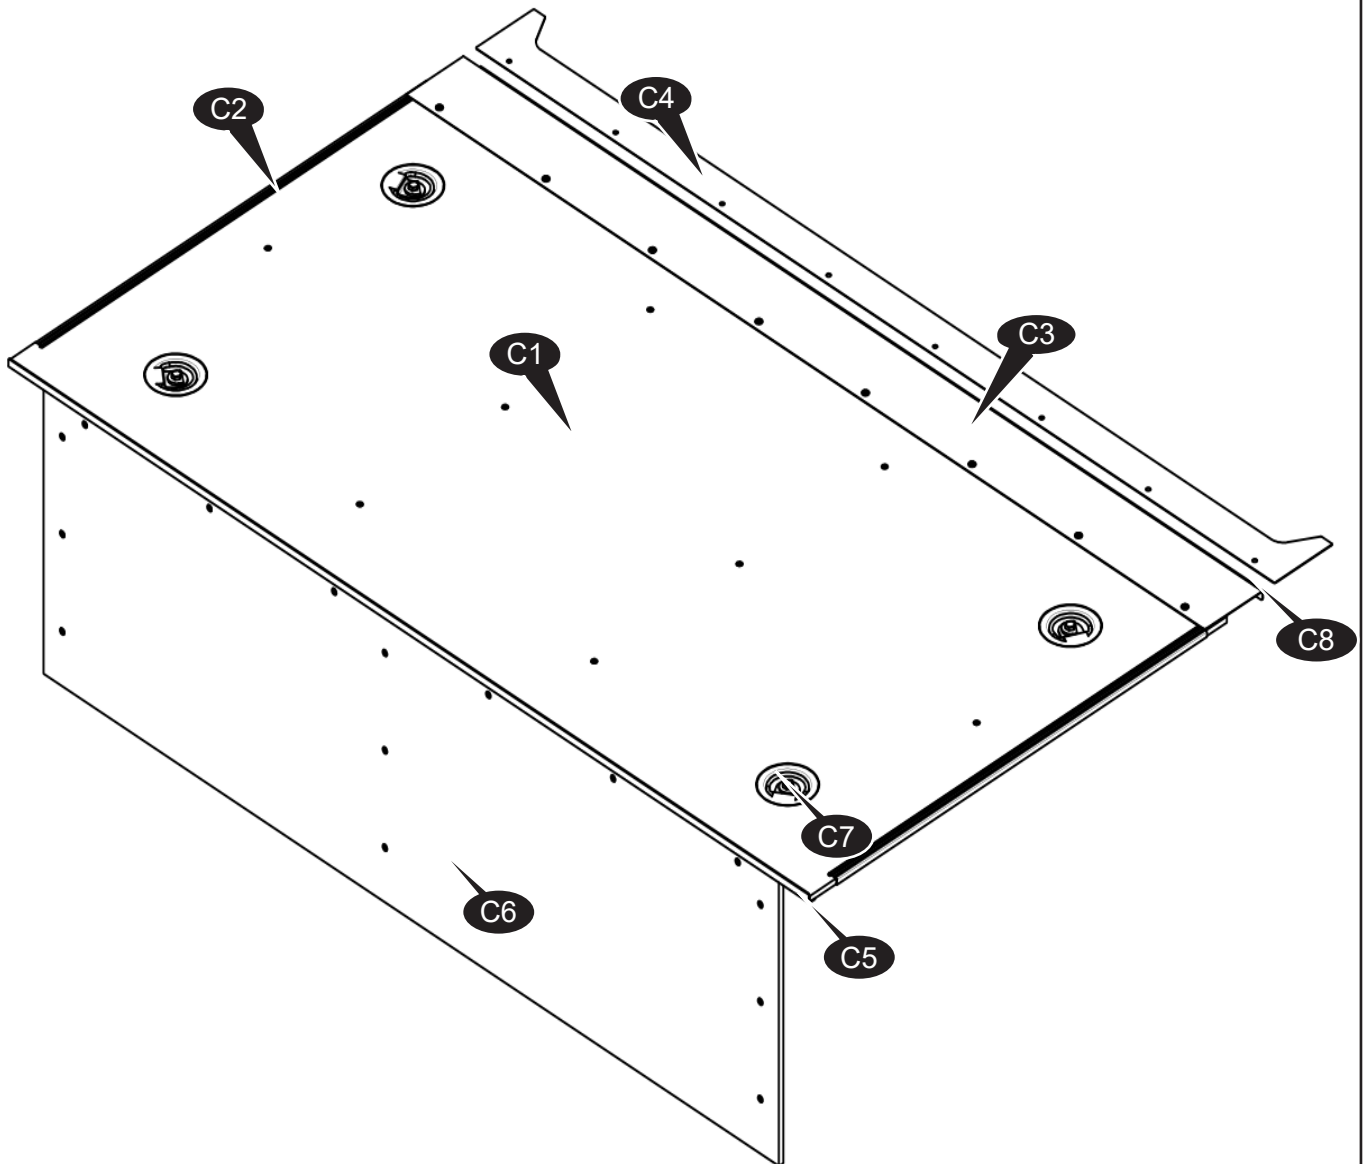


Item	Quantity	Part Number	Description
C1	1	15026925	Floor Front Mod Drawer
C2	2	15026173	U-profile 9mm L=764
C3	1	15026171	SF Ford Transit Custom L1 L2 Cover plate Front
C4	1	15026714	SF VW T7 L1 L2 Cover Plate Loyds Sep
C5	1	15026914	Angle Floor Front Mod Drawer
C6	1	15026269	Floor Vertical Front Drawer Transit Custom
C7	1	15026917	Fitting Kit Floor Set Front Mod L1 L2 2SLD CustomT7
C8	1	36.721004	Rubber Profile L1600mm

15026932 Floor Set Rear Module L2 2SLD Custom/T7

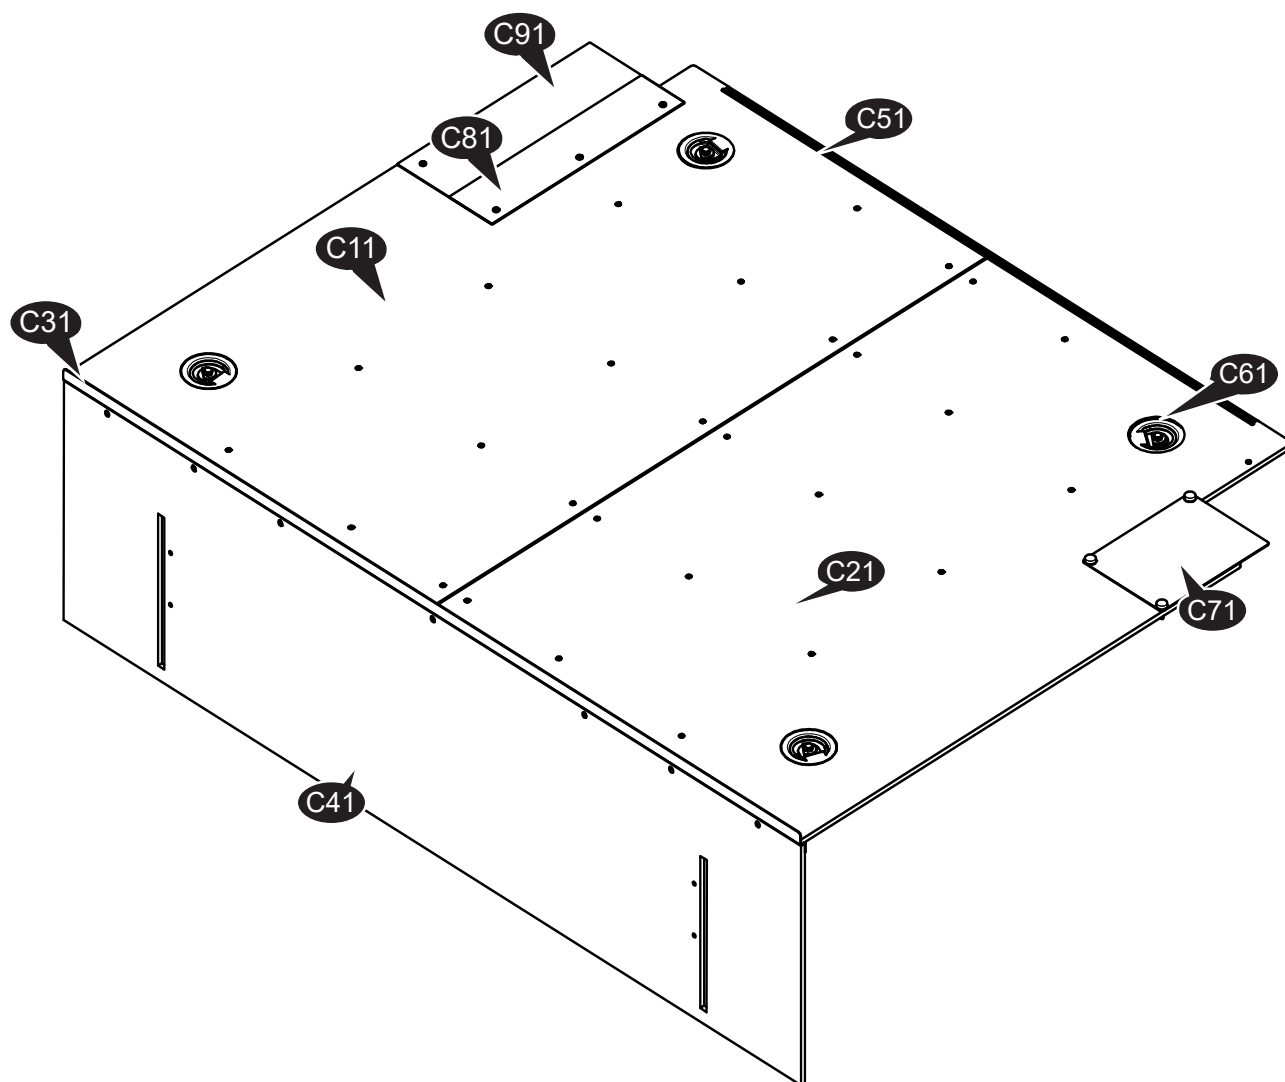


Item	Quantity	Part Number	Description
C11	1	15026282	Floor Rear Mod Ford Transit Custom L2 2024 Right
C21	1	15026283	Floor Rear Left Mod Ford Transit Custom L2 2024
C31	1	15026281	Floor Angle Rear Mod Transit Custom L2
C41	1	15026280	Floor Vertical Rear Drawer Transit Custom L2
C51	1	15022714	U-profile 9mm L=1224
C61	1	15026933	Fitting Kit Floor Set Mod 2SLD CustomT7
C71	1	15026163	SF Ford Transit Custom Tool Box Lid
C81	1	15028767	Cover Plate Transit Custom Converter Heater
C91	1	15028768	Cover Plate Transit Custom

15028111 Floor Set Rear Module L1 2SLD Custom/T7

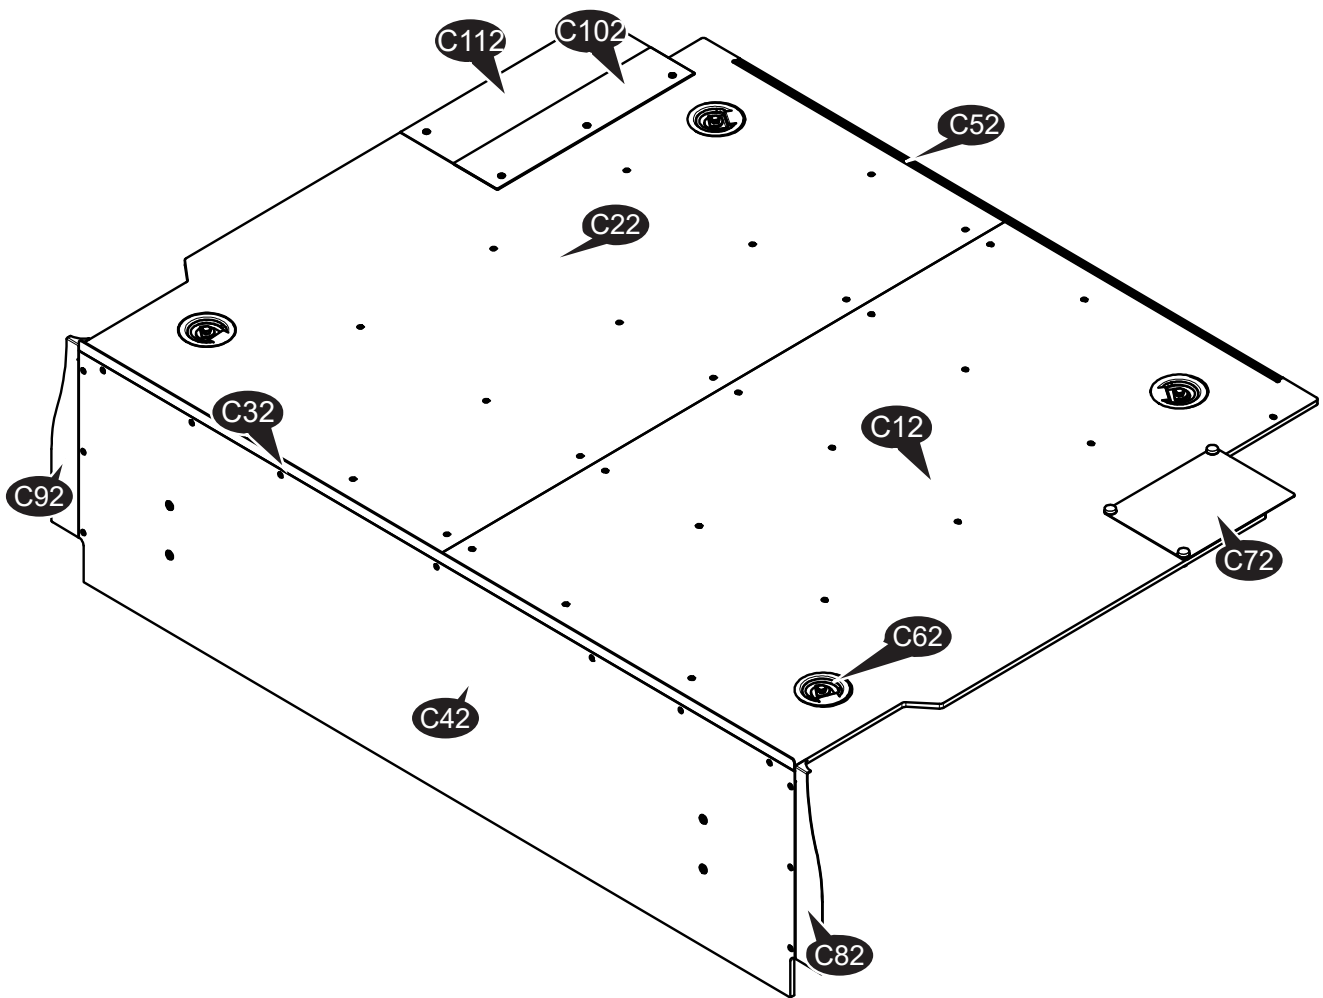


Item	Quantity	Part Number	Description
C12	1	15028109	Floor Rear Mod Ford Transit Custom L1 2024 Right
C22	1	15028108	Floor Rear Left Mod Ford Transit Custom L1 2024
C32	1	15028110	Floor Angle Rear Mod Transit Custom L1
C42	1	15028107	Floor Vertical Rear Drawer Transit Custom L1
C52	1	15022714	U-profile 9mm L=1224
C62	1	15028272	Fitting Kit Floor Set Mod 2SLD CustomT7 L1
C72	1	15026163	SF Ford Transit Custom Tool Box Lid
C82	1	15028256	LH_Deksel front Rear Mod Transit Custom L1
C92	1	15028257	RH_Deksel front Rear Mod Transit Custom L1
C102	1	15028767	Cover Plate Transit Custom Converter Heater
C112	1	15028768	Cover Plate Transit Custom

15026918 Steel Bracket Set Front Mod L1 L2 2SLD Custom/T7

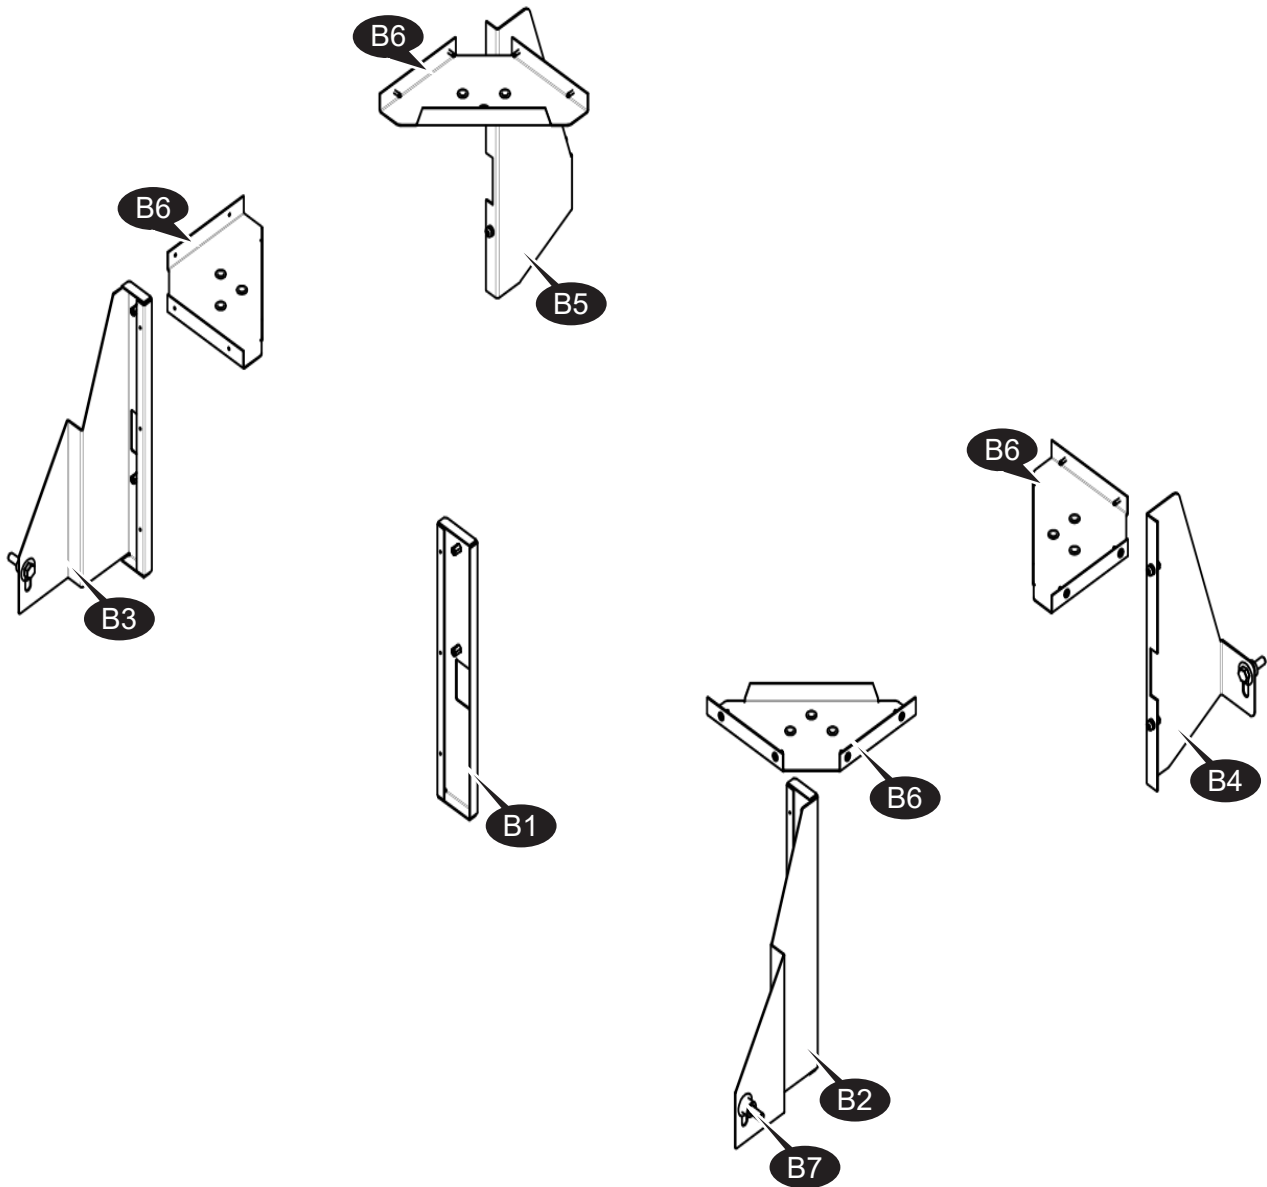


Item	Quantity	Part Number	Description
B1	1	15026924	Bracket Middle Front Drawer ASSY
B2	1	15026927	Bracket Right Front Drawer Mod ASSY
B3	1	15026929	Bracket Left Front Drawer Mod ASSY
B4	1	15026182	Bracket Front Right Transit Custom ASSY
B5	1	15025670	Bracket Front Left Transit Custom ASSY
B6	4	15018460	Bracket Latch Inner 8mm ASSY
B7	1	15026919	Fitting Kit Steelbracket Set Front Mod L1 L2 2SLD

15026930 Steelbracket Set Rear Mod 2SLD Custom/T7

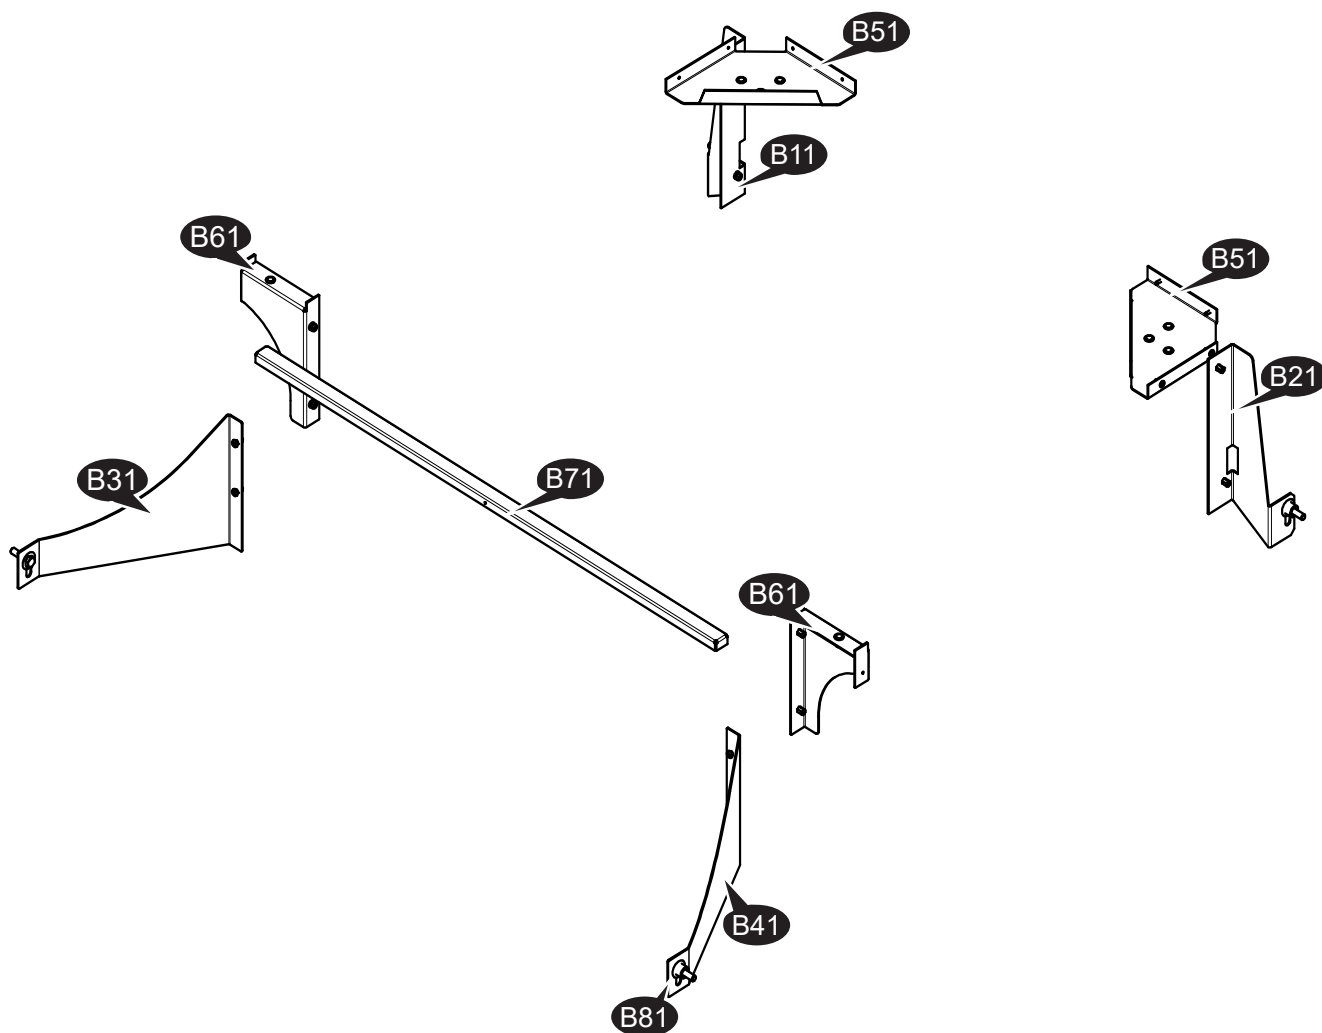


Item	Quantity	Part Number	Description
B11	1	15025683	Bracket Rear Right Transit Custom ASSY
B21	1	15025679	Bracket Rear Left Transit Custom ASSY
B31	1	15026277	Bracket Side Middle Rear Right Transit Custom
B41	1	15026278	Bracket Side Middle Rear Left Transit Custom
B51	2	15018460	Bracket Latch Inner 8mm ASSY
B61	2	15018461	Bracket Latchcup Side M8 SF 2020 ASSY
B71	1	15026921	Bracket Middle Rear Drawer Custom
B81	1	15026931	Fitting Kit Steelbracket Set Rear Module Mod 2SLD CustomT7

15028106 Steelbracket Set Rear Mod 2SLD Custom/T7

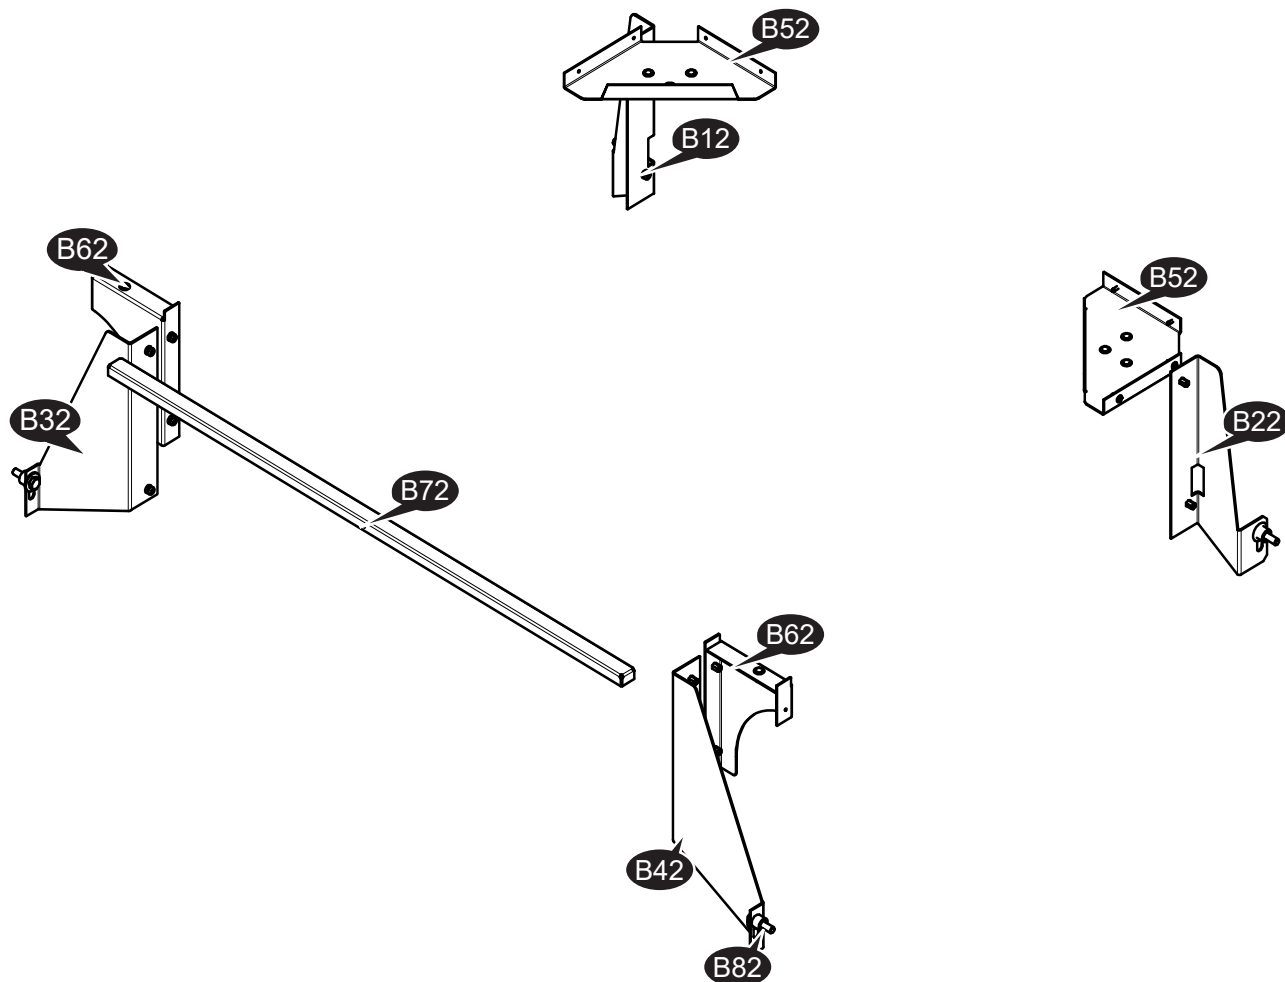


Item	Quantity	Part Number	Description
B12	1	15025683	Bracket Rear Right Transit Custom ASSY
B22	1	15025679	Bracket Rear Left Transit Custom ASSY
B32	1	15025681	Bracket Side Right Transit Custom ASSY
B42	1	15025677	Bracket Side Left Transit Custom ASSY
B52	2	15018460	Bracket Latch Inner 8mm ASSY
B62	2	15018461	Bracket Latchcup Side M8 SF 2020 ASSY
B72	1	15026921	Bracket Middle Rear Drawer Custom
B82	1	15028104	Fitting Kit Steelbracket Set Rear Module Mod 2SLD CustomT7 L1

15010236 Handle Assy

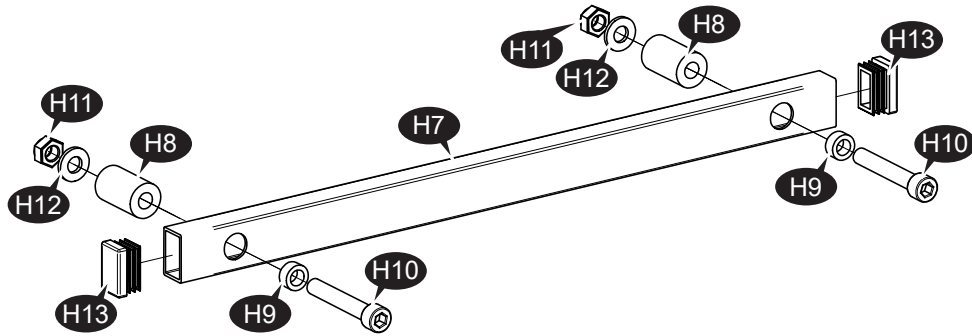

















Item	Quantity	Part Number	Description
H7	1	15009441	Handle Tube 25x15x286
H8	2	15009442	Spacer Ø8,3x18x30 Nylon Black
H9	2	15009443	Spacer Ø8,1x13x6mm Galv
H10	2	15009444	Screw M8x50 Cylinderh Hex
H11	2	8 NMU	Mutter M8 Nyloc DIN985
H12	2	8,4x17x2	M8 Washer, DIN 125
H13	2	15009438	End sleeve Black

15028788 SF Ford Transit Custom 1SLD Cover Plate Front Mod

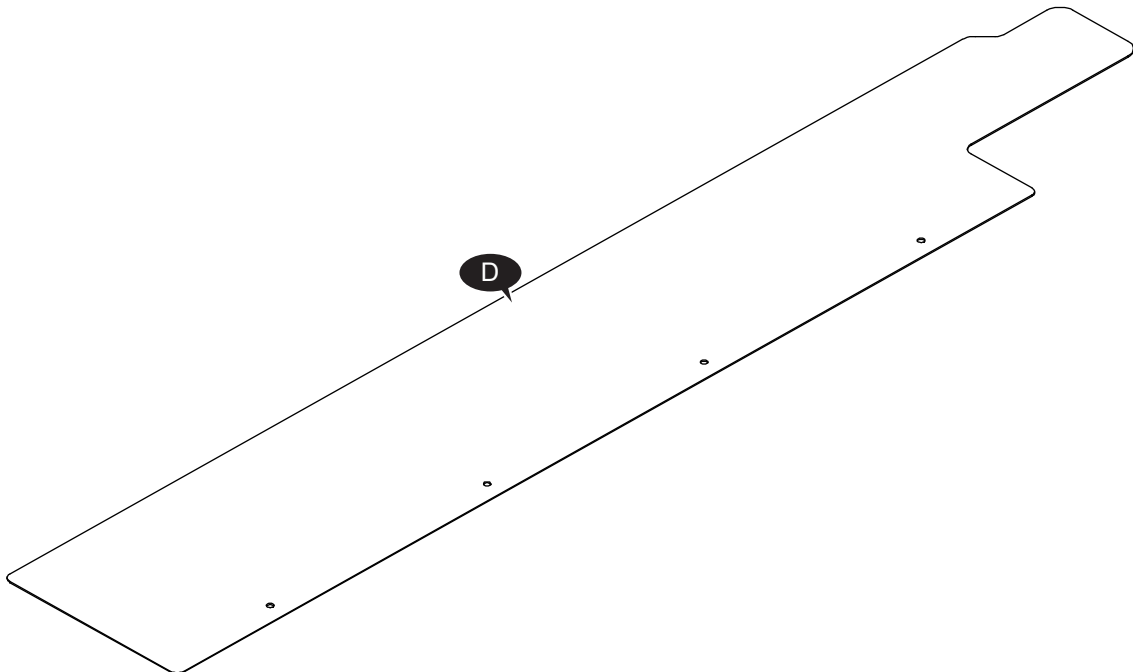


Item	Quantity	Part Number	Description
D	1	15028788	SF Ford Transit Custom 1SLD Cover Plate Front Mod

Fitting kit

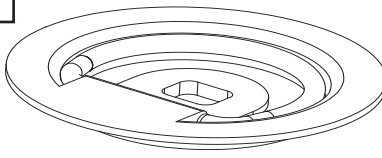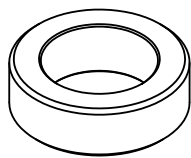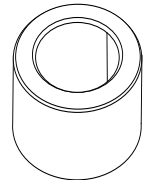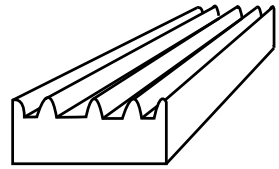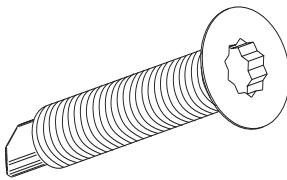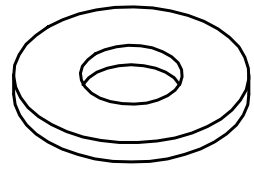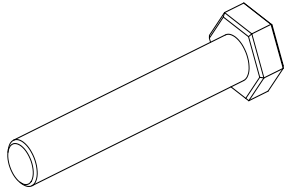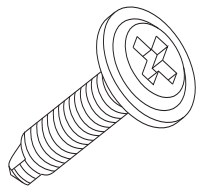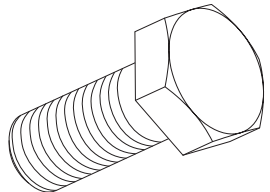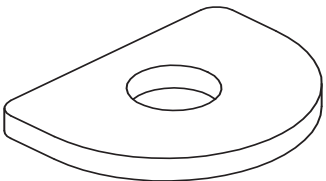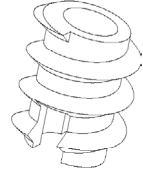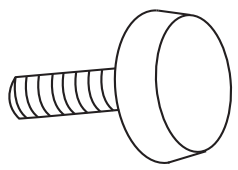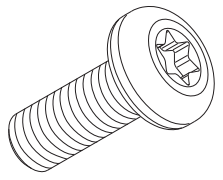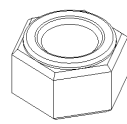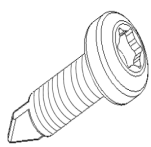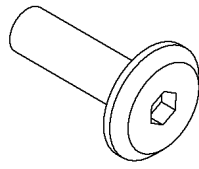F1  15005497 Latchcup Black Ø90 Ø12x15 1000Kp	F2  13X20X6,4 Spacer, U-709	F3  15001584 Distance Sleeve D20 d13 h15
F4  36.721004 Rubber Profile Sindby (L: 1200 mm)	F5  15016947 4.8x25 Selfdrill CS RW25 Elz	F6  16000020 Washer 10,5x30x2,5mm
F7  15004713 M8x50 screw, 6K DIN 933 Black,	F8  4,2x16 FLS Platescrew selftapping BLACK	F9  10X40 6K Bolt, M10x40 Din933 6K ,Zn
F10  15005884 Washer Latchcup for Ø8	F11  15010378 M6 Threaded insert hex	F12  M6x20 Ø20 Rattskrue
F13  15003551 M6x16 TX30 pan (DIN 7985)	F14  15009571 Screw 4,2x13 Selfdrill Panh Torx socket	F15  6 NMU M6 Self locking nut, DIN 985-8
F16  15005063 Screw 4,2x19 Selfdrill Panh AW20	F17  6x20 Umb	F18
F19	F20	F21


1. Install Front/ Rear Module

L&R

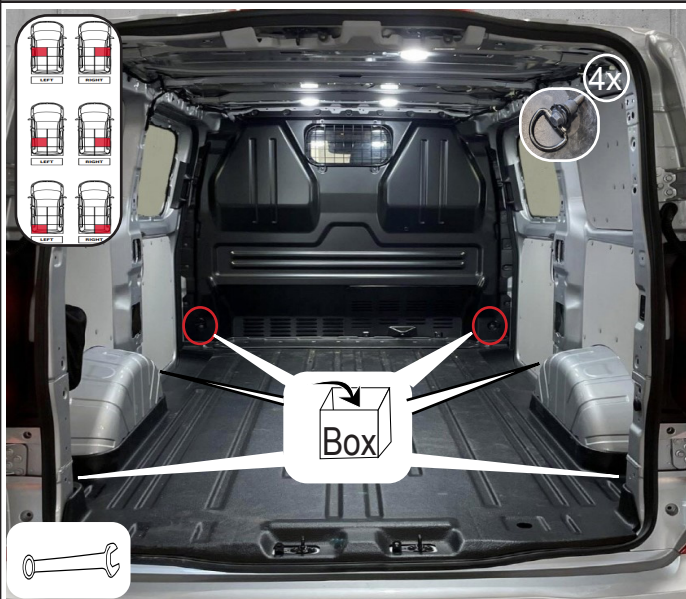


2. Install Front Module 1&2SLD

L&R

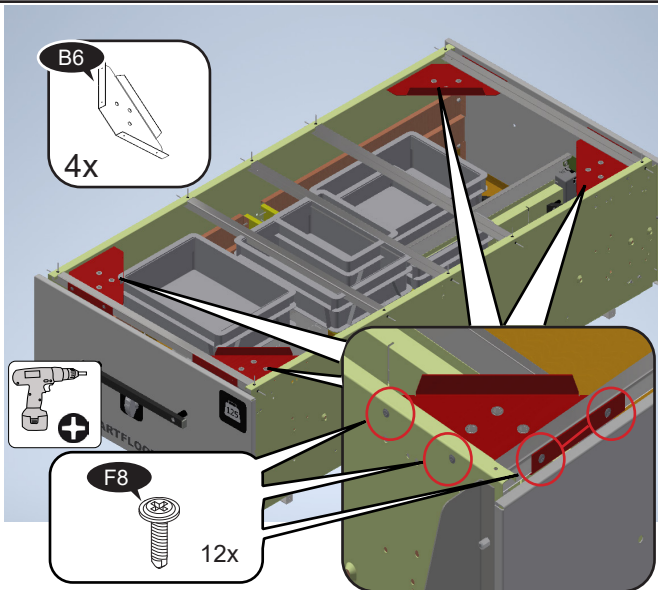


3. Install Front Module 1&2SLD

LH

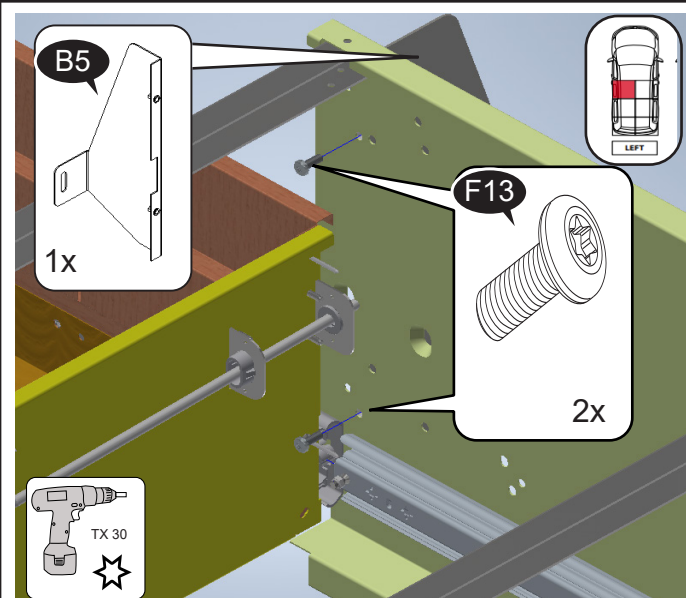

4. Install Front Module 1&2SLD



RH

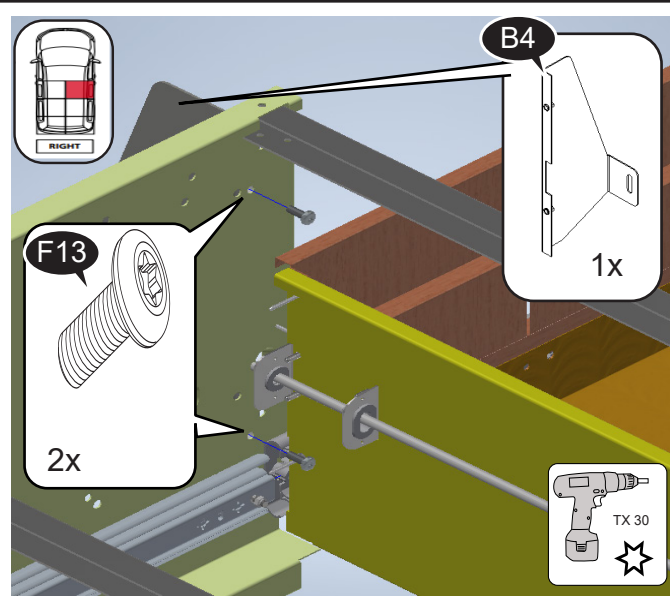

5. Install Front Module 1&2SLD


6. Install Front Module 1&2SLD

L&R

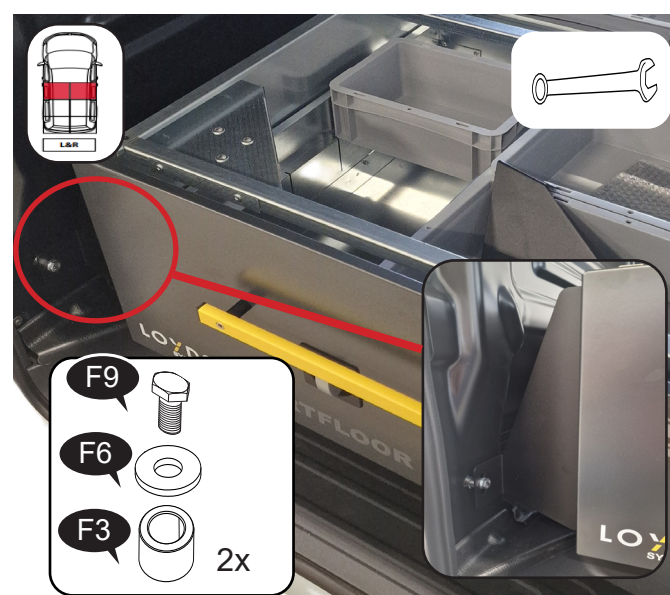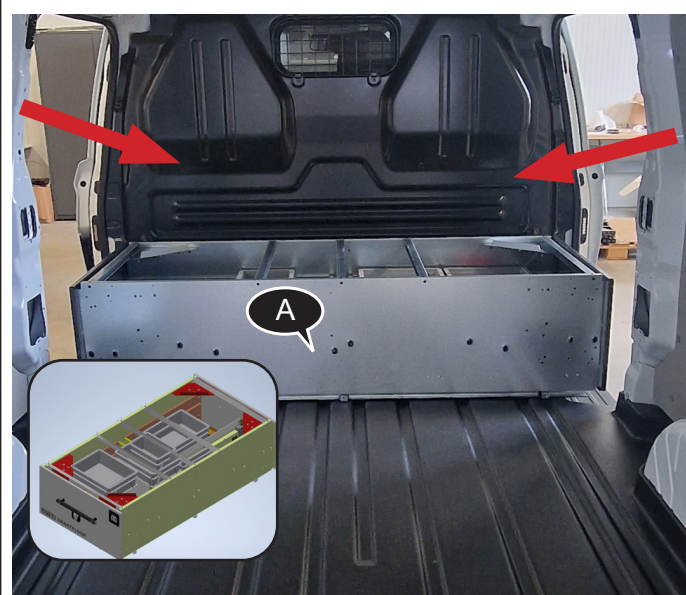


7. Install Front Module 1&2SLD

L&R

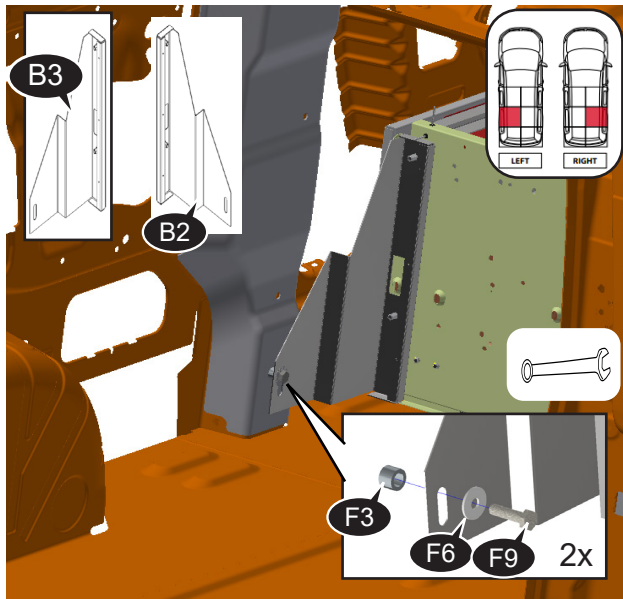



8. Install Front Module 1&2SLD

L&R

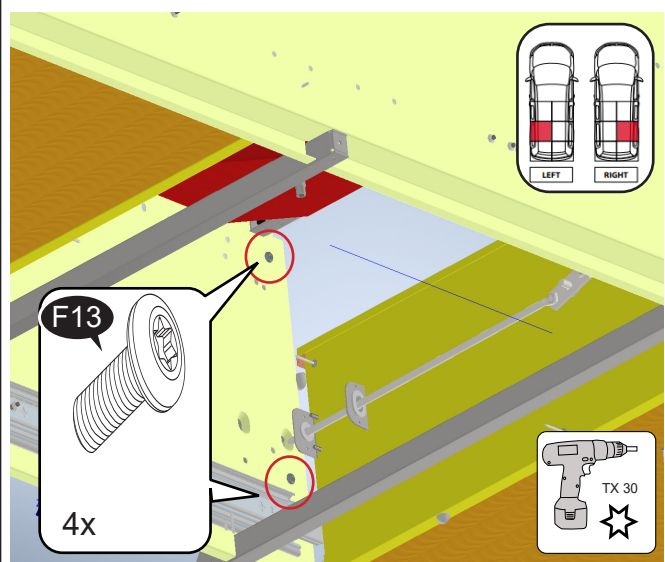



9. Install Front Module 1&2SLD

10. Install Front Module 1&2SLD

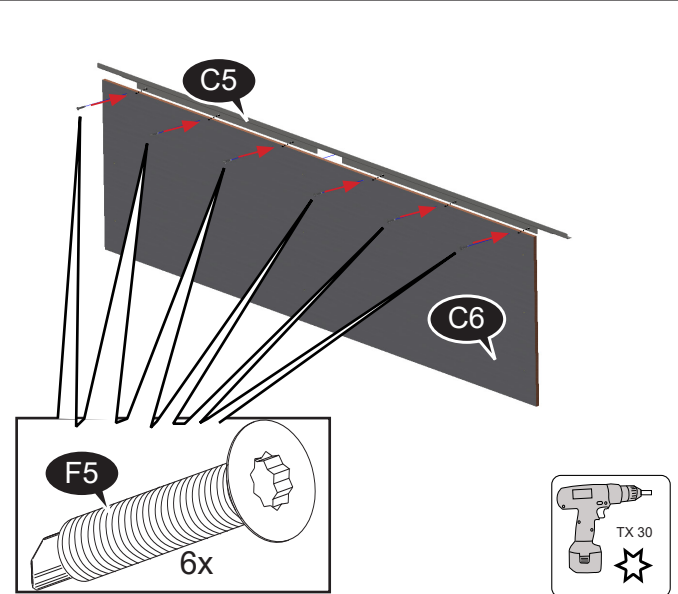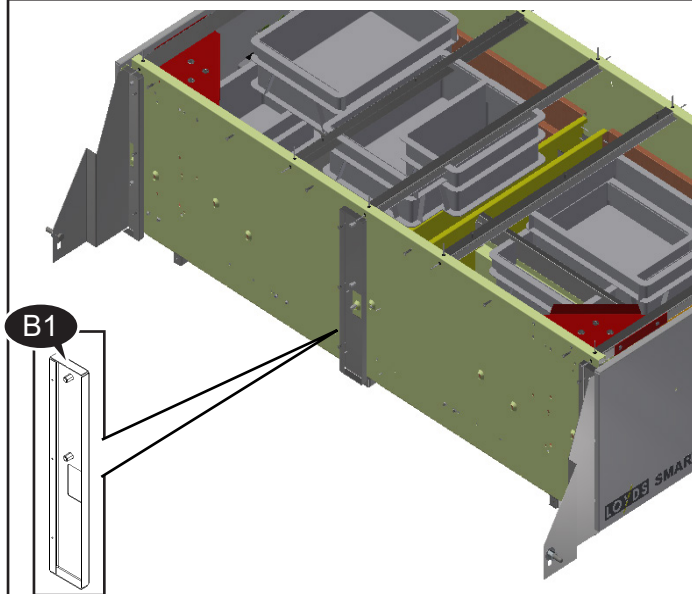


11. Install Front Module 1&2SLD

12. Install Front Module 1&2SLD

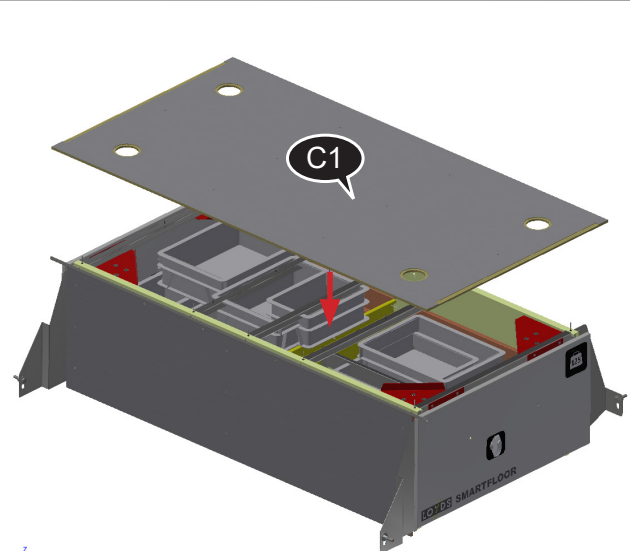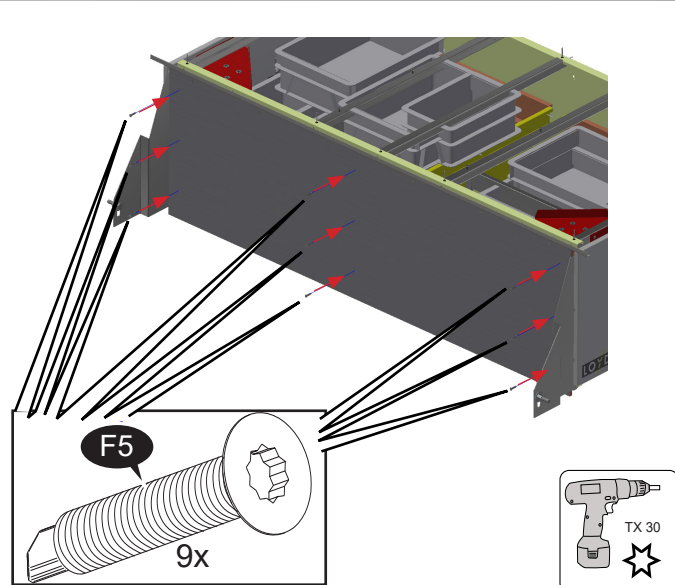

13.


Install Front Module 1&2SLD

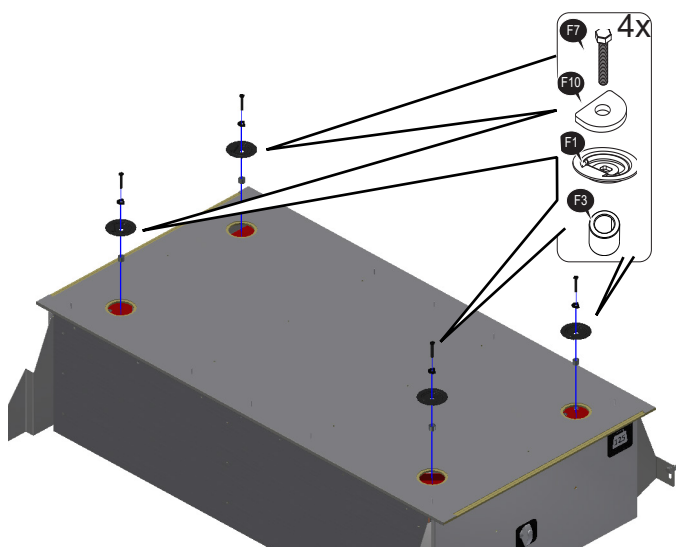

Do not tighten yet


14.

Install Front Module 1&2SLD

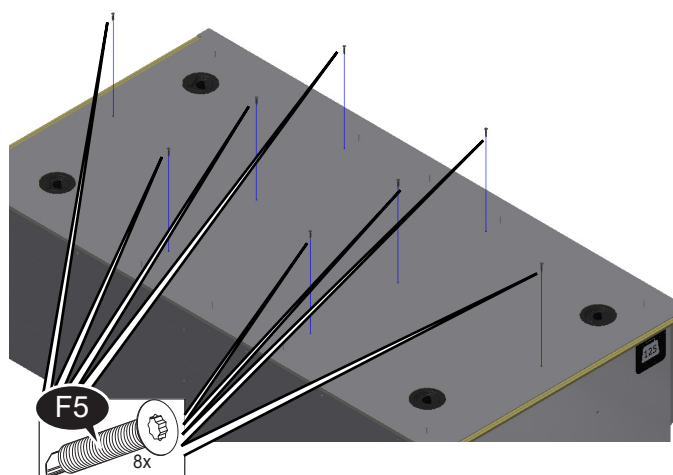

15.


Install Front Module 1&2SLD

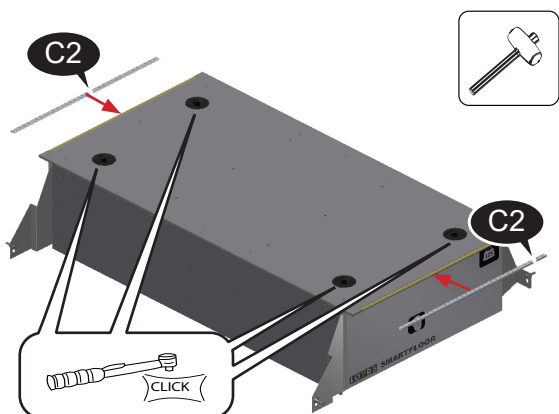

16.

Org. Sep.


Install Front Module

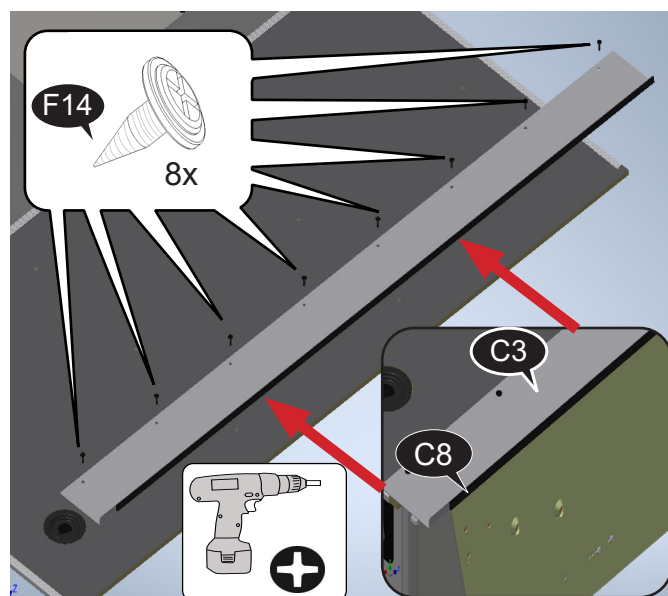

17.


Loyds. Sep.

Install Front Module

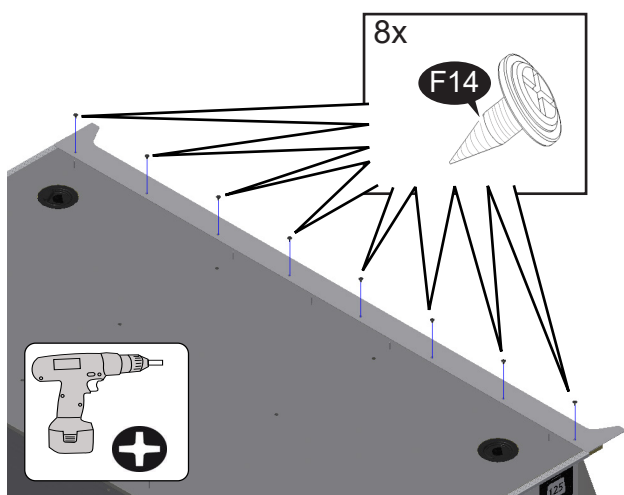

18.


Install Front Module 1&2SLD

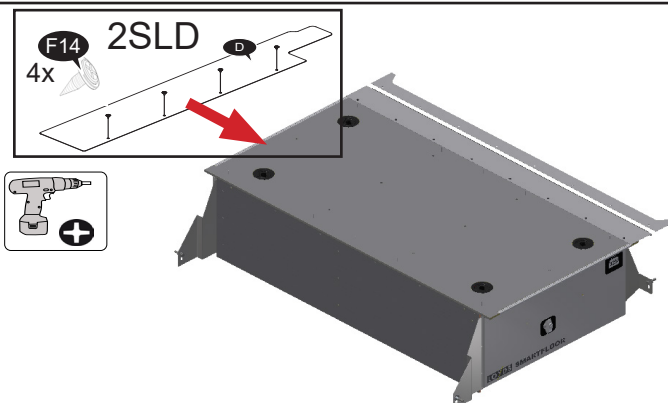

COMPLETE INSTALL
FRONT MODULE

19.


Install Real Module L2

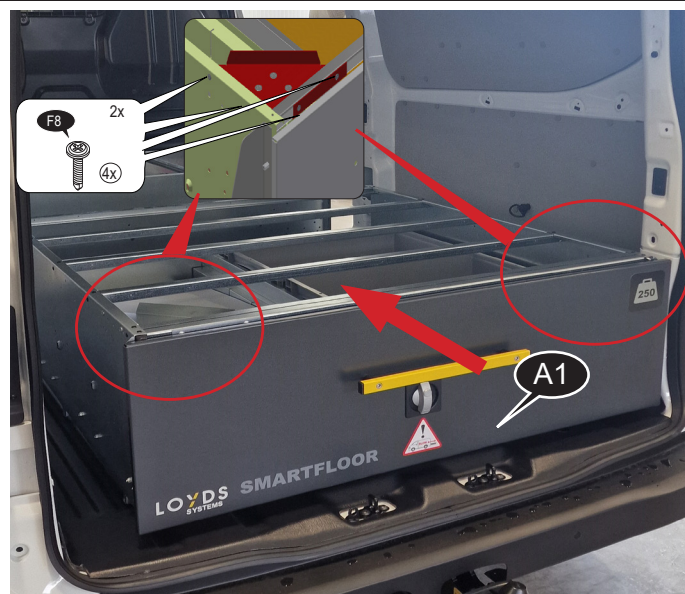

20.

Install Real Module L2


L&R

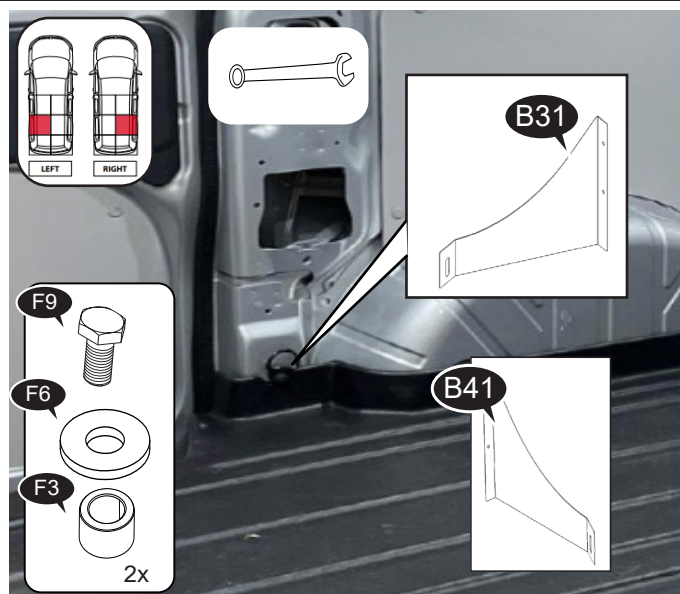

21.

Install Real Module L2


L&R

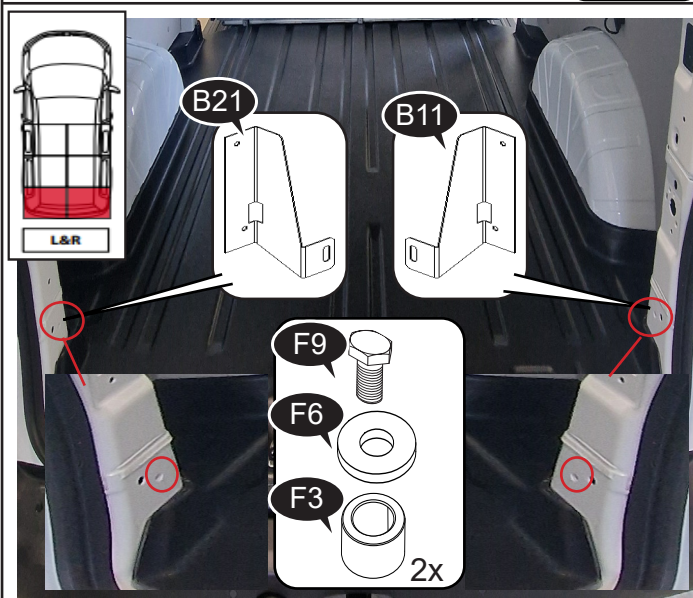

22.

Install Real Module L2


RH

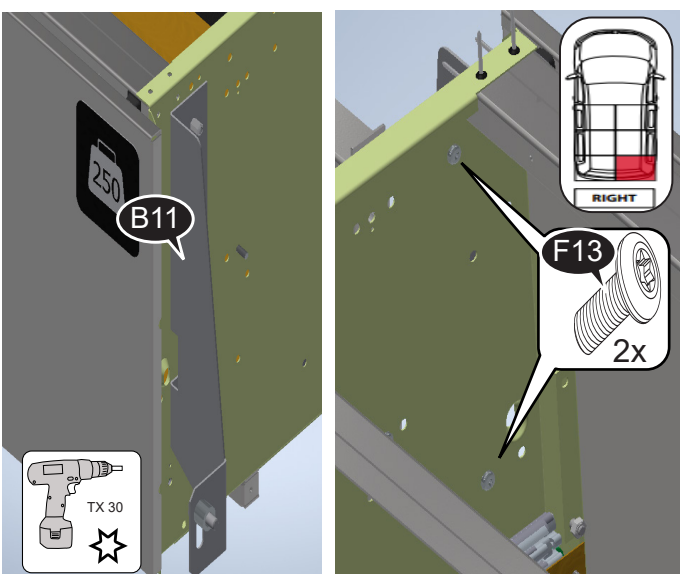

23.

Install Real Module L2


LH

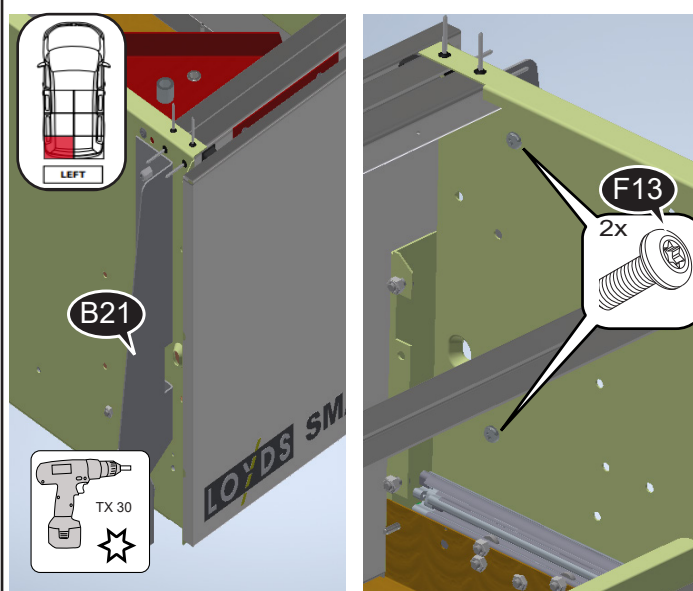

24.

Install Real Module L2


L&R

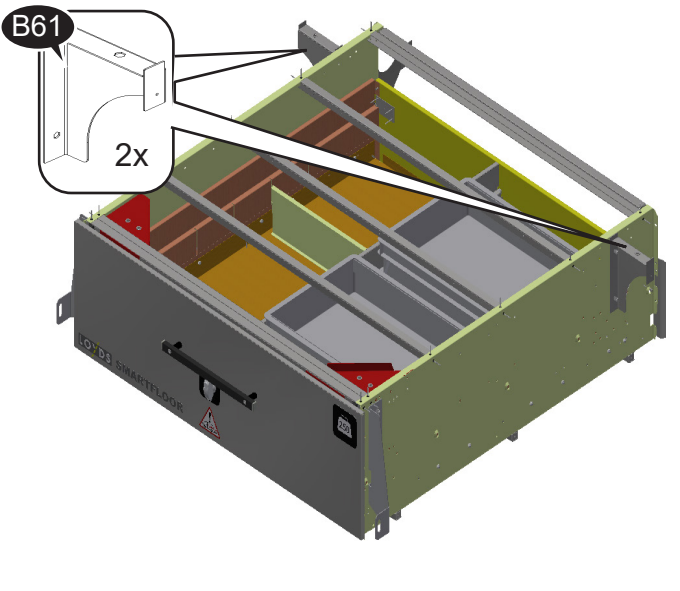

25.

Install Real Module L2


LH

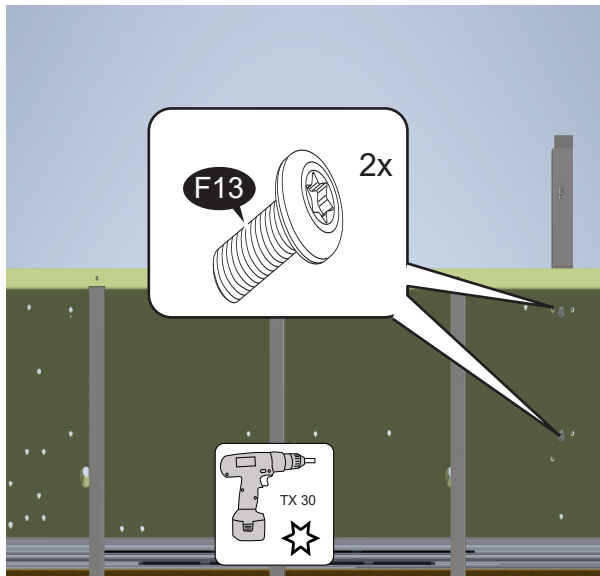

26.


Install Real Module L2

RH

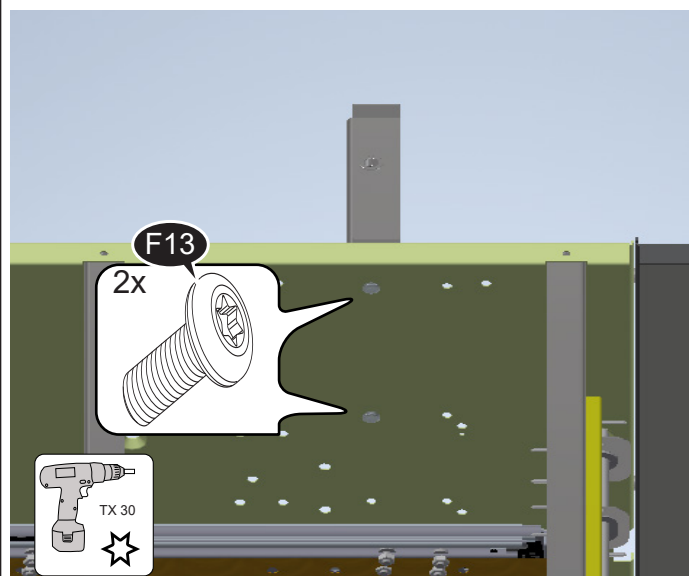


27.

Install Real Module L2

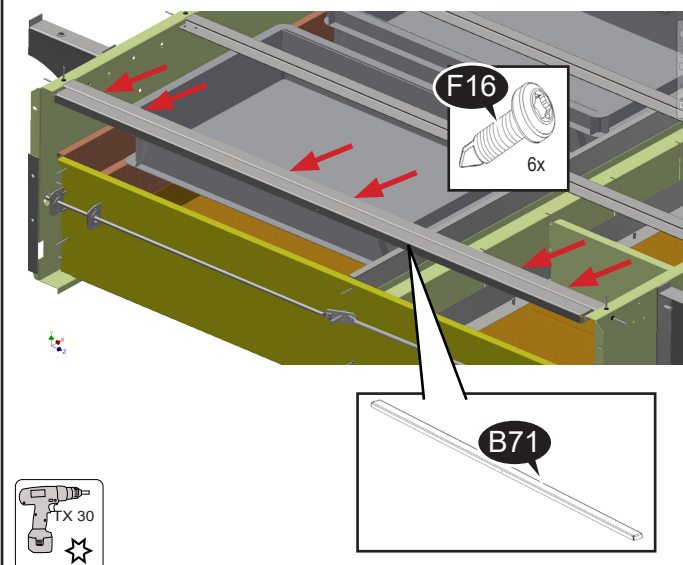


28.

Install Real Module L2

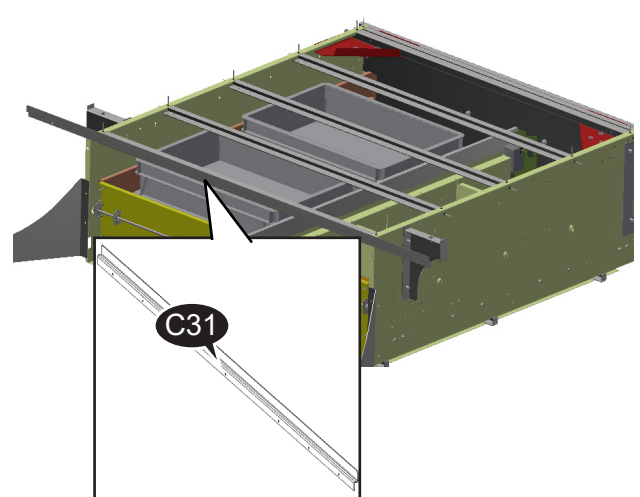


29.

Install Real Module L2

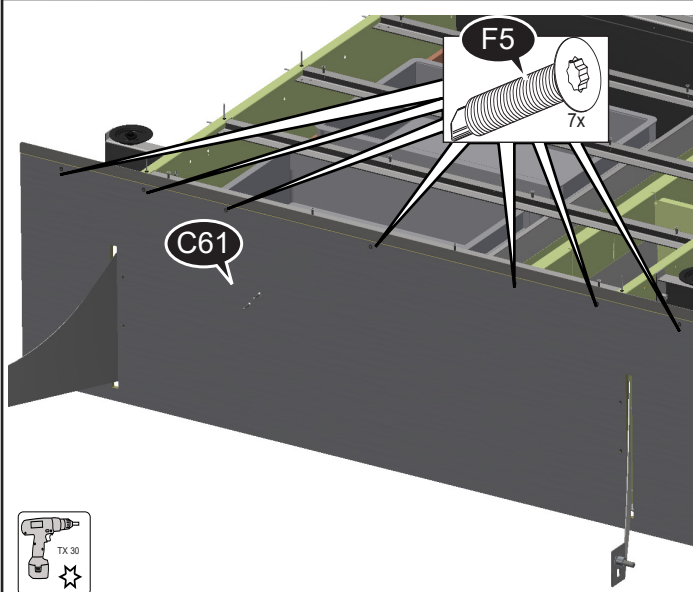


30.

Install Real Module L2

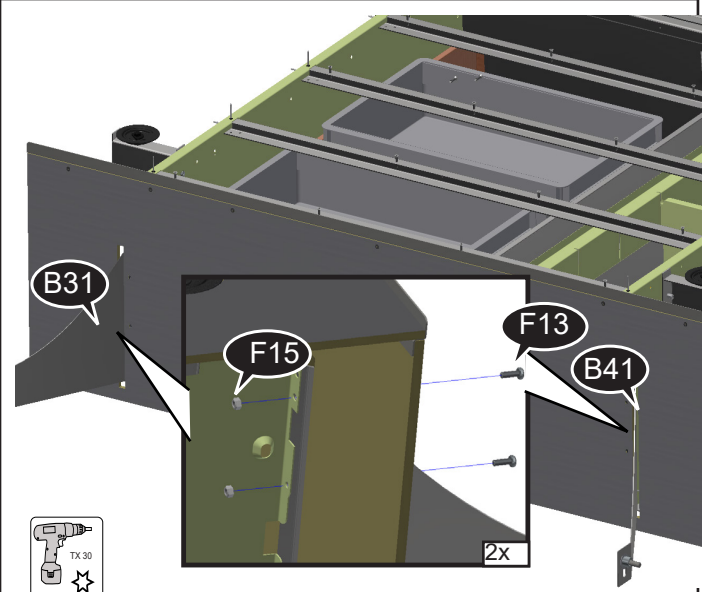


31.

Install Real Module L2

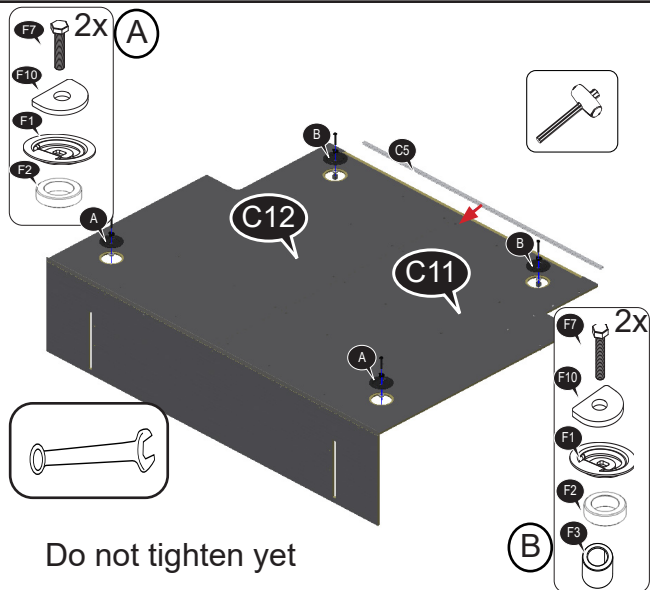


32.

Install Real Module L2

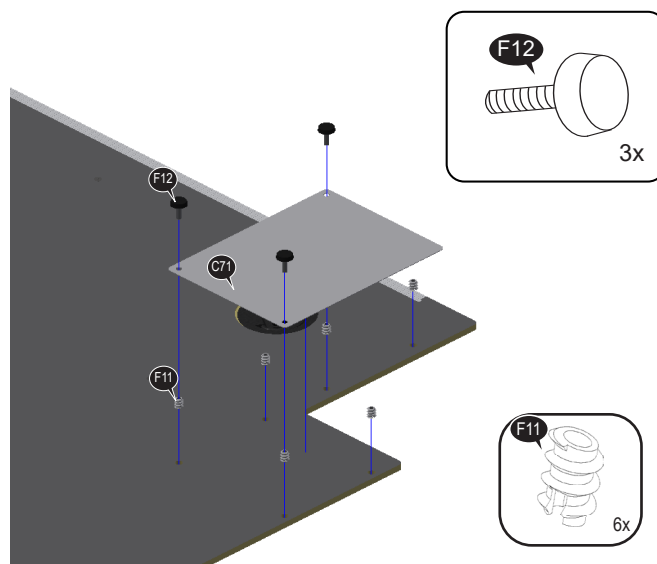


33.

Install Real Module L2

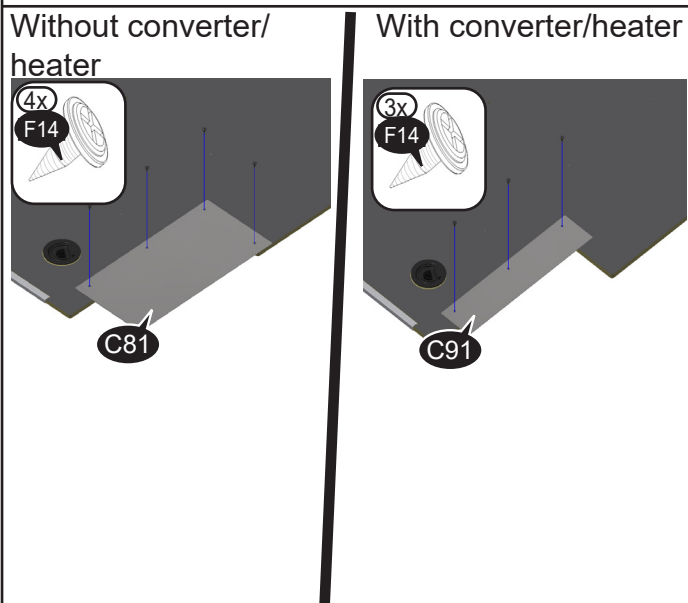


34.

Install Real Module L2

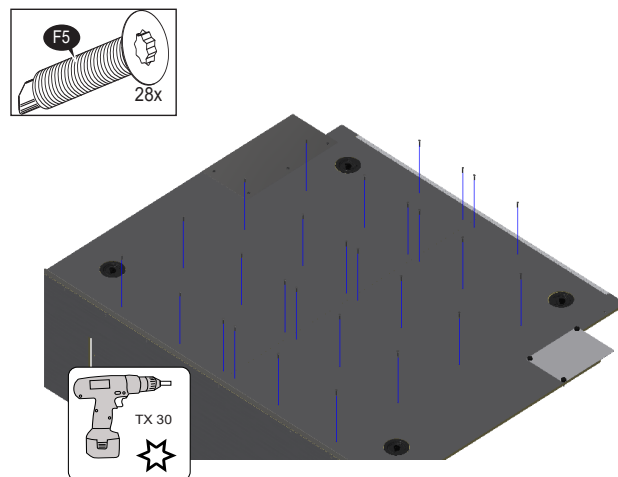


35.

Install Real Module L2

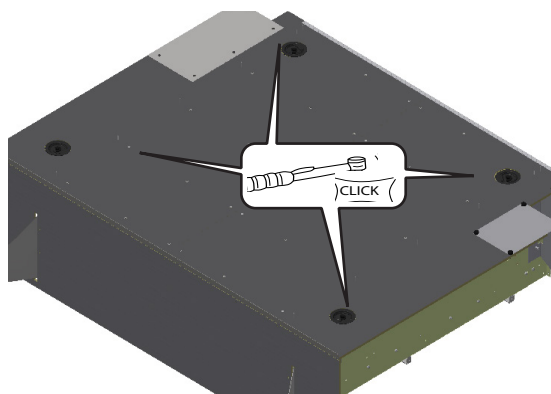

36.


Install Real Module L2

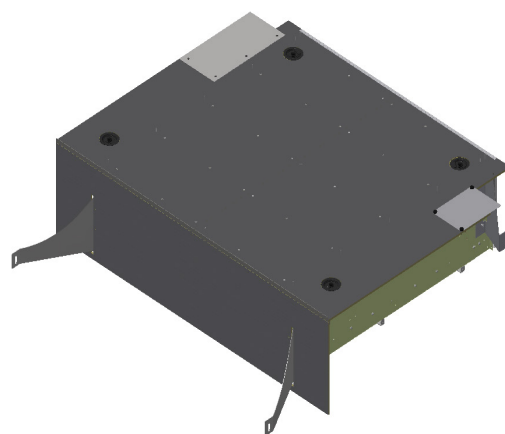

COMPLETE INSTALL
REAR MODULE L2


37.

Install Real Module L1

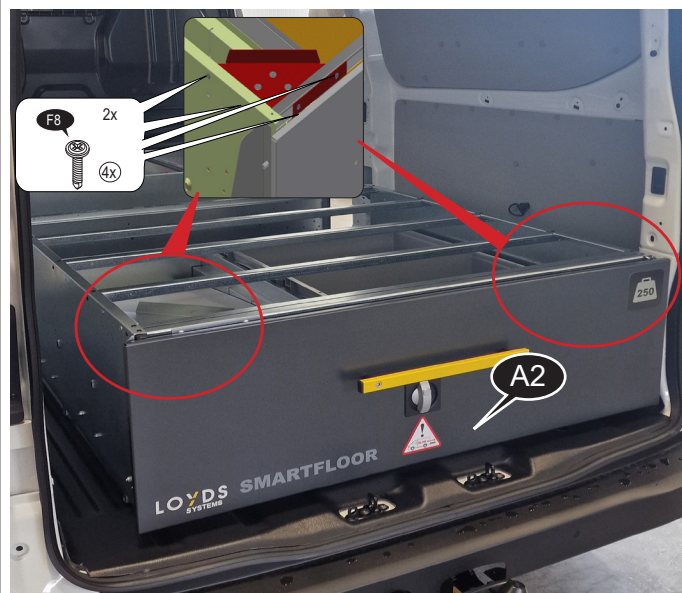


38.

Install Real Module L1

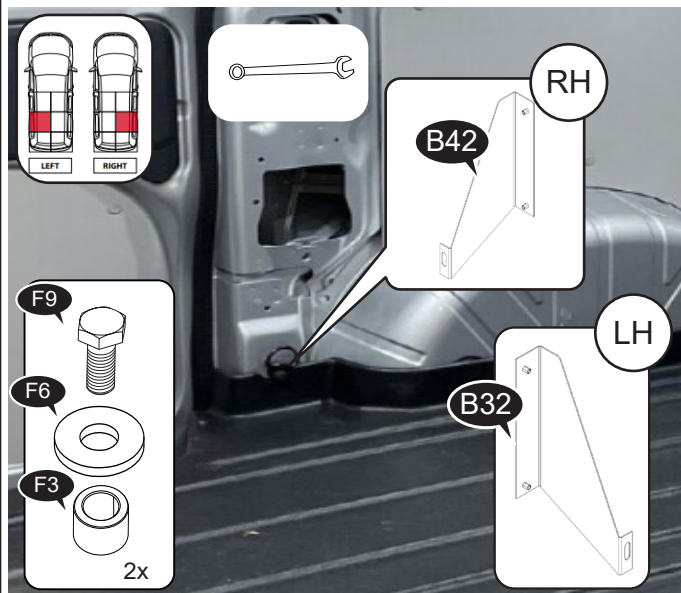


39.

Install Real Module L1

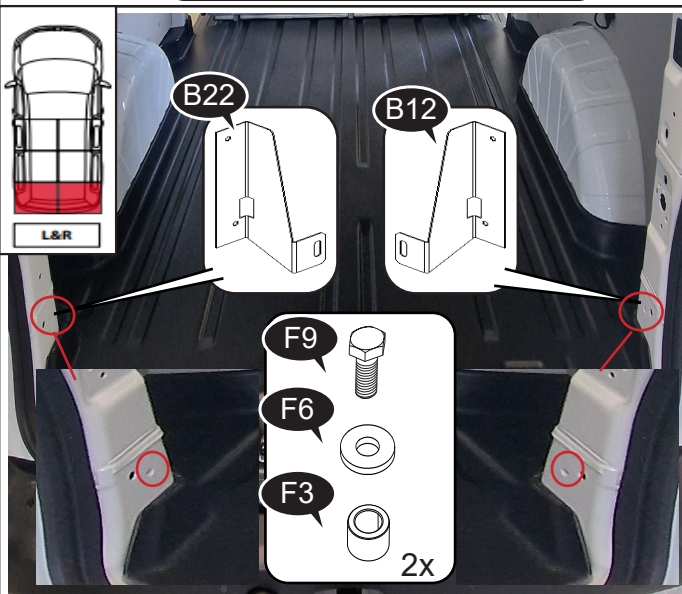


40.

Install Real Module L1

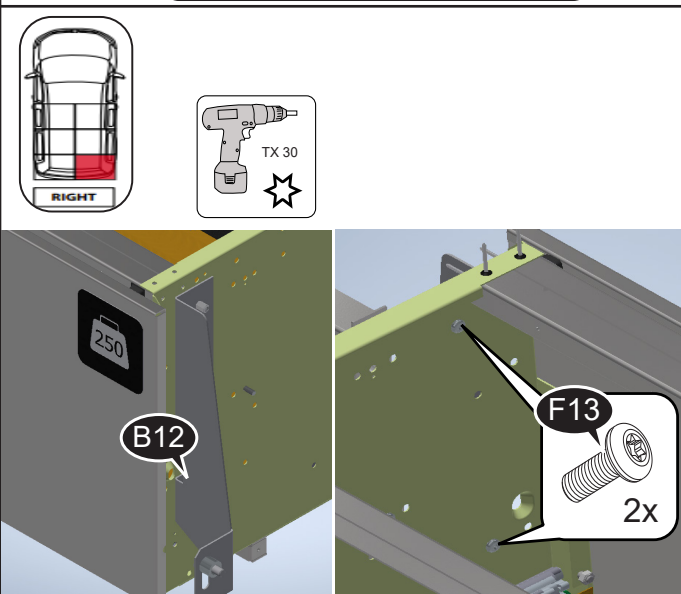


41.

Install Real Module L1

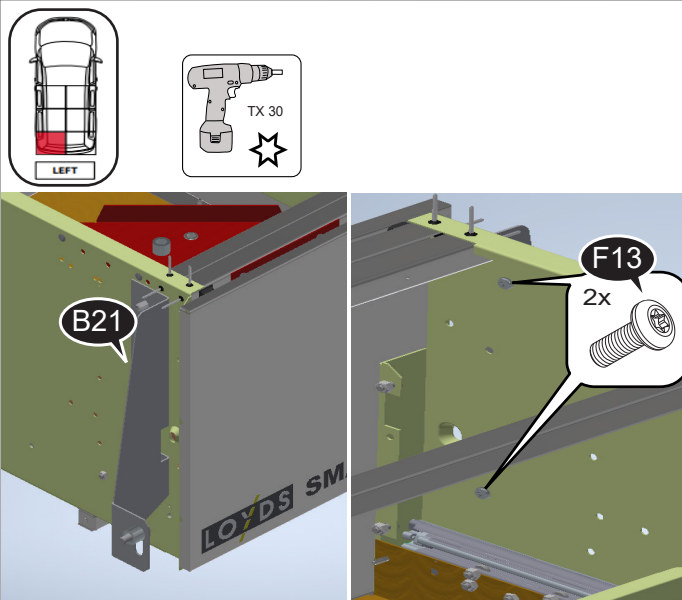

42.


Install Real Module L1

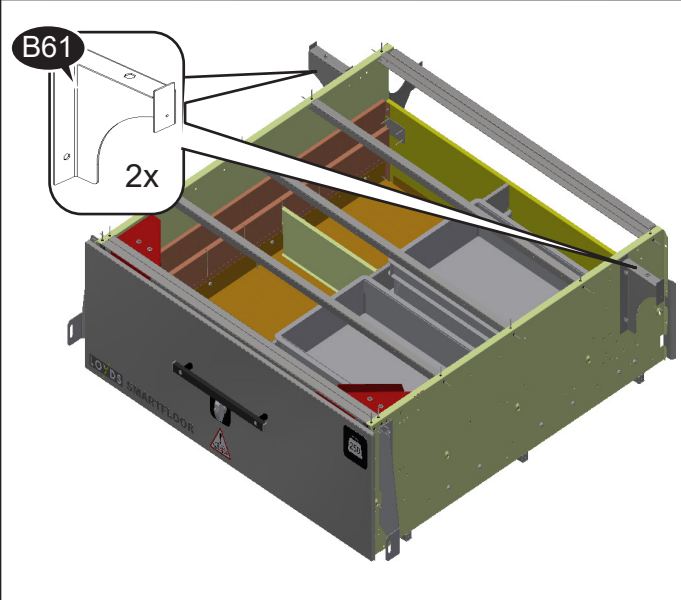

43.

Install Real Module L1


LH

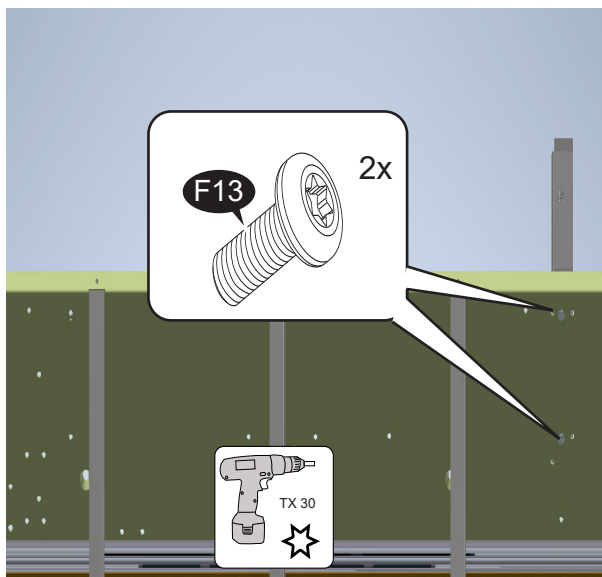

44.


Install Real Module L1

RH

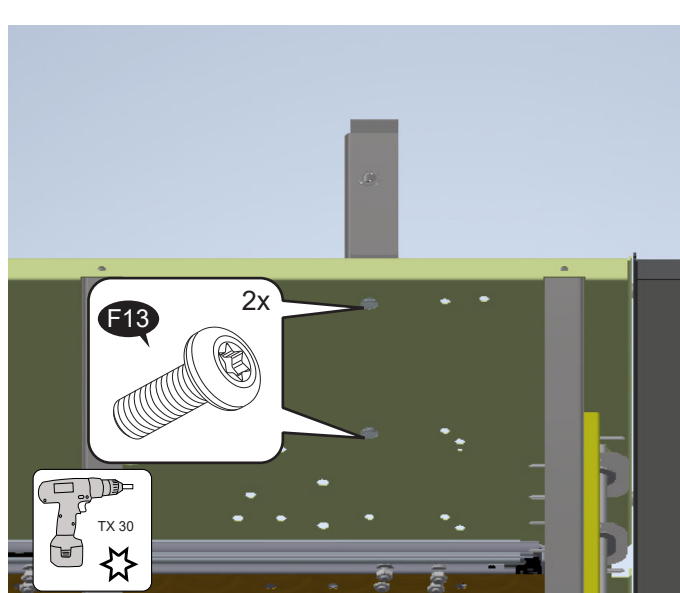


45.

Install Real Module L1

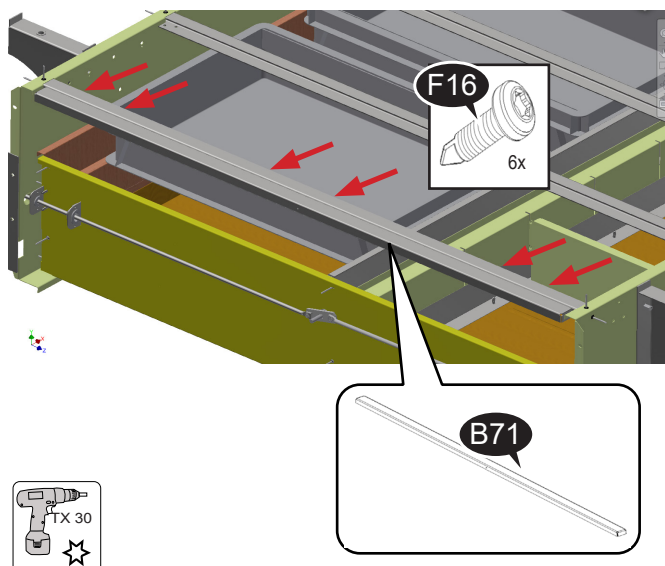


46.

Install Real Module L1

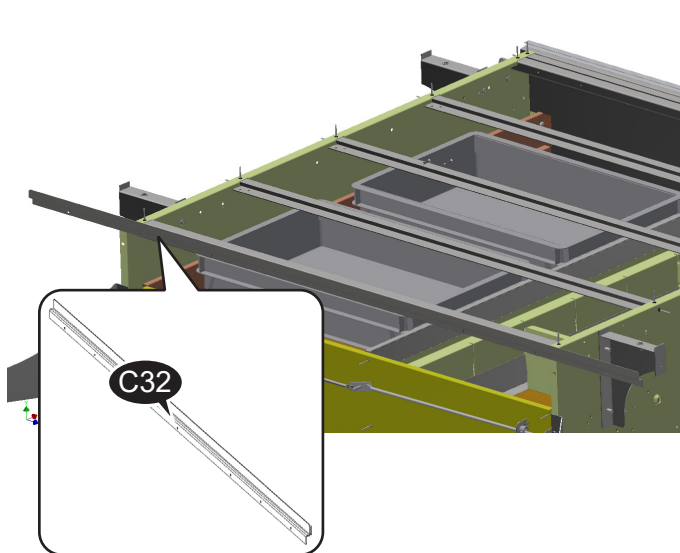


47.

Install Real Module L1

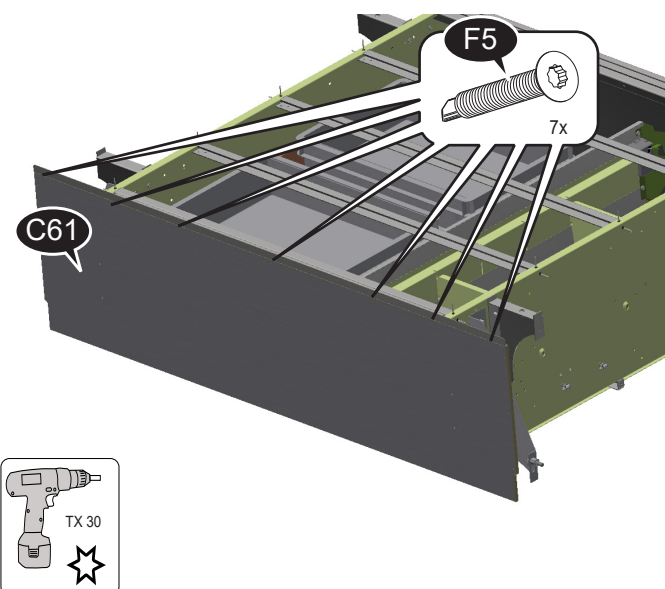


48.

Install Real Module L1

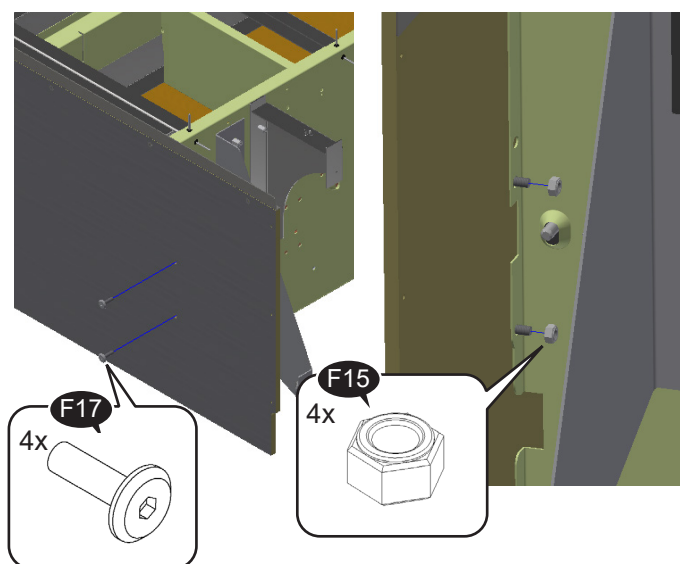


49.

Install Real Module L1

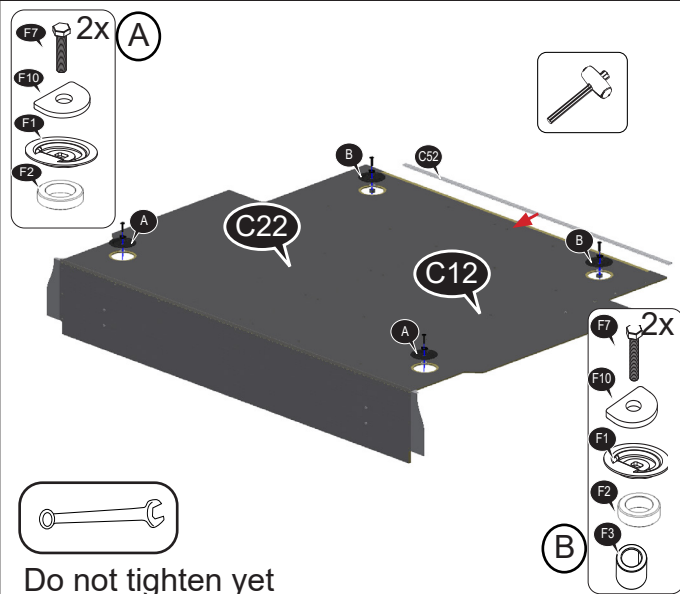


50.

Install Real Module L1

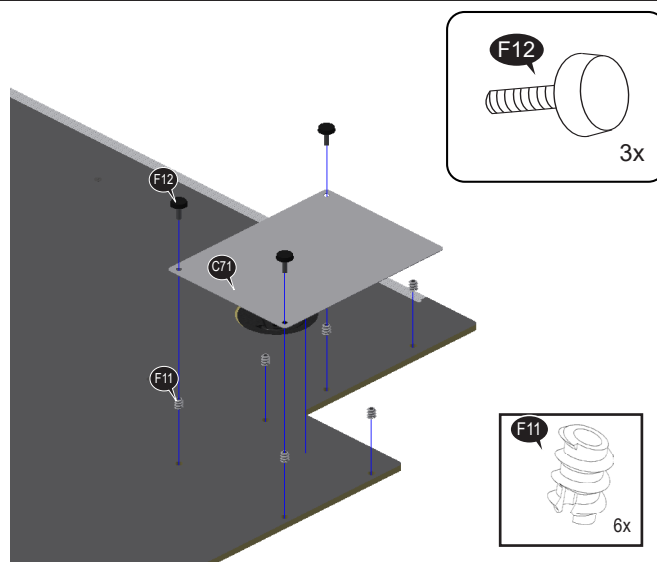


51.

Install Real Module L1

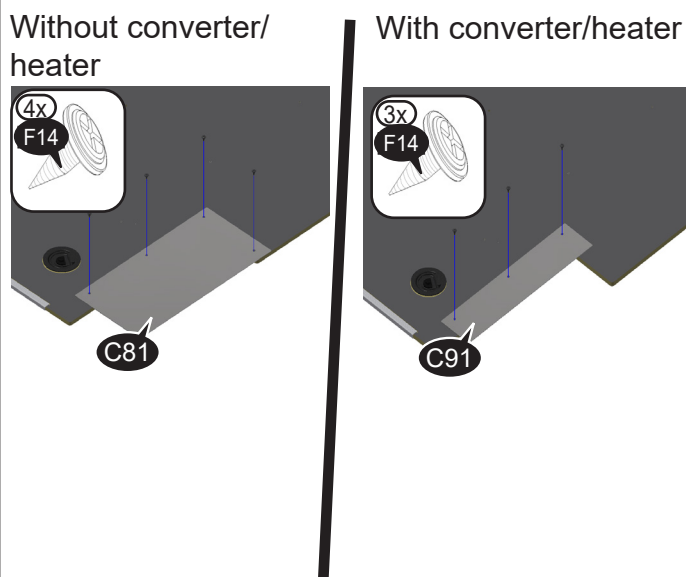


52.

Install Real Module L1

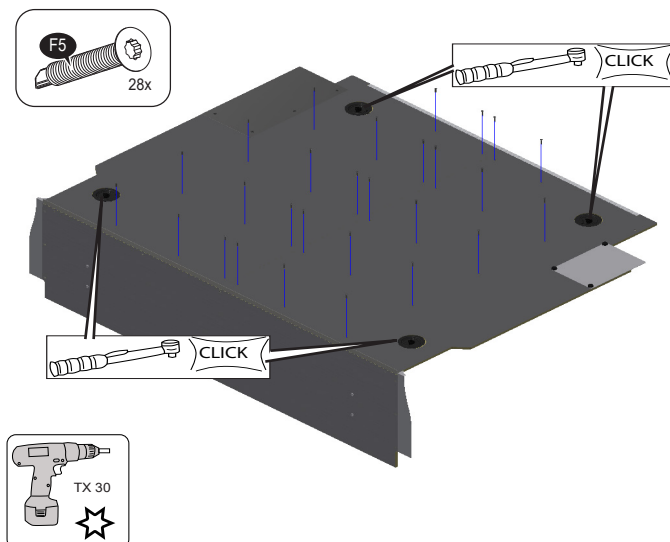


53.

Install Real Module L1

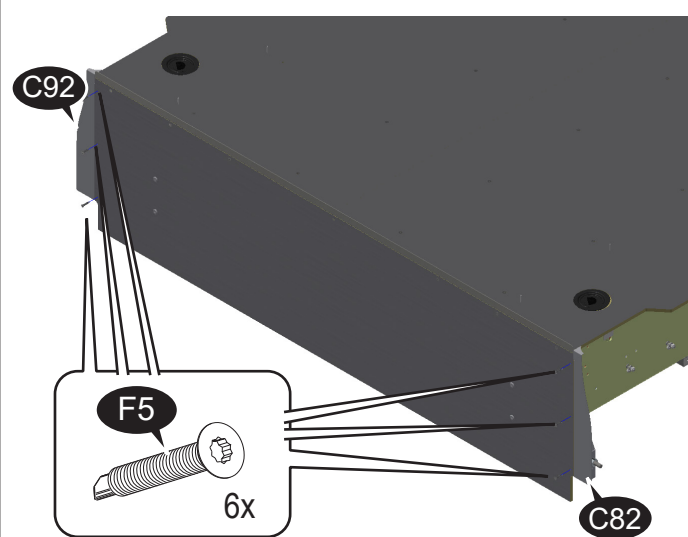

54.

Install Real Module L1

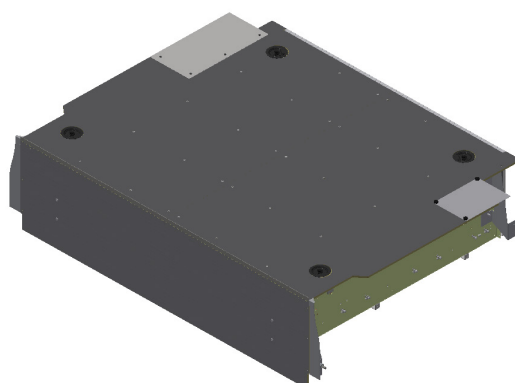

COMPLETE INSTALL
REAR MODULE L1

Appendix

