


VW ID Buzz GTX

Smartfloor Kit Complete 2SLD

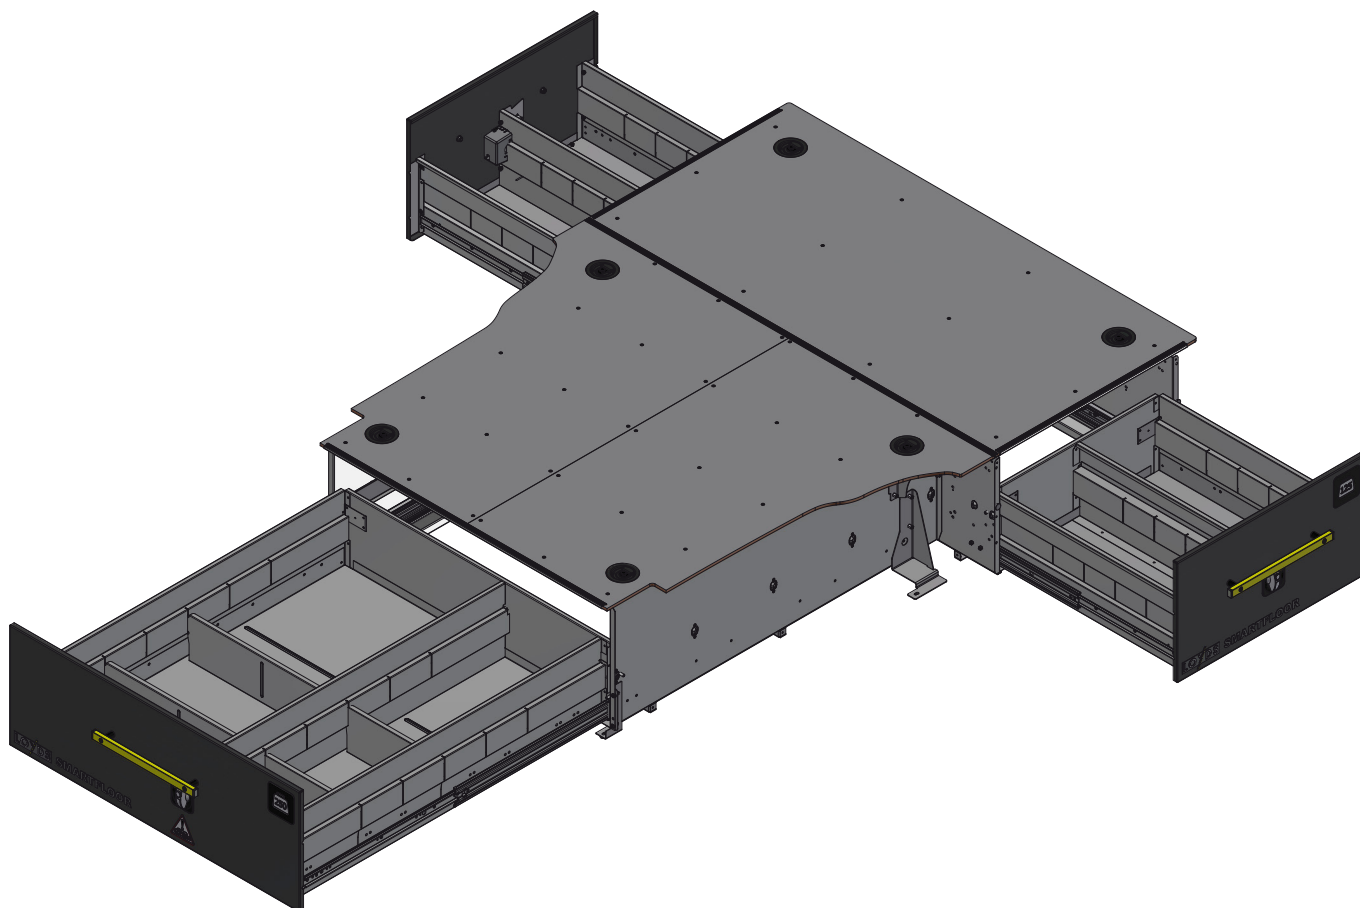

Installation Manual 15029911_A


Loyds Industri AS - 2026-06-15

LOYDS


Revision Record

Rev nr	Date	Page	Picture	Update	New	Deleted steps
A	2026-06-15				X	

Tools

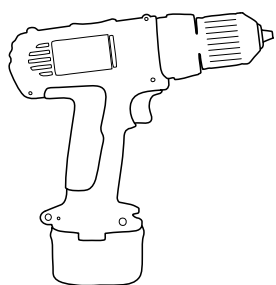

TX25
TX30



PH2





6 mm




6 mm 



6 mm: 6 NM
8 mm: 25 NM

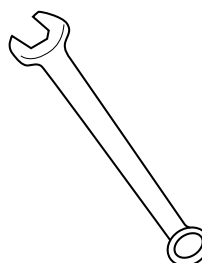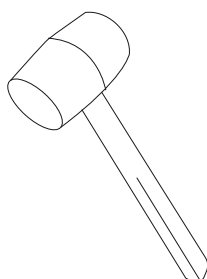

10 mm
13 mm

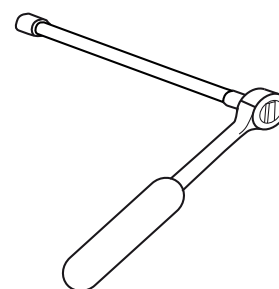


10 mm
13 mm




Use colors when printing this installation manual. / Ved utskrift, bruk farger.

15029770 Complete SF ID Buzz GTX 2SLD

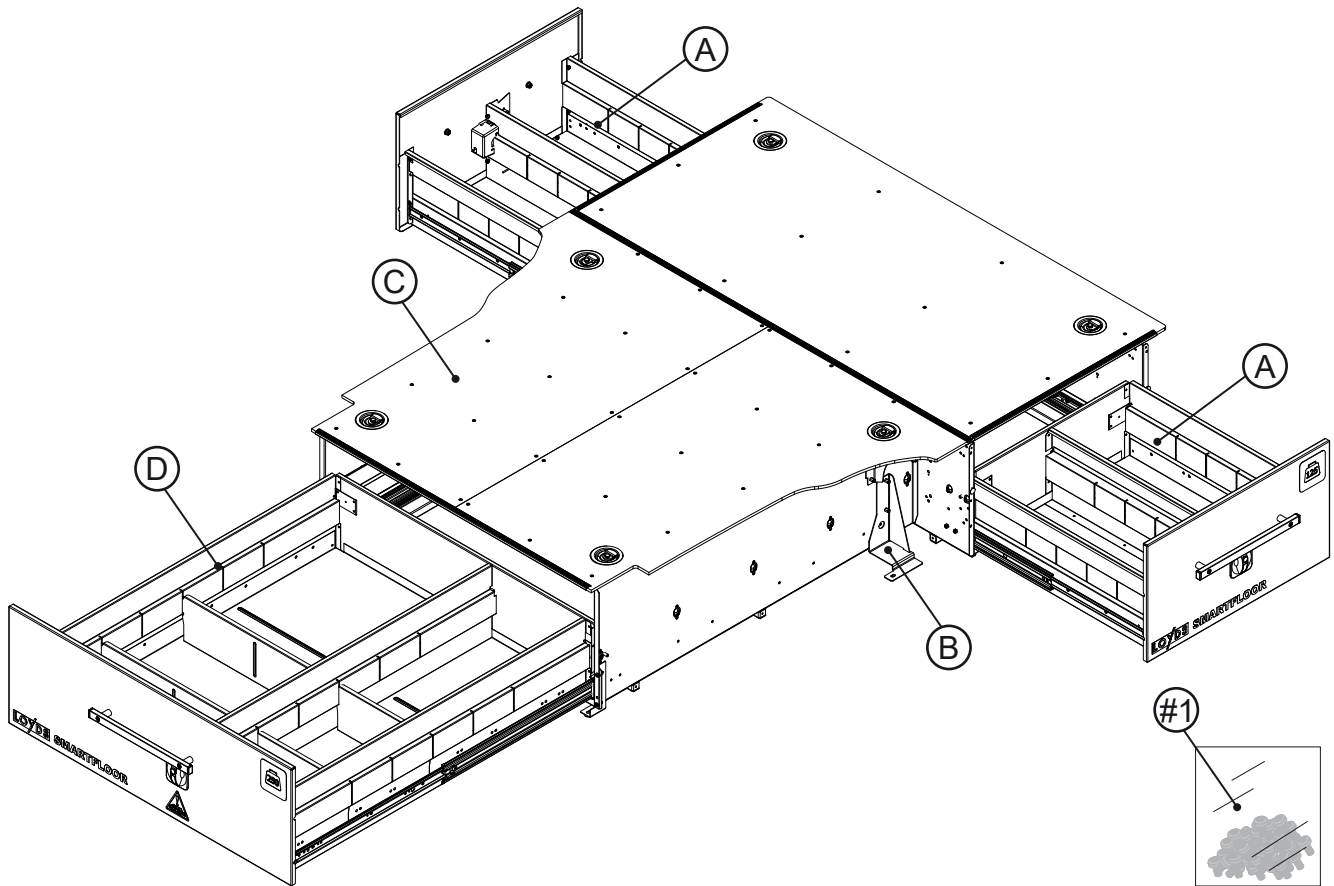


Number	Quantity	Part Number	Definition
A	1	15022217	FD2 Front Drawer W600 L750 Assembled
B	1	15029793	SF ID Buzz GTX Bracket Kit
C	1	15029785	SF ID Buzz GTX Floor Kit 1SLD
D	1	15022782	Rear Drawer W1000 L1200 Main AS ALU
#1	1	15029808	SF ID Buzz GTX Fitting Kit

15029793 SF ID Buzz GTX Bracket Kit

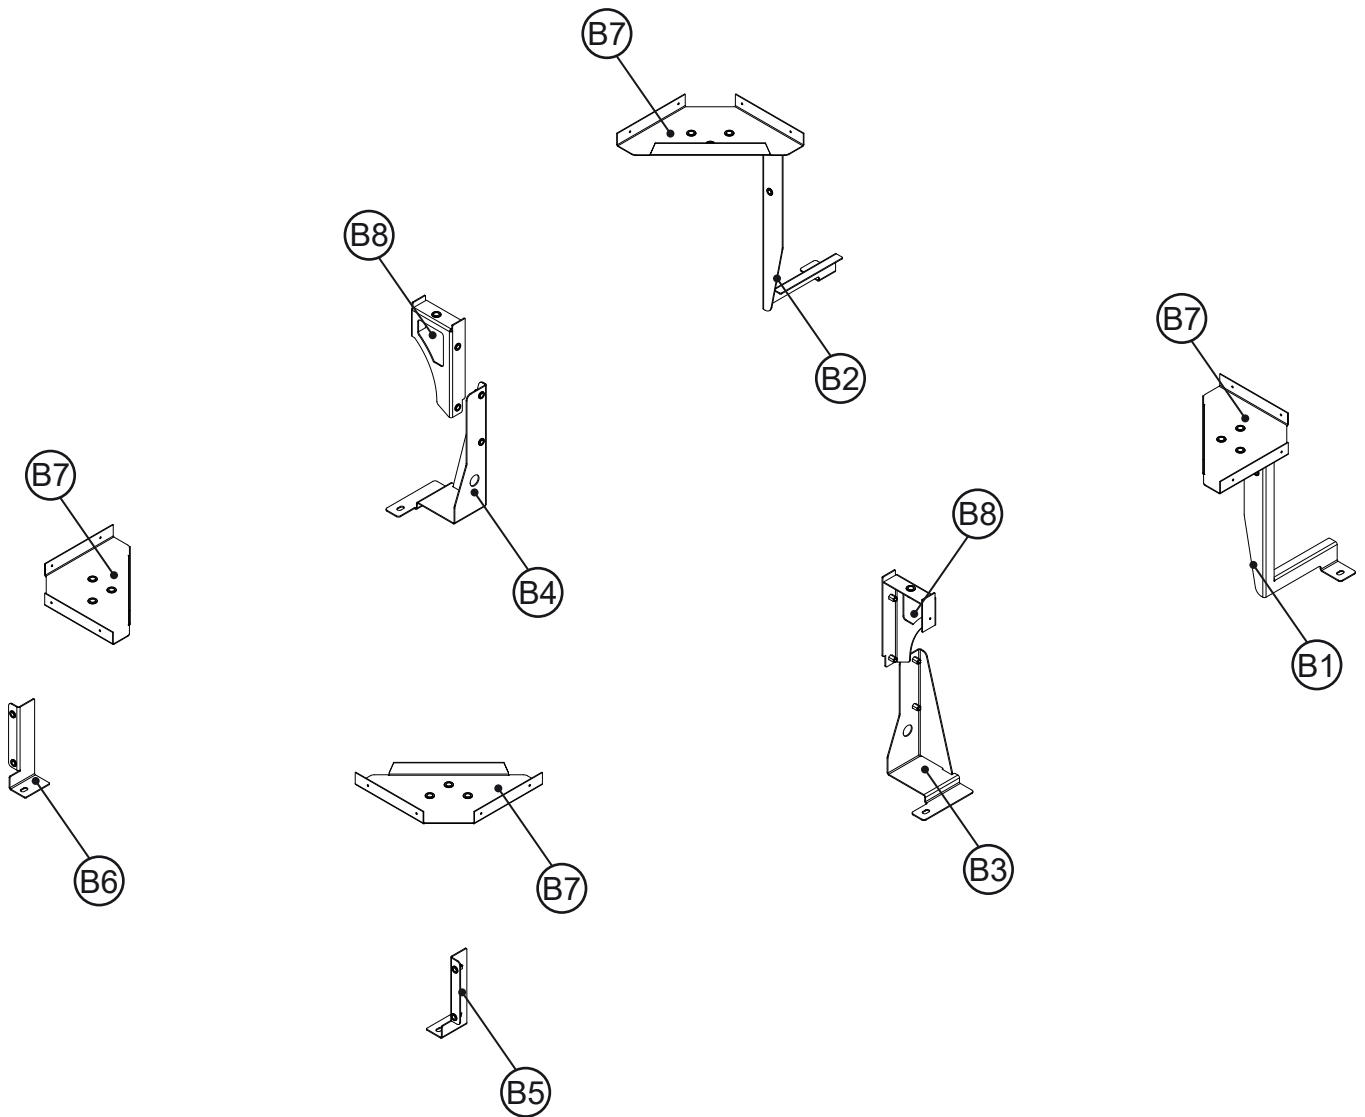


Number	Quantity	Part Number	Definition
B1	1	15029772	SF ID Buzz GTX Front Right Bracket ASSY
B2	1	15029774	SF ID Buzz GTX Front Left Bracket ASSY
B3	1	15029776	SF ID Buzz GTX Middle Right Bracket ASSY
B4	1	15029778	SF ID Buzz GTX Middle Left Bracket ASSY
B5	1	15029780	SF ID Buzz GTX Rear Right Bracket ASSY
B6	1	15029782	SF ID Buzz GTX Rear Left Bracket ASSY
B7	4	15018460	Bracket Latch Inner 8mm ASSY
B8	2	15023259	Bracket Latchcup Side M8 ID.C ASSY

15029785 SF ID Buzz GTX Floor Kit 2SLD

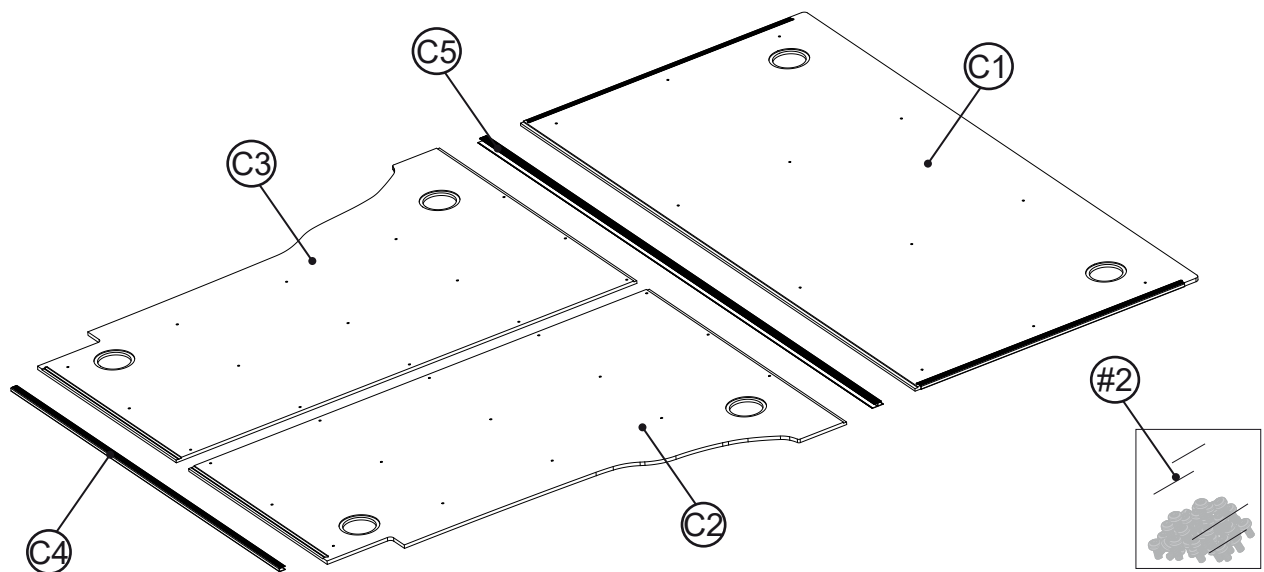


Number	Quantity	Part Number	Definition
C1	1	15029787	SF ID Buzz GTX Front Floor w alu profile
C2	1	15029788	SF ID Buzz GTX Rear Right Floor
C3	1	15029789	SF ID Buzz GTX Rear Left Floor
C4	1	15029795	U-Profile 9mm L=1070
C5	1	15029796	H-Profile 9mm L=1574
#2	1	15029806	SF ID Buzz GTX Floor Kit Fitting Kit

15010236 Handle Assy

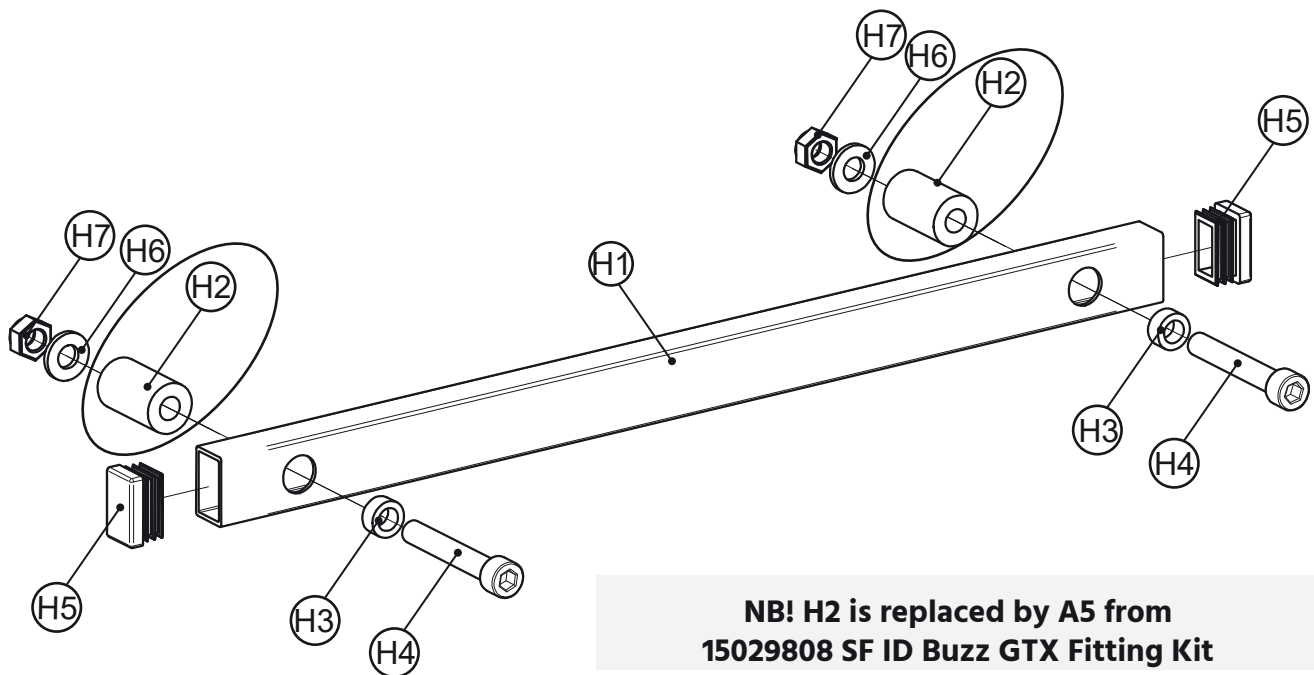


Number		Quantity	Part Number	Definition
H	H1	2	15009441	Handle Tube 25x15x286
	H2	2	15009442	Spacer Ø8,3x18x30 Nylon Black
	H3	2	15009443	Spacer Ø8,1x13x6mm Galv
	H4	2	15009444	Screw M8x50 Cylinderh Hex
	H5	2	15009438	End sleeve Black
	H6	2	8,4x17x2	M8 Washer, DIN 125
	H7	2	8 NMU	Mutter M8 Nyloc DIN985

#1 15029808 SF ID Buzz GTX Fitting Kit


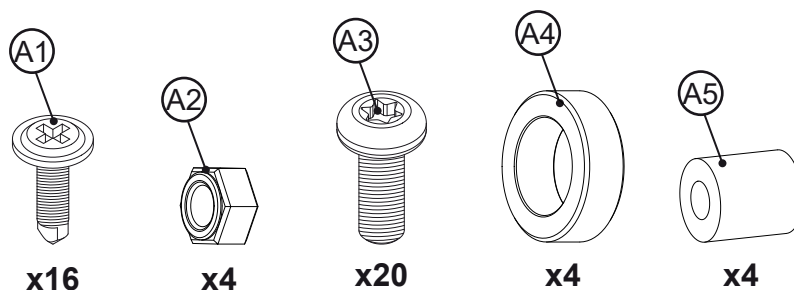


A1	4,2x16 FLS Platescrew selfdrilling E45759 Black
A2	6 NMU M6 Self locking nut, DIN 985-8
A3	15003551 M6x16 TX30 pan (DIN 7985)
A4	13x20x6,4 Spacer, U-709
A5	15010652 Spacer Ø8,3x18x20 Nylon Black


#2 15029806 SF ID Buzz GTX Floor Kit 2SLD

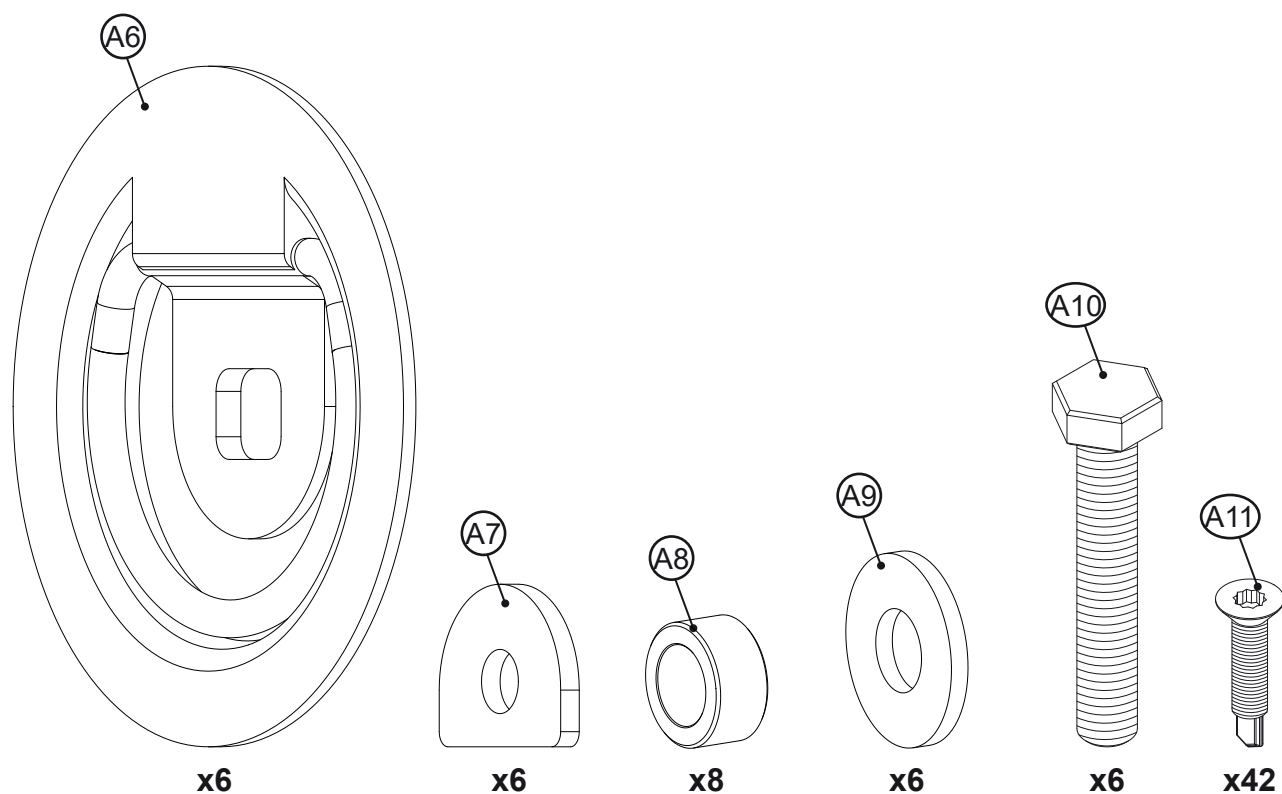


A6	15005497 Latch Cup Black Ø90 Ø12x15 1000Kp
A7	15005884 Washer Latchcup for Ø8
A8	13x20x10 Spacer, U-710
A9	15009916 Washer 30x13x3 Elz
A10	15004713 M8x50 screw, 6K DIN 933 Black, ElZn+Cr3
A11	15016947 Screw 4,8x25 Selfdrill Counters Torx Elz

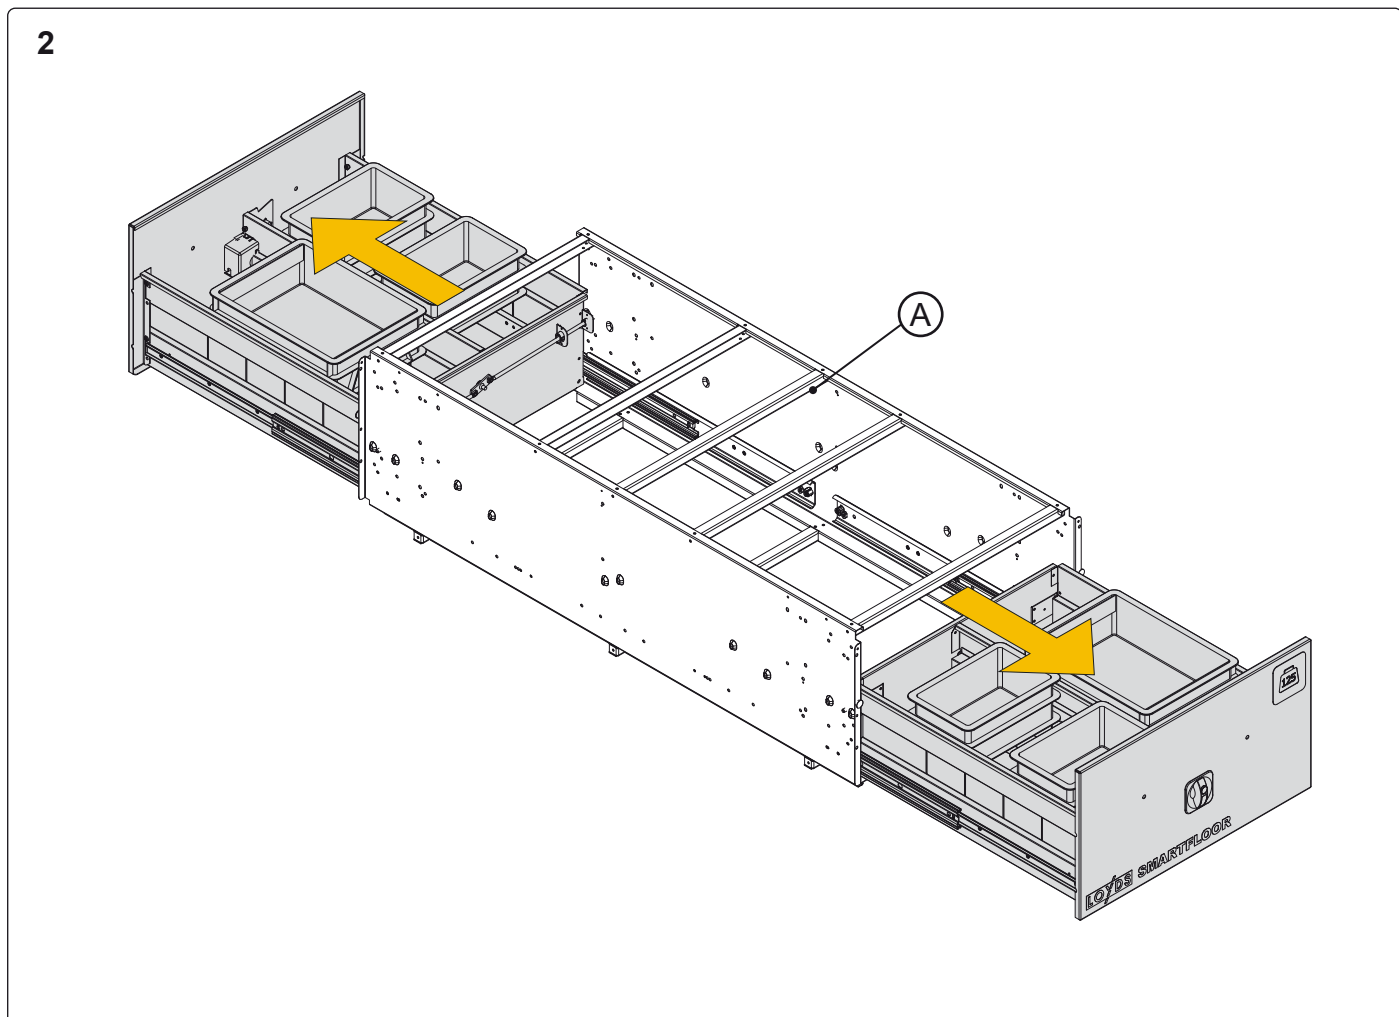
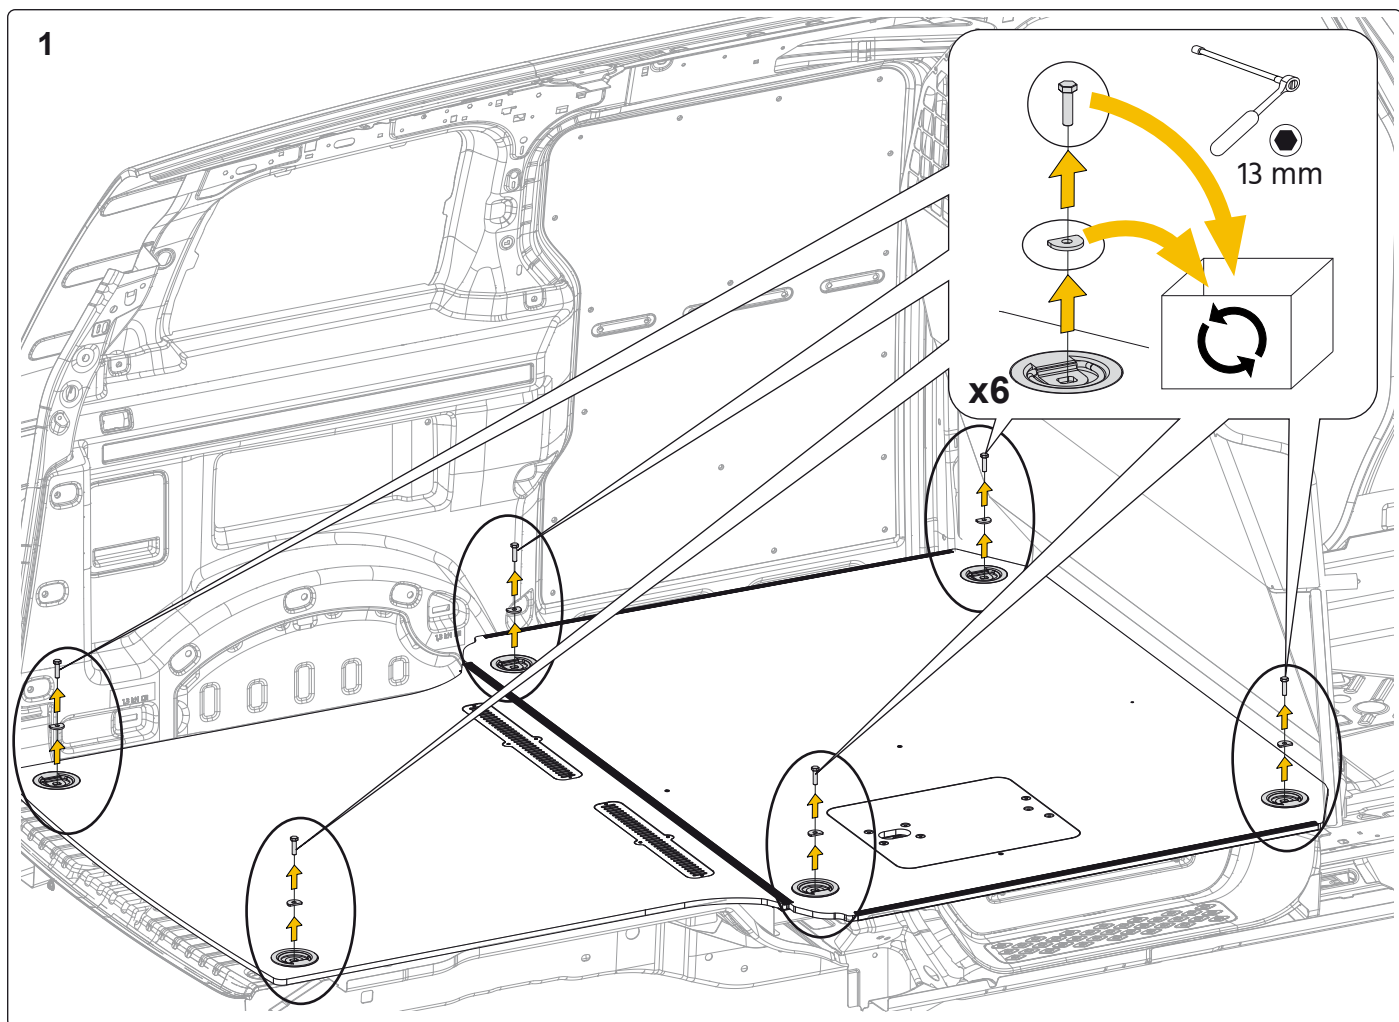


3

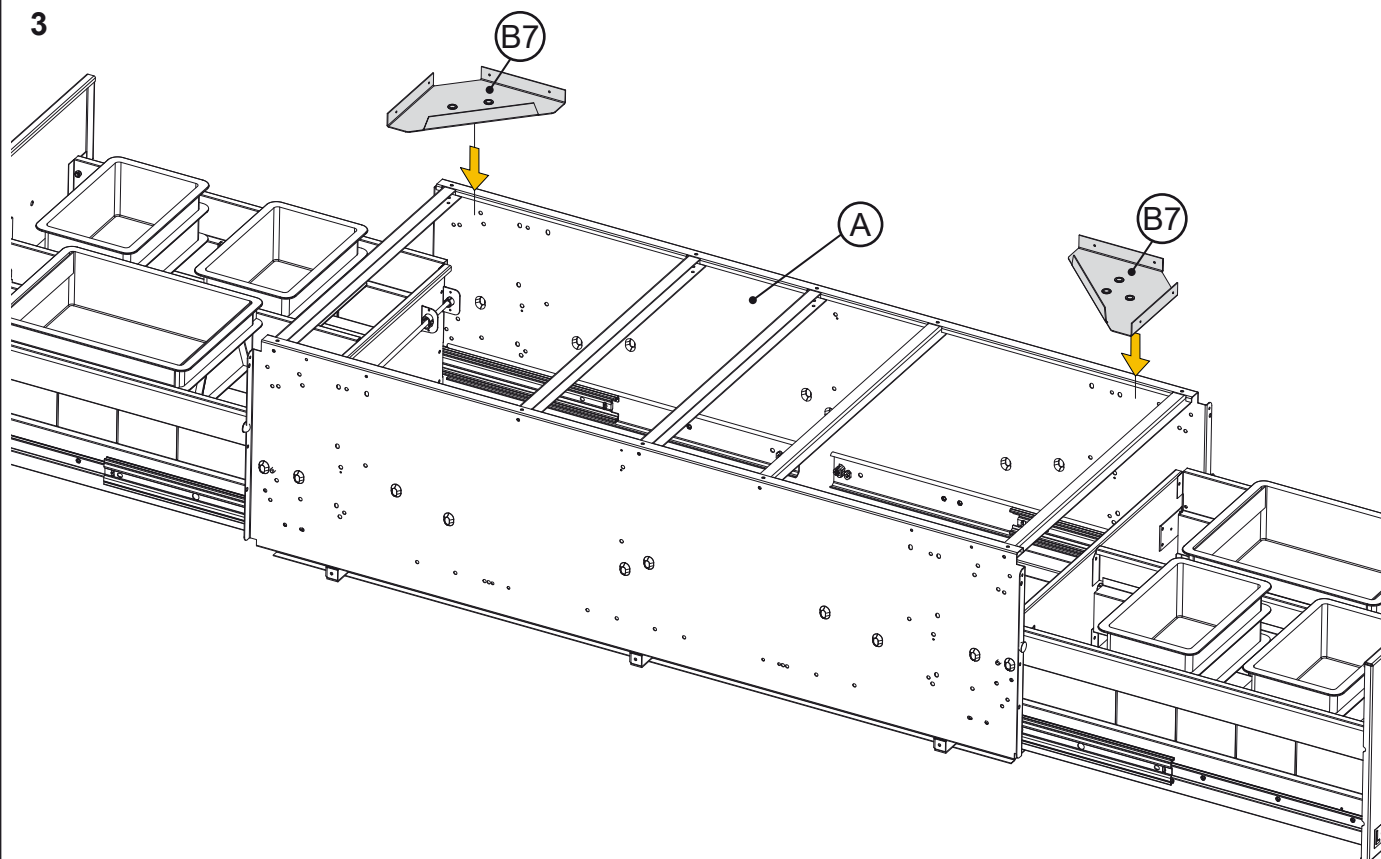


4

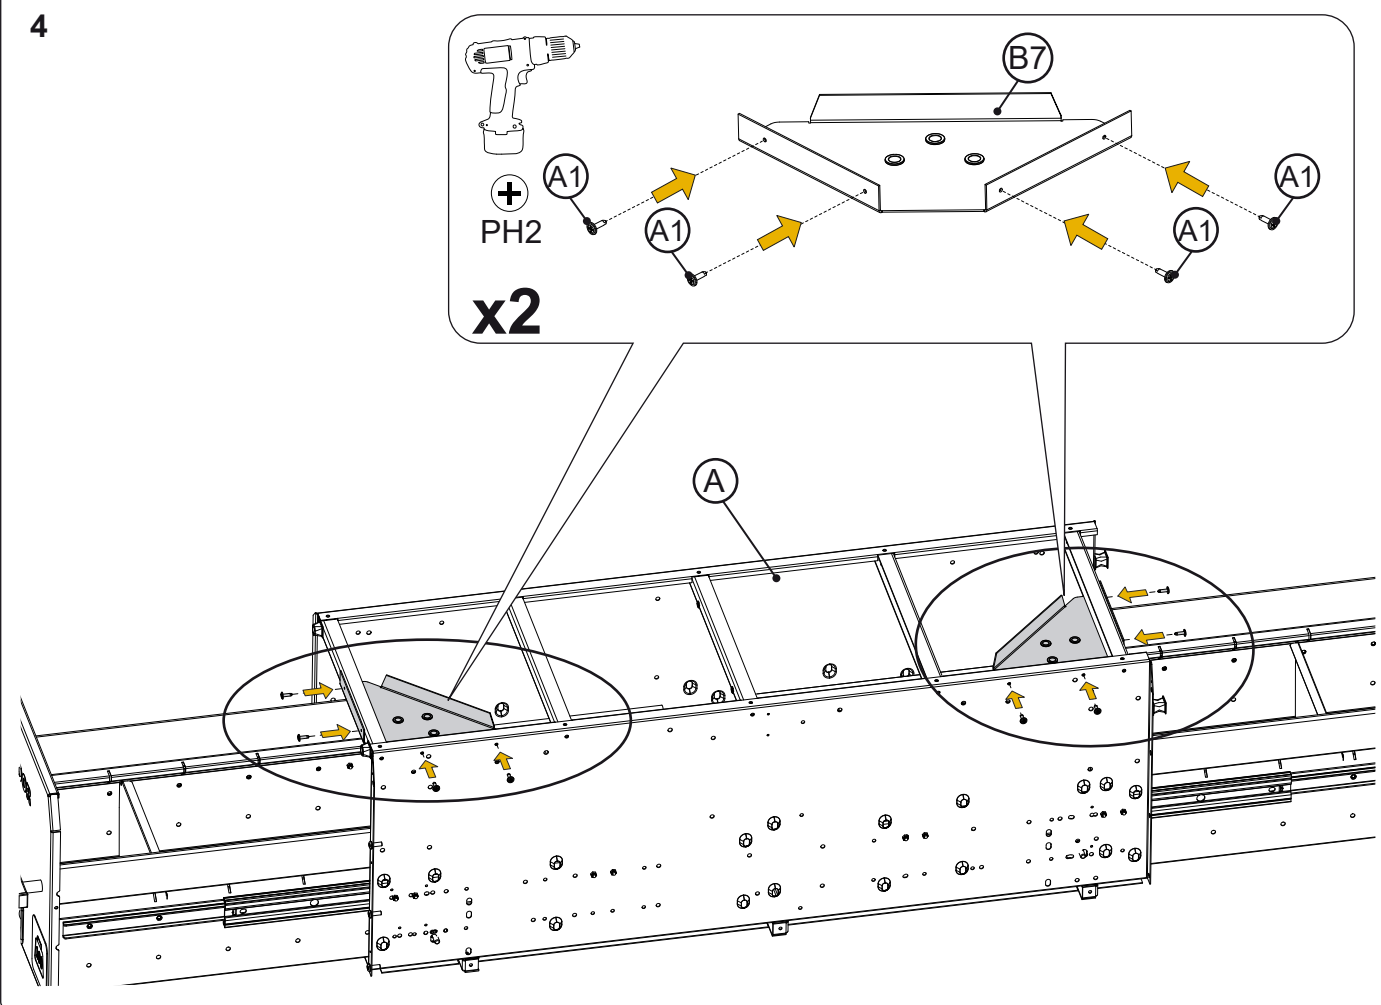


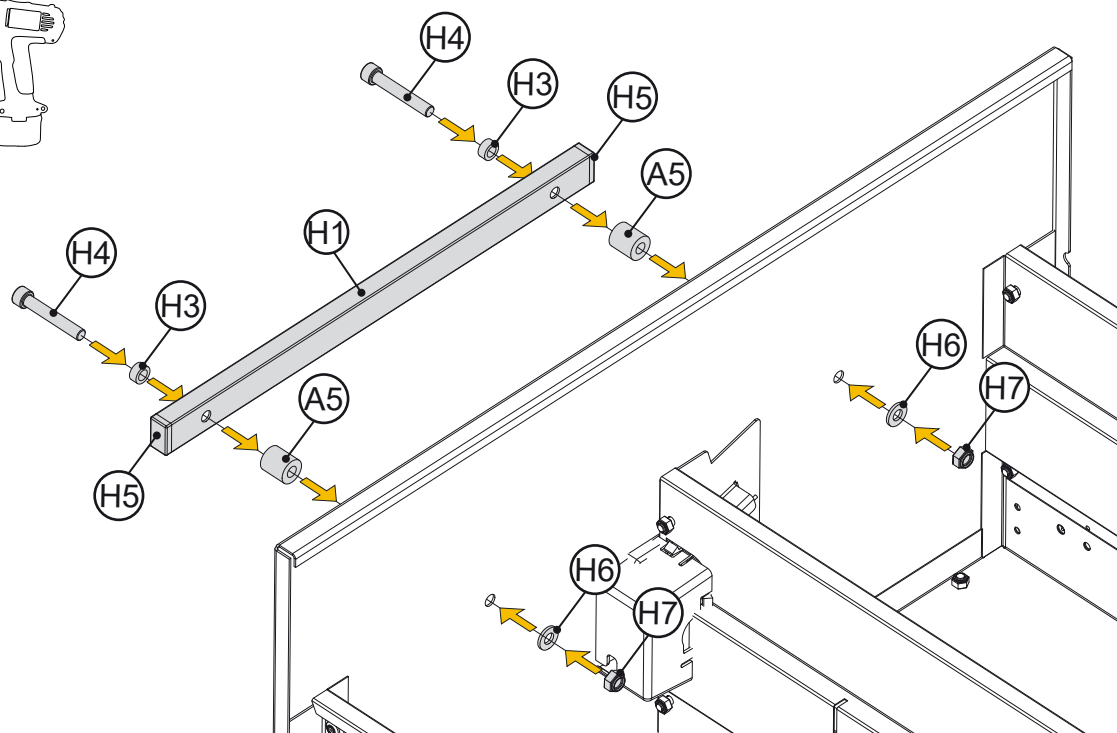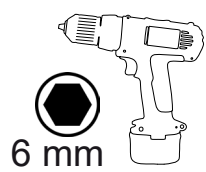

x2

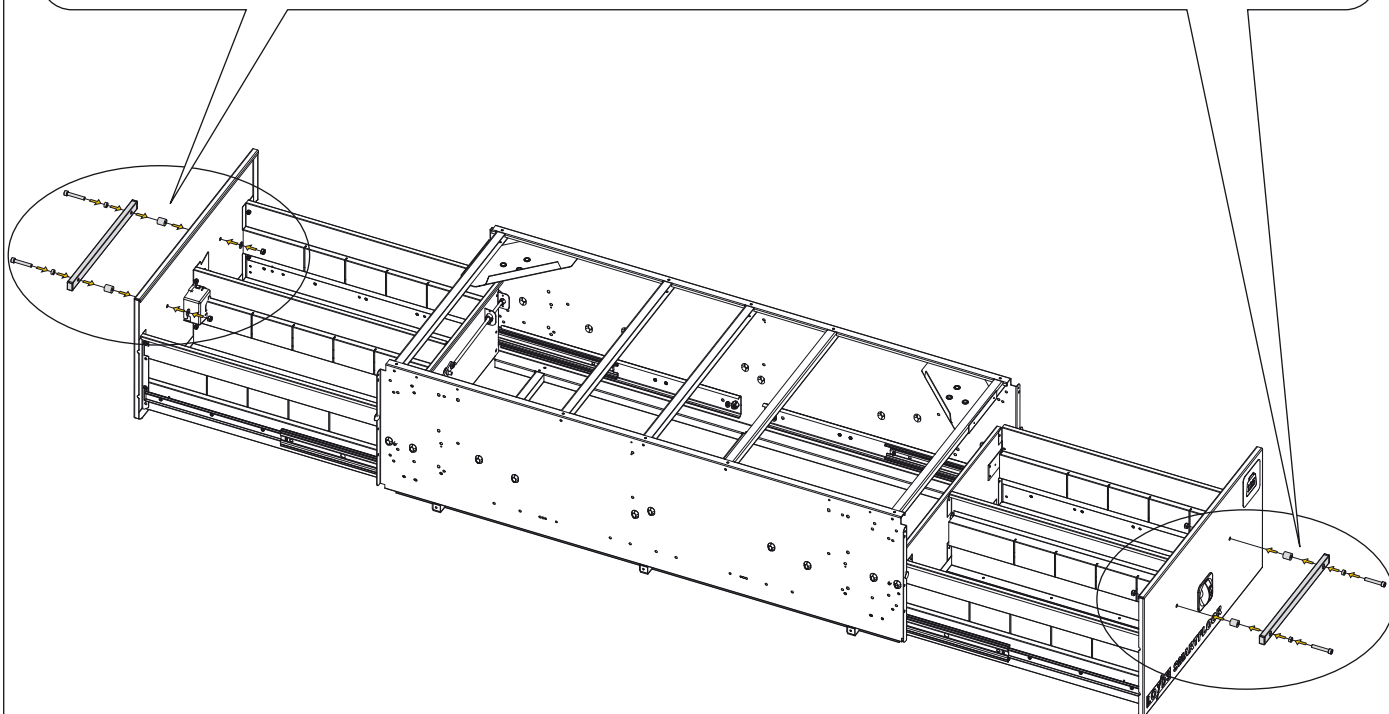


6

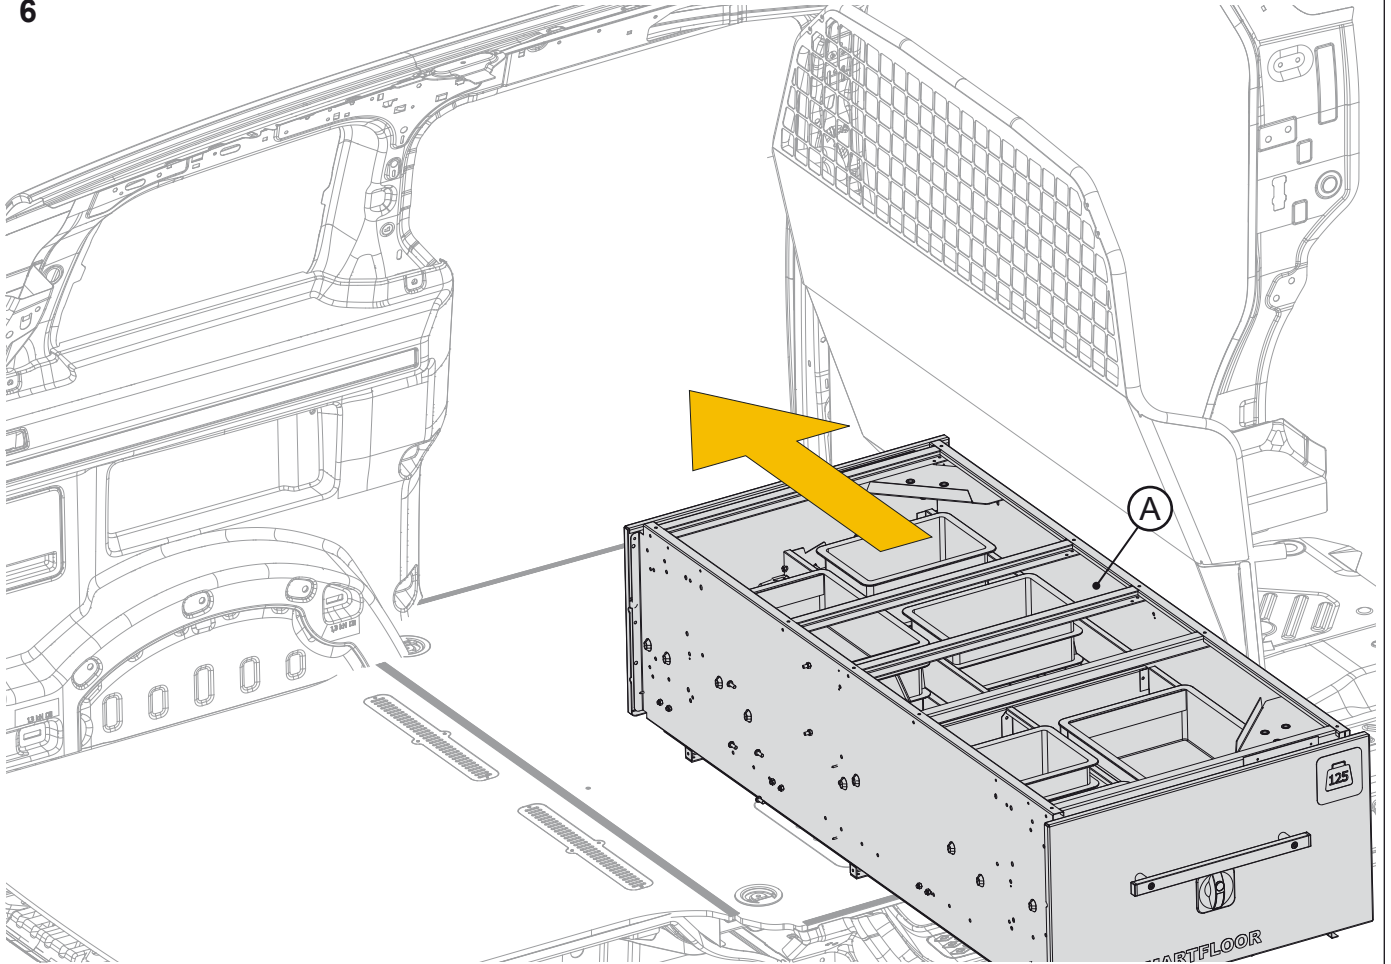


7


Ensure the front module is centered on the floor

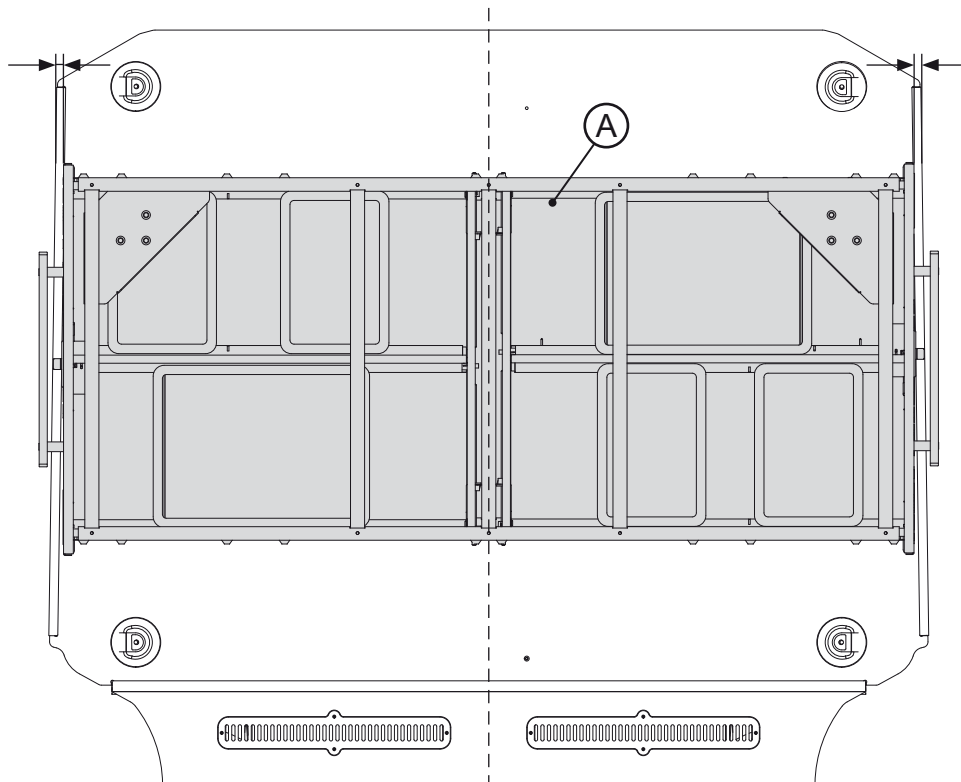


8

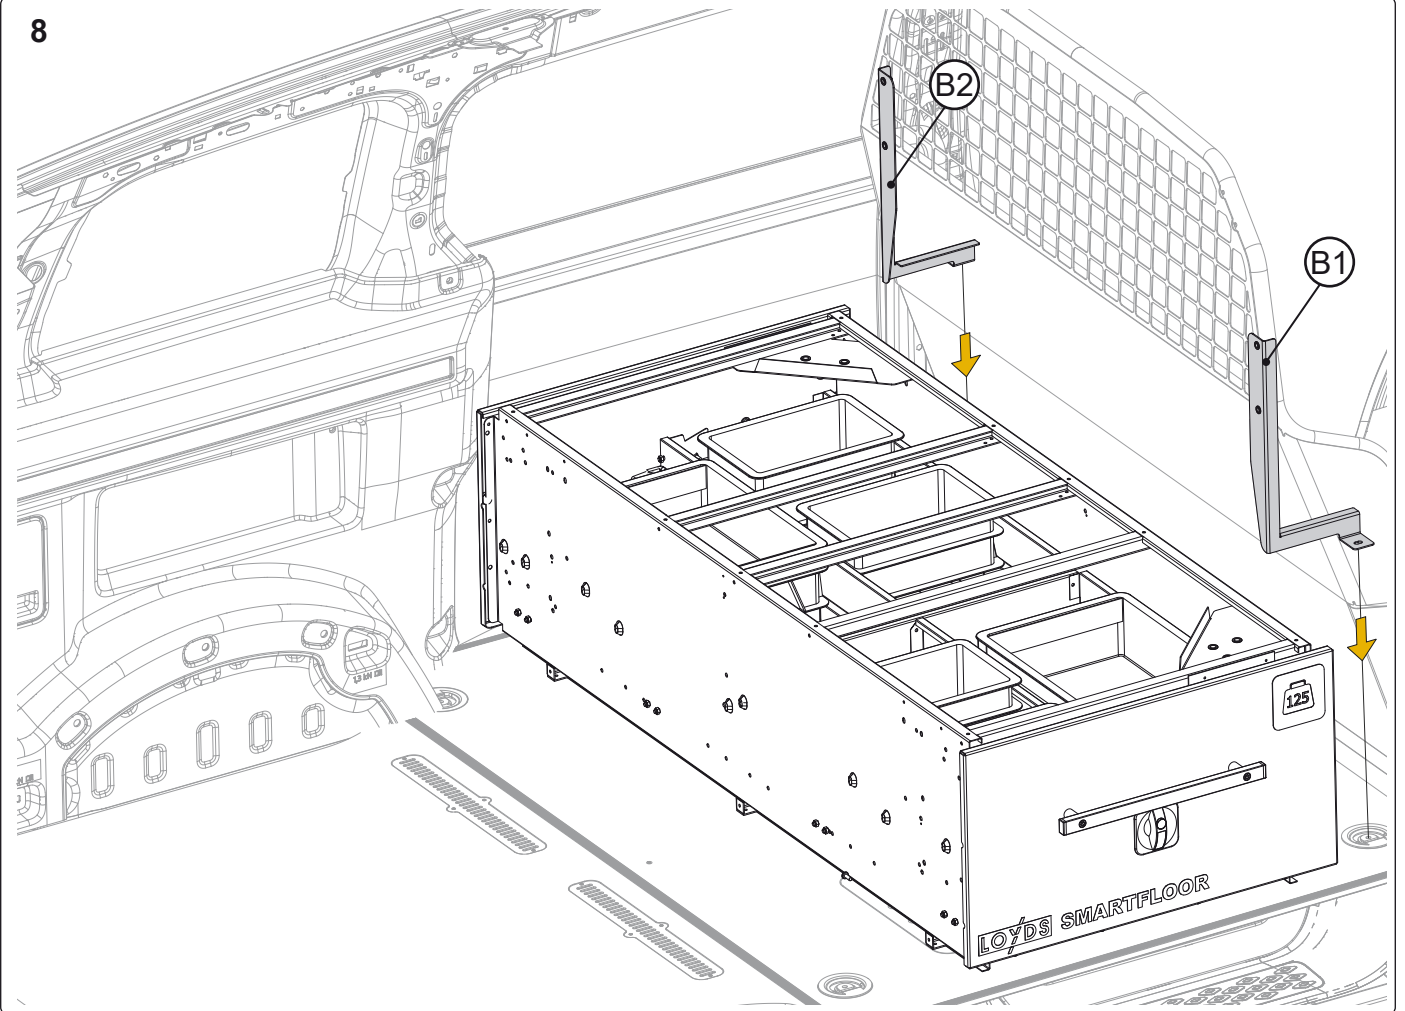


9

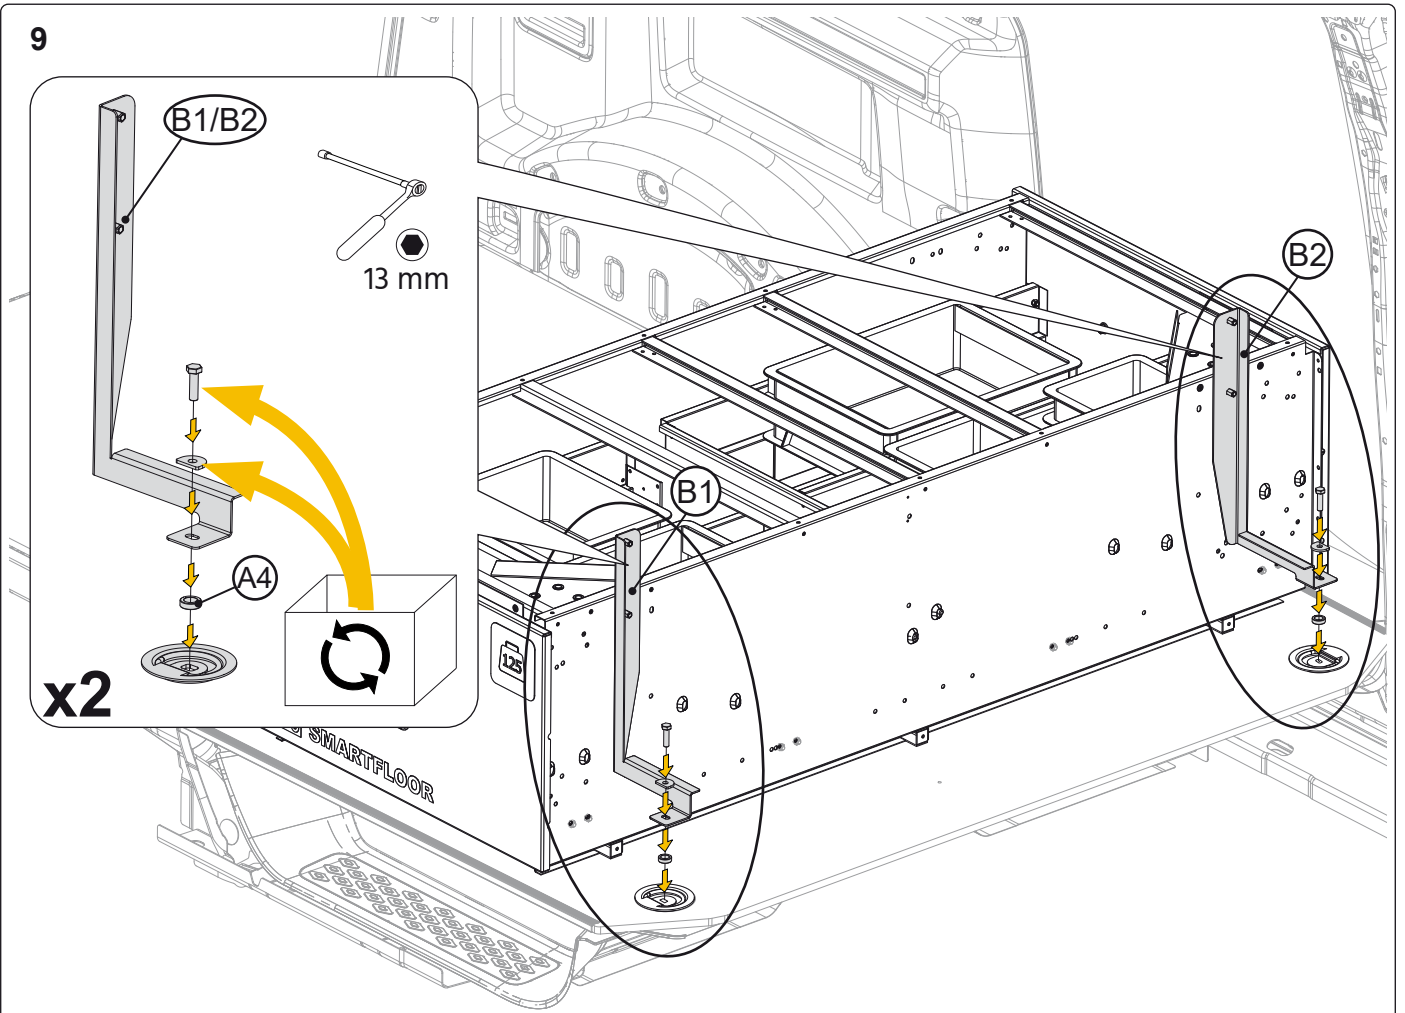


10

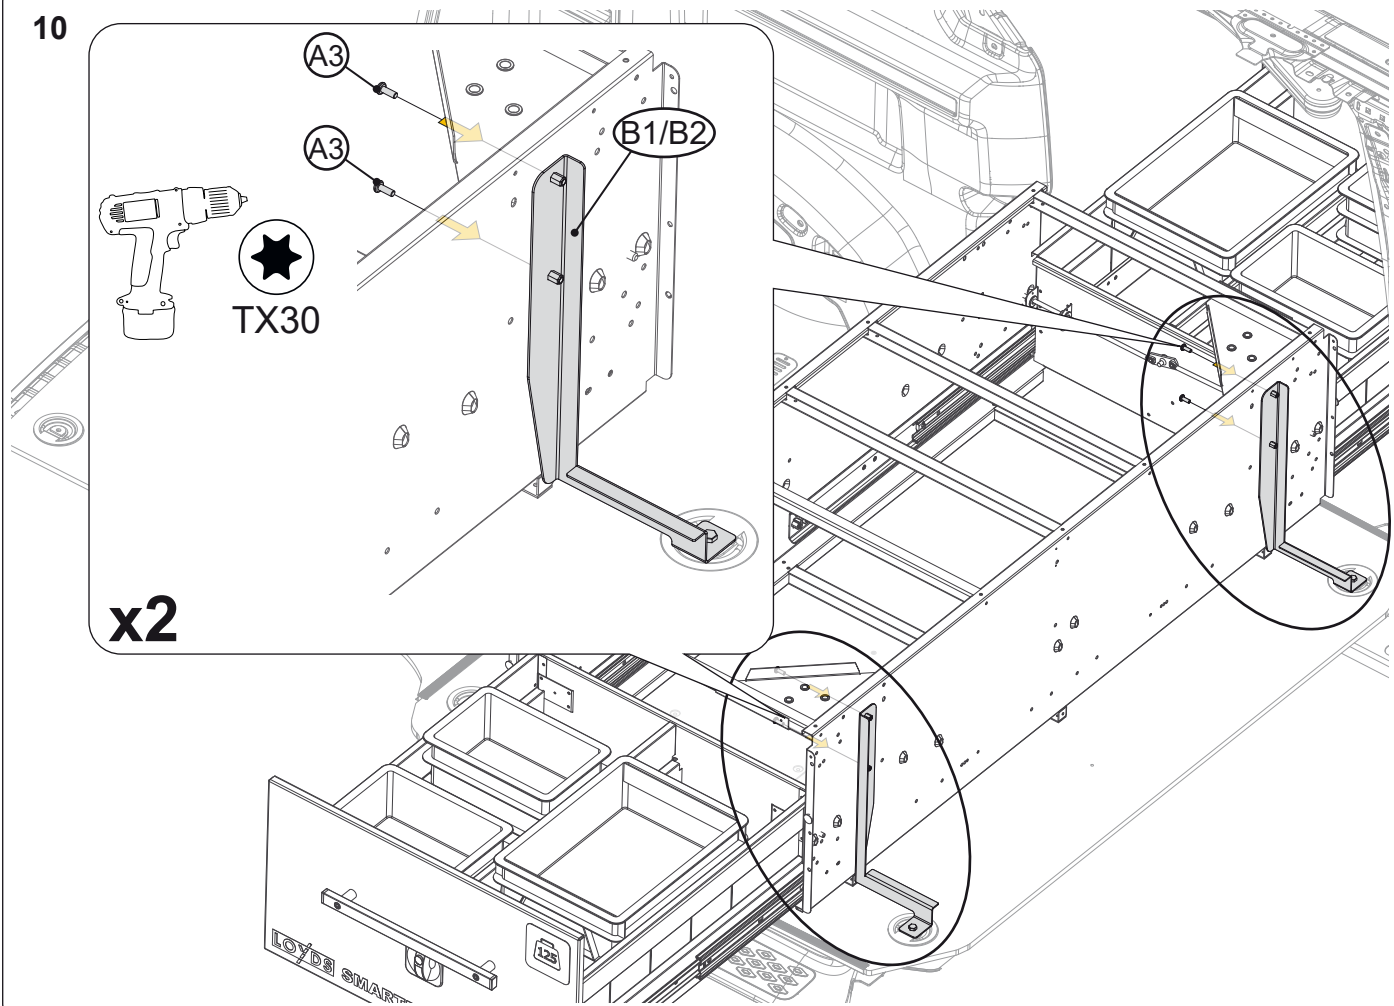


11

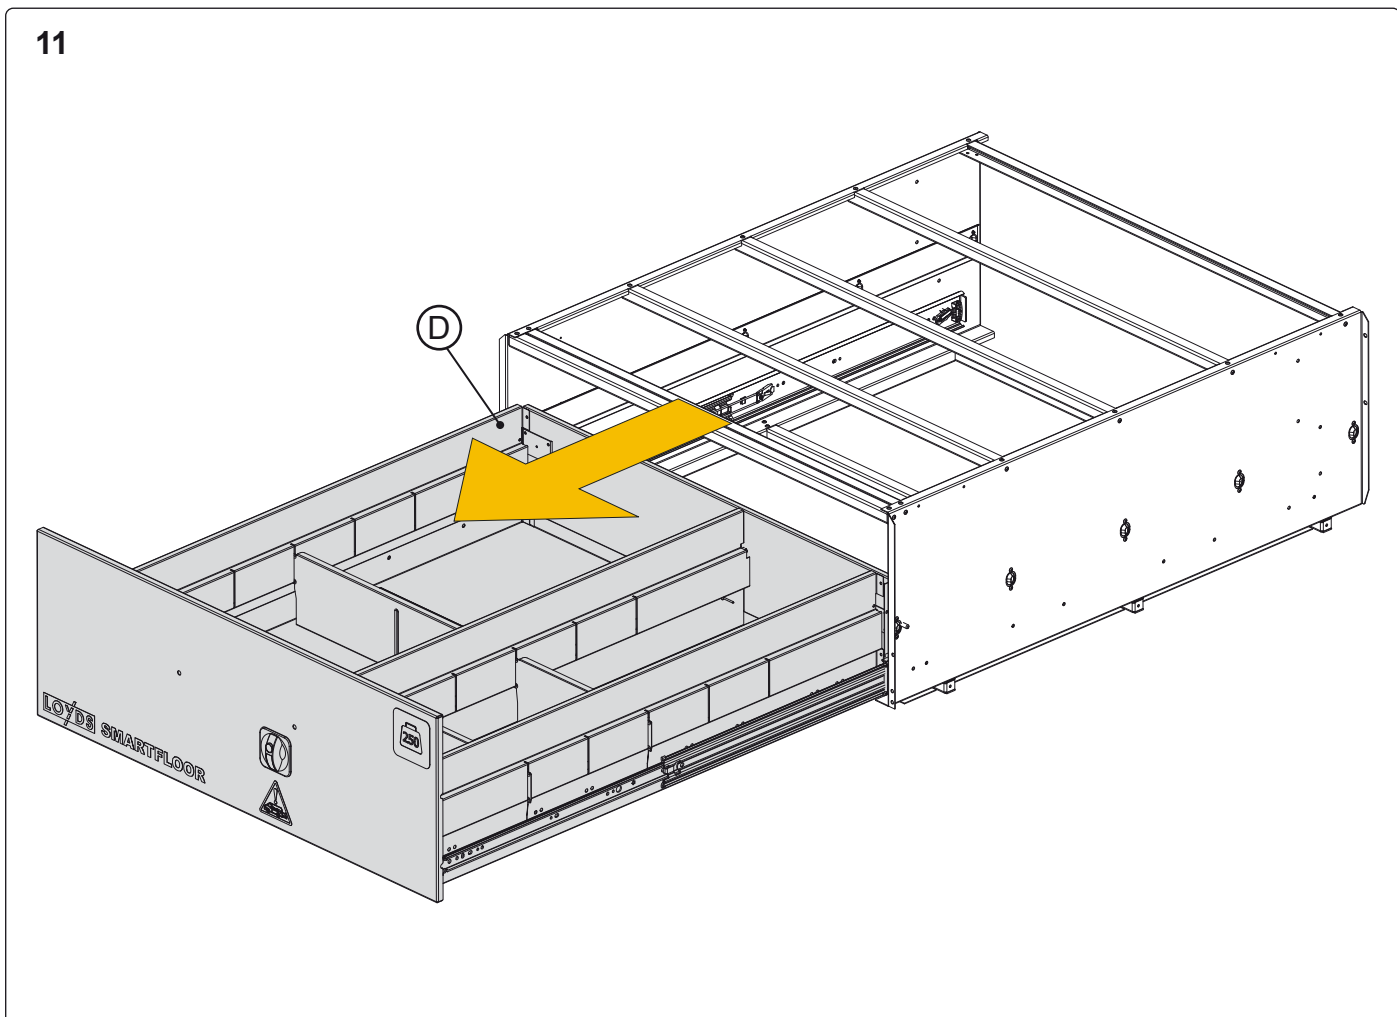


12

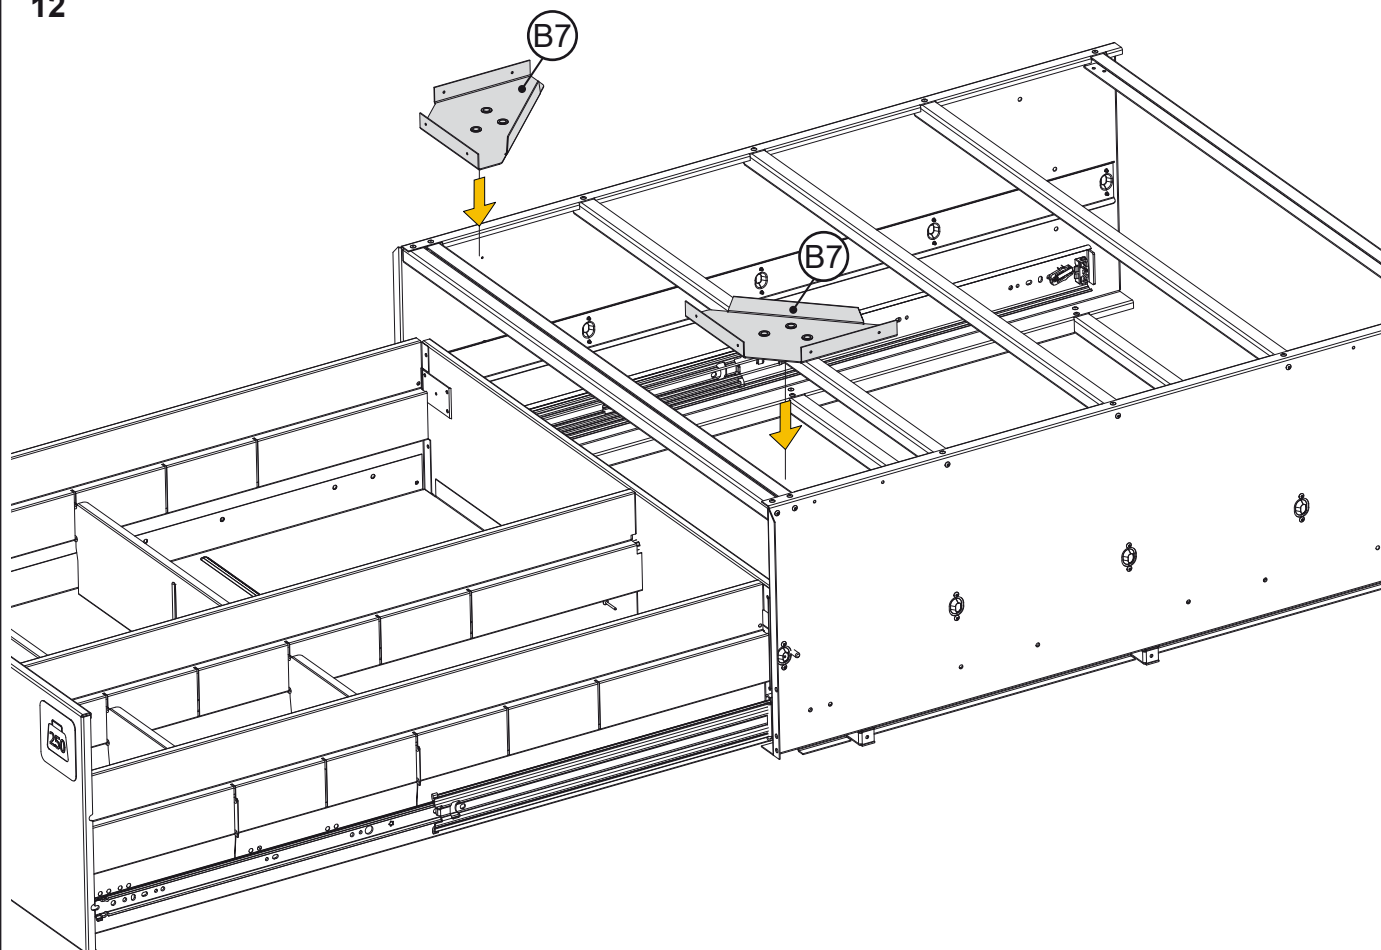


13

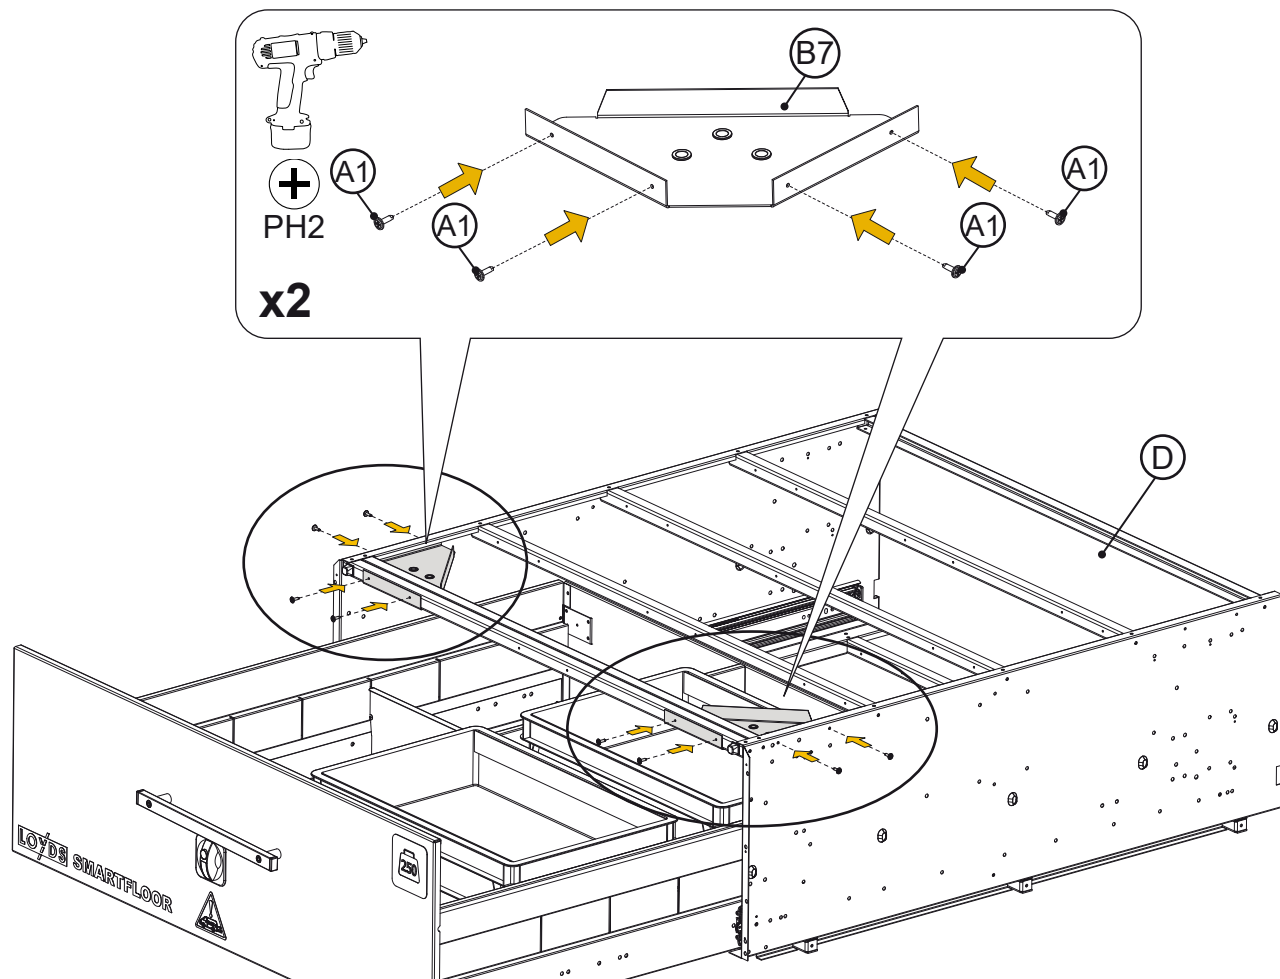


14

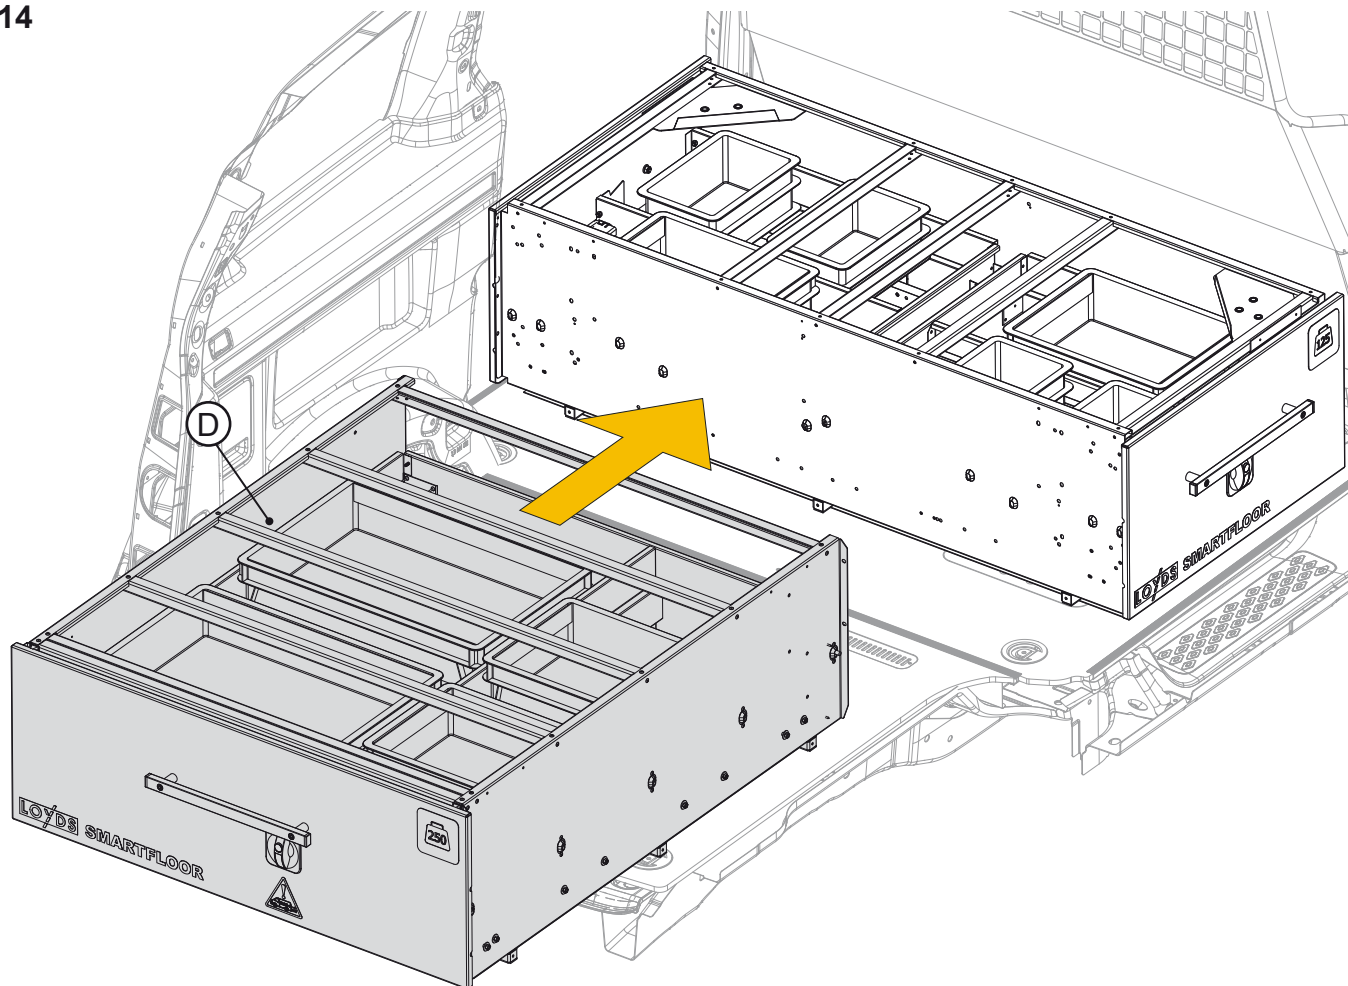


15

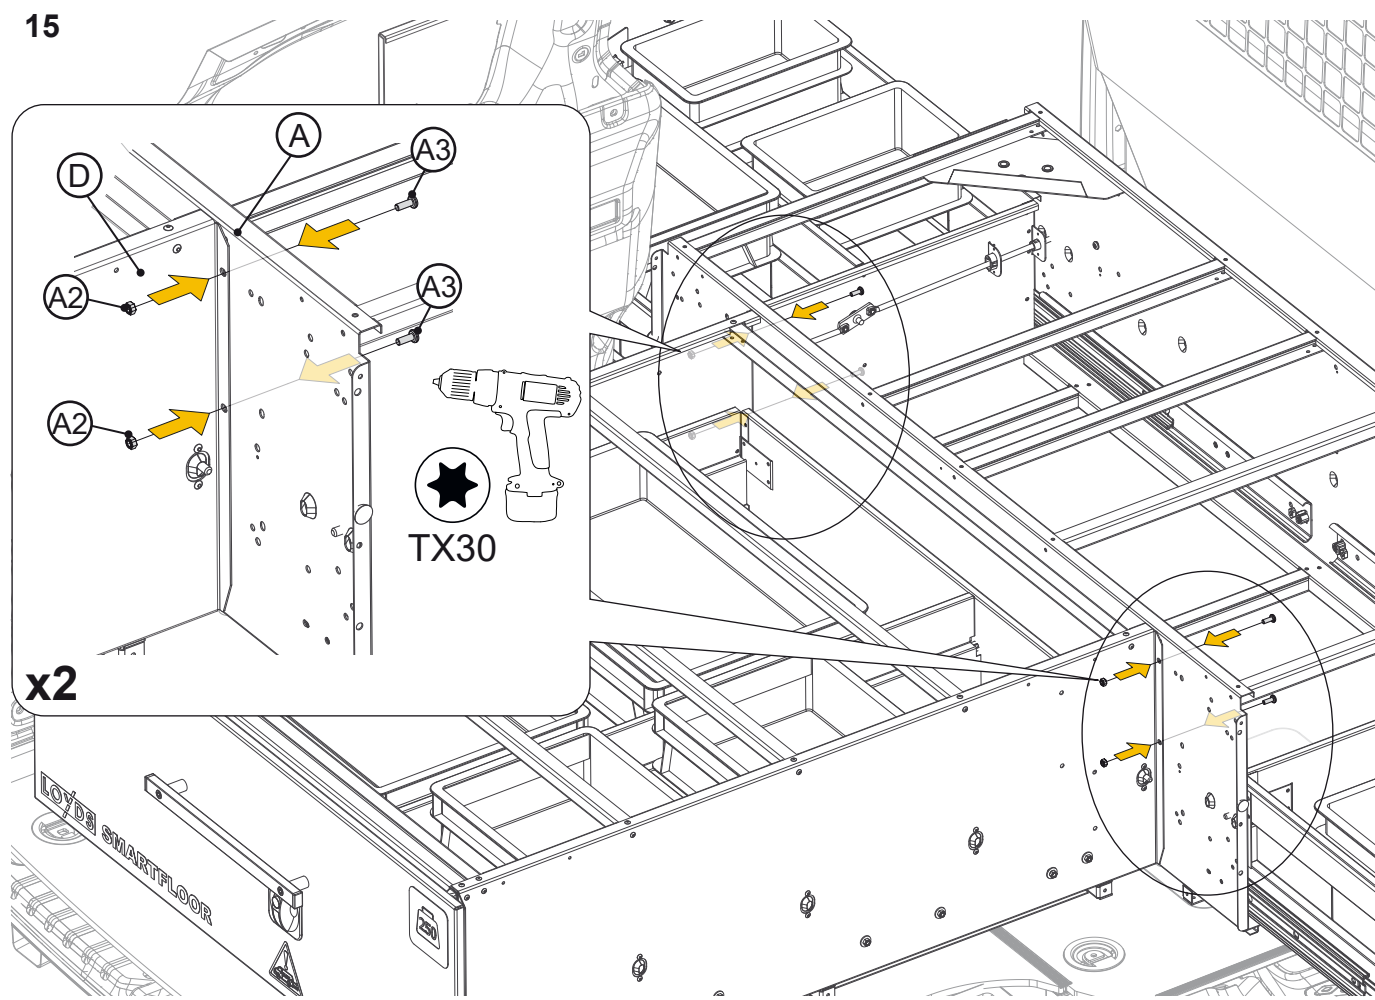


16

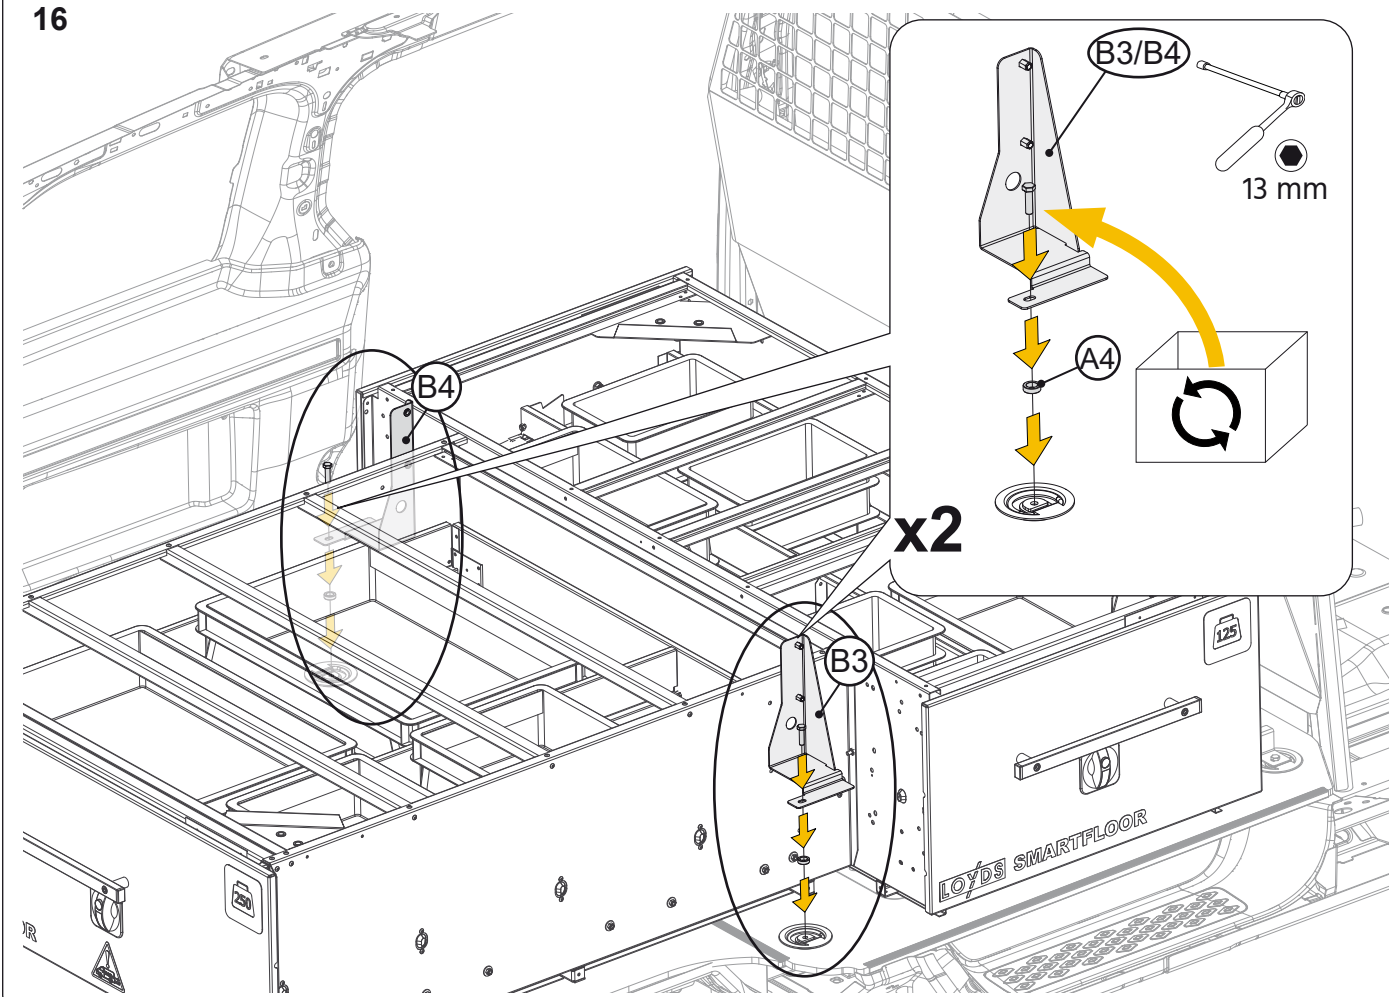


17

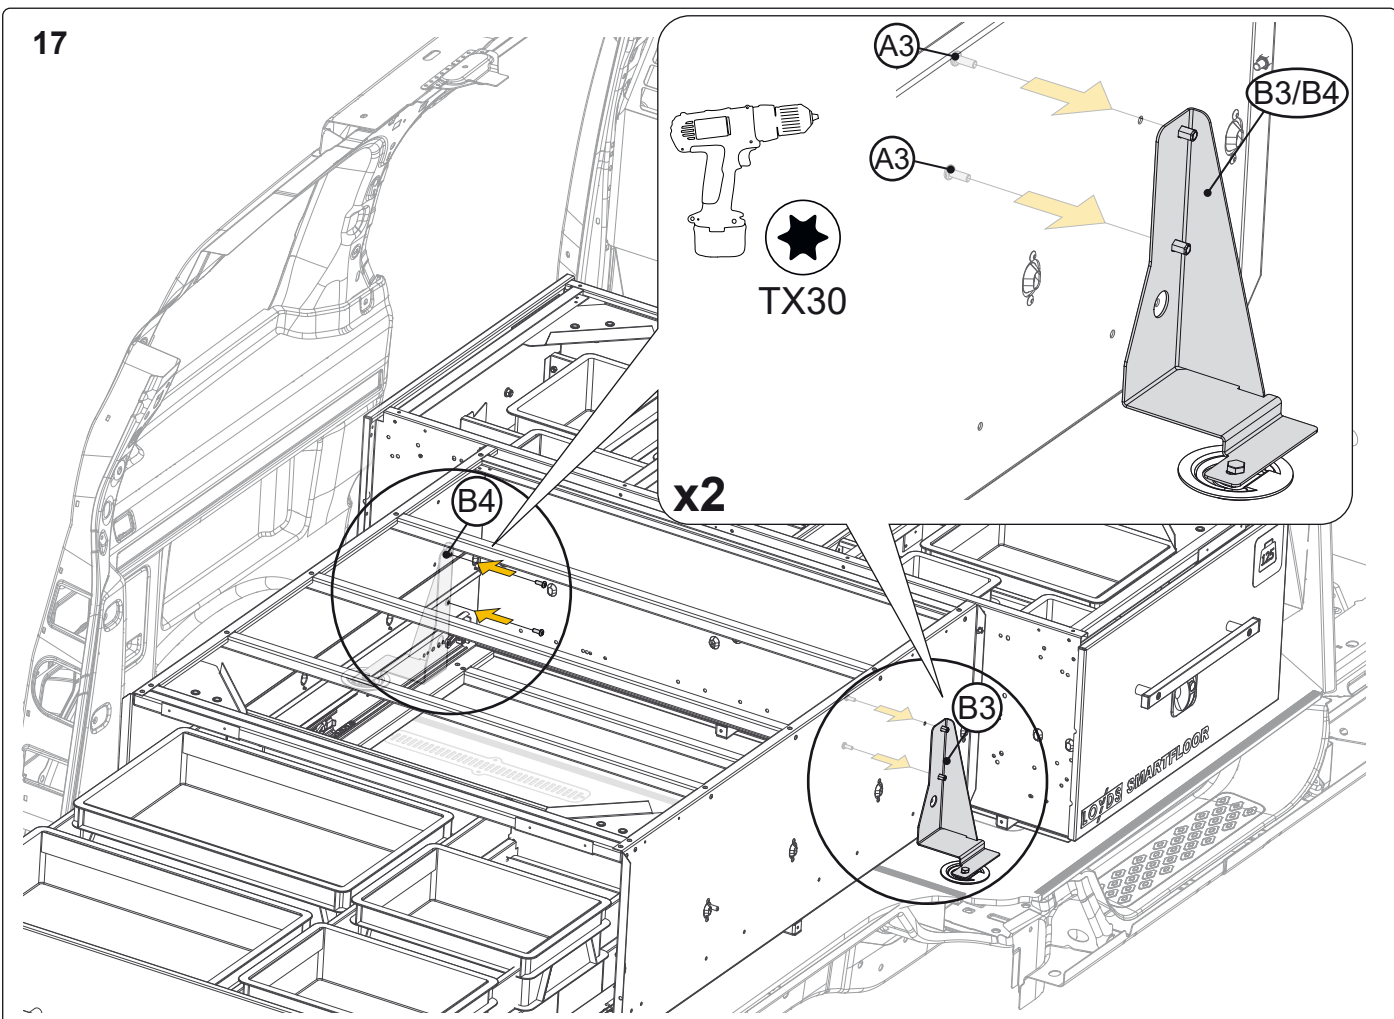


18

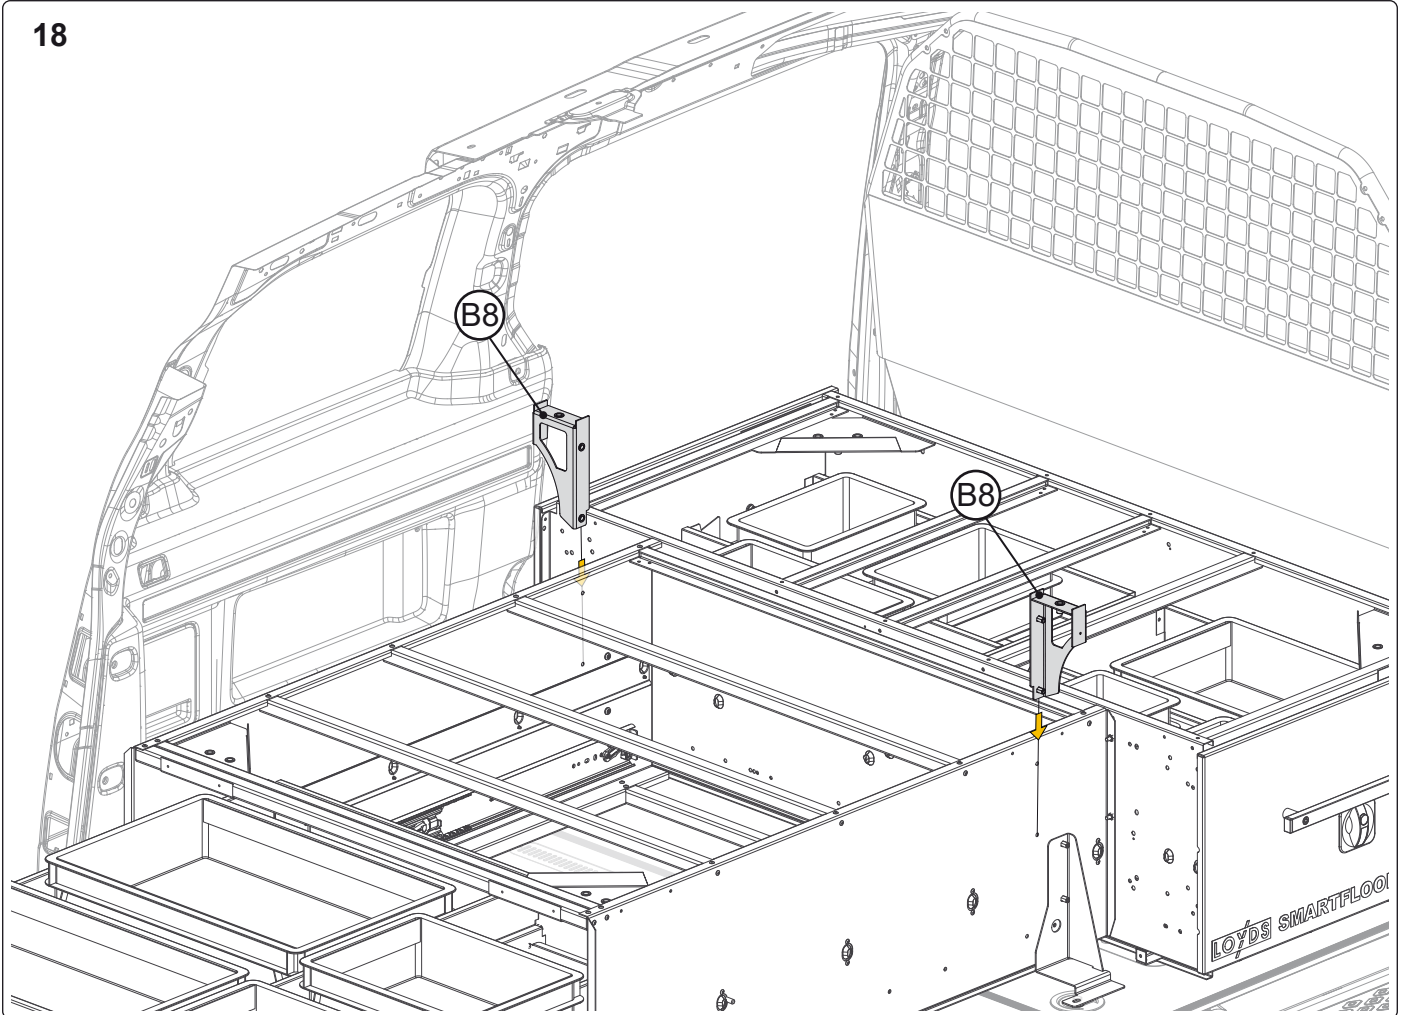


19

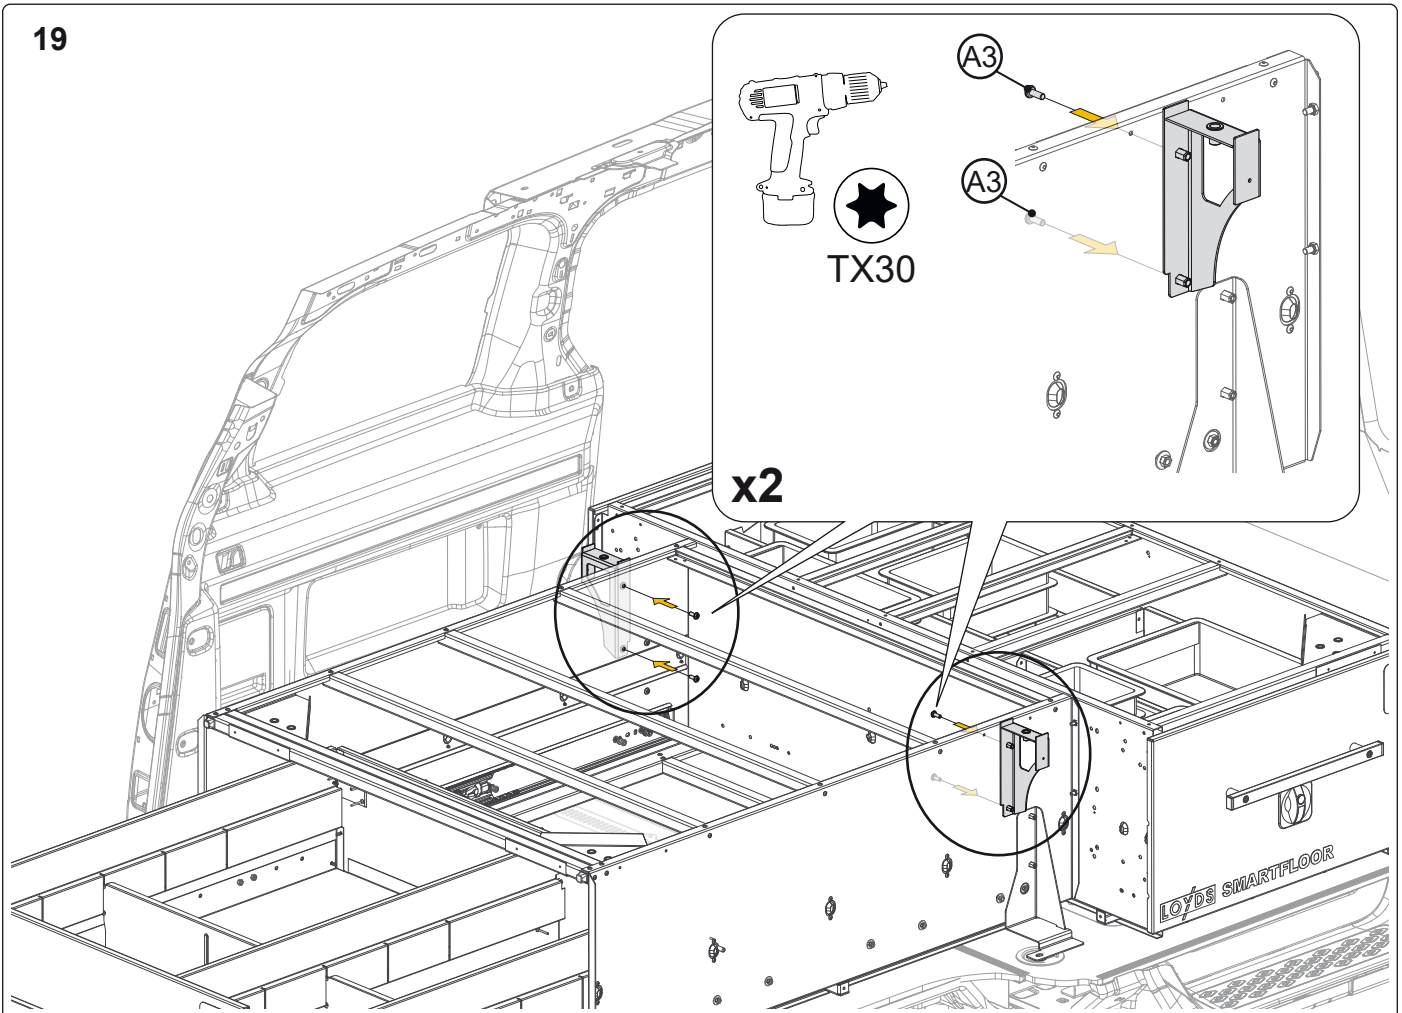


20

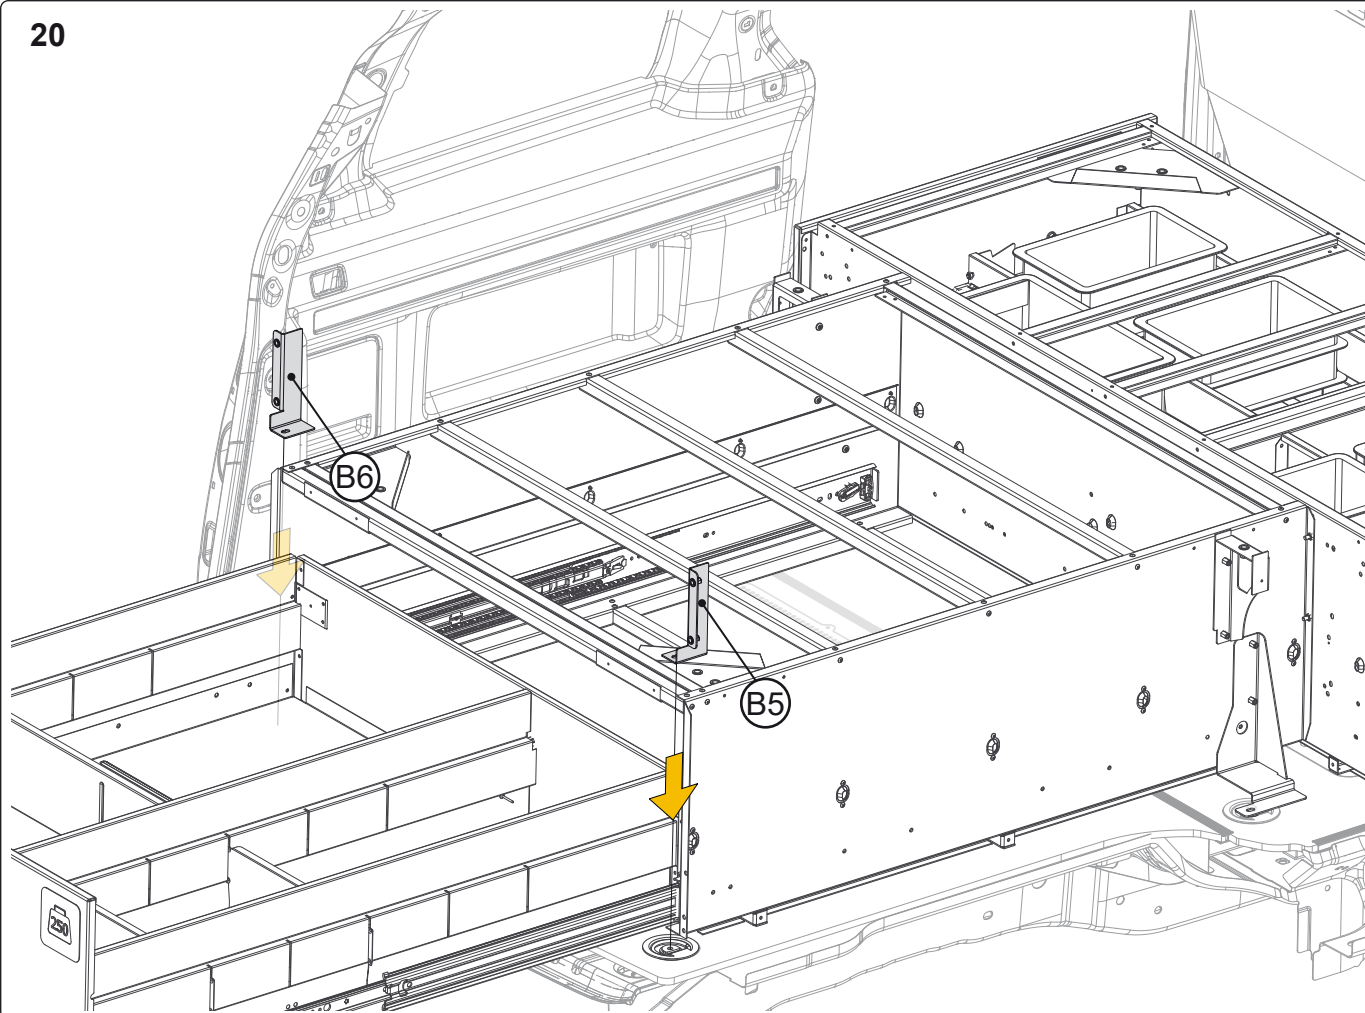


21

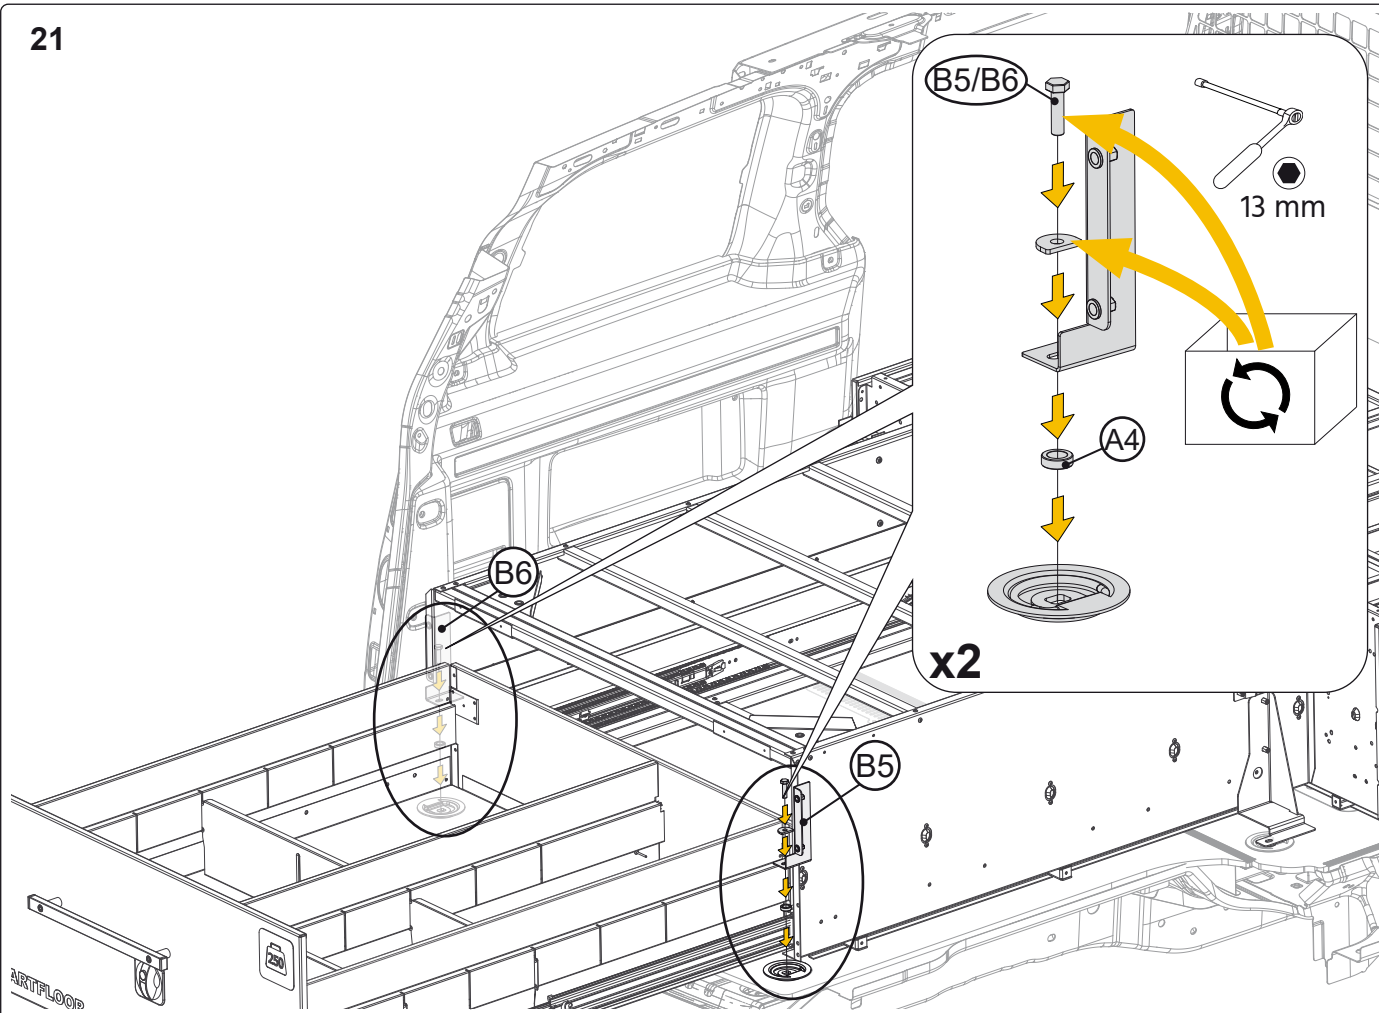


22

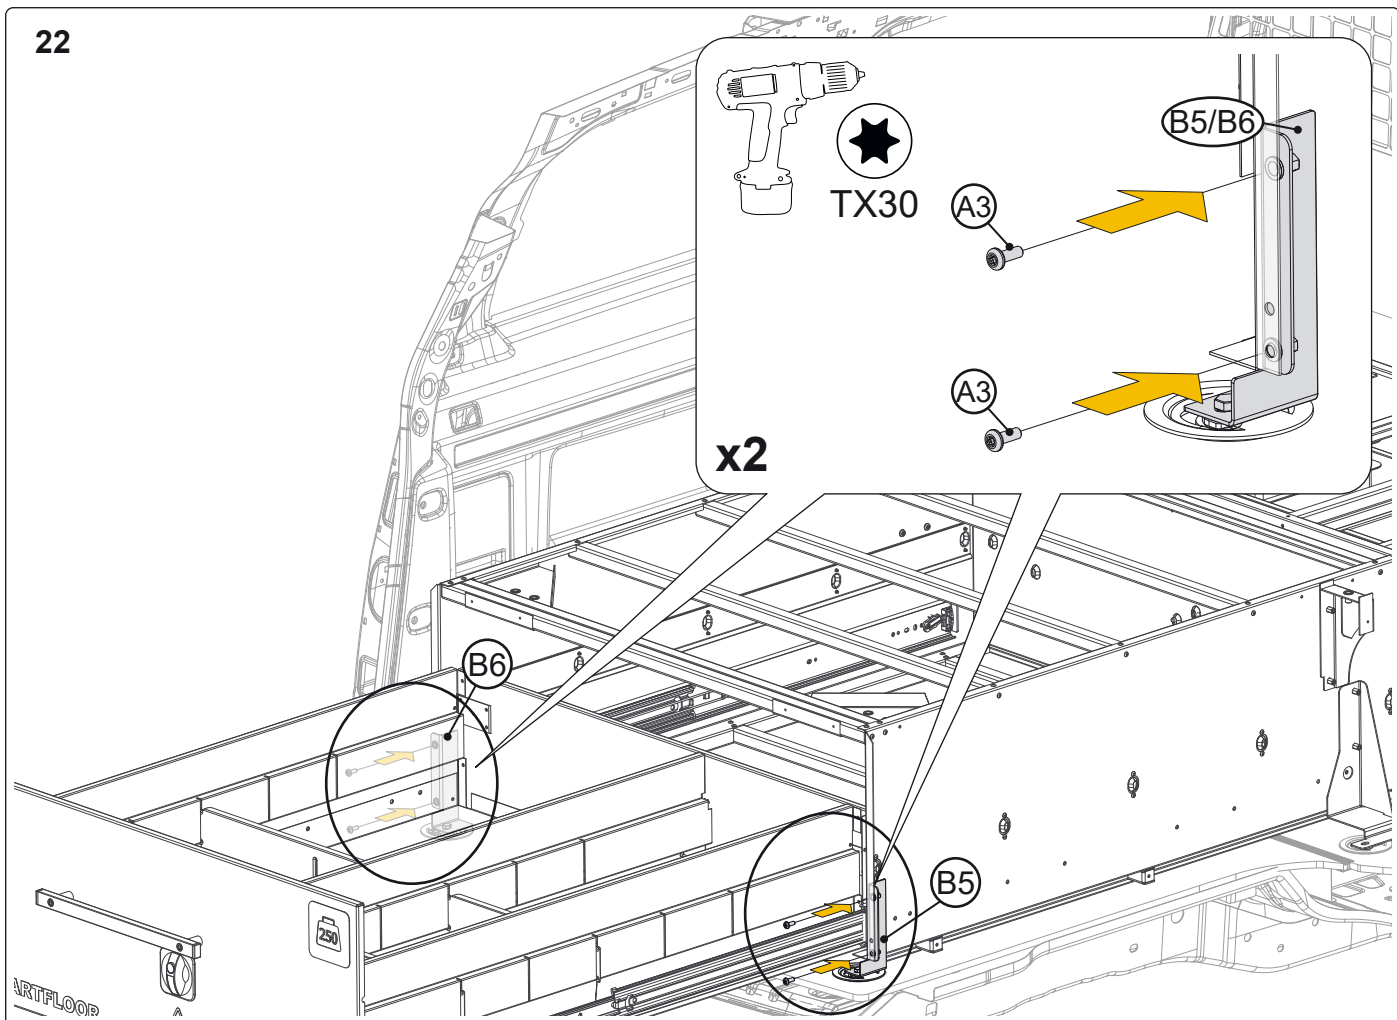


23

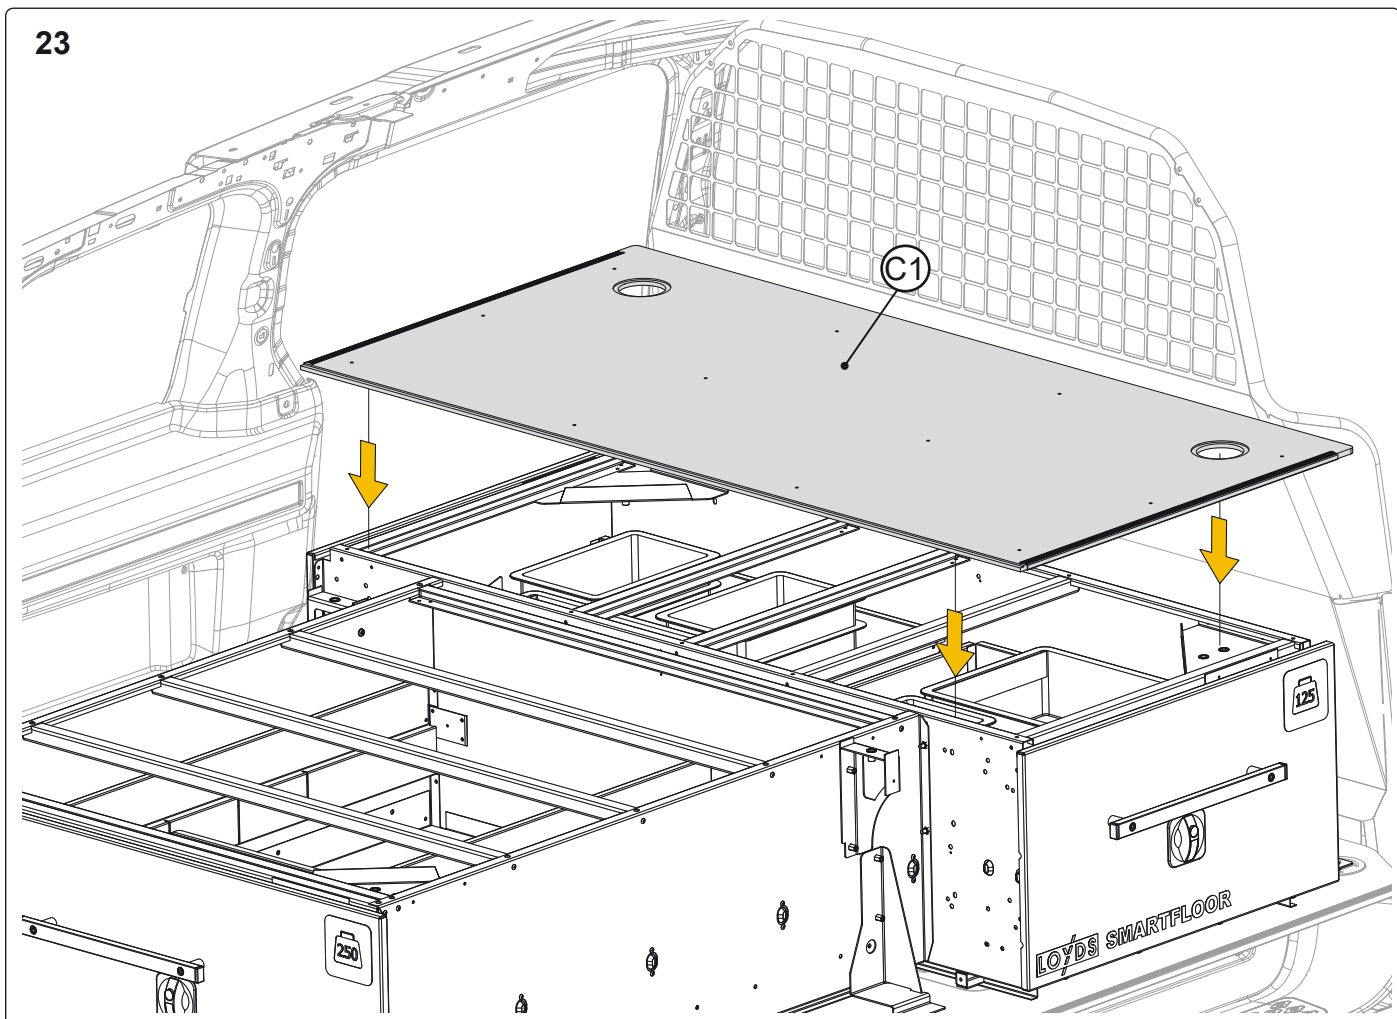


24

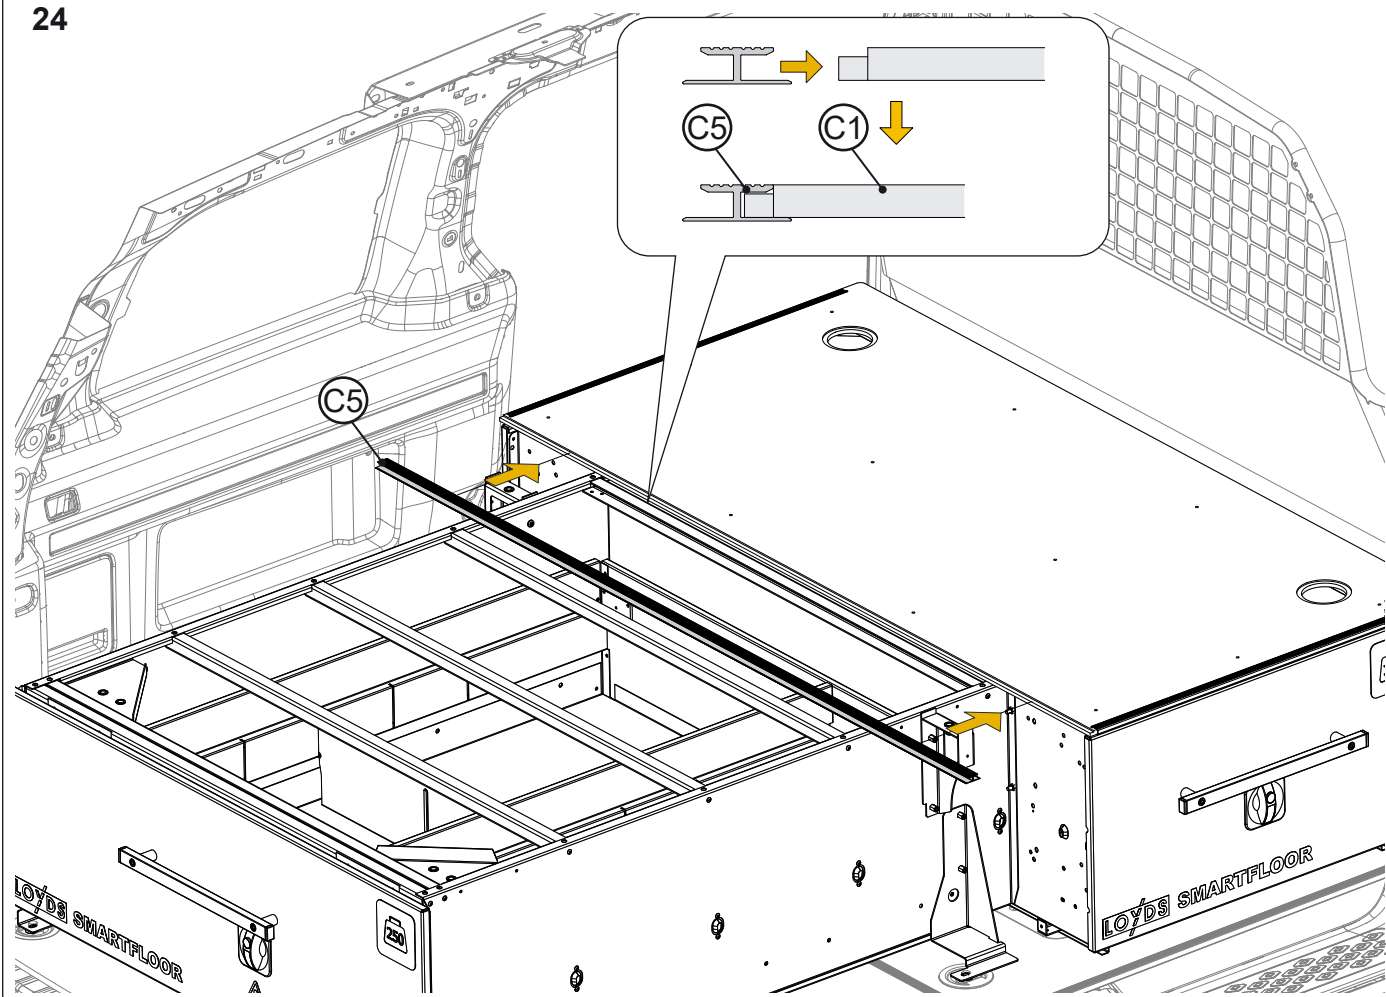


25

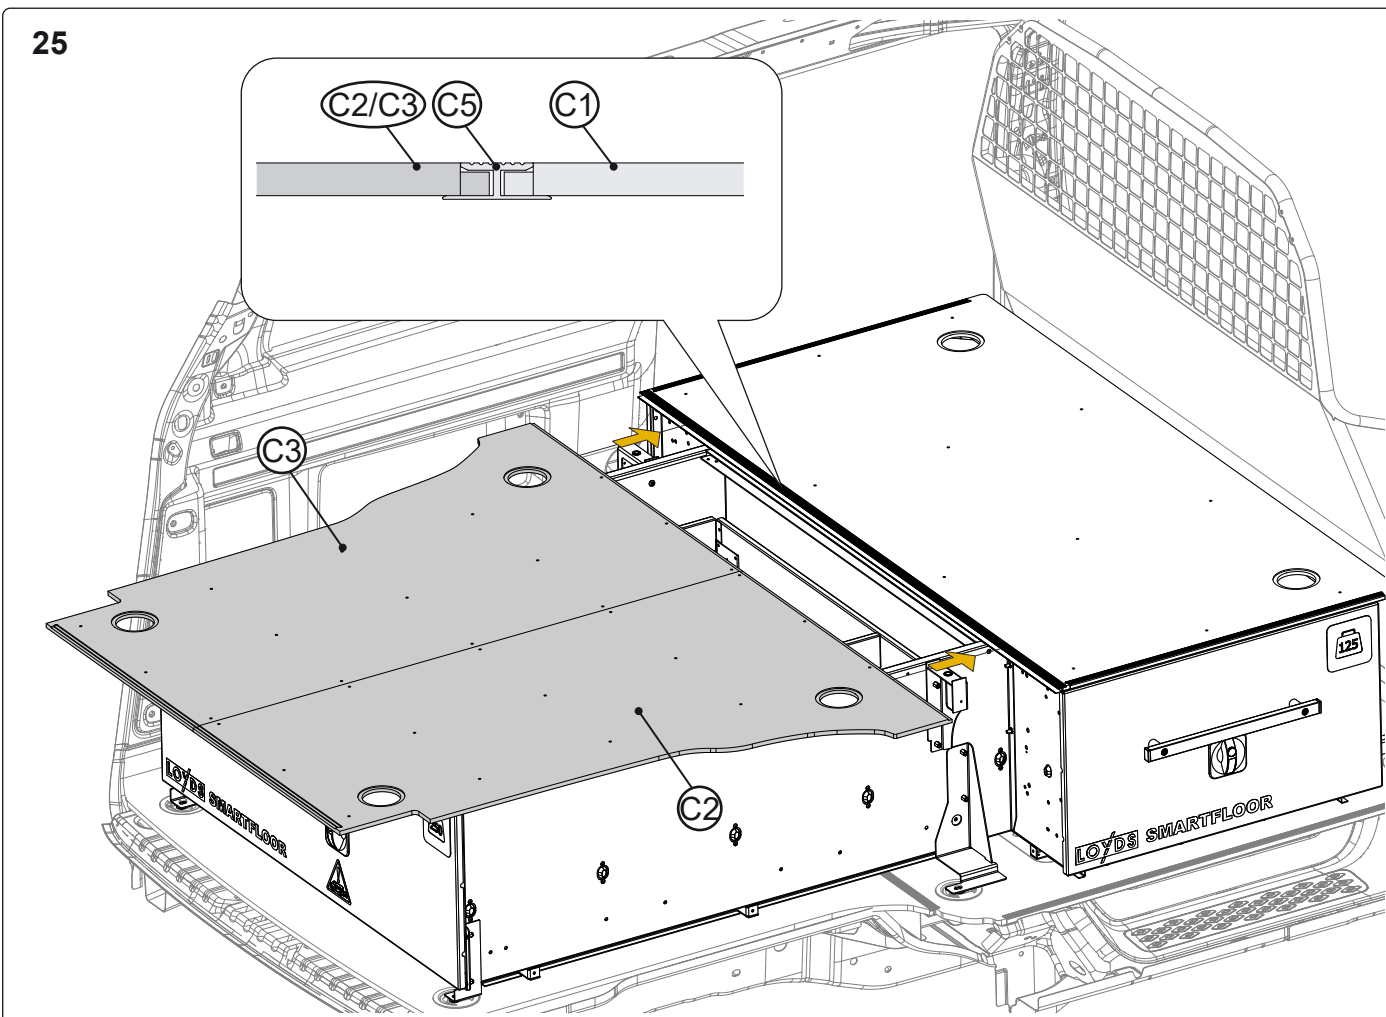


26

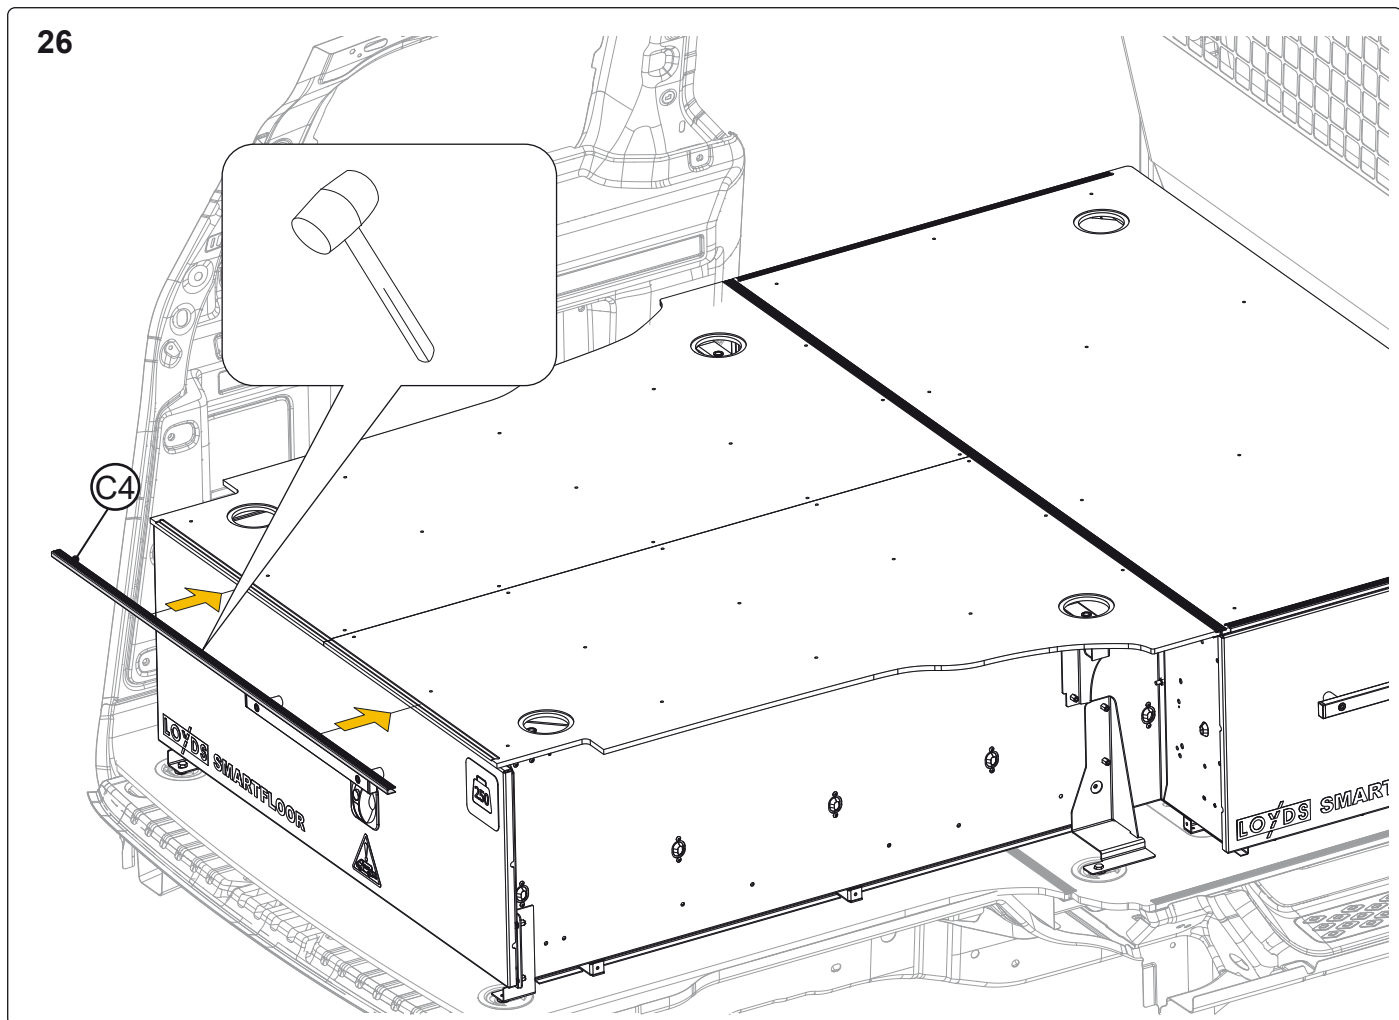


27

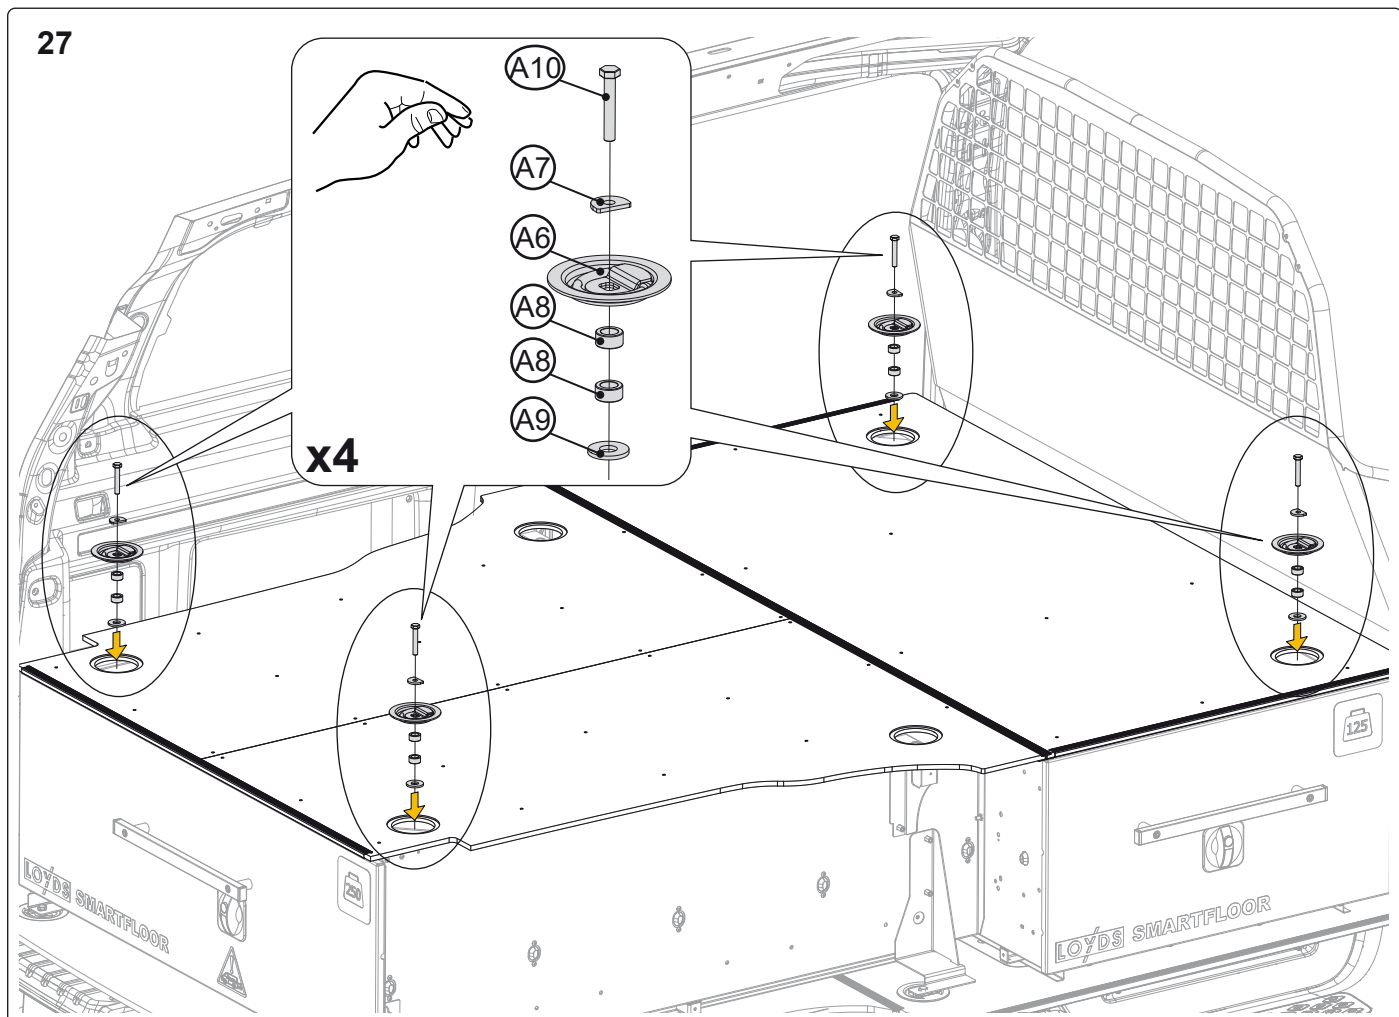

28

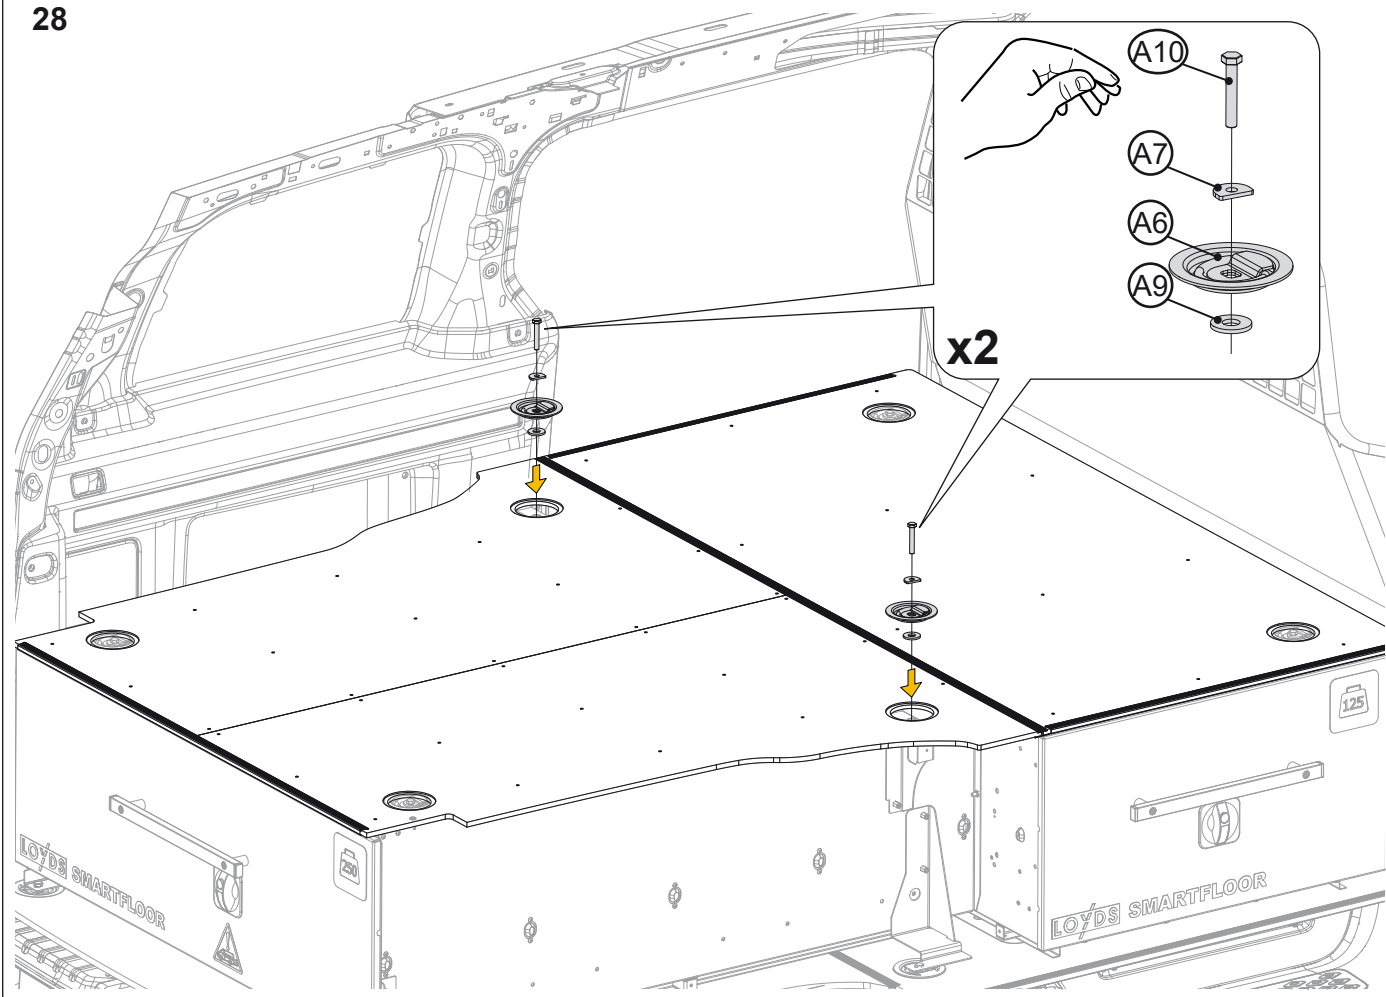

29

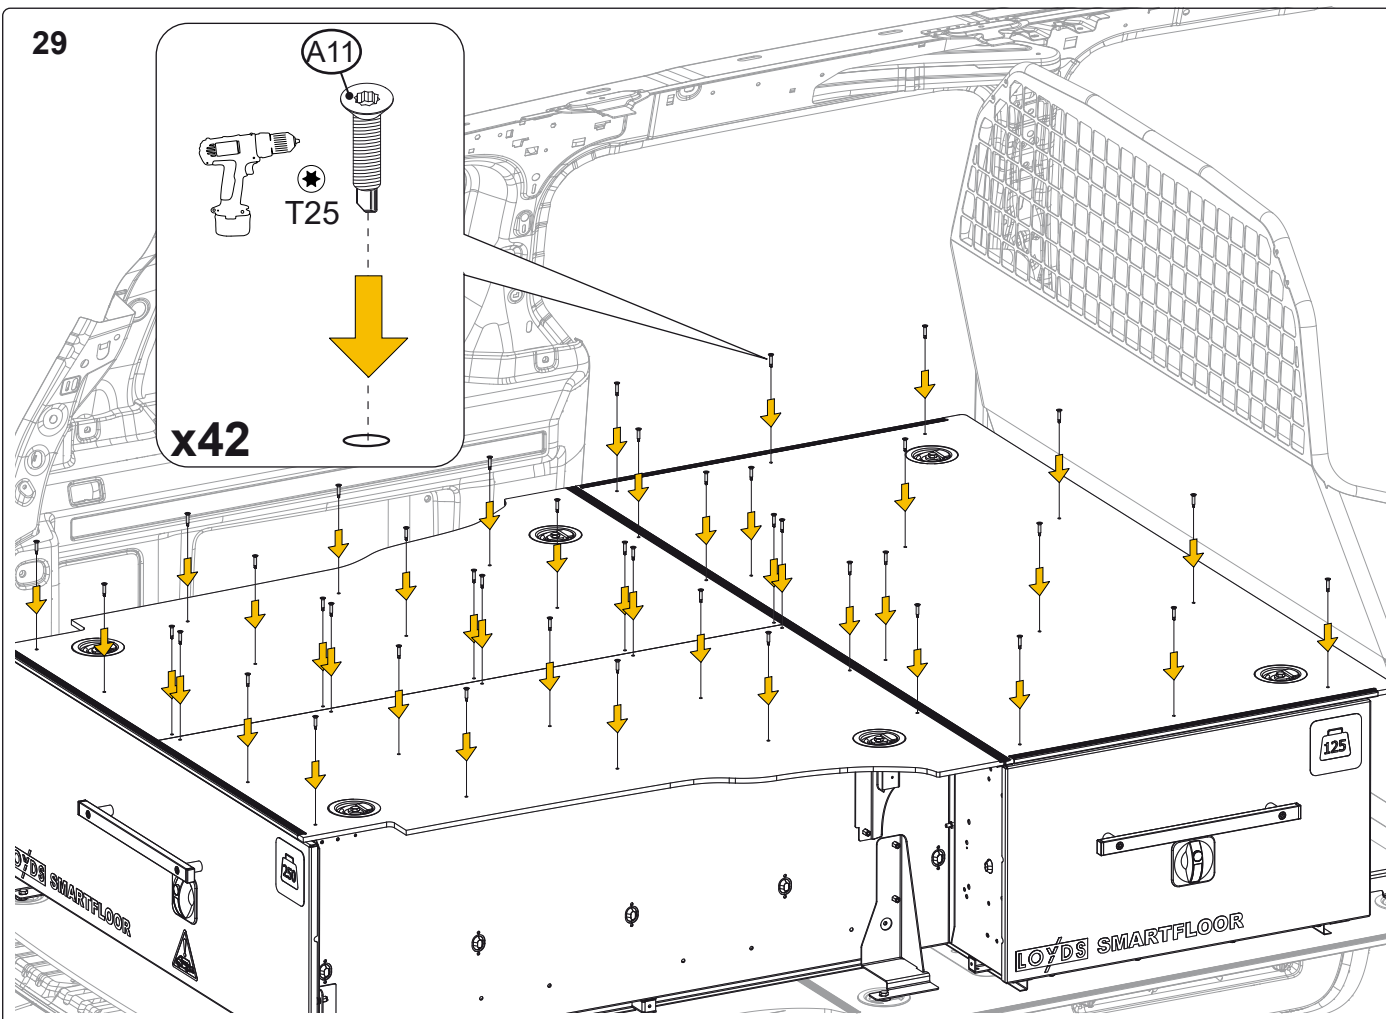

30

