

SMARTFLOOR

Mercedes Vito A2/A3 Installation Manual









Revision Record

Rev nr	Date	Page	Picture	Update	New	Deleted steps
03	10.12.2018			Floor Revisions		
04	29.01.2019			Floor Revisions		
05	06.08.2019			Floor Revisions		
06	09.10.2019			Norwegian marked only		


Recommended torque for screws:

4,2mm Selfdrilling: 3,6 NM
 6mm: 6 NM
 8mm: 10 NM
 10mm: 42 NM

Tools

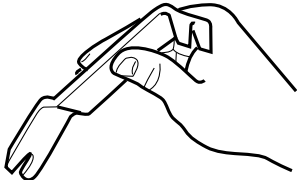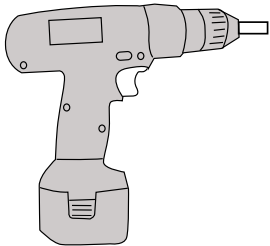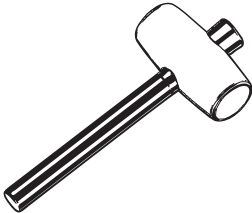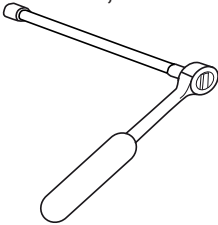
			
10, 13 mm 	10, 13 mm 	Bits T 25 T 30 T 40 	Bits PH2 
			

15012320_C Kit complete Vito A2 LafiSno Sep No 2SLD

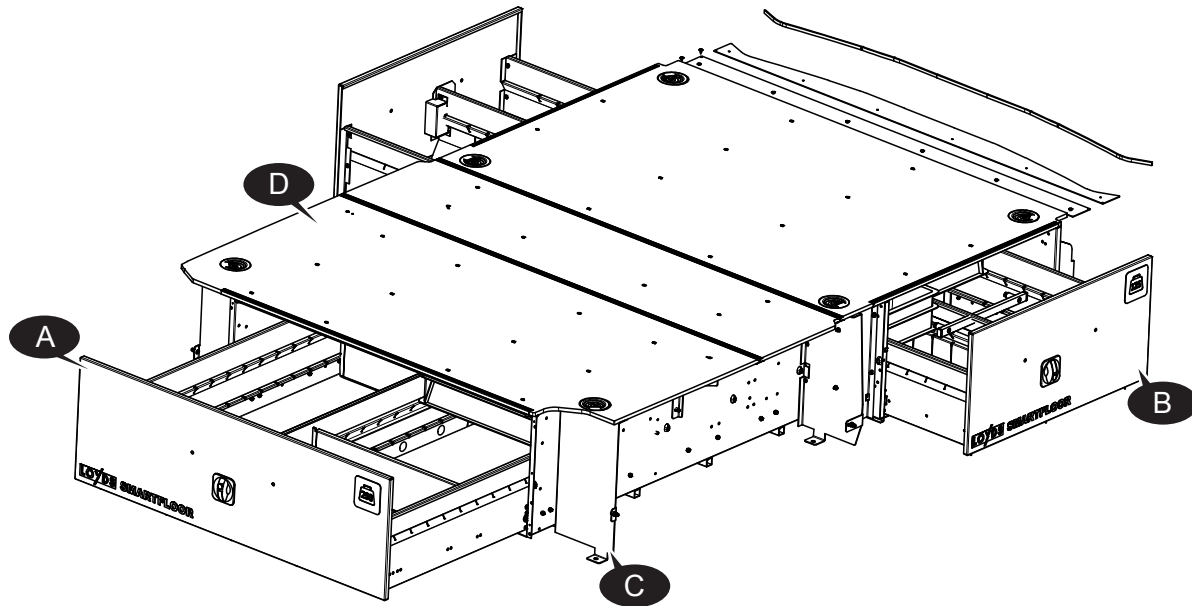


Item	Quantity	Part Number	Description
A	1	15009300	RD Rear Drawer Complete ASSY
B	1	15009190	FD2 Front Drawer Complete Assy
C	1	15012321	Steel bracket set Vito A2
D	1	15017952	Floor Set SF Vito A2 LafiSno Sep 2SLD

15013451_C Kit complete Vito A3 LafiSno Sep No 2SLD

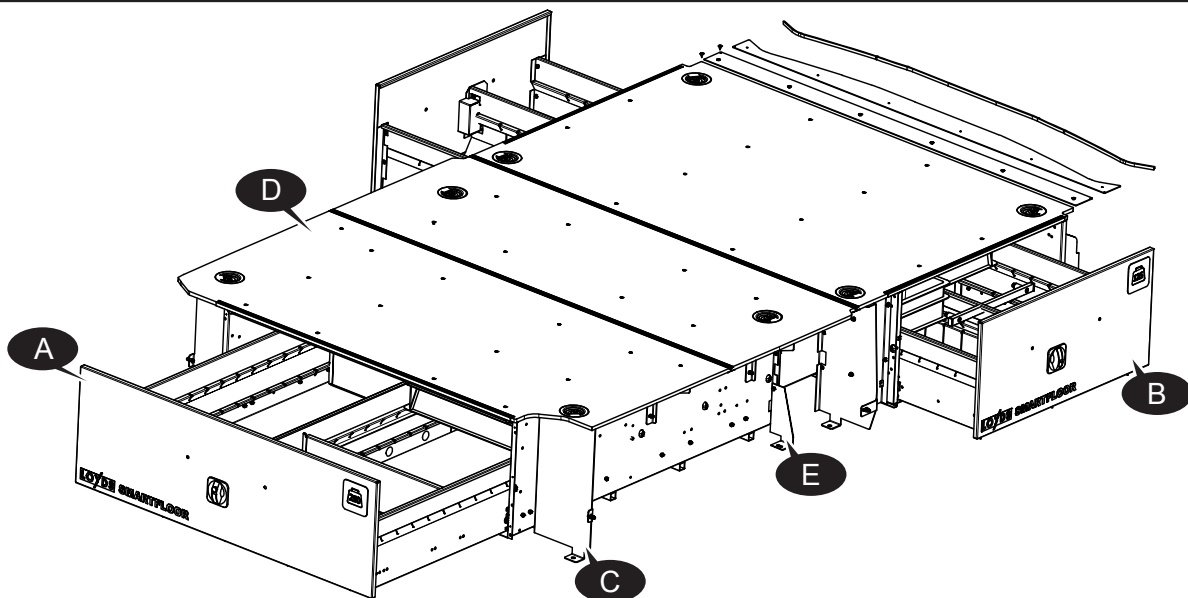


Item	Quantity	Part Number	Description
A	1	15009300	RD Rear Drawer Complete Assy
B	1	15009190	FD2 Front Drawer Coplete Assy
C	1	15012321	Steel bracket set Vito A2
D	1	15017950	Floor Set SF Vito A3 LafiSno Sep 2SLD
E	1	15013453	Additional Steelbracket Set Vito A3

15014587_C Kit Complete Vito A2 LafiSno Sep No 1SLD

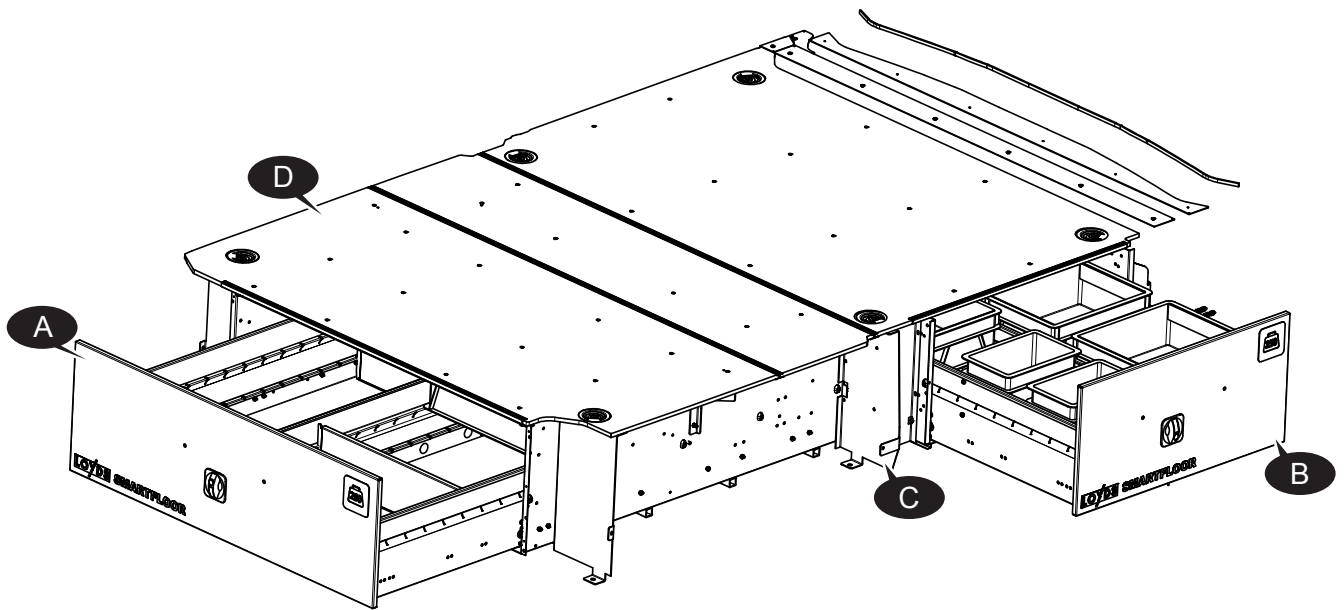


Item	Quantity	Part Number	Description
A	1	15009300	RD Rear Drawer Complete Assy
B	1	15009580	FD1 Front Drawer Complete Assy
C	1	15012321	Steel Bracket Set A2
D	1	15017951	Floor Set SF Vito A2 LafiSno Sep 1SLD

15014588_C Kit Complete Vito A3 LafiSno Sep No 1SLD

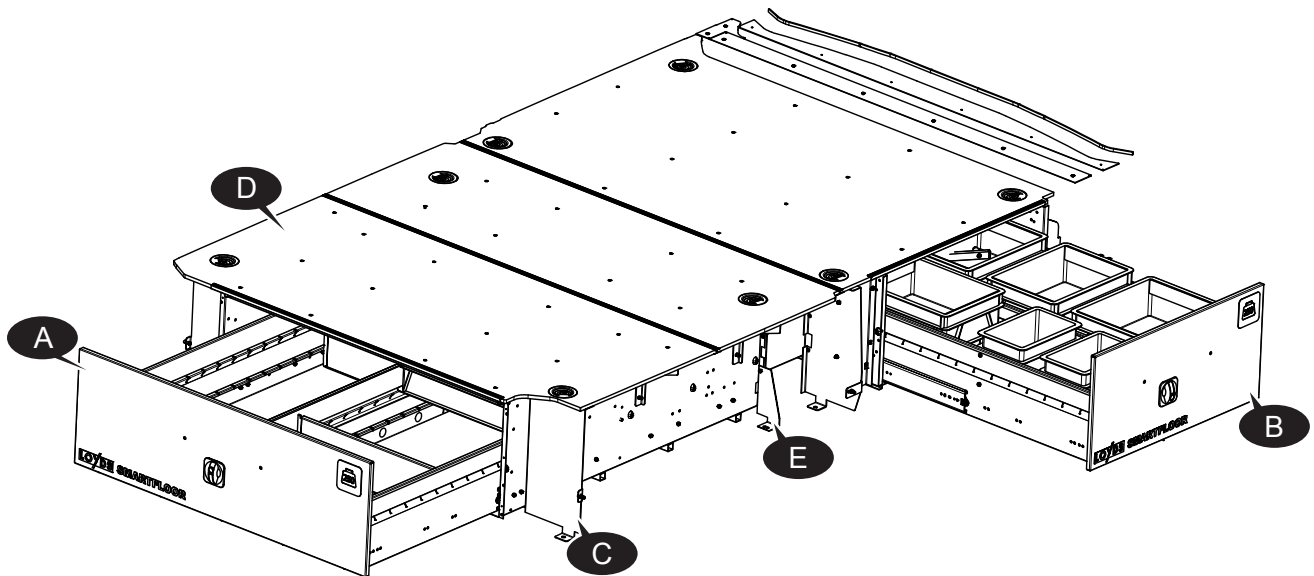


Item	Quantity	Part Number	Description
A	1	15009300	RD Rear Drawer Complete Assy
B	1	15009580	FD1 Front Drawer Complete Assy
C	1	15012321	Steel bracket set Vito A2
D	1	15017949	Floor Set SF Vito A3 LafiSno Sep 1SLD
E	1	15013453	Additional Steelbracket Set Vito A3

15017952_A Floor Set SF Vito A2 LafiSno Sep 2SLD

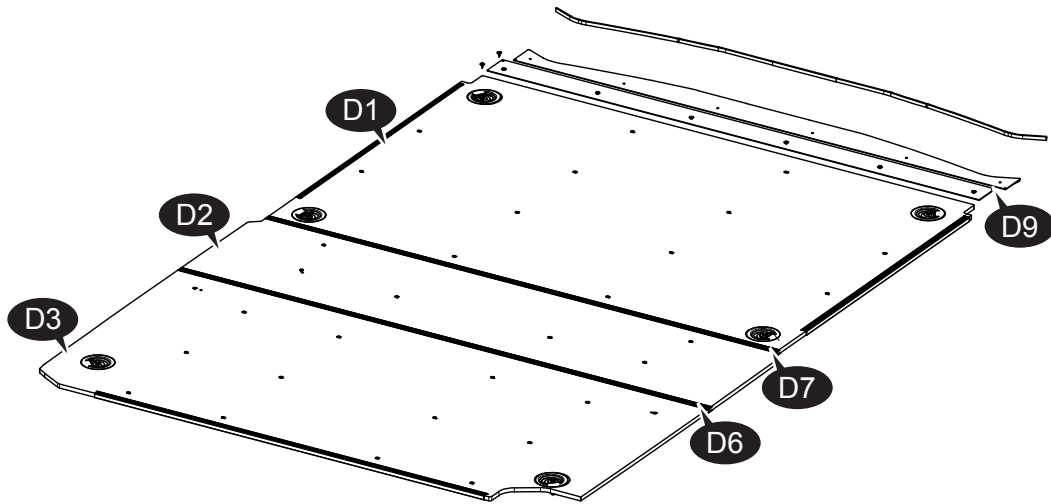


Item	Quantity	Part Number	Description
D1	1	15017946	Front Floor SF Vito LafiSno Sep No 2SLD ASSY
D2	1	15012326	Middle Floor Vito A2
D3	1	15016321	Rear Floor SF Vito A2 ASSY
D6	1	15012329	H-profile 12mm L=1665
D7	1	15012328	H-profile 12mm L=1604
D9	1	15017953	Floor Extension Kit SF Vito LafiSno Sep 2SLD 2019
	1	15012324	Fitting Kit Floor Set Vito A2 2SLD

15017950_A Floor Set SF Vito A3 LafiSno Sep 2SLD

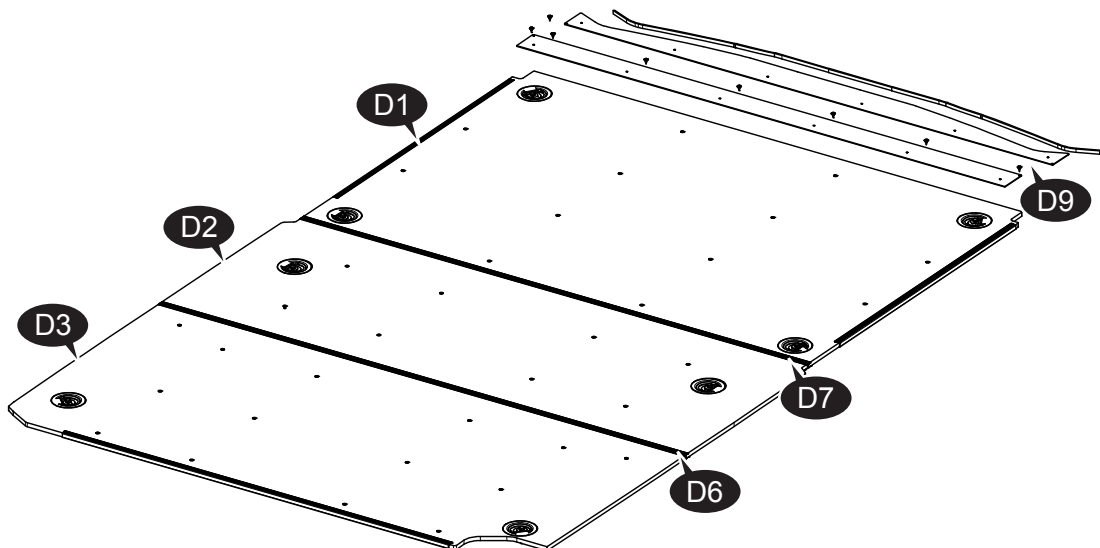


Item	Quantity	Part Number	Description
D1	1	15017946	Front Floor SF Vito LafiSno Sep No 2SLD ASSY
D2	1	15013454	Middle Floor Vito A3
D3	1	15016321	Rear Floor SF Vito A2 ASSY
D6	1	15012329	H-profile 12mm L=1665
D7	1	15012328	H-profile 12mm L=1604
D9	1	15017953	Floor Extension Kit SF Vito LafiSno Sep 2SLD 2019
	1	15013468	Fitting Kit Floor Set Vito A3 2SLD

15017951_B Floor Set SF Vito A2 LafiSno Sep 1SLD

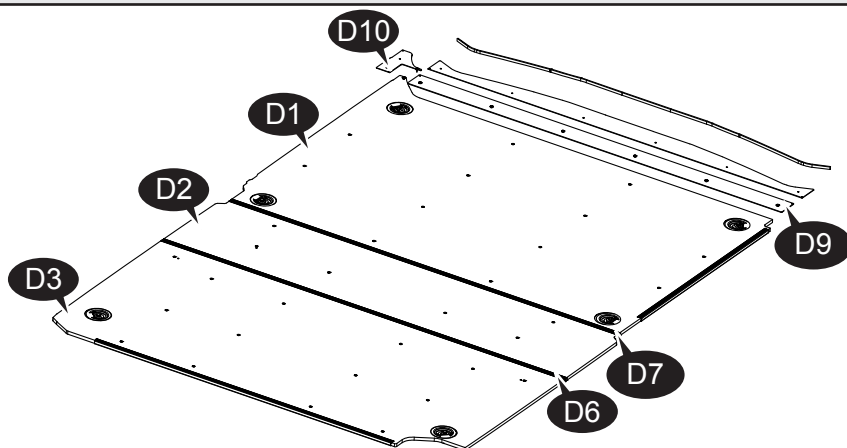


Item	Quantity	Part Number	Description
D1	1	15017945	Front Floor SF Vito LafiSno Sep No 1SLD ASSY
D2	1	15012326	Middle Floor Vito A2
D3	1	15016321	Rear Floor SF Vito A2 ASSY
D6	1	15012329	H-profile 12mm L=1665
D7	1	15012328	H-profile 12mm L=1604
D9	1	15017953	Floor Extension Kit SF Vito LafiSno Sep 2SLD 2019
D10	1	15017957	Floor Extend Bracket SF Vito Lafinto Sep 2019 1SLD
	1	15012324	Fitting Kit Floor Set Vito A2 2SLD

15017949_A Floor Set SF Vito A3 LafiSno Sep 1SLD

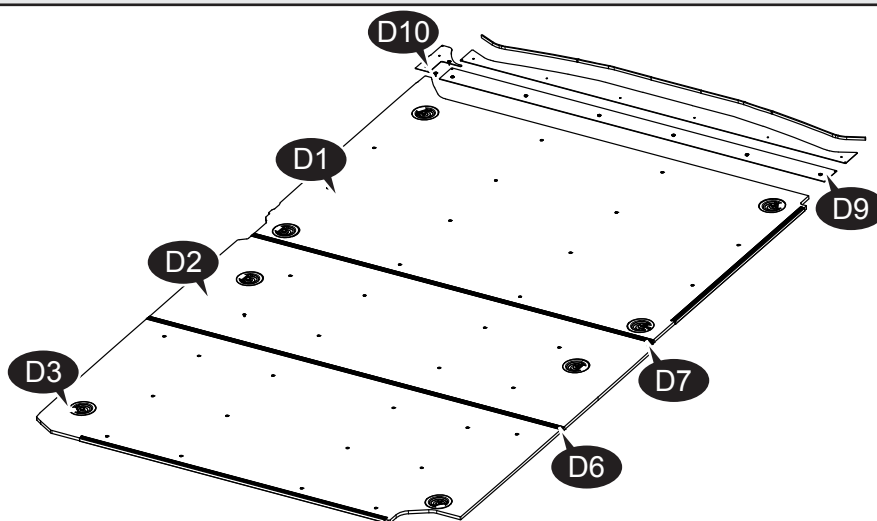


Item	Quantity	Part Number	Description
D1	1	15017945	Front Floor SF Vito LafiSno Sep No 1SLD ASSY
D2	1	15013454	Middle Floor Vito A3
D3	1	15016321	Rear Floor SF Vito A2 ASSY
D6	1	15012329	H-profile 12mm L=1665
D7	1	15012328	H-profile 12mm L=1604
D9	1	15017953	Floor Extension Kit SF Vito LafiSno Sep 2SLD 2019
D10	1	15017957	Floor Extend Bracket SF Vito Lafinto Sep 2019 1SLD
	1	15013468	Fitting Kit Floor Set Vito A3 2SLD

15012321 Steel bracket set Vito A2

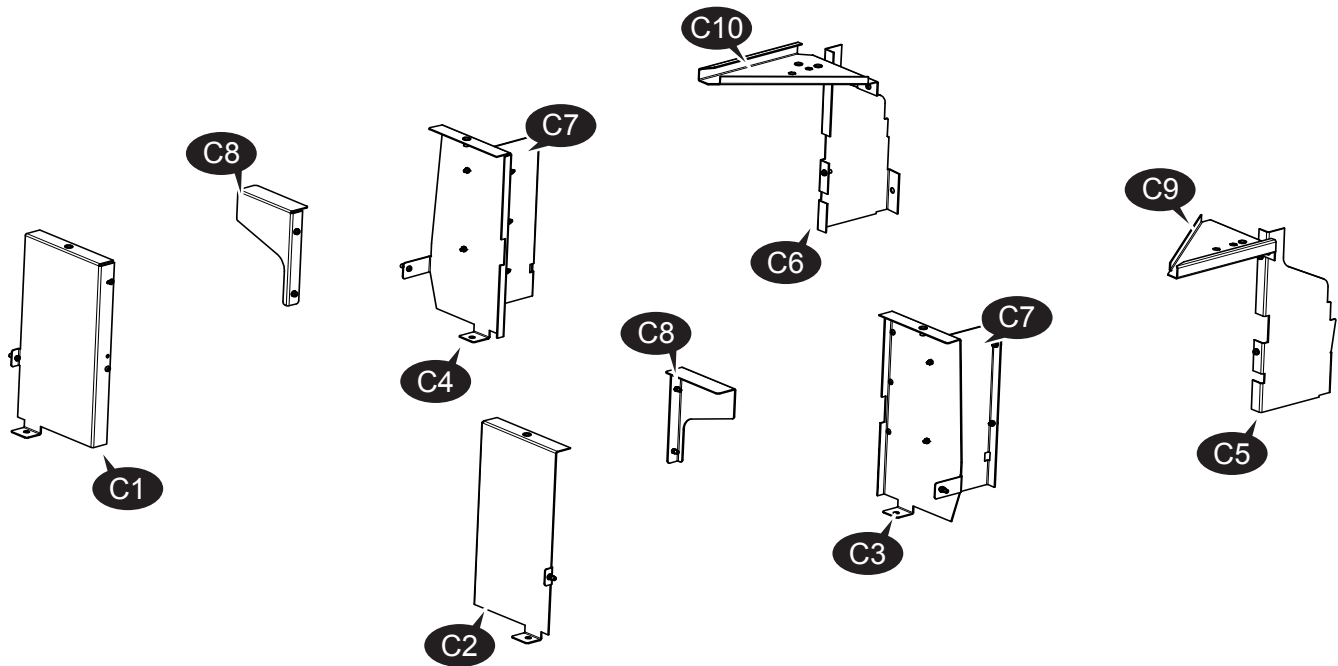


Item	Quantity	Part Number	Description
C1	1	15012332	Bracket Rear Left w Latch ASSY
C2	1	15012333	Bracket Rear Right w Latch ASSY
C3	1	15012331	Bracket Side Middle Right w Latch ASSY
C4	1	15012330	Bracket Side Middle Left w Latch ASSY
C5	1	15012334	Bracket Side Front Right ASSY
C6	1	15012335	Bracket Side Front Left ASSY
C7	2	15012319	Bracket Connect Front Rear Drawer
C8	2	15010225	Bracket Stiffener Middle Right T5 w heater ASSY
C9	1	15011031	Bracket Latchcup M8 Multi Right ASSY
C10	1	15011032	Bracket Latchcup M8 Multi Left ASSY
		15012322	Fitting Kit Steel Bracket Set A2

15013453 Additional Steelbracket Set Vito A3

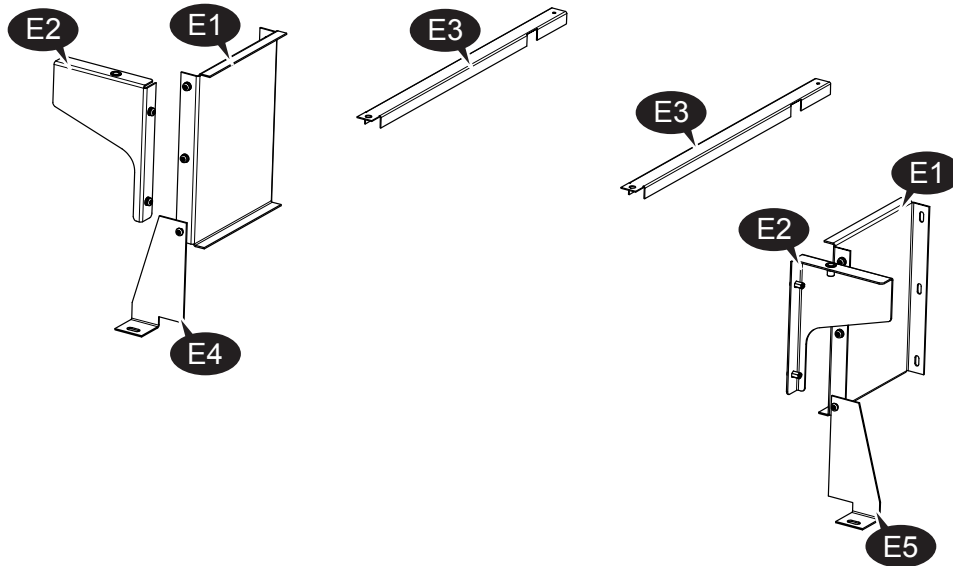

Item	Quantity	Part Number	Description
E1	2	15013462	Extend Bracket Vito A3 ASSY
E2	2	15013166	Bracket Middle w Latch Flexi ASSY
E3	2	15013465	Stiffener Rear Front Drawer Vito A3
E4	1	15013466	Bracket Floor Middle Left A3
E5	1	15013467	Bracket Floor Middle Right A3
	1	15013469	Fitting Kit Addit Steelbracket Vito A3


15010236 Handle Assy

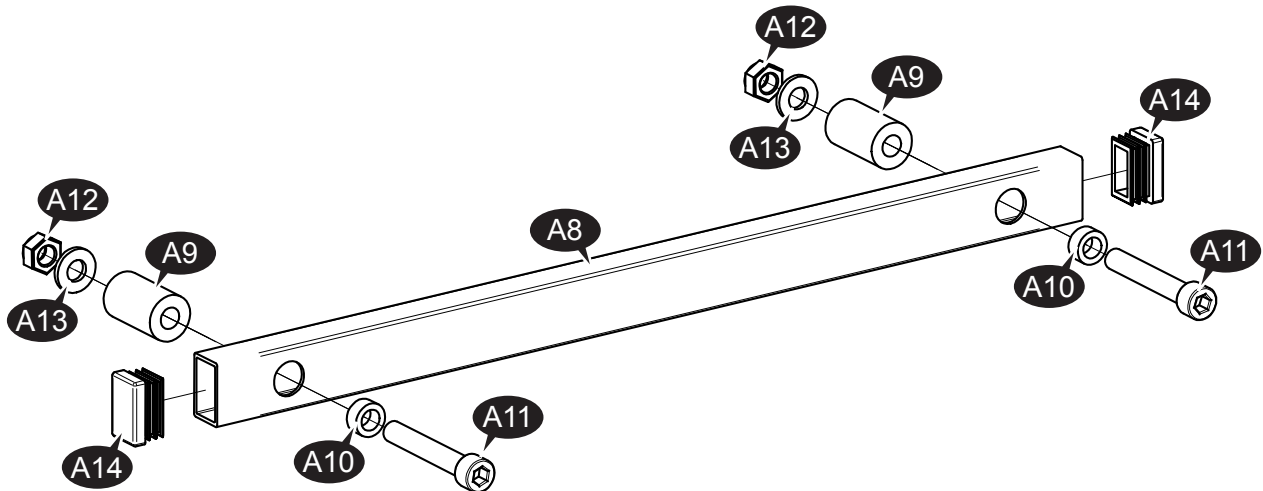


15010236 Handle Assy

Item	Quantity	Part Number	Description
A8	1	15009441	Handle Tube 25x15x286
A9	2	15009442	Spacer Ø8,3x18x30 Nylon Black
A10	2	15009443	Spacer Ø8,1x13x6mm Galv
A11	2	15009444	Screw M8x50 Cylinderh Hex
A12	2	8 NMU	Mutter M8 Nyloc DIN985
A13	2	8,4x17x2	M8 Washer, DIN 125
A14	2	15009438	End Plug Tube 25x15 Inside


15012322_B Fitting Kit Steel Bracket Set A2

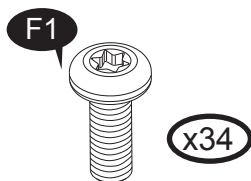

15003551
M6x16 TX30 pan (DIN 7985)

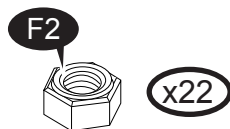


6 NMU
M6 Self Locking nut, DIN 985-8

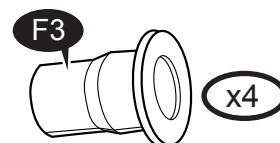


15003550
M6 Popnut short

15013469_A Fitting Kit Addit Steelbracket Vito A3

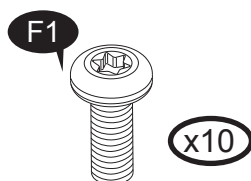


15003551
M6x16 TX30 pan (DIN 7985)


15012324_B Fitting Kit Floor Set Vito A2 2SLD

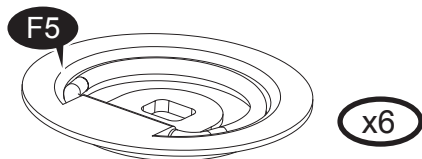

15005497
Latch Cup Black Ø90 Ø12x15 1000Kp

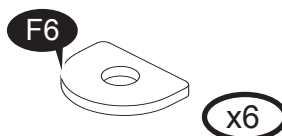

15005884
Washer Latchcup for Ø8

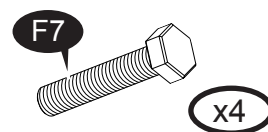

8x40 6KS
M8x40mm Bolt, DIN 933, sort




15004713
M8x50mm Bolt, 6K DIN 933 Black



15001584
Distansehylse D20 d13 h15



11,3x18x12
Distansehylse B-223 Plast

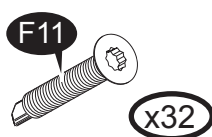


15009568
Screw 4,8x32 Selfdrill Counters Torx
Elz



36.721004
Window rubber profile
L: 1600mm

15013468_A Fitting Kit Floor Set Vito A3 2SLD

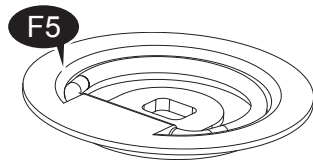


x8

15005497
Latch Cup Black Ø90 Ø12x15 1000Kp



x8

15005884
Washer Latchcup for Ø8



x6

8x40 6KS
M8x40mm Bolt, DIN 933, sort



x2

15004713
M8x50mm Bolt, 6K DIN 933 Black




x2

15001584
Distansehylse D20 d13 h15




x2

11,3x18x12
Distansehylse B-223 Plast

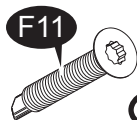


x34

15009568
Screw 4,8x32 Selfdrill Counters Torx
Elz

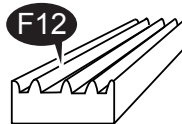

36.721004
Window rubber profile
L: 1600mm

15017953_A Floor Extension Kit SF Vito LafiSno Sep 2SLD 19

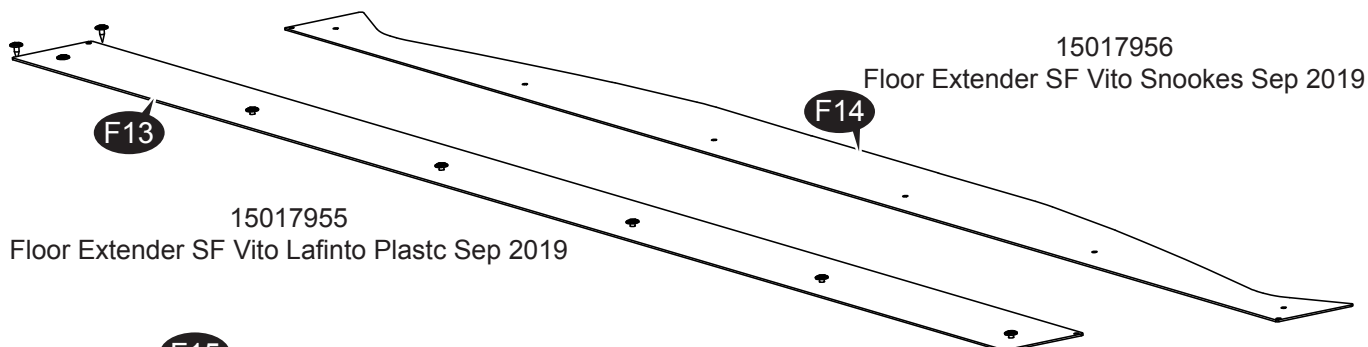


x8

4,2x13 S
Screw 4,2x13 Flathead Needle Black

1.

L&R

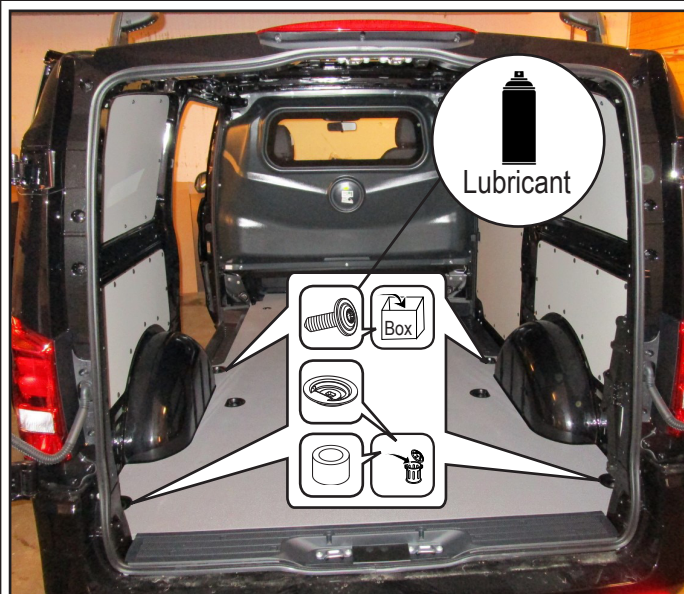


2.

RH




3.

LH

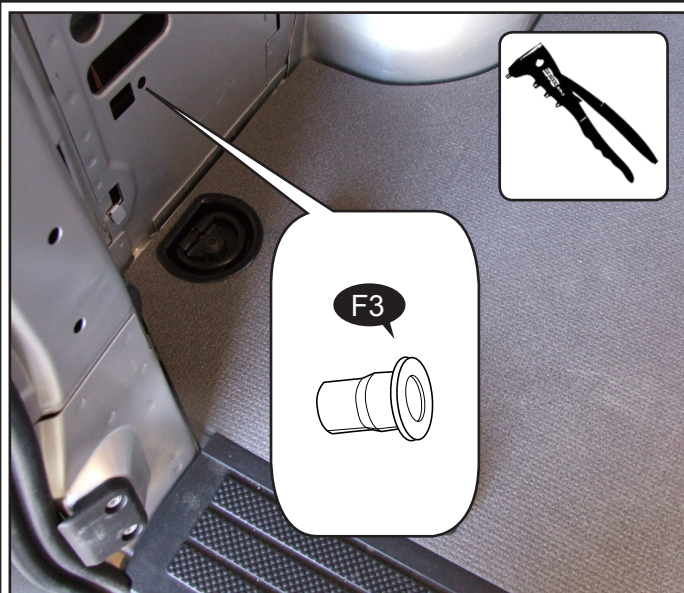


4.

RH

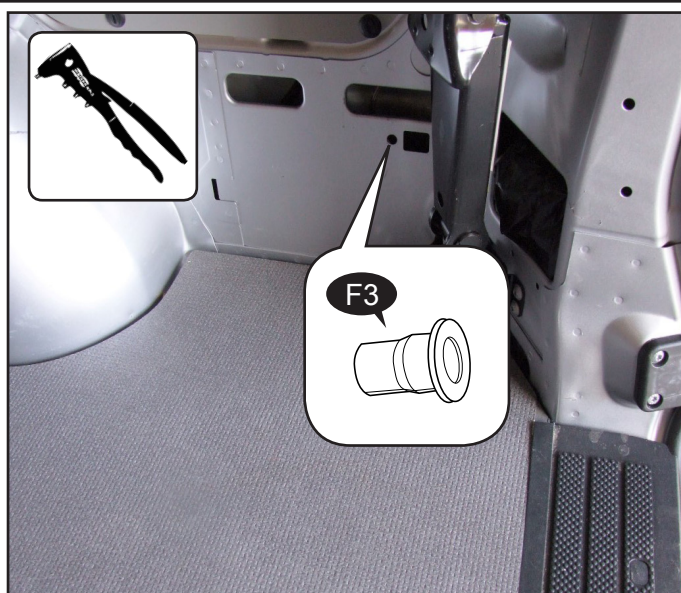

5.

LH

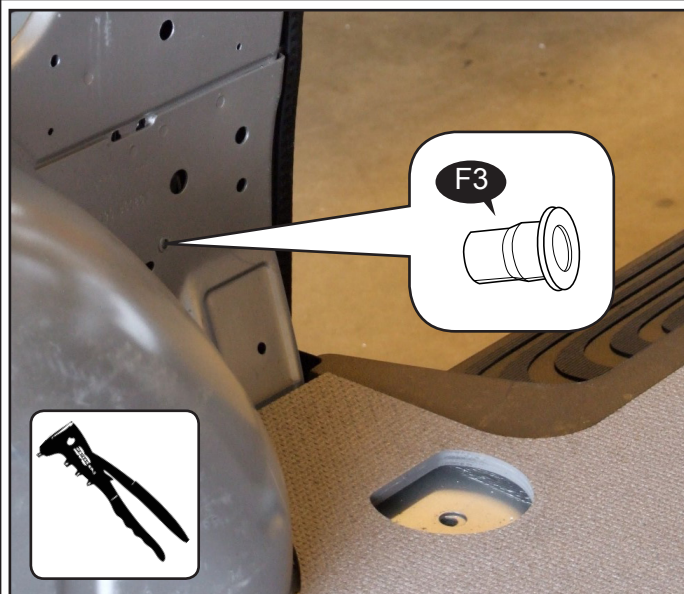


6.

RH




7.


L&R

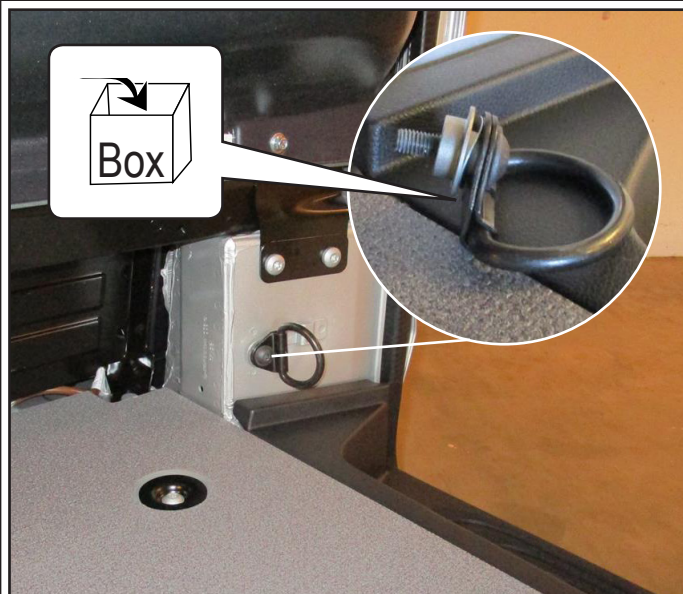


8.

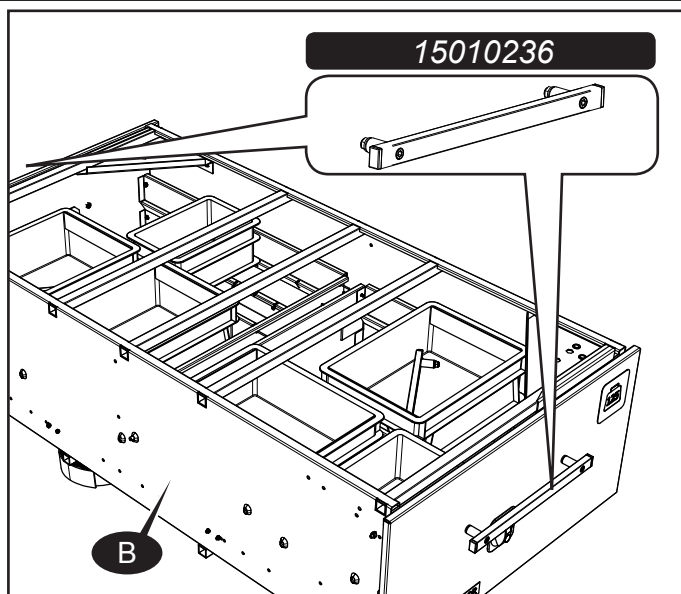


9.

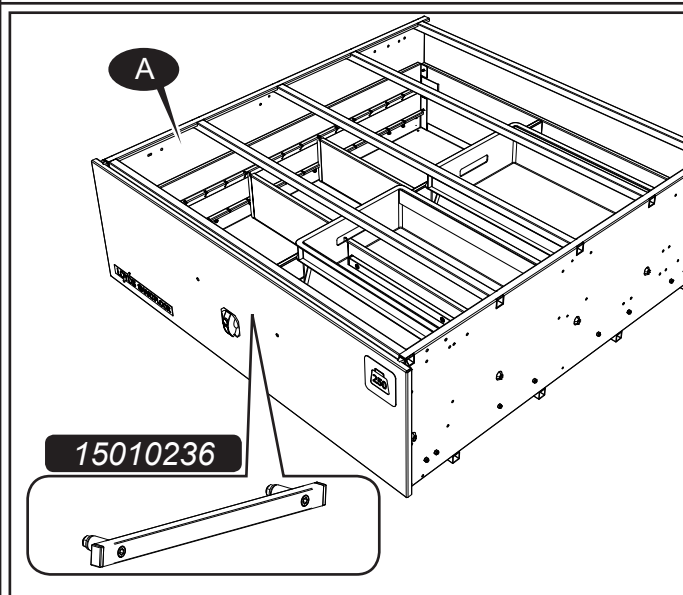

10.

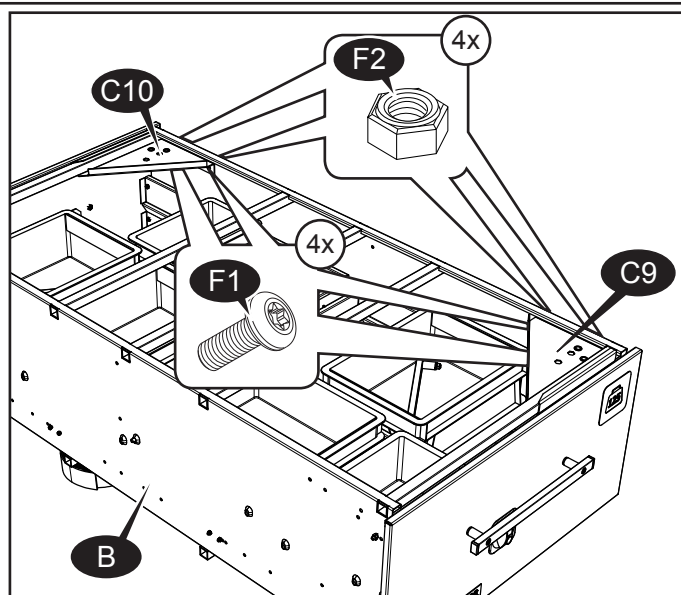


11.

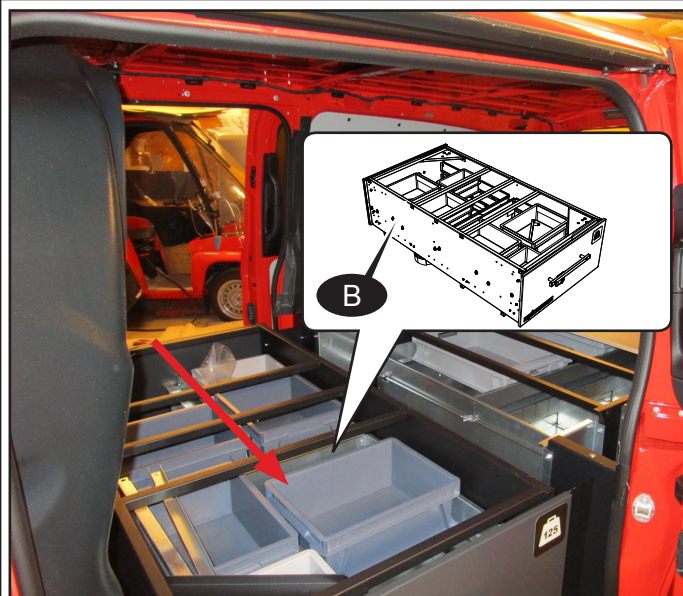


12.

L&R

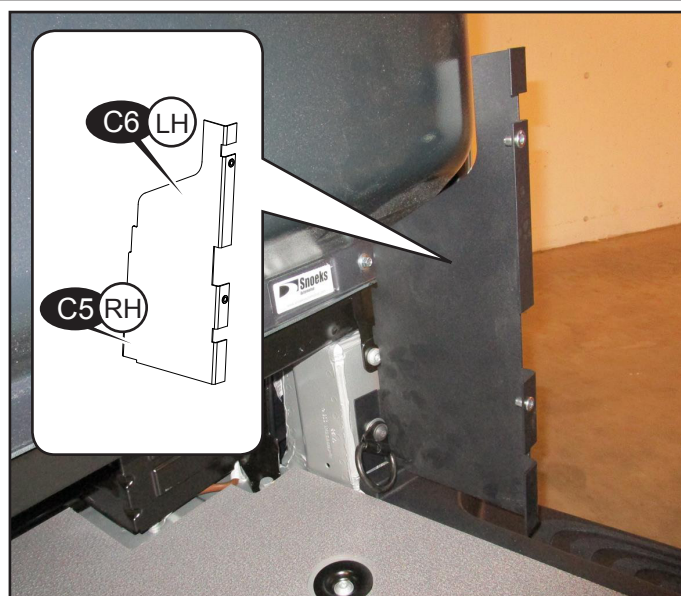


13.

L&R

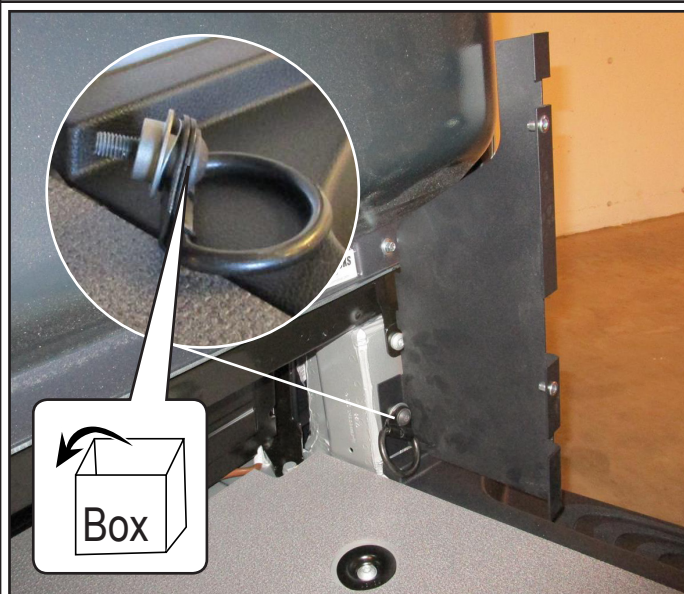

14.


L&R

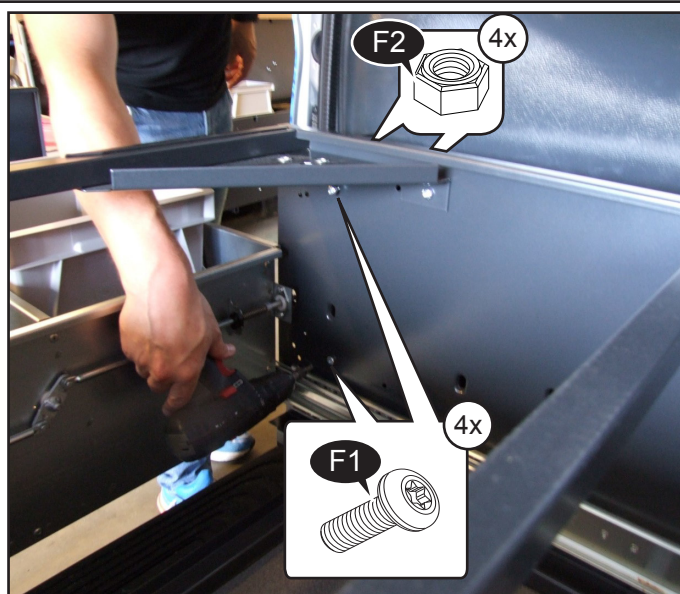

15.


16.

L&R

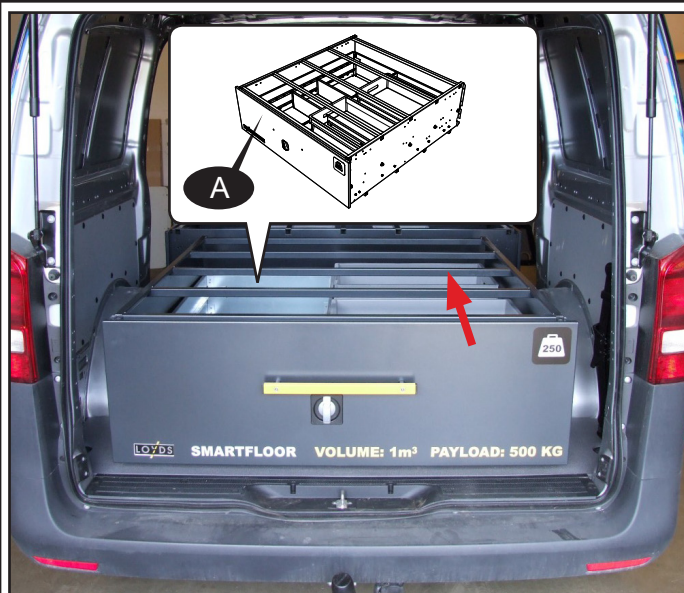


17.

A2 L&R

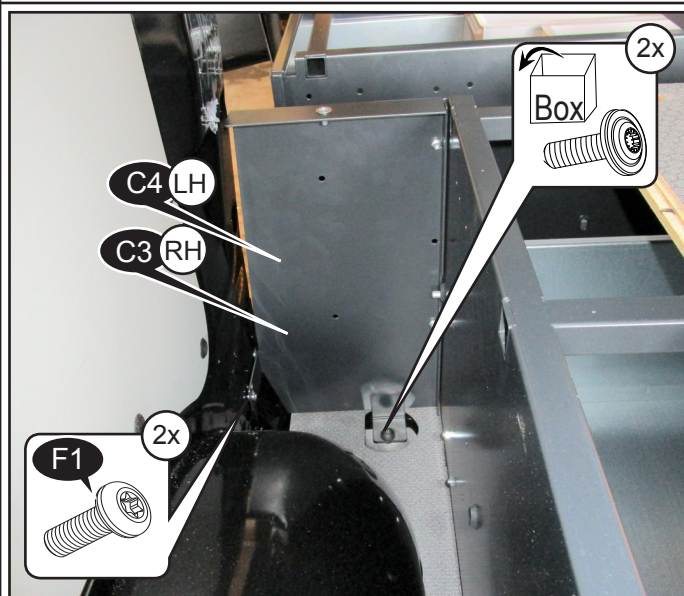


17.A

A2 L&R

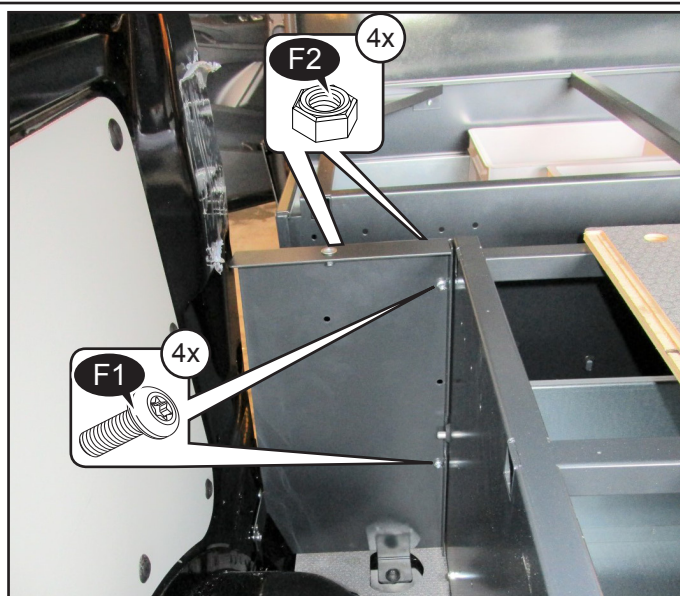


17.B

A2 L&R

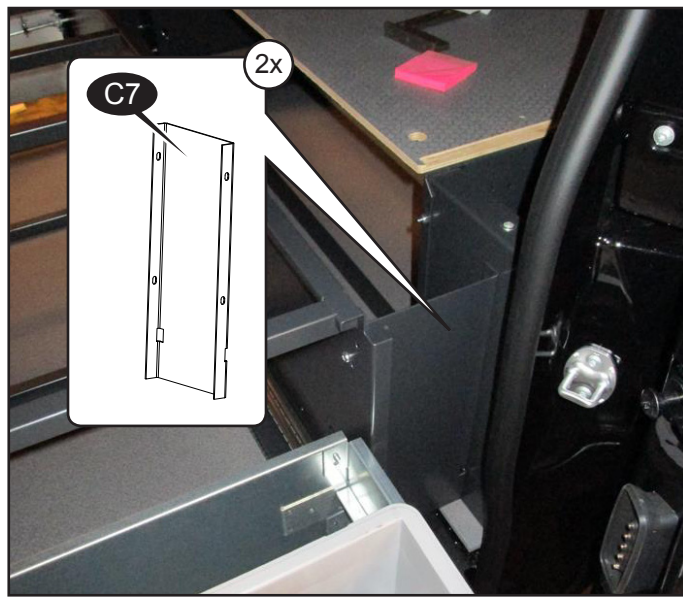


17.C

A2 L&R

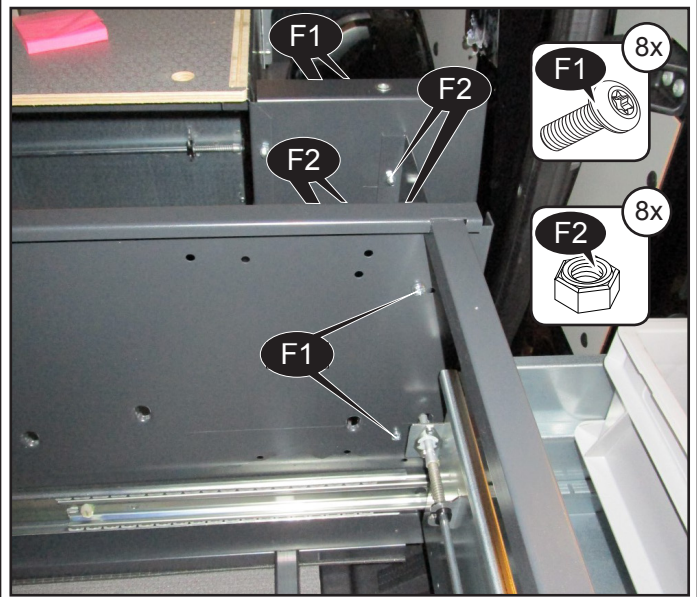


18.

A3 L&R

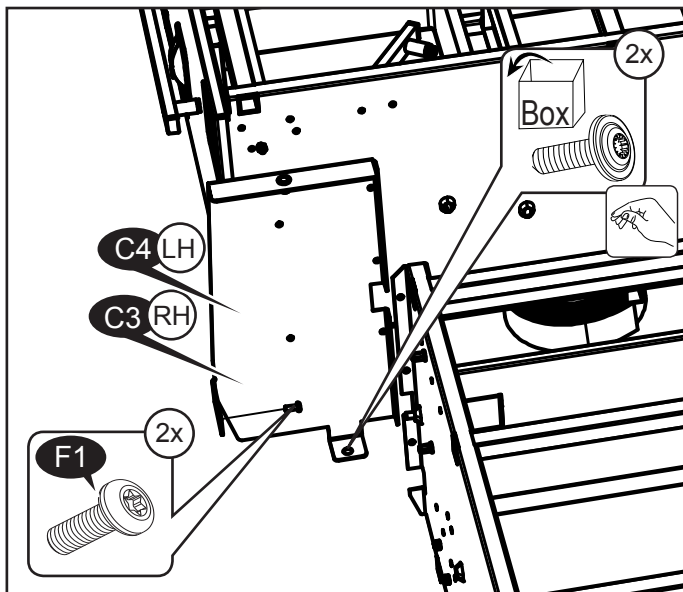


18.A

A3 L&R

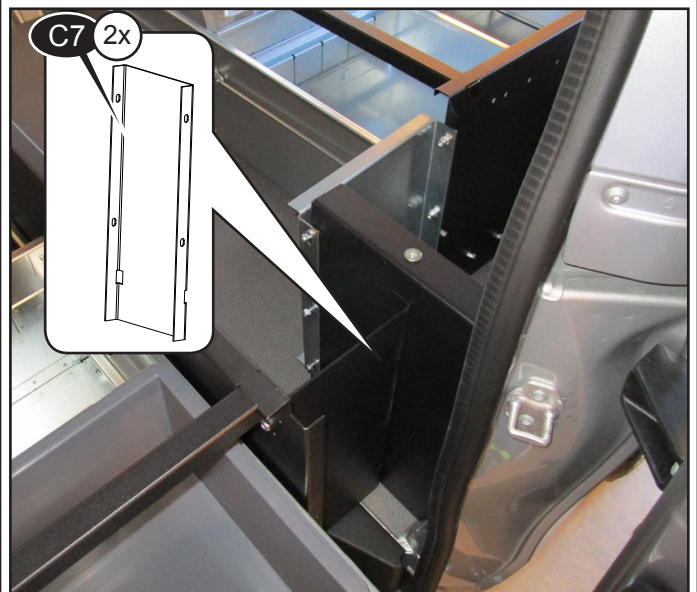


18.B







A3 L&R

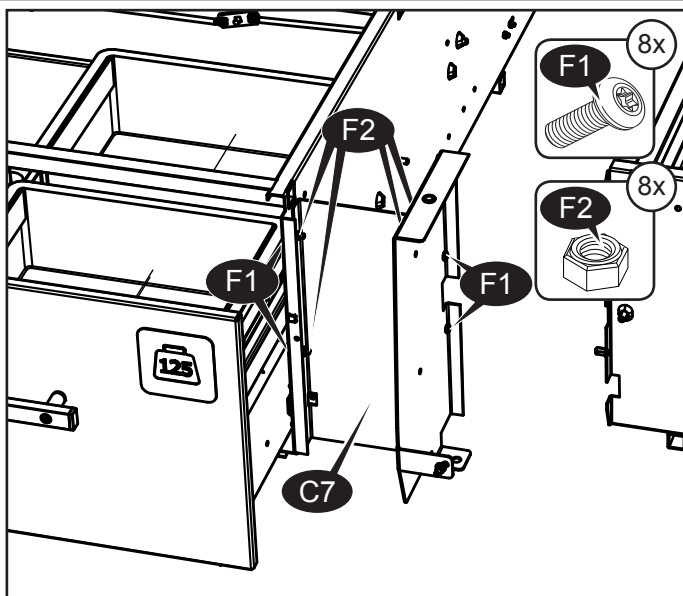

18.C

A3 L&R

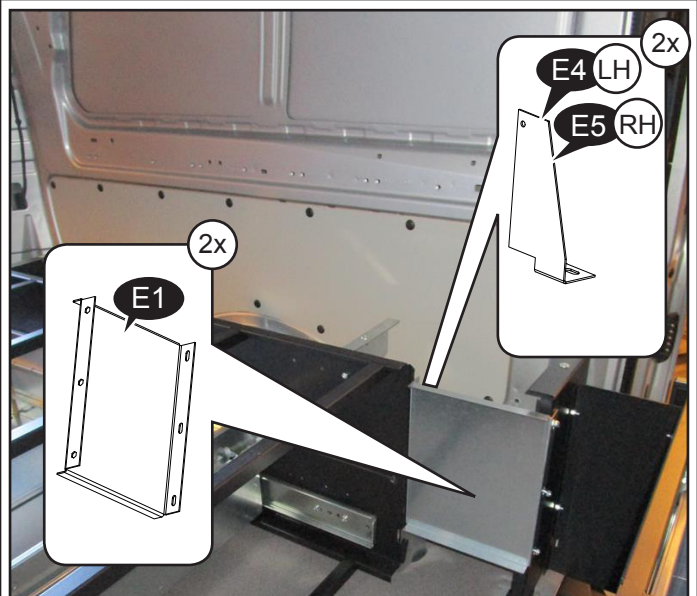

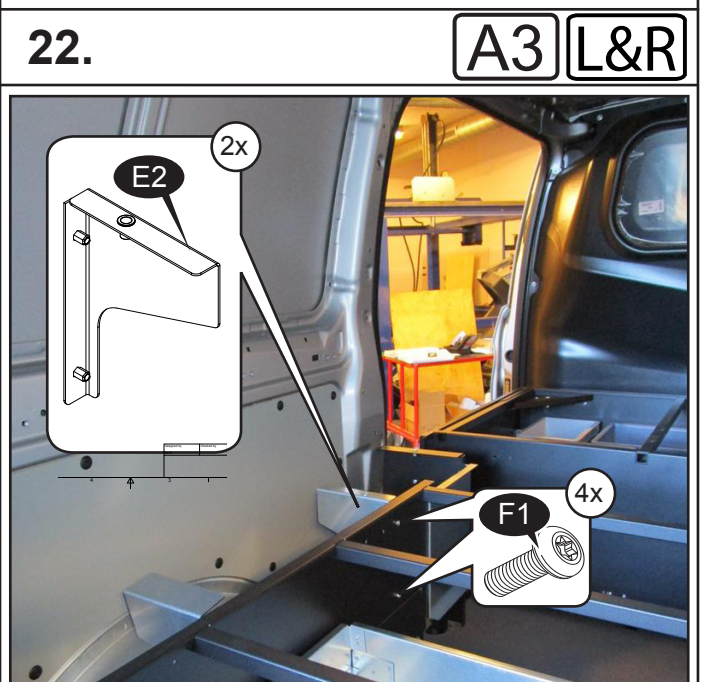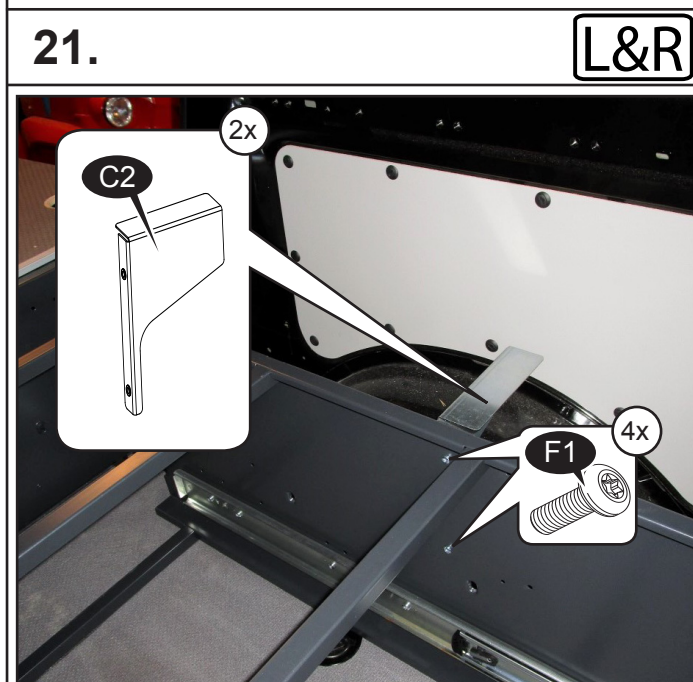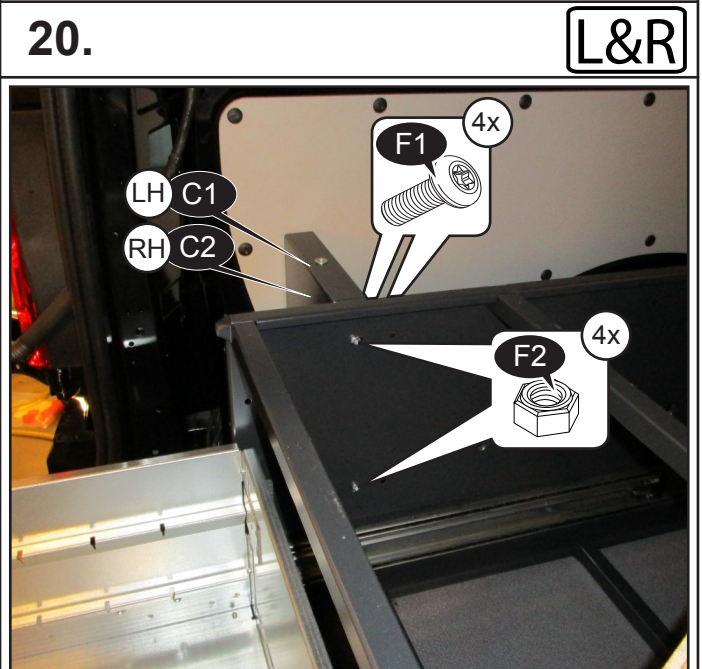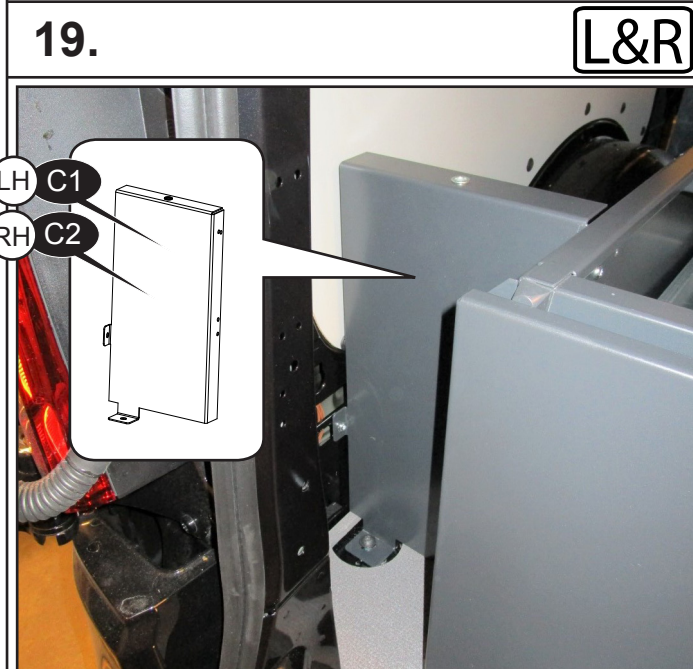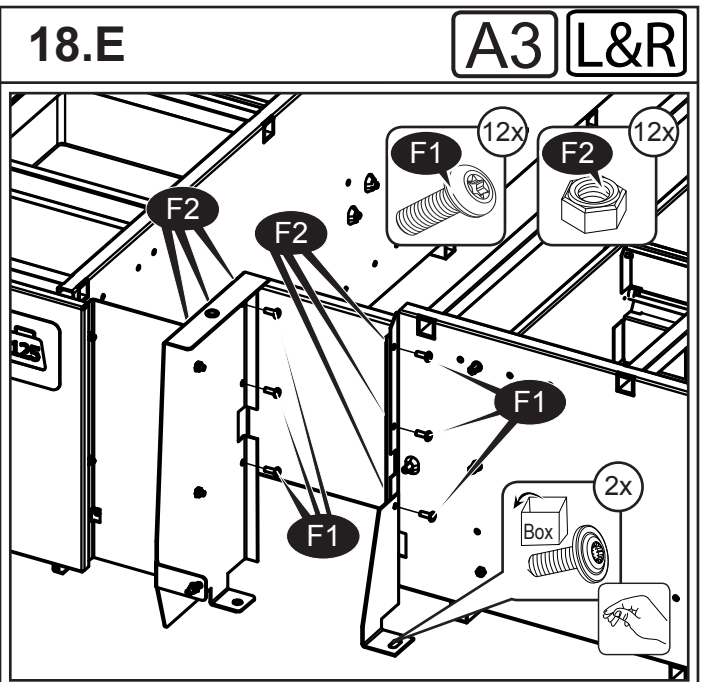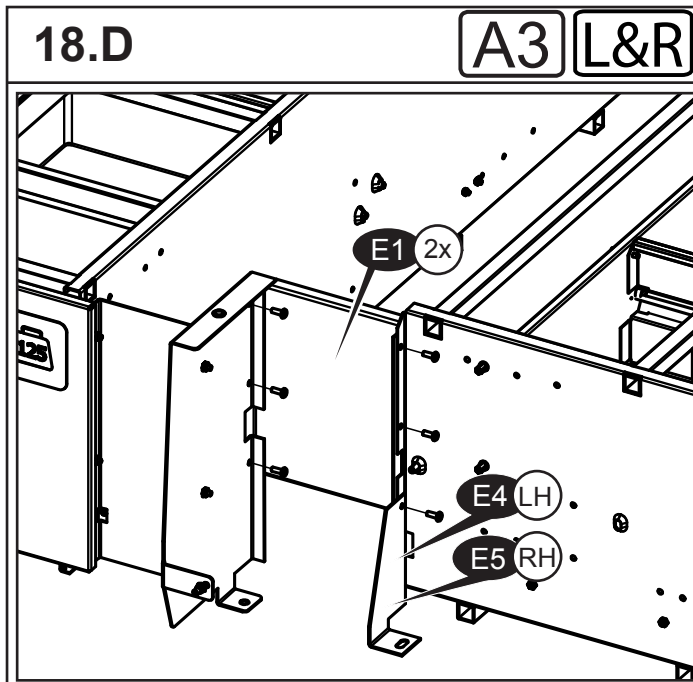


23.




24.

A2

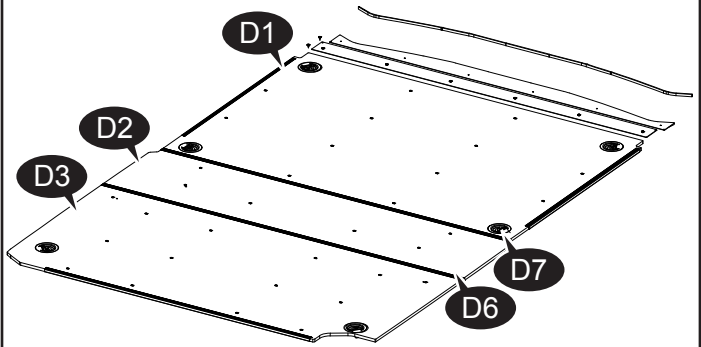


24.A

A2

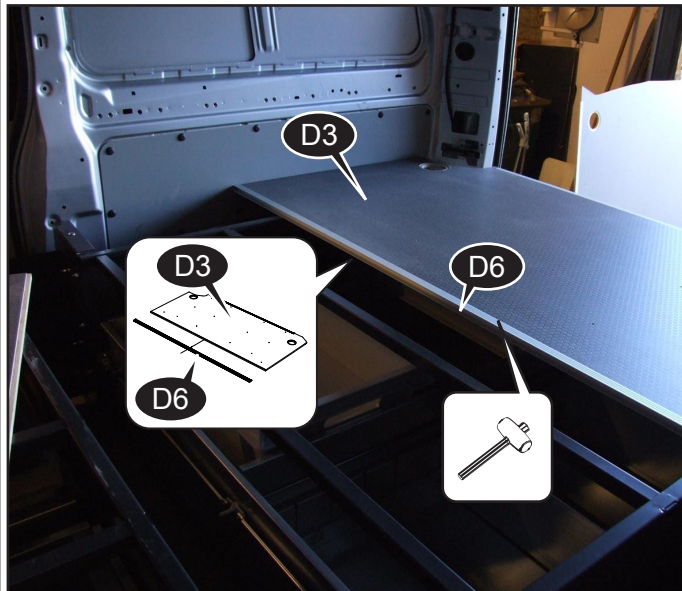


24.B

A2

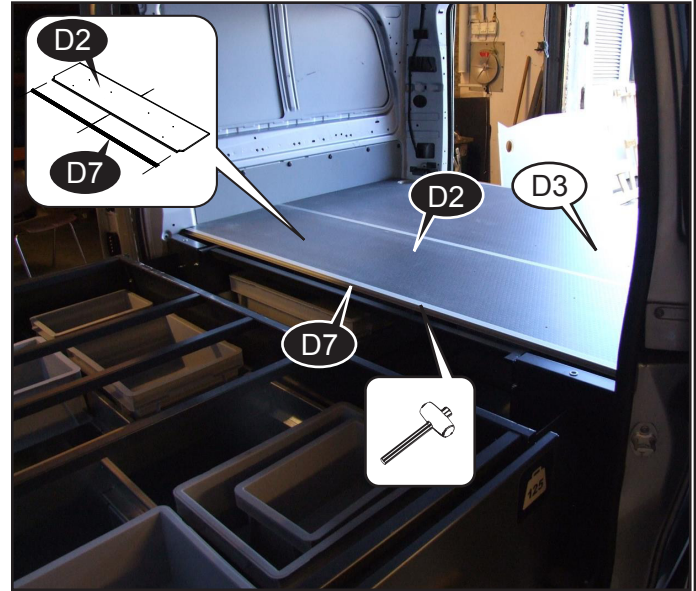


24.C

A2

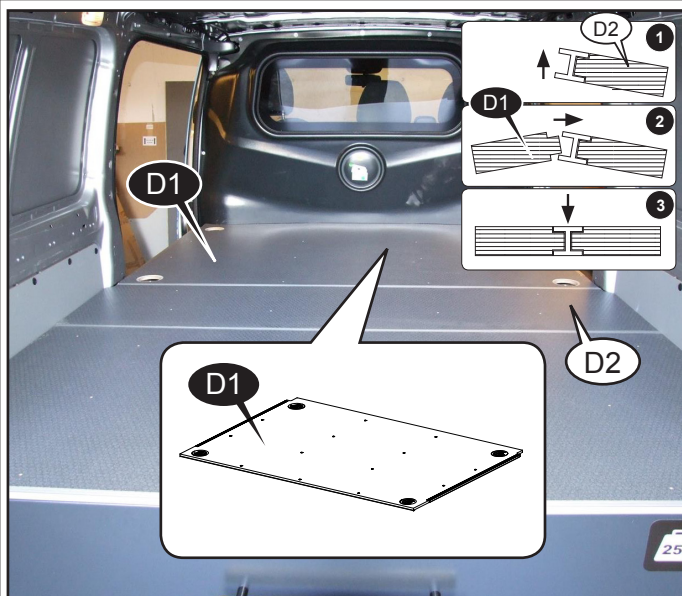


25.

A3

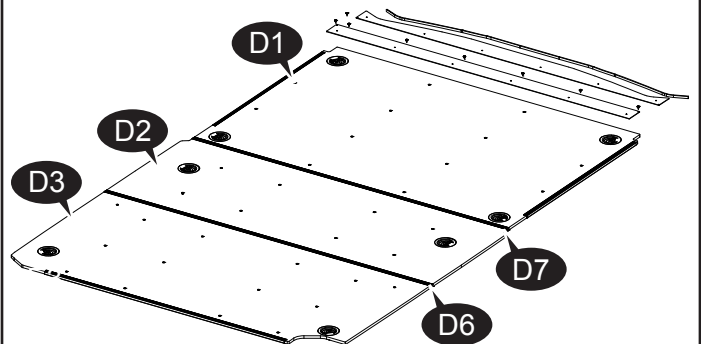


25.A

A3

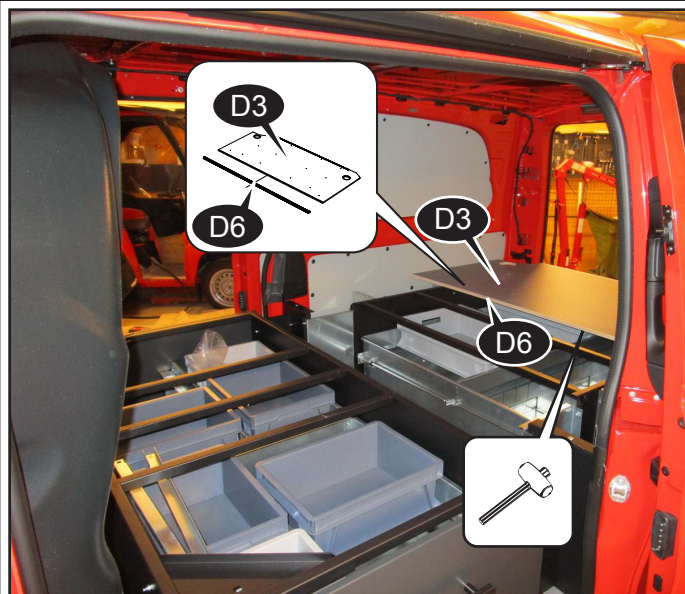


25.B

A3

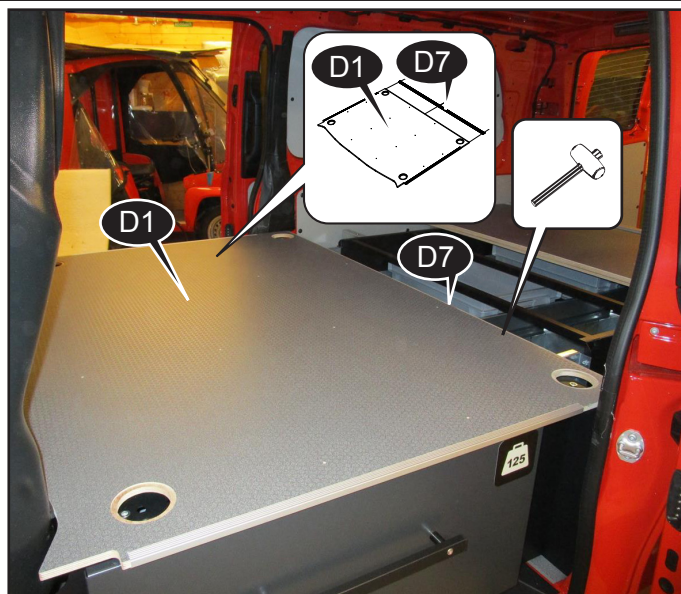


25.C

A3

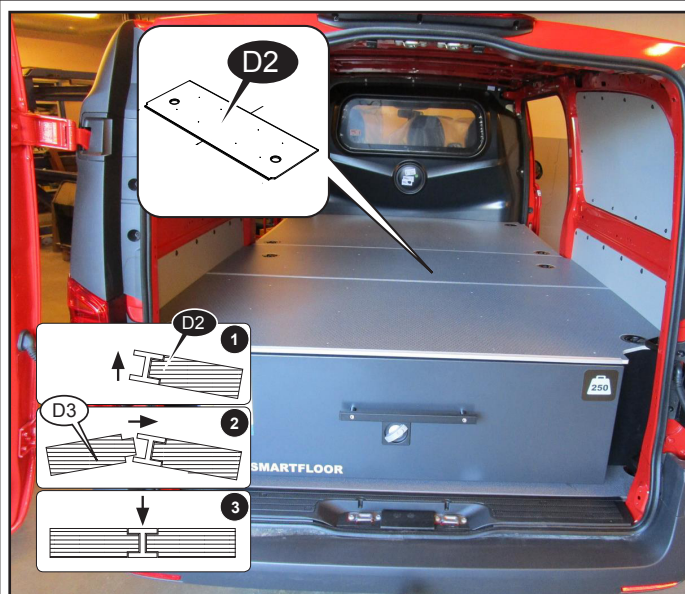


26.

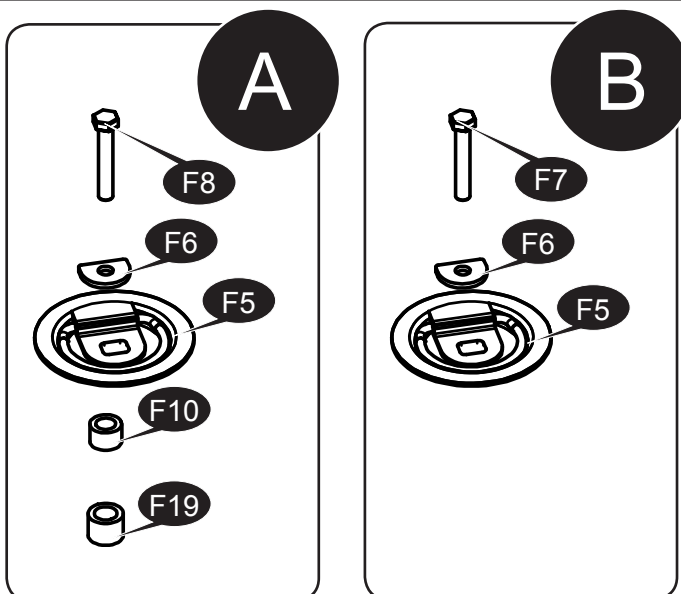


27.

A2

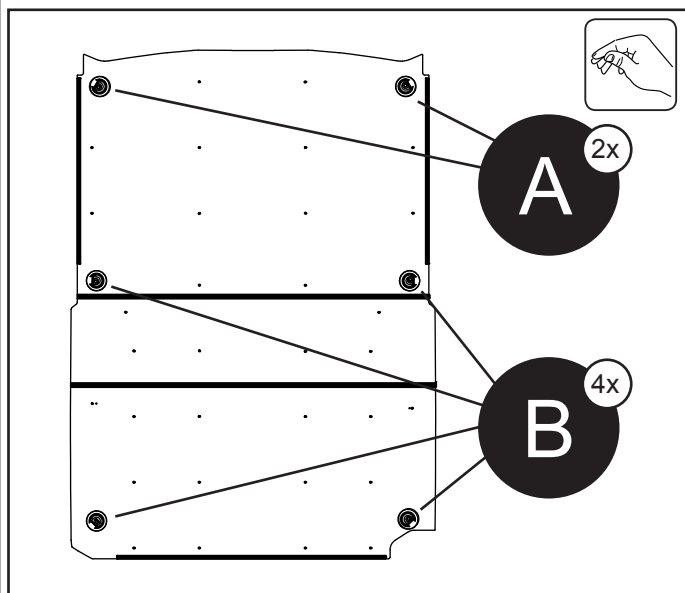




28.

A3

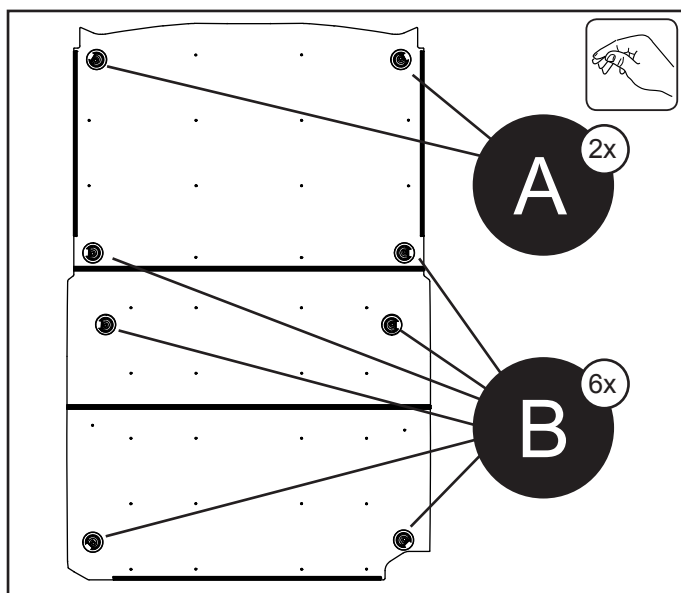



29.

A2

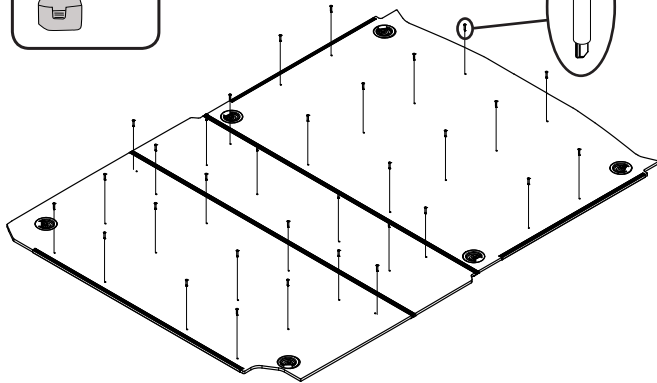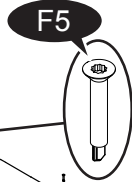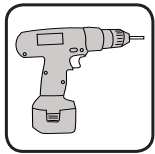



30.

A3

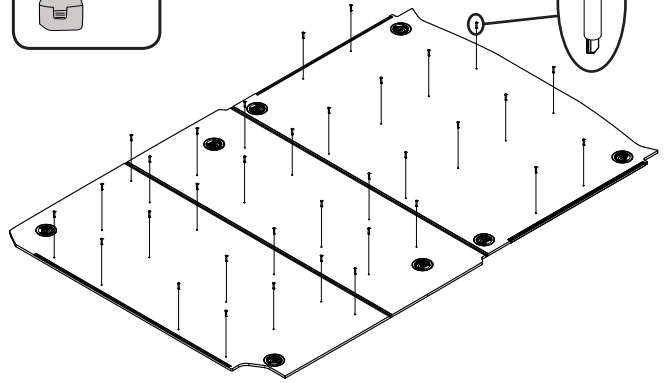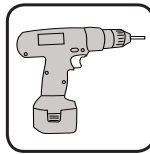


31.

L&R

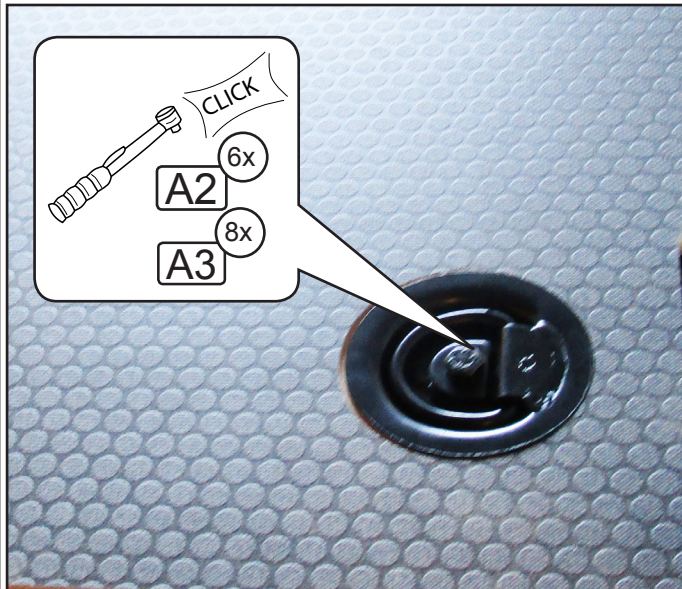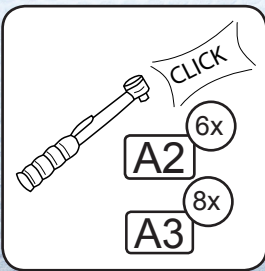



32.

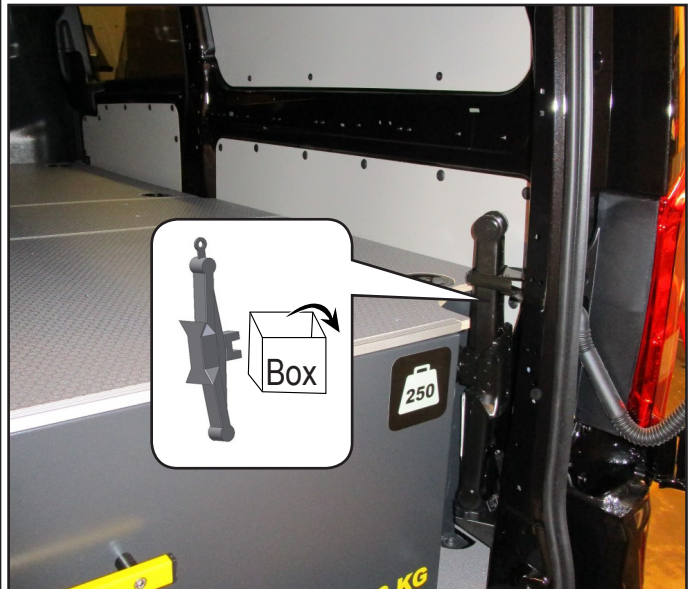

33.

2SLD



Lafinto
plastic
separator

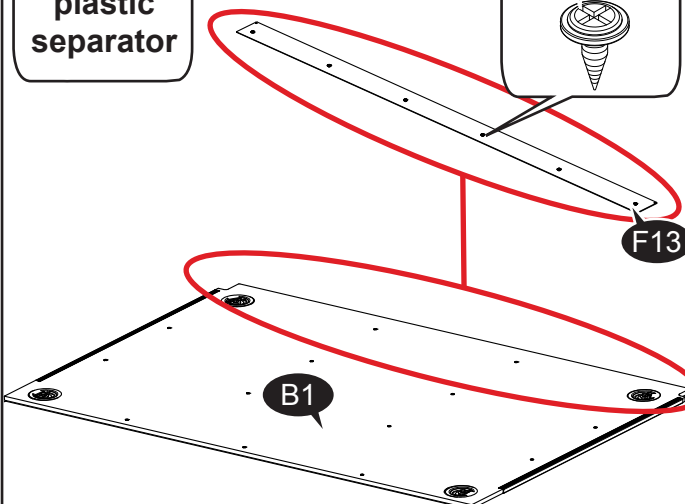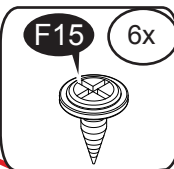

34.

2SLD

Snookes
separator

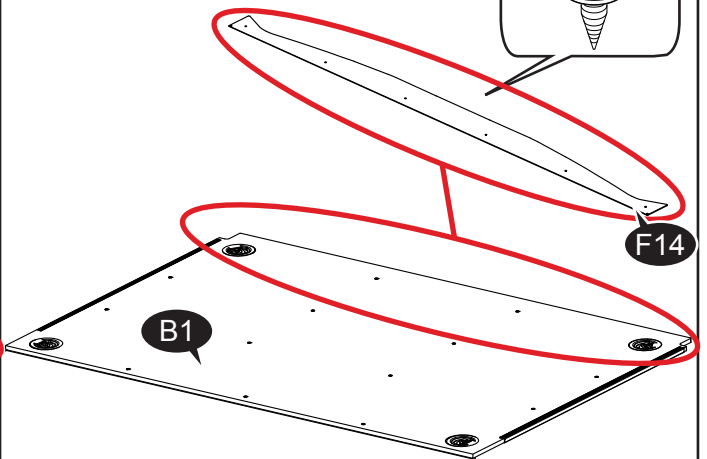
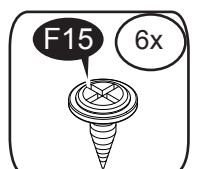


35.

1SLD

36.

Lafinto
plastic
separator

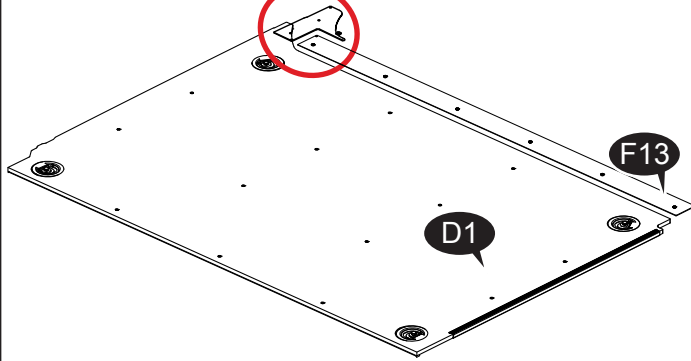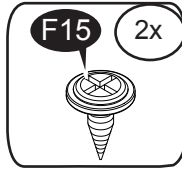

Mount rubber profile
between floor extender
and separator

