

SMARTFLOOR

VW T6 PP Panels Installation Manual D-Cab Se



Contents

15014540_B Kit Complete T6 D-cab Se
15014509_B Kit Complete T6 D-cab Se w Heater

LH Left hand side

RH Right hand side

L&R Left and right hand side

 With heater

 Without heater

EXAMPLE

LH **RH** 

Left hand side (both with and without heater), right hand side without heater.








Revision Record

Rev nr	Date	Page	Picture	Update	New	Deleted steps
01	13.12.18			Floor Set Rev		
02	04.06.19					Removed Window Rubber
03	30.09.19			Added supplement kit		


Recomended attracrion moments screws:

4,2mm Selfdrilling: 3,6 NM
 6mm: 6 NM
 8mm: 10 NM
 10mm: 42 NM

Tools

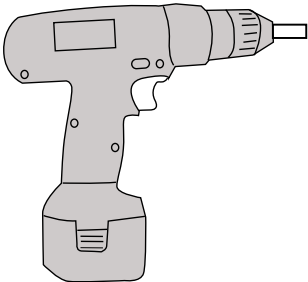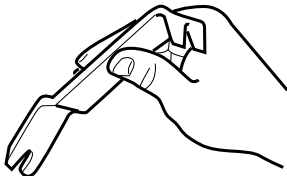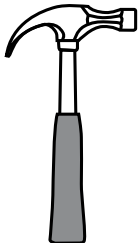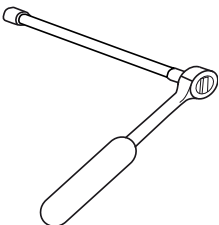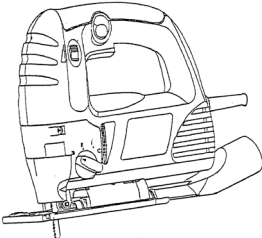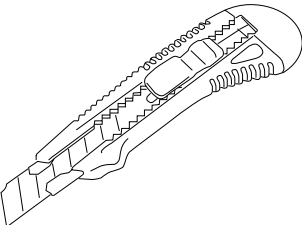	 Bits PH2 T20 T25 T30 T45  12-kant 10 mm		
10,13 mm 	10,13, 16, 17 mm 	  6 mm	
			


15014540_B Kit Complete T6 D-cab Se

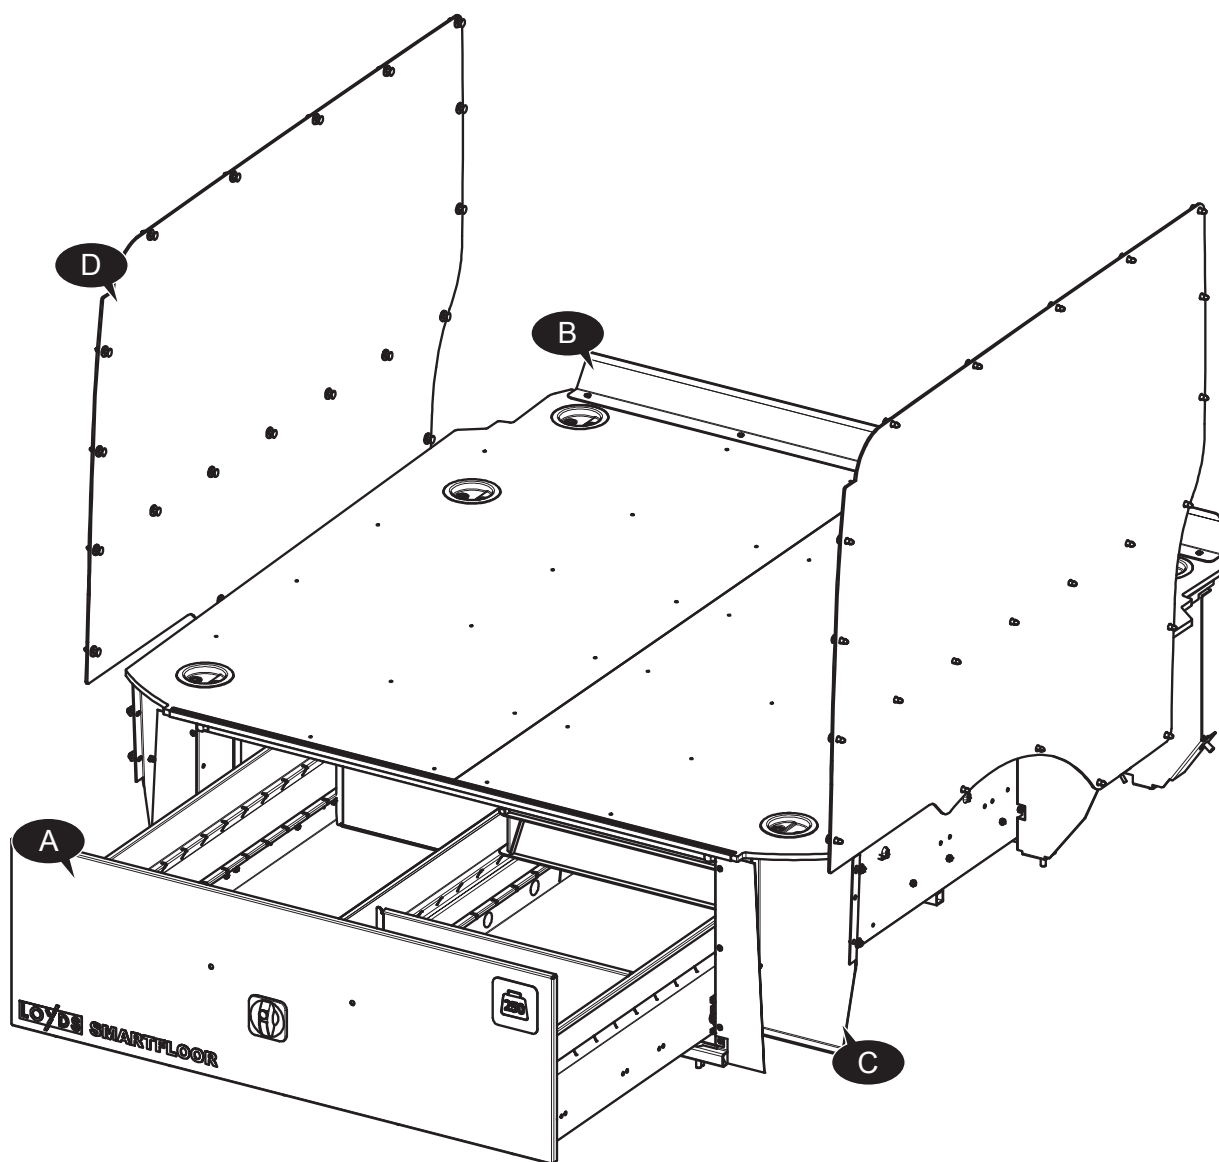

15014540_B Kit Complete T6 D-cab Se

Item	Quantity	Part Number	Description
A	1	15009300	RD Rear Drawer Complete Assy
B	1	15014538	Floor KitT6 D-cab Se
C	1	15014541	Steelbracket Set T6 D-cab Se
D	1	15014648	Panel Set Rear Smartfloor T6 Long Se


15014509 Kit Complete T6 D-cab Se w Heater

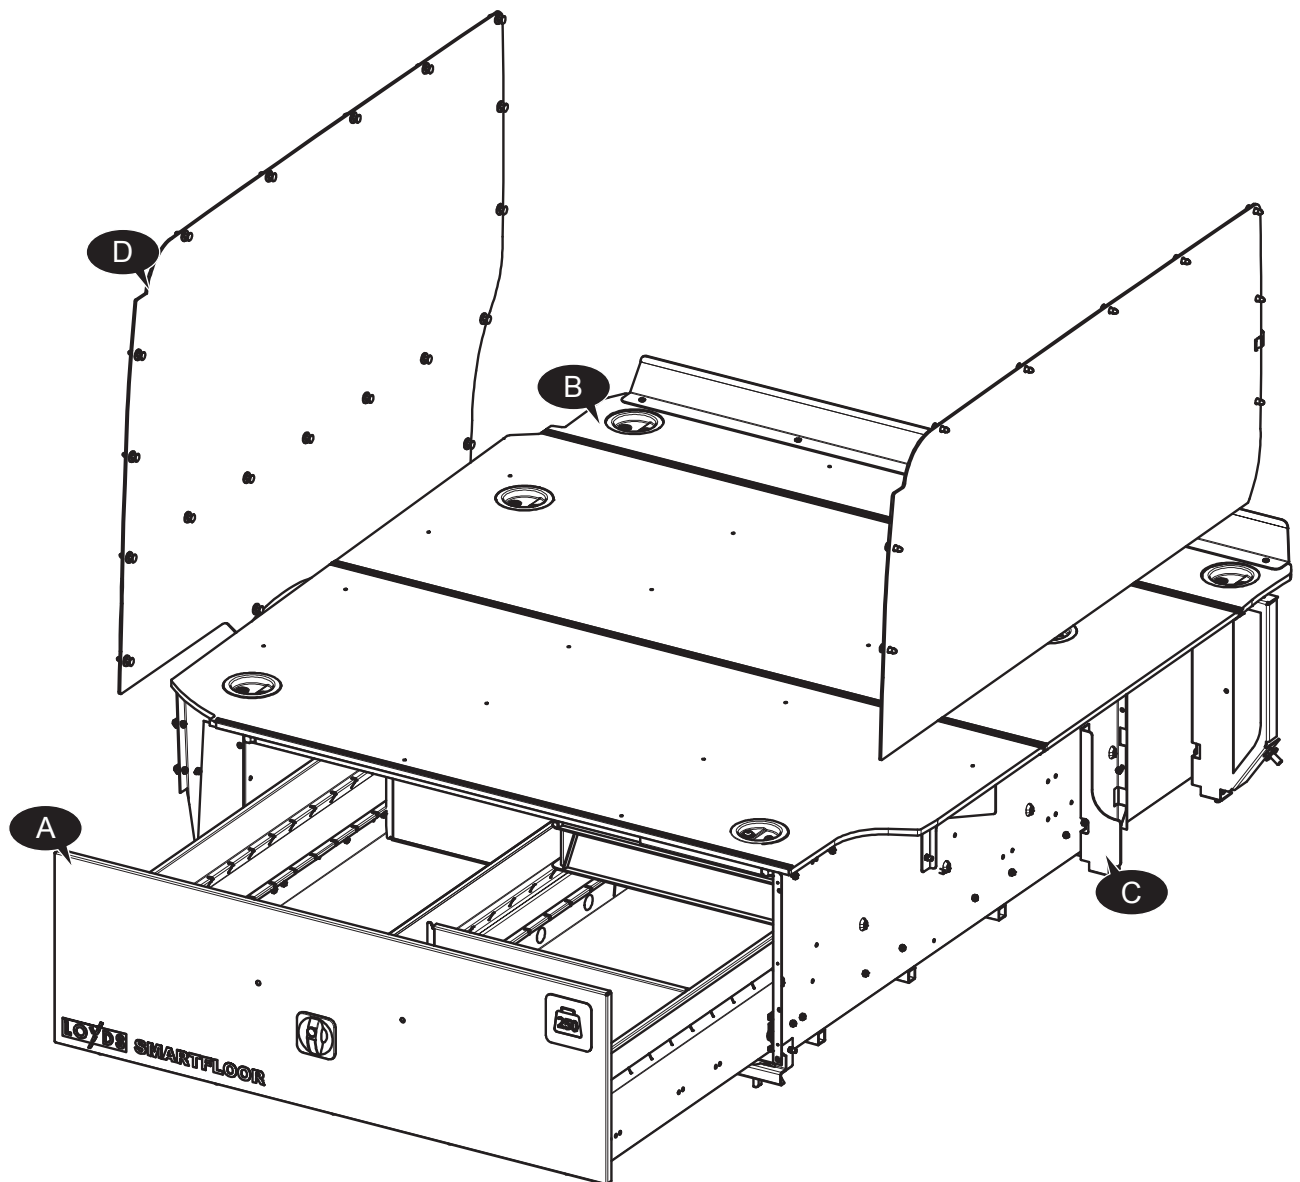

15014509 Kit Complete T6 D-cab Se w Heater

Item	Quantity	Part Number	Description
A	1	15009300	RD Rear Drawer Complete Assy
B	1	15014534	Floor Kit T6 D-cab w Heater Se
C	1	15014504	Steelbracket Set T6 D-cab w heater Se
D	1	15015171	Panel Set Rear w Heater Smartfloor T6 Long Se


15014538_A Floor Kit T6 D-cab Se

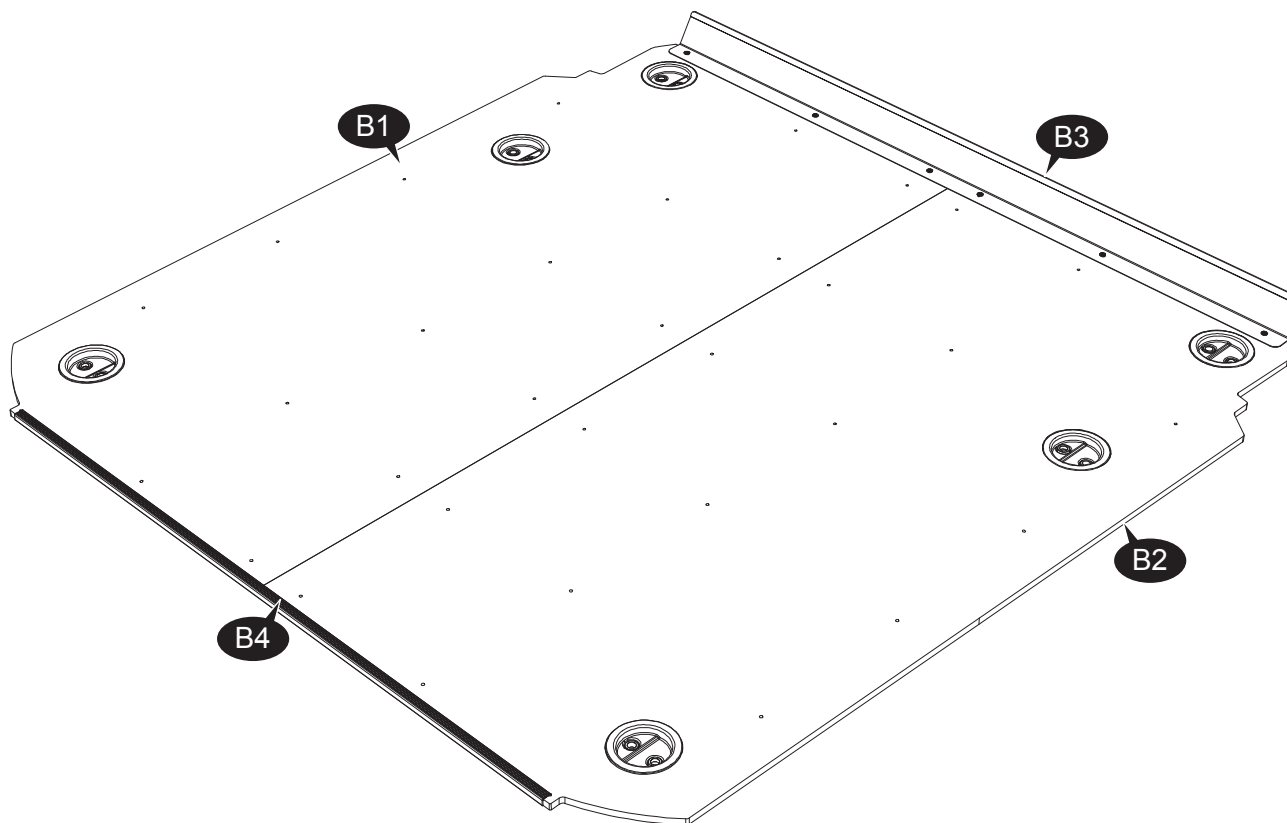

15014538_A Floor Kit T6 D-cab Se

Item	Quantity	Part Number	Description
B1	1	15014536	Floor Left Side T6 D-cab Se
B2	1	15014537	Floor Right Side T6 D-cab Se
B3	1	15014503	Front Air Circulation Angle T6 D-cab
B4	1	15009326	U-profile 12mm L=1278


15014534_B Floor Kit T6 D-cab w Heater Se

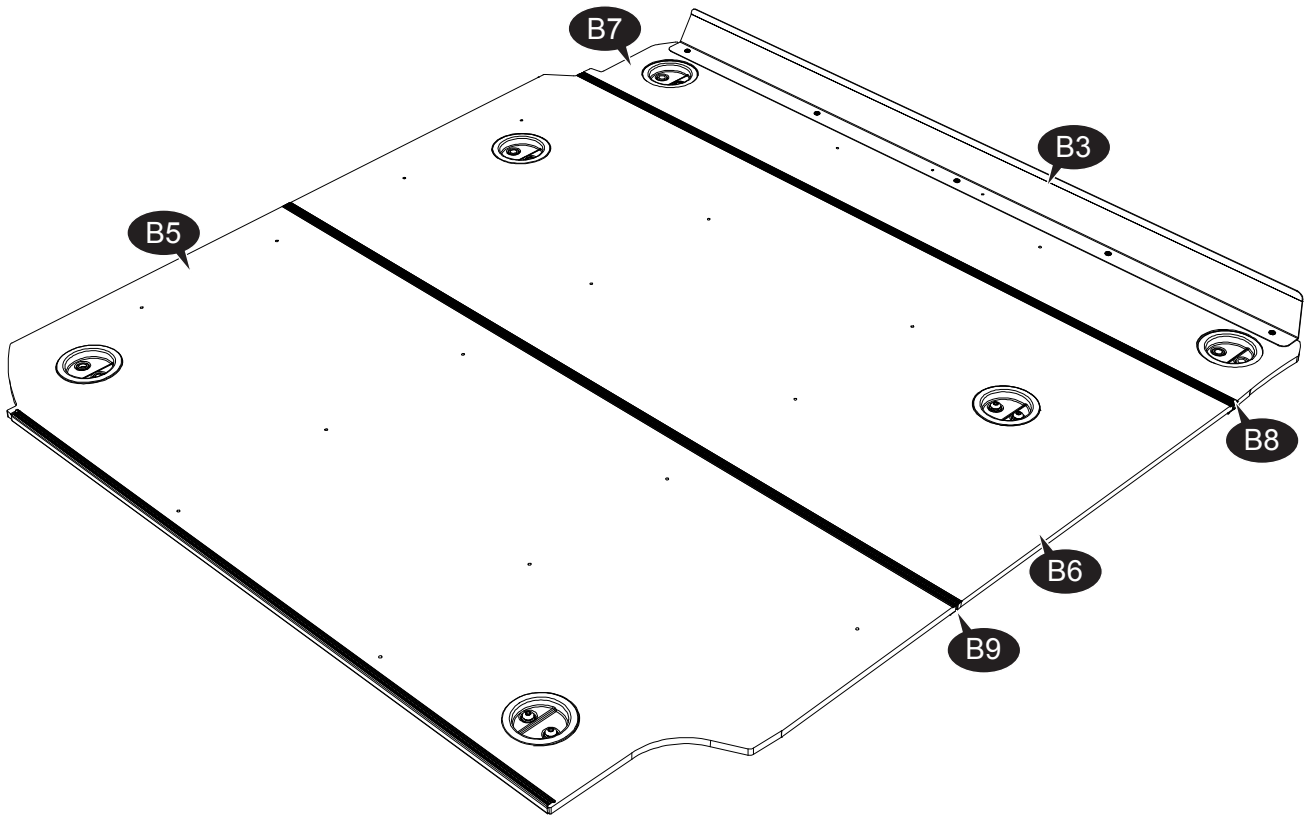

15014534_B Floor Kit T6 D-cab w Heater Se

Item	Quantity	Part Number	Description
B3	1	15014503	Front Air Circulation Angle T6 D-cab
B5	1	15016142	Wooden Floor Rear T6 Long w heater ASSY
B6	1	15010233	Wooden Floor Middle T5 Long w heater
B7	1	15014149	Front Floor T6 D-cab Se w Heater
B8	1	15010237	H-profile 12mm L=1553
B9	1	15010244	H-profile 12mm L=1587
	1	15014535	Fitting Kit Floor T6 D-cab w heater Se


15014541 Steelbracket Set T6 D-cab Se

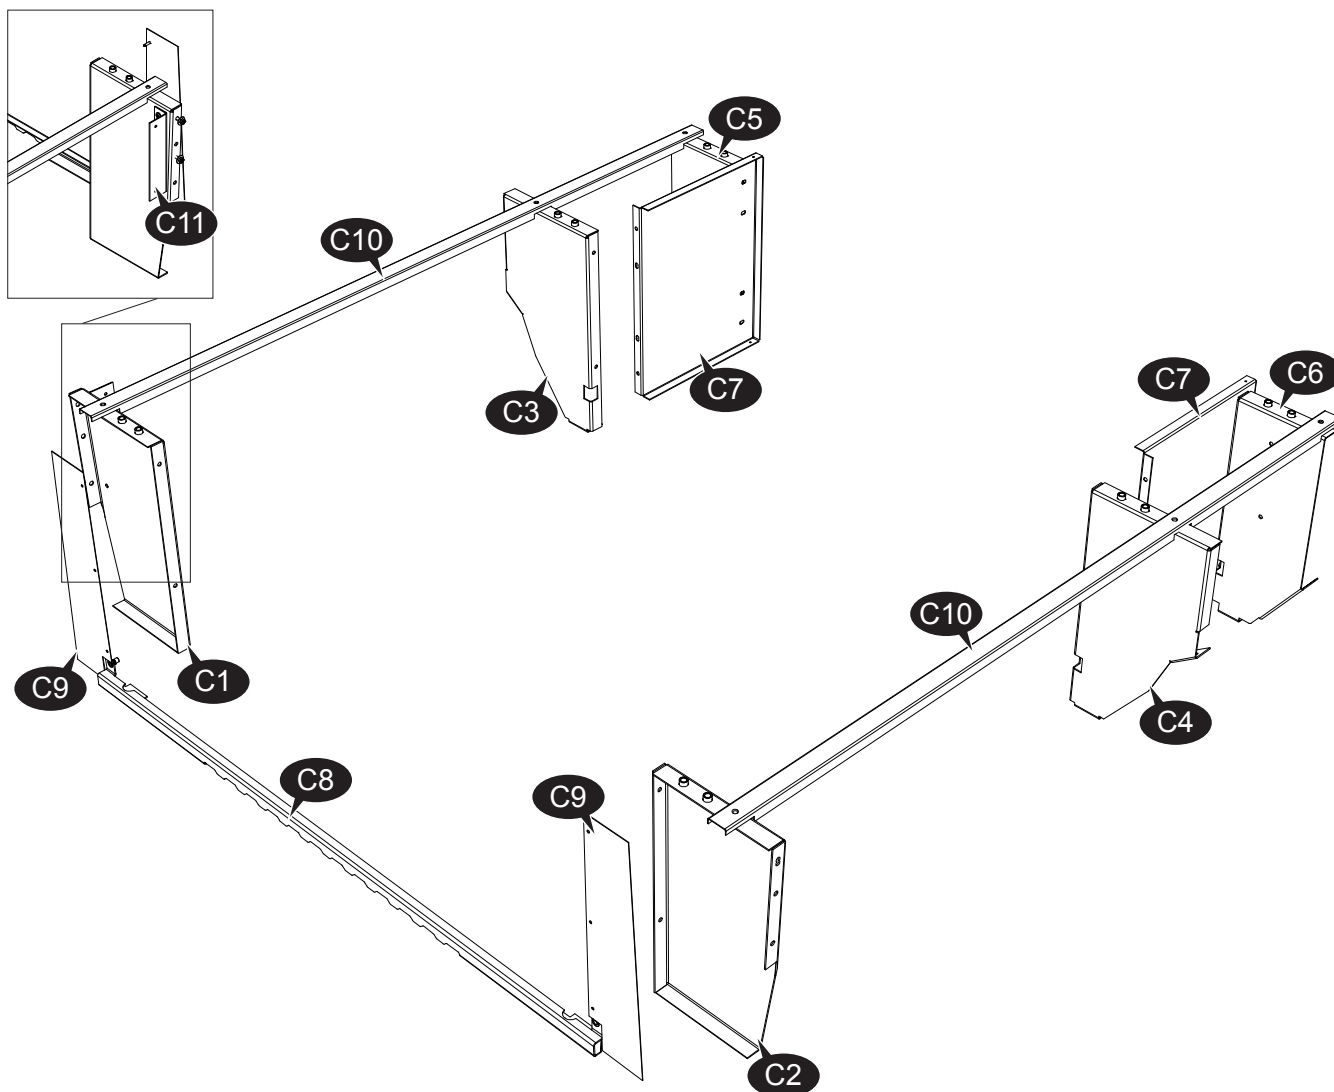

15014541 Steelbracket Set T6 D-cab Se


Item	Quantity	Part Number	Description
C1	1	15009323	Bracket Side Rear Left T5 ASSY
C2	1	15009324	Bracket Side Rear Right T5 ASSY
C3	1	15009321	Bracket Side Middle Left T5 ASSY
C4	1	15009322	Bracket Side Middle Right T5 ASSY
C5	1	15014508	Bracket Side Front Left T6 D-cab Se ASSY
C6	1	15014544	Bracket Side Front Right T6 D-cab Se ASSY
C7	2	15010241	Fix Bracket RD FD Right T5 Long w heater
C8	1	15009445	Rear Cover Lower Profile Assy T5
C9	2	15009291	Rear Cover Side T5
C10	2	15009292	Stiffener Floor Longitude T5 Long
C11	1	15009915	Bracket EI-connector T5

15014504 Steelbracket Set T6 D-cab w Heater Se

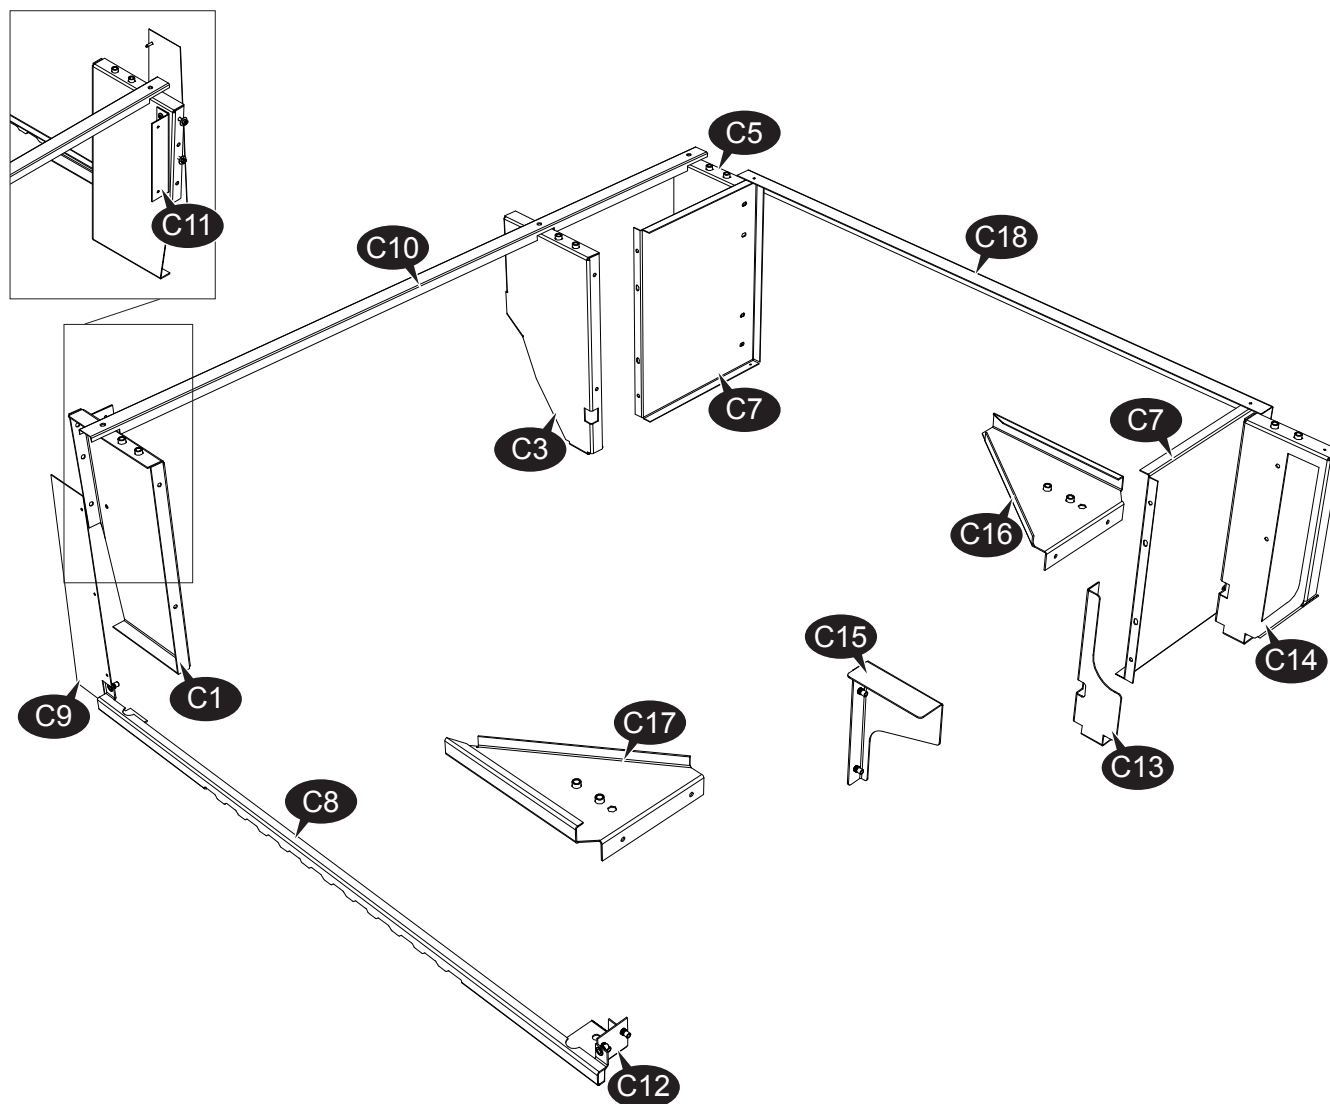

15014504 Steelbracket Set T6 D-cab w heater Se			
Item	Quantity	Part Number	Description
C1	1	15009323	Bracket Side Rear Left T5 ASSY
C3	1	15009321	Bracket Side Middle Left T5 ASSY
C5	1	15014508	Bracket Side Front Left T6 D-cab Se ASSY
C7	2	15010241	Fix Bracket RD FD Right T5 Long w heater
C8	1	15009445	Rear Cover Lower Profile Assy T5
C9	1	15009291	Rear Cover Side T5
C10	1	15009292	Stiffener Floor Longitude T5 Long
C11	1	15009915	Bracket EI-connector T5
C12	1	15010228	Bracket Lower Rear Right T5 w heater Assy
C13	1	15014506	Bracket Side Middle T6 D-cab w Heater
C14	1	15010239	Bracket Side Front Right w heater ASSY
C15	1	15010225	Bracket Stiffener Middle Right T5 w heater ASSY
C16	1	15010243	Bracket Latchcup Middle Right T5 w heater ASSY
C17	1	15010229	Bracket Latchcup Rear Right T5 w heater ASSY
C18	1	15014505	Front Bracket Angle T6 D-cab Se


15010236 Handle Assy

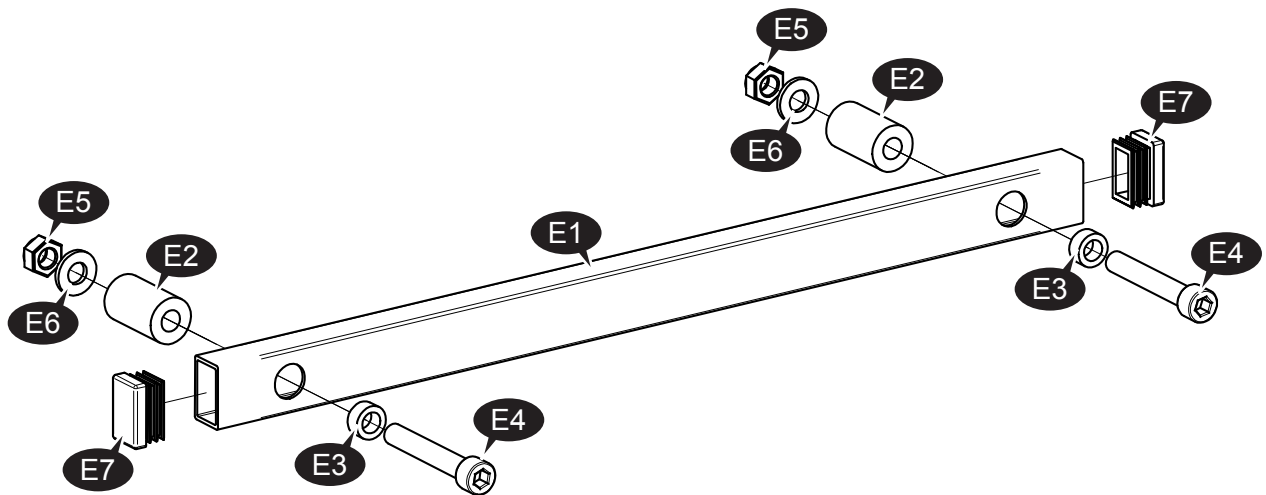

15010236 Handle Assy

Item	Quantity	Part Number	Description
E1	1	15009441	Handle Tube 25x15x286
E2	2	15009442	Spacer Ø8,3x18x30 Nylon Black
E3	2	15009443	Spacer Ø8,1x13x6mm Galv
E4	2	15009444	Screw M8x50 Cylinderh Hex
E5	2	8 NMU	Mutter M8 Nyloc DIN985
E6	2	8,4x17x2	M8 Washer, DIN 125
E7	2	15009438	End Plug Tube 25x15 Inside


15015171 Panel Set Rear w Heater Smartfloor T6 Long Se

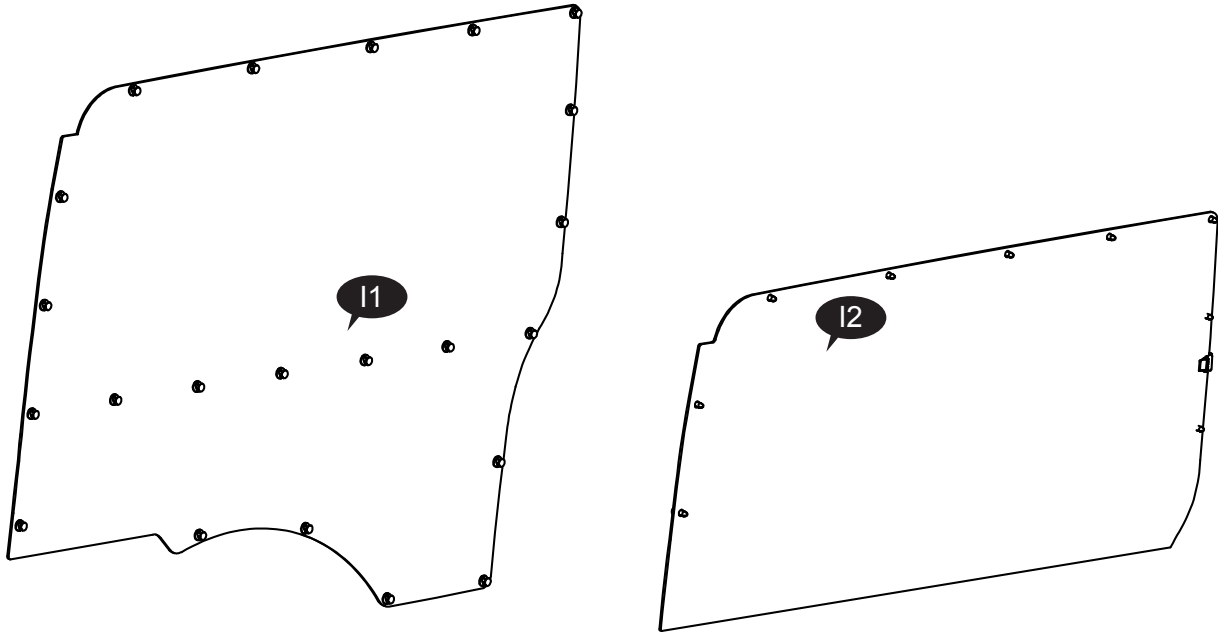

15015171 Panel Set Rear w Heater Smartfloor T6 Long Se

















Item	Quantity	Part Number	Description
I1	1	15015165	Panel SF Rear Left T5 Long PP Se
I2	1	15014829	Panel Side Right Long w Heater Se
	1	15015173	Fitting Kit Panel Set Rear w Heater T6 No Se

15014648 Panel Set Rear Smartfloor T6 Long Se

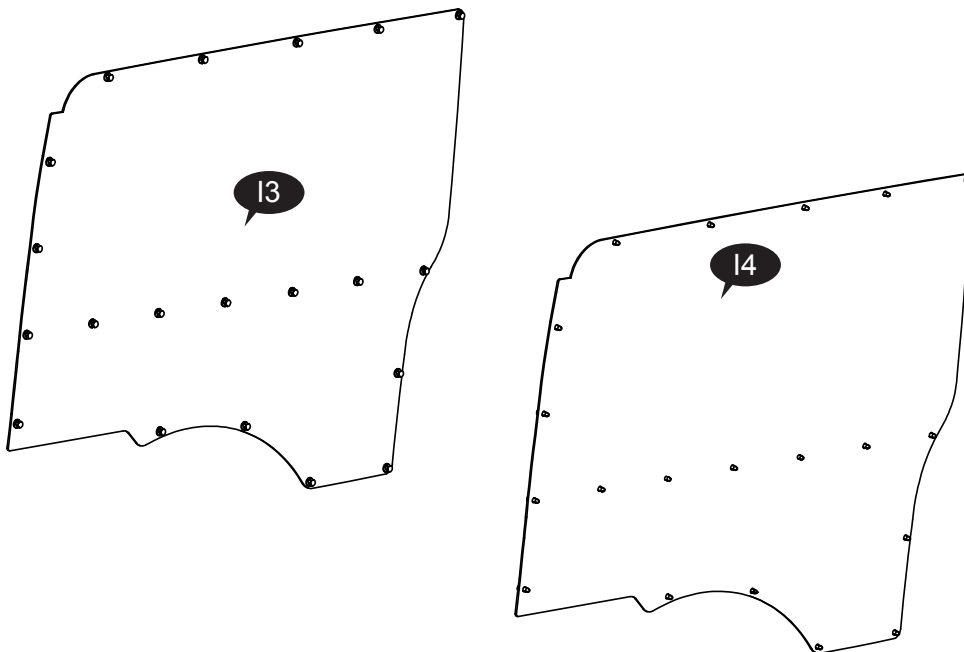


15014648 Panel Set Rear Smartfloor T6 Long Se


Item	Quantity	Part Number	Description
I3	1	15015166	Panel SF Rear Left T6 Long PP Se
I4	1	15015165	Panel SF Rear Right T6 Long PP Se
	1	15015164	Fitting Kit Sidepanels T6 Long

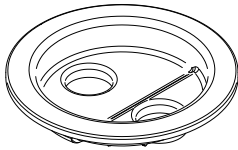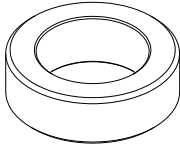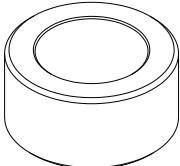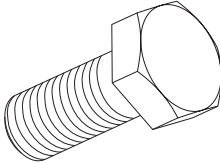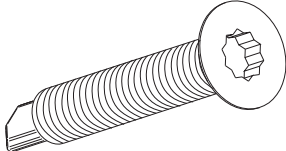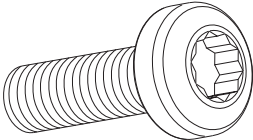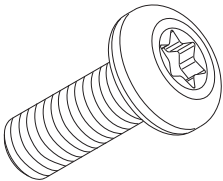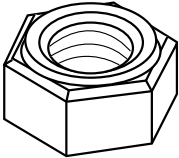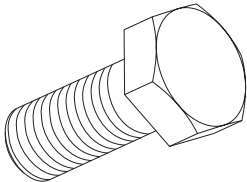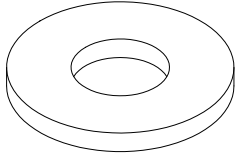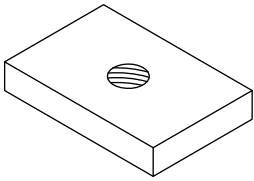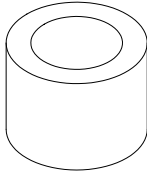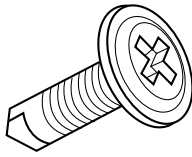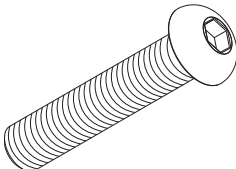Fitting kit		
F1  15006240 Plastic Cover Latchcup VW 2012	F2  13x20x6,4 Spacer U-709	F3  13x20x10 Spacer U-710
F4  7-16x25 7/16X1' UNF Bolt, S-82	F5  15009568 Screw 4,8x32 Selfdrill Counters Torx Elz	F6  15009762 Screw M6x20 Panh Torx Elz
F7  15003551 M6x16 TX30 pan (DIN 7985)	F8  6,4x18x1,5 M6 Washer, DIN 9021	F9  6 NMU M6 Self locking nut, DIN 985-8
F10  10x25 6K Screw, M10x25 DIN933 6K, ElZn	F11  15009916 Washer 30x13x3 Elz	F12  4,3x13 platescrew needlepin flathead
F13  02-01794 6MM Thread M6 metalblock 5x20x30	F14  15001584 Spacer D20 d13 h15	F15  4,2x19 Black Selftapping Screw, 45761
F16  15001595 M10x50 UNB Black		F18  15008180 Panel Push-Plug D8 Grey RAL7035


15017989 Supplement One-eye Latch Kit SF T6

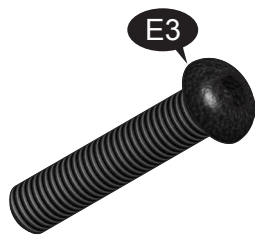

15001595
M10x50 Panh UNB Black

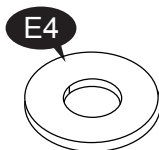


29,5x11x2,5
Stoppskive M10 DIN 9021

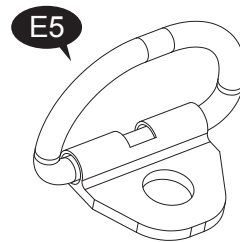


6794
Fixation Eye BHF

Item	Quantity	Part Number	Description
E3	1	15001595	M10x50 Panh UNB Black
E4	1	29,5x11x2,5	Stoppskive M10 DIN 9021
E5	1	6794	Fixation Eye BHF

15017958 Fitting Kit SF T6 for Vehicles w single latchscrews

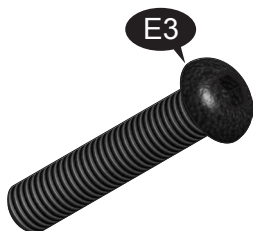

15001595
M10x50 Panh UNB Black

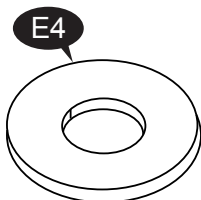


29,5x11x2,5
Stoppskive M10 DIN 9021




10x30 UNB sort
Maskinskrue Panhode

Item	Quantity	Part Number	Description
E3	6	15001595	M10x50 Panh UNB Black
E4	8	29,5x11x2,5	Stoppskive M10 DIN 9021
E6	2	10x30 UNB sort	Maskinskrue Panhode

1.

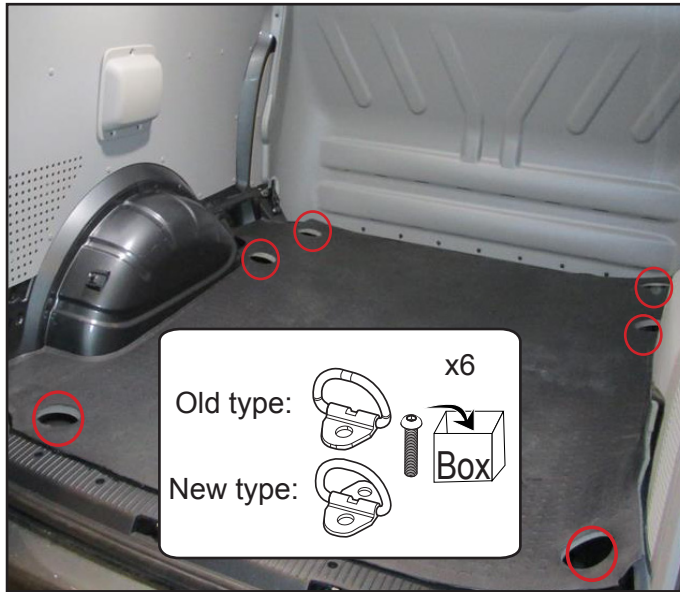

2.

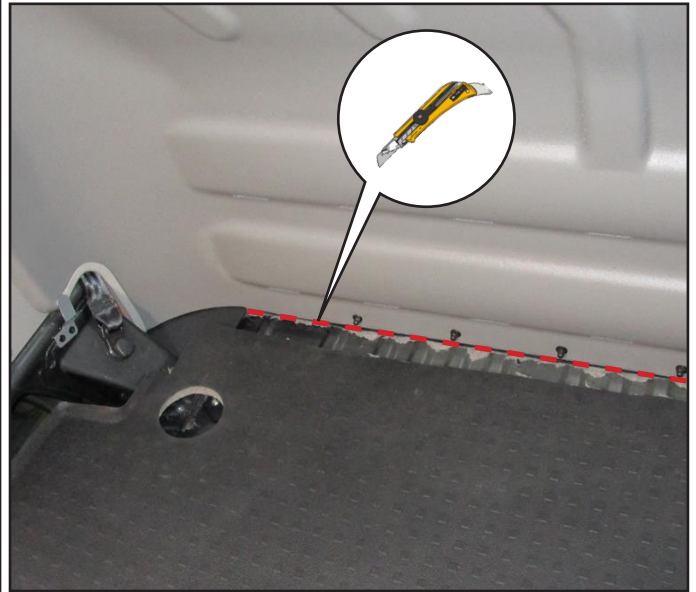


3.




4.

Only for installations w/o
Loyds PP Panels

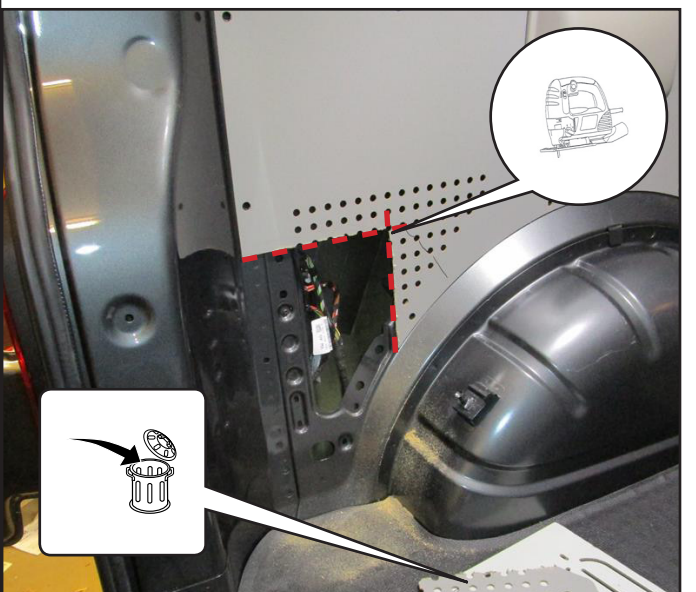


5.

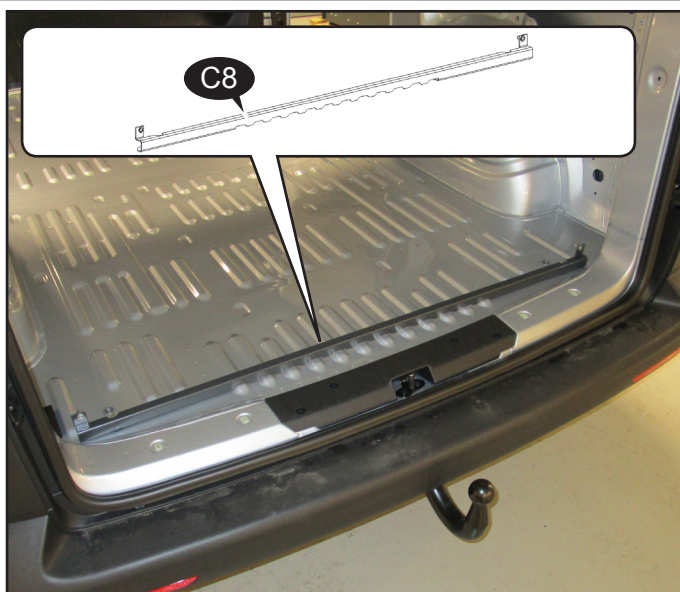


6.

LH RH

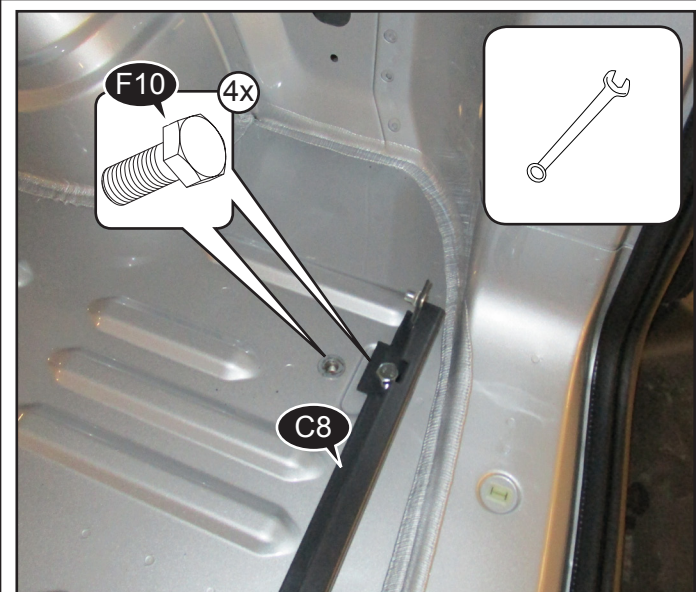


7.

RH 

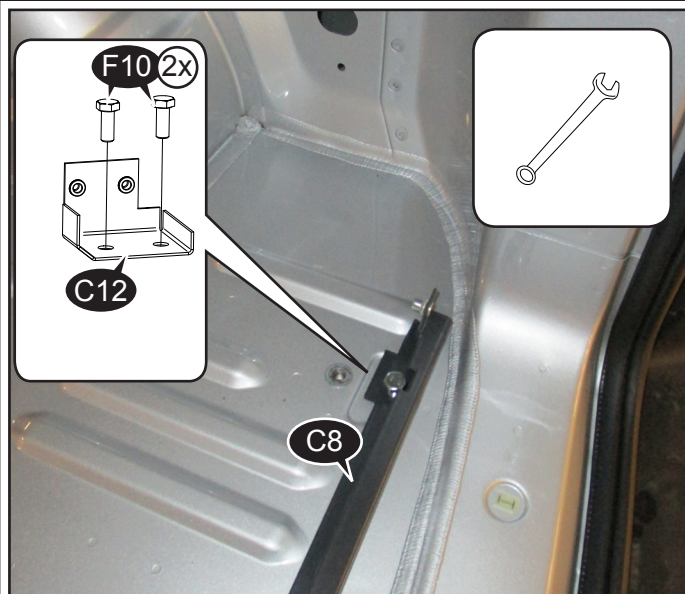


8.

LH 

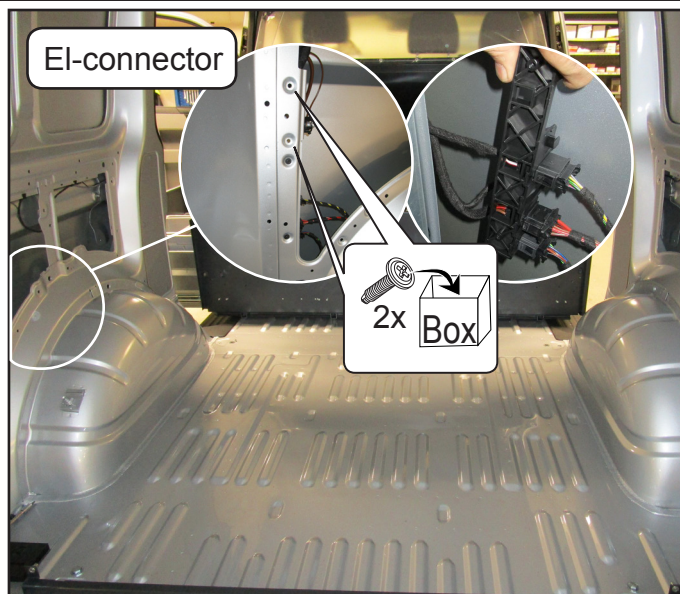

9.



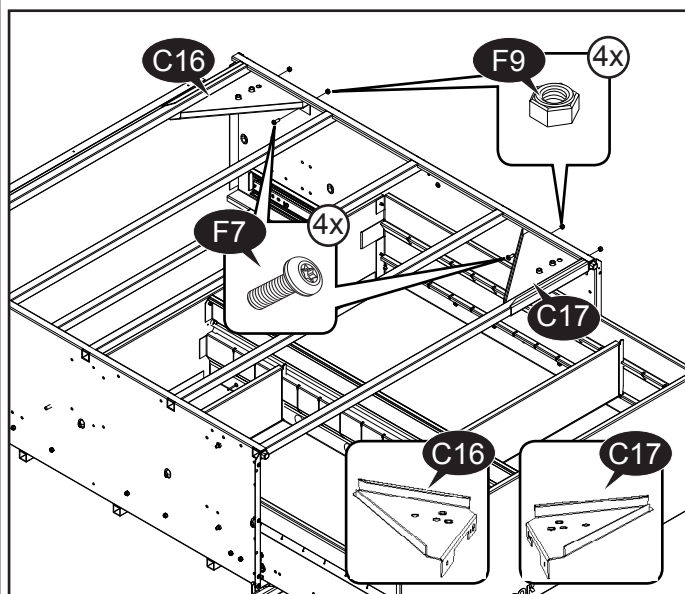


10.



11.




Picture 12.

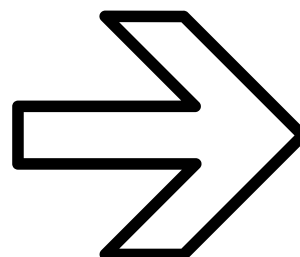


12.

LH

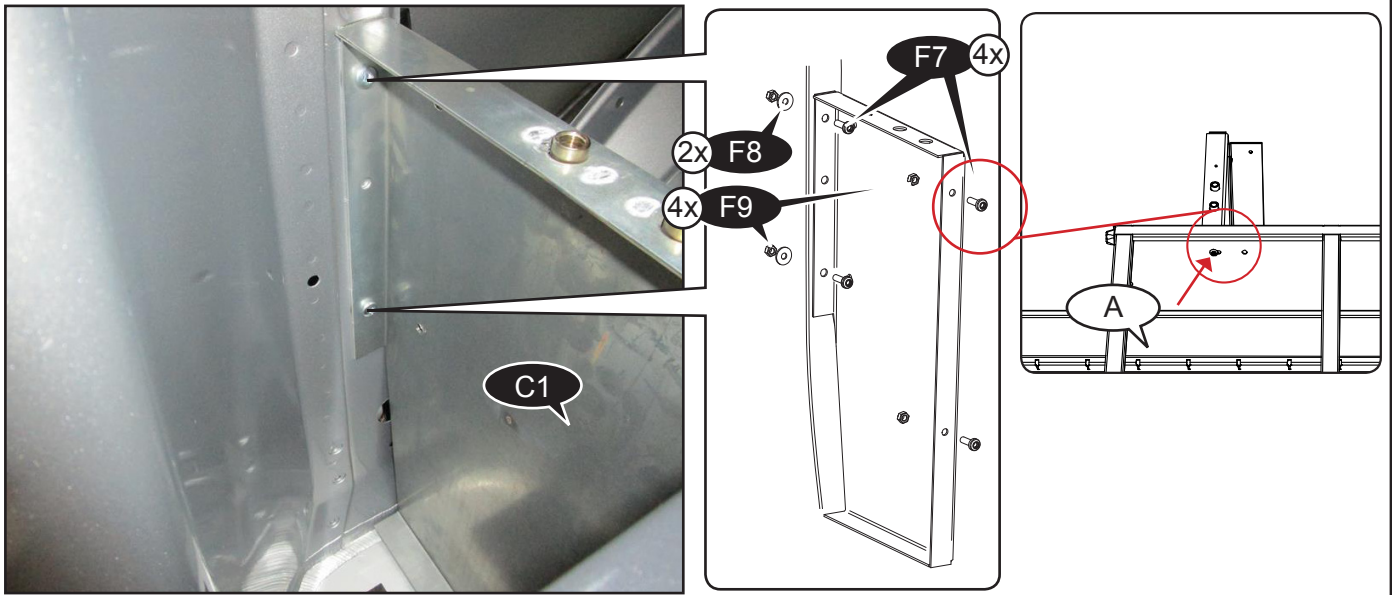


13.

LH

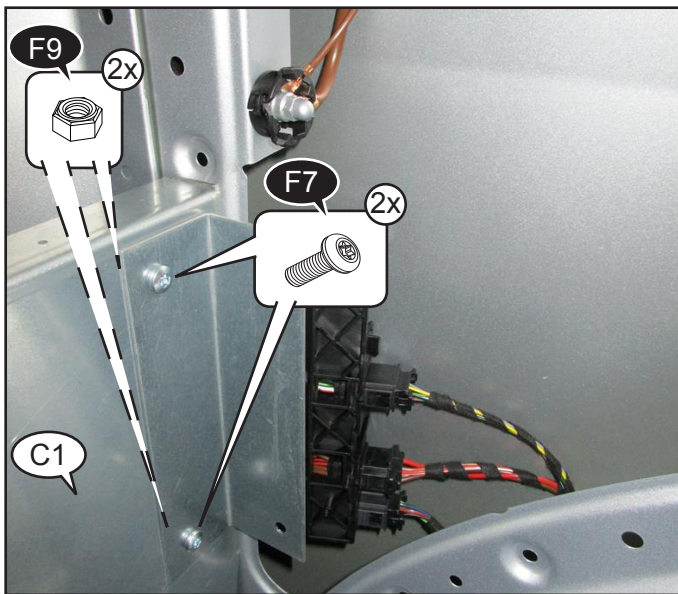


14.

LH

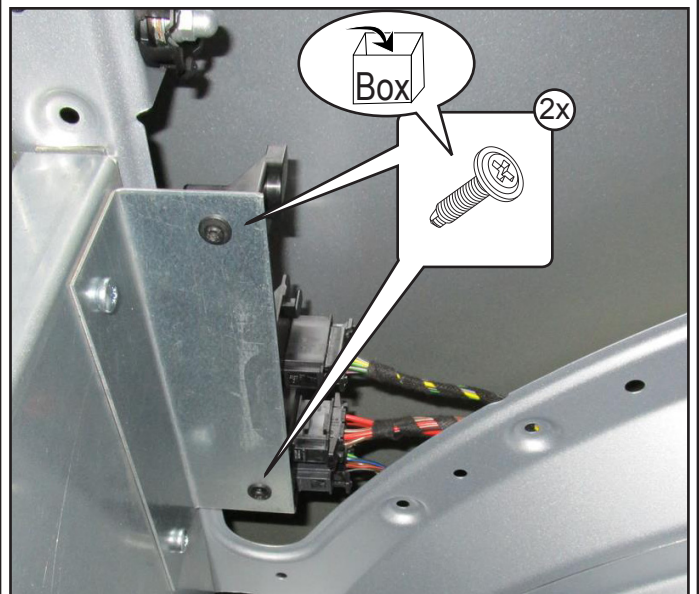


15.

RH 

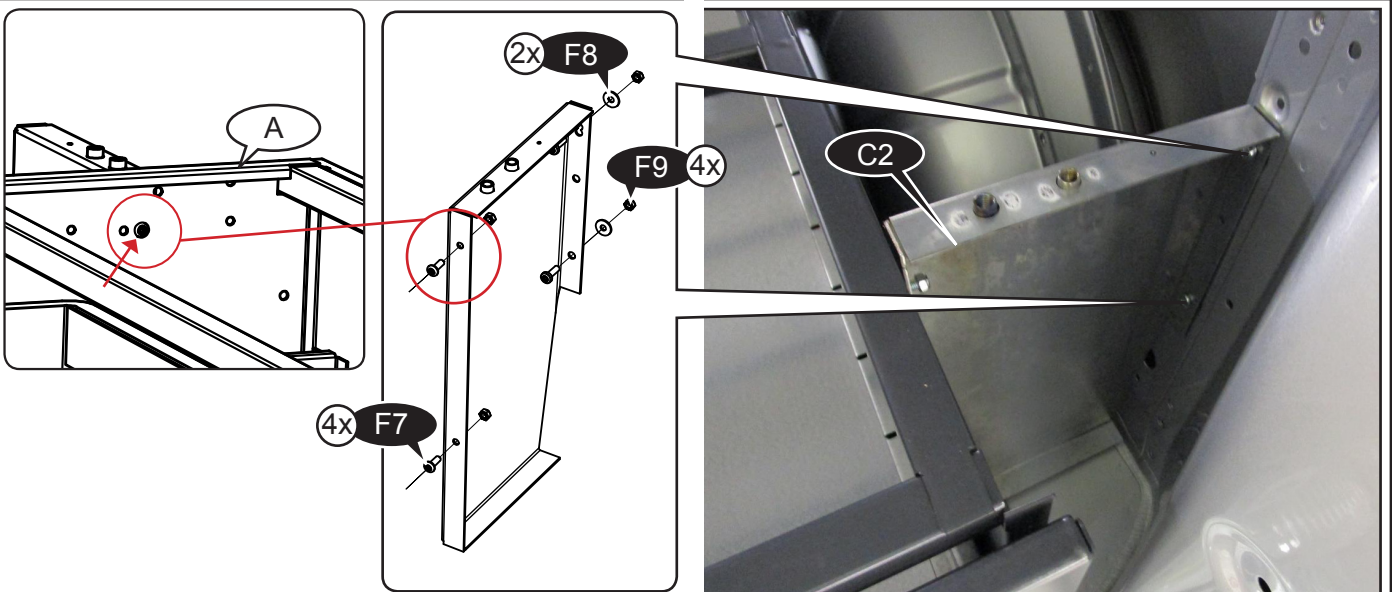


16.

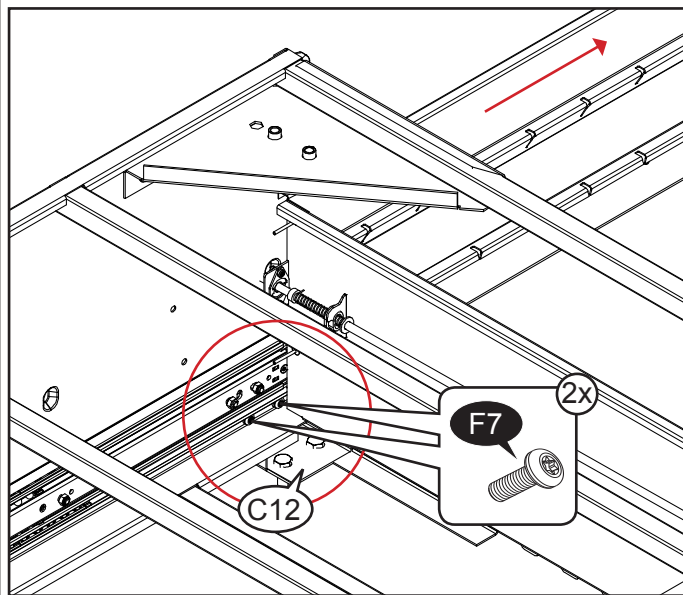
RH 

17.


L&R

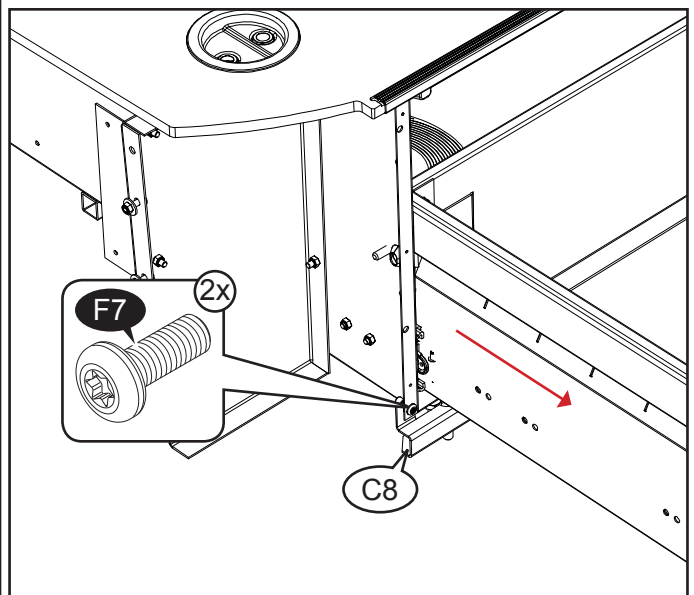


18.

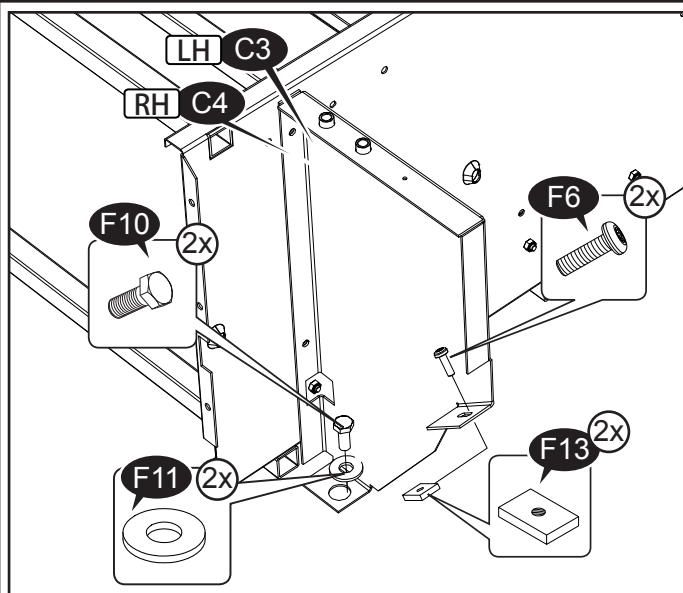LH RH 


19.

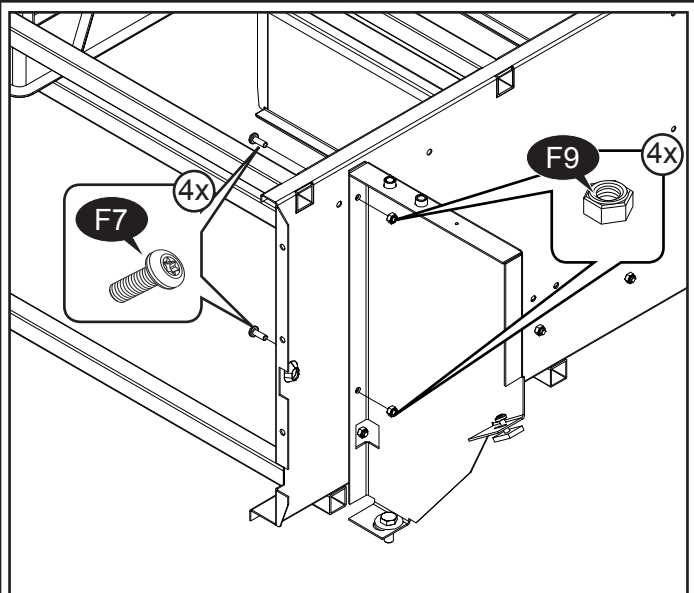LH RH 

20.

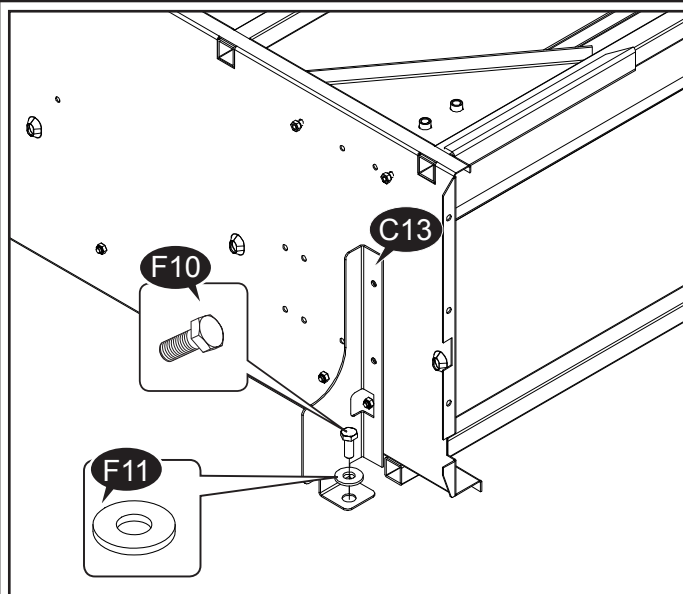RH 

21.

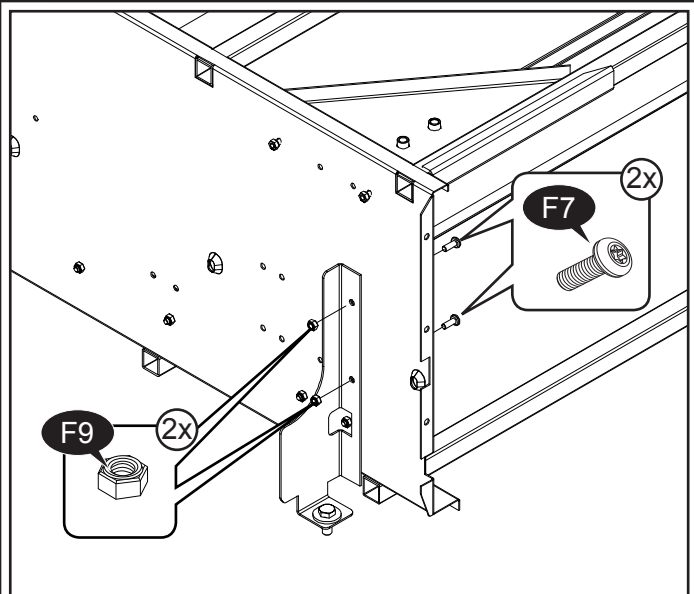RH 


22.

L&R




23.

L&R

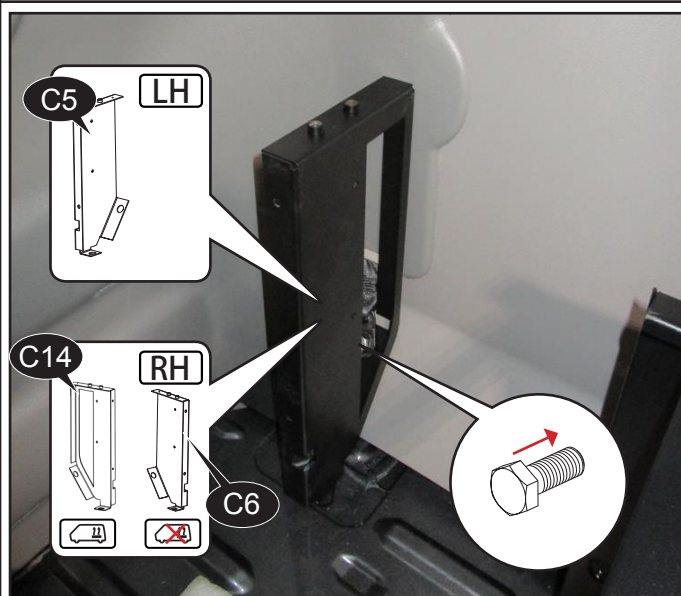


24.

L&R

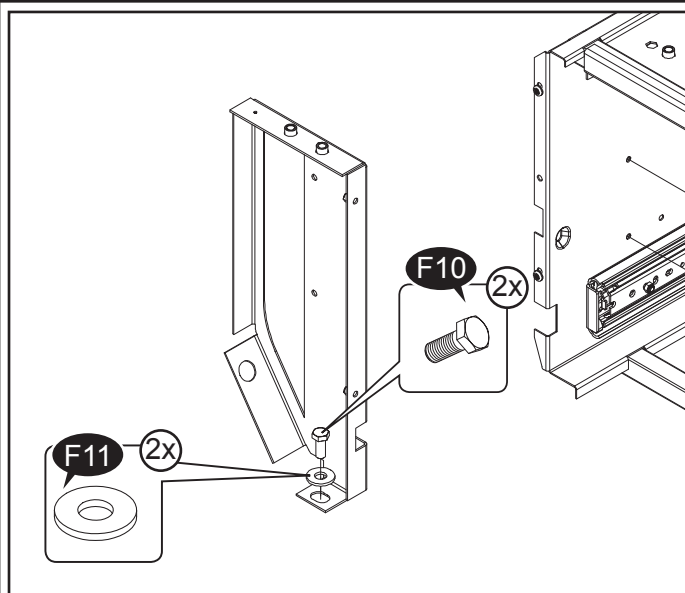


25.

L&R

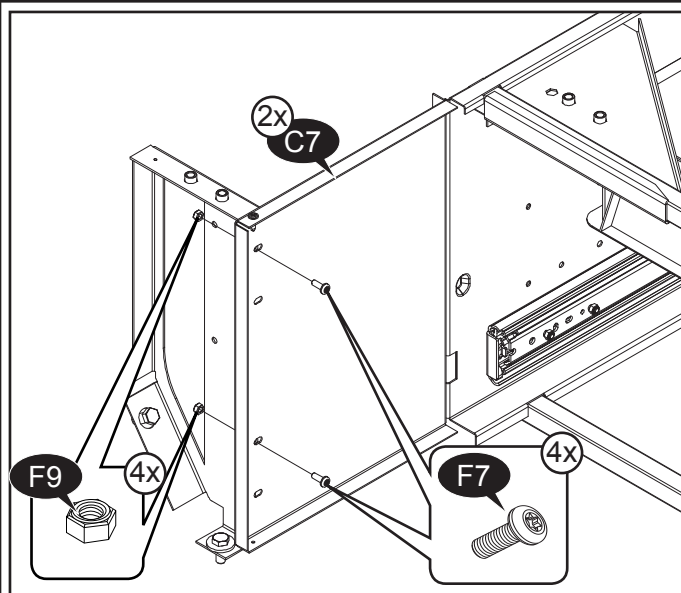


26.

L&R

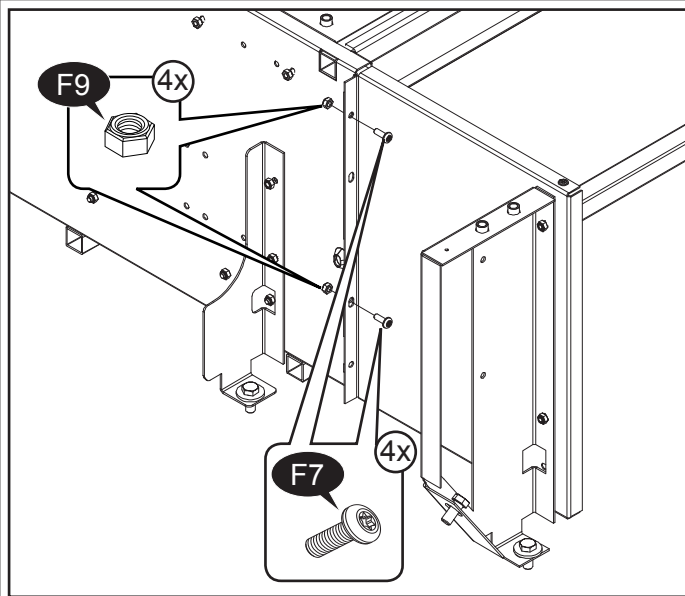


27.


LH RH

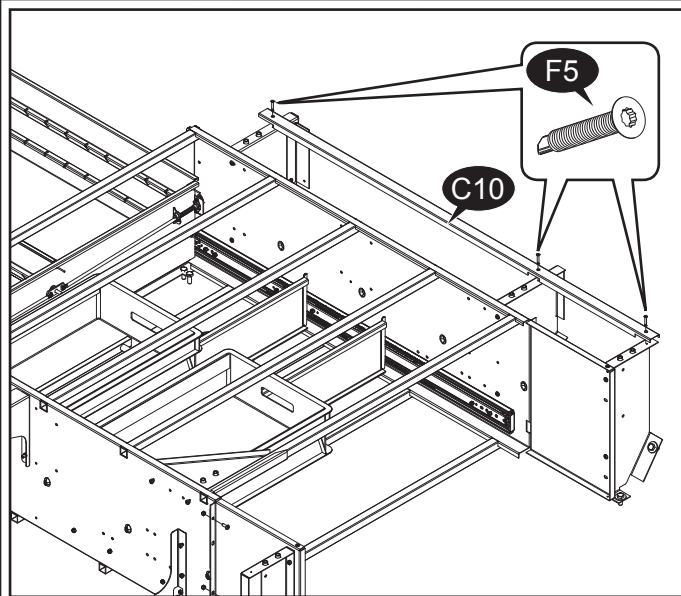


28.

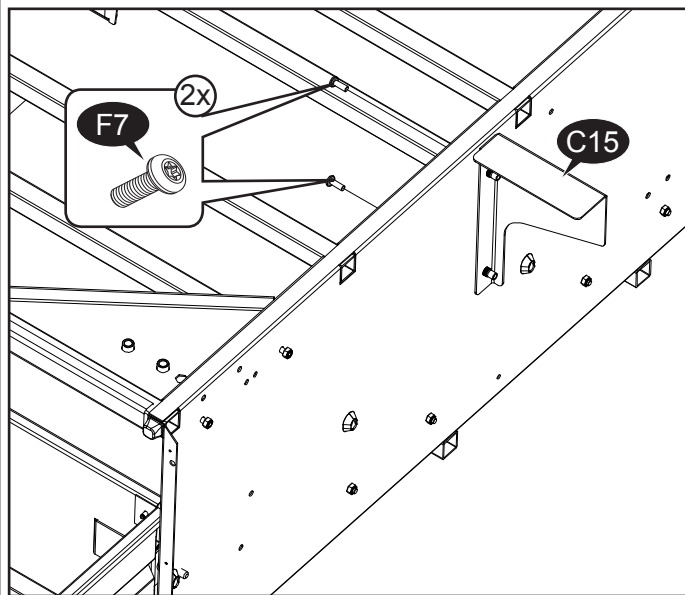


29.

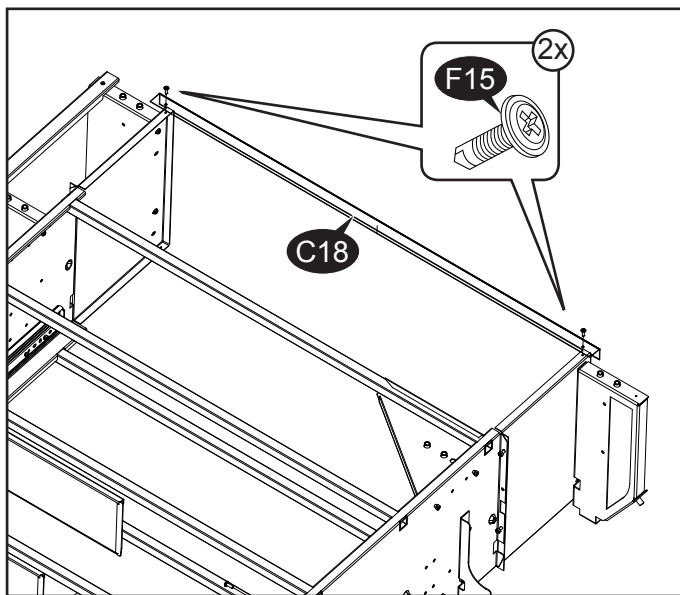


30.

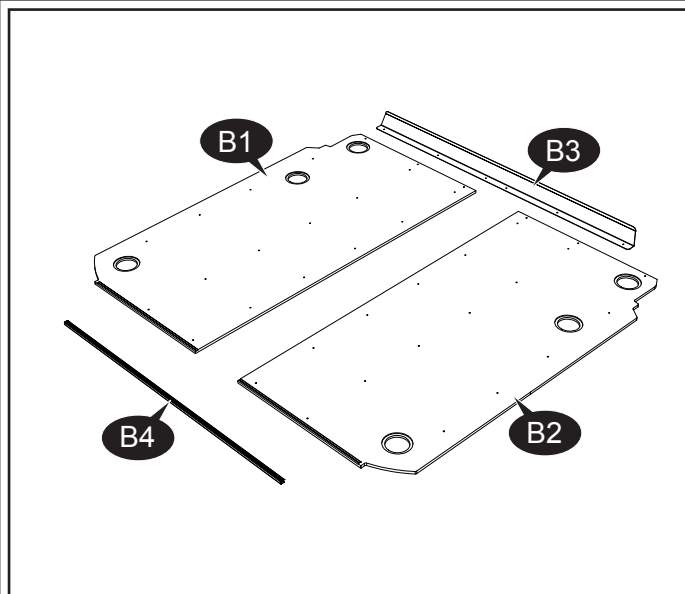


31.

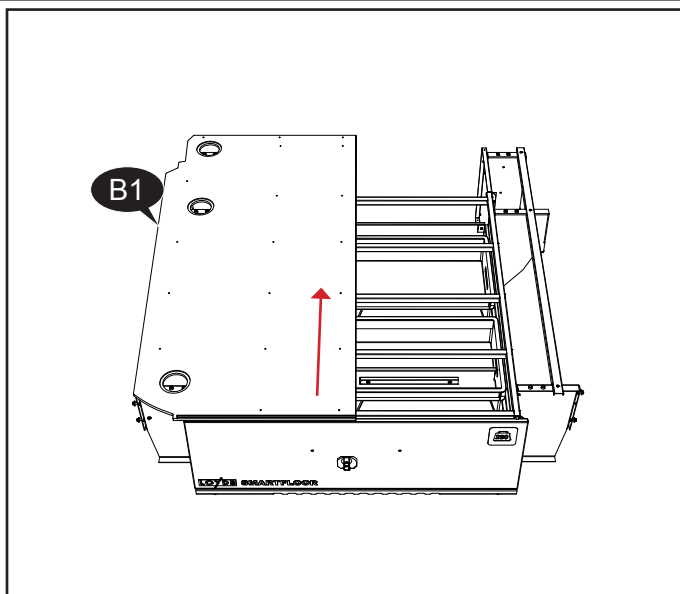


32.

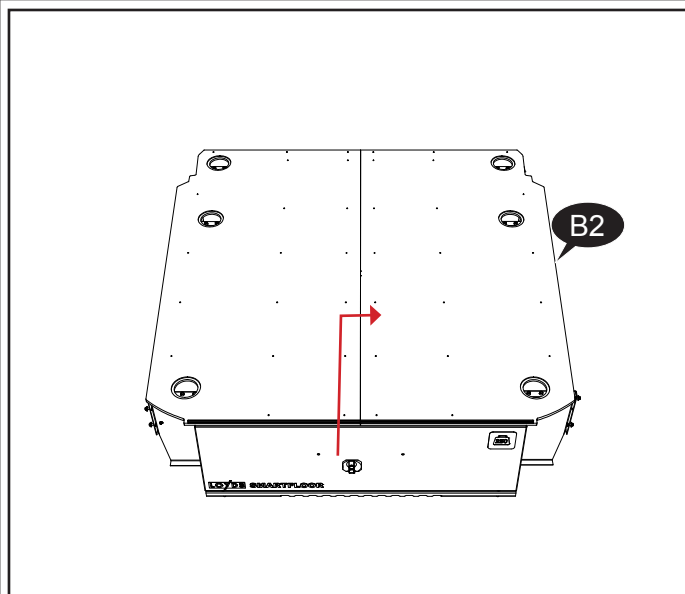


33.

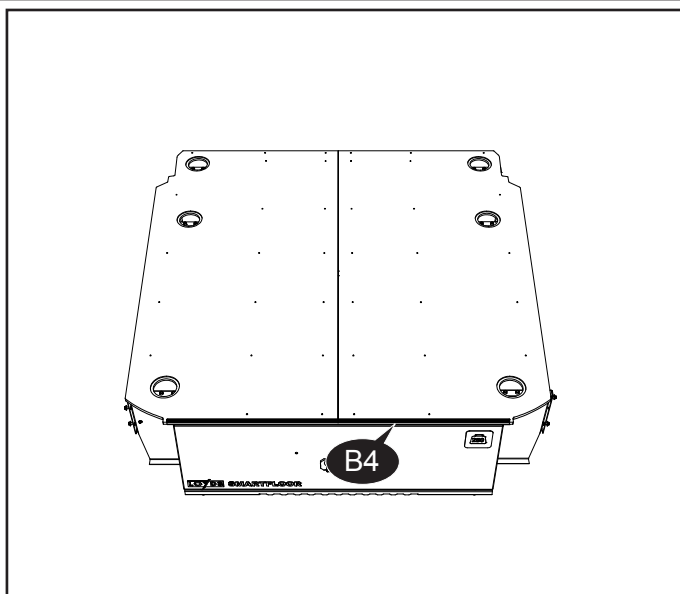


34.

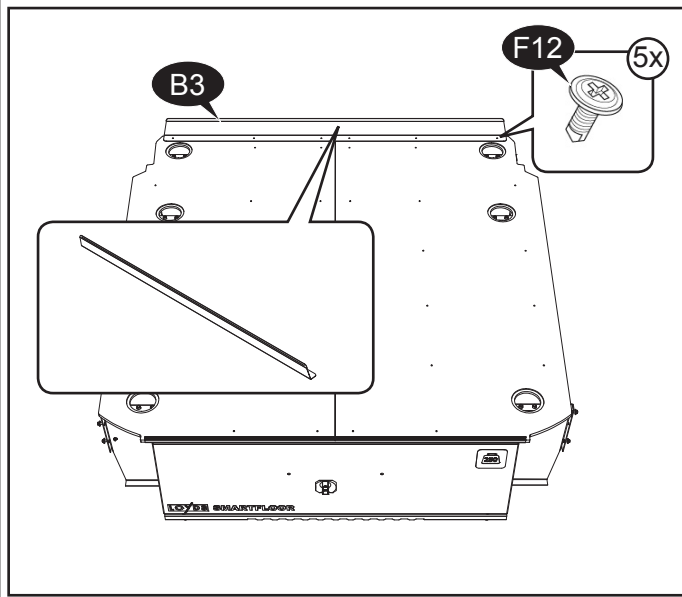


35.

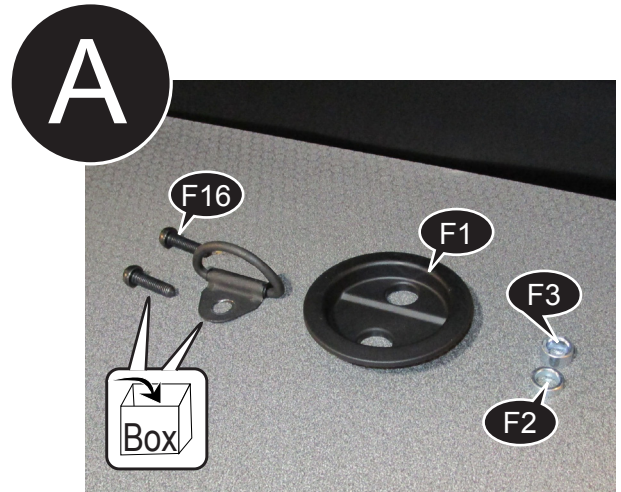


36.

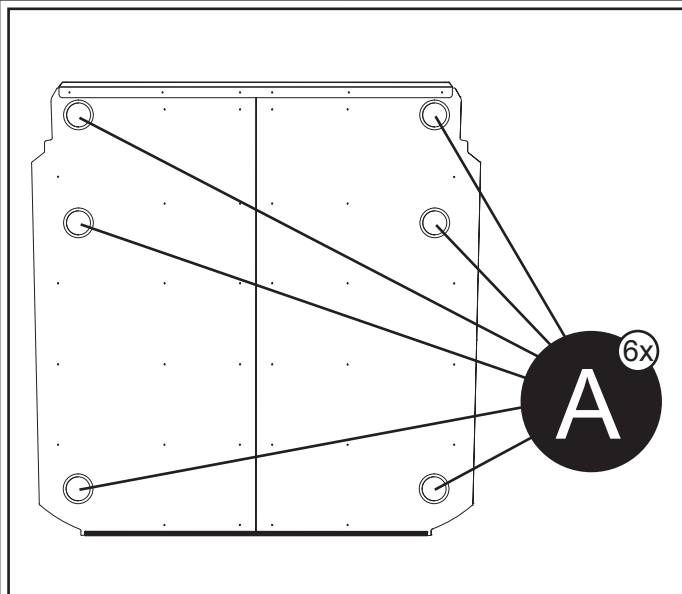


37.

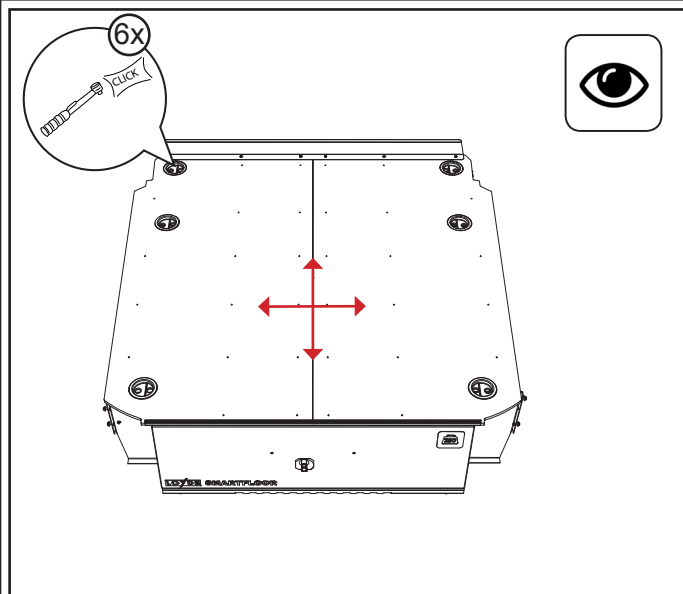


38.

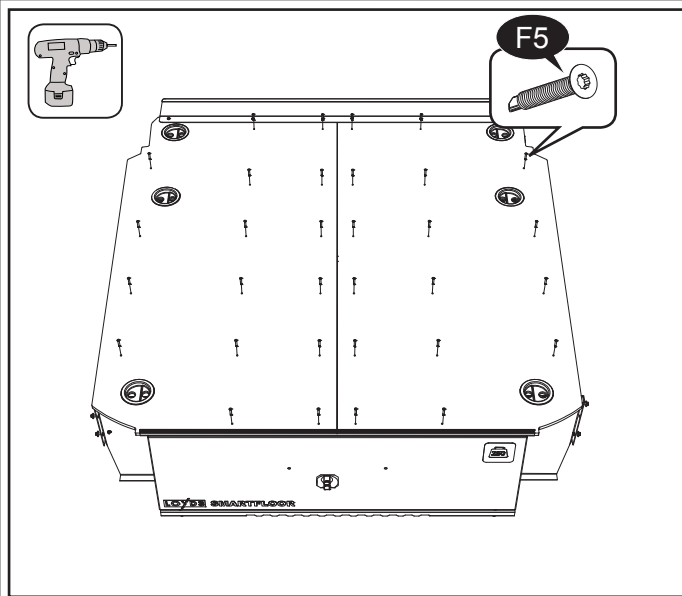


39.

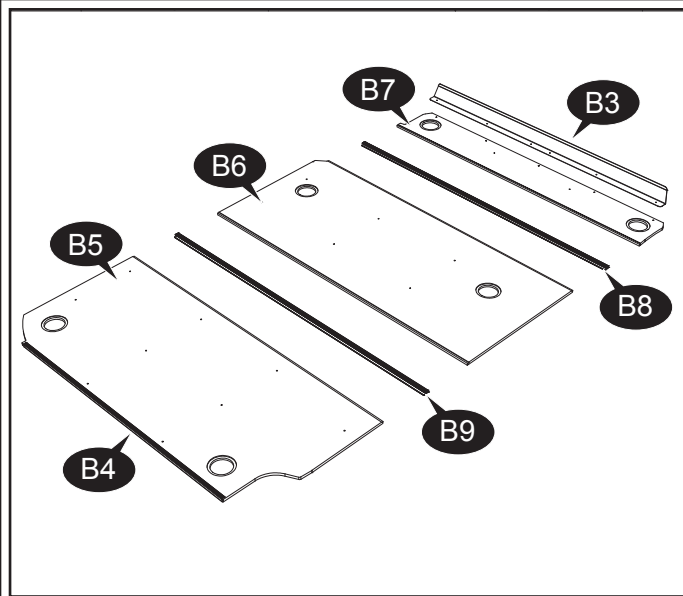


40.

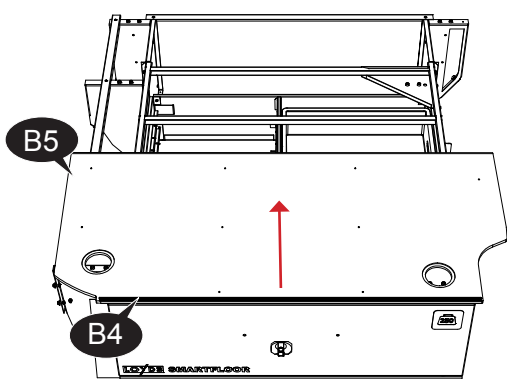


41.

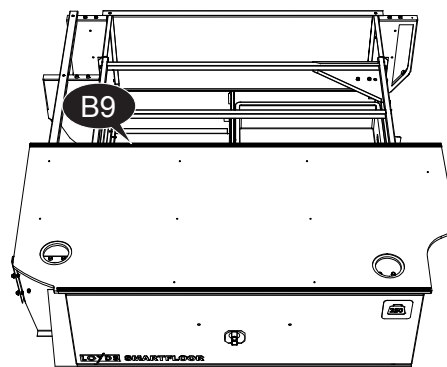


42.

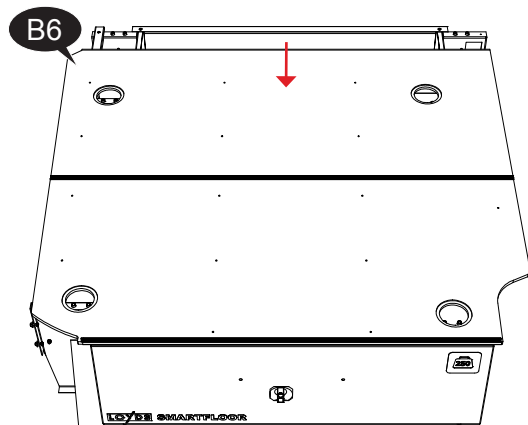


43.

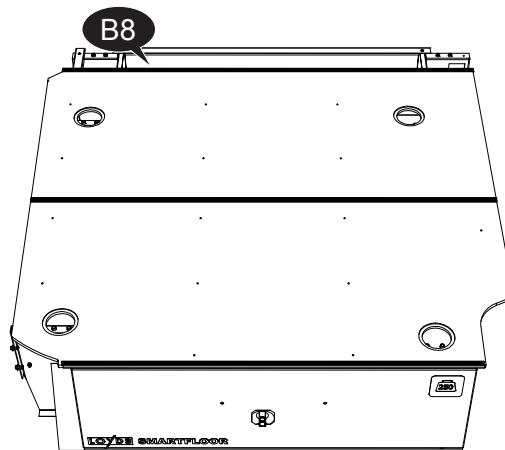


44.

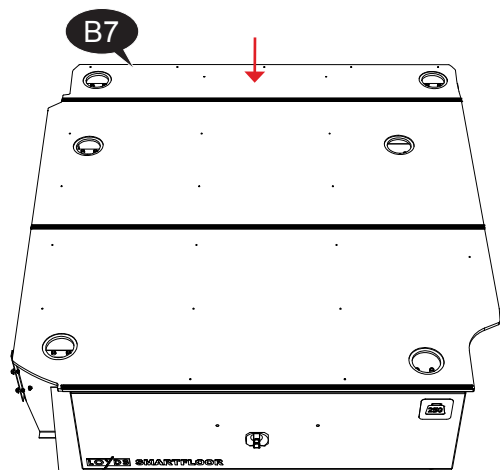


45.

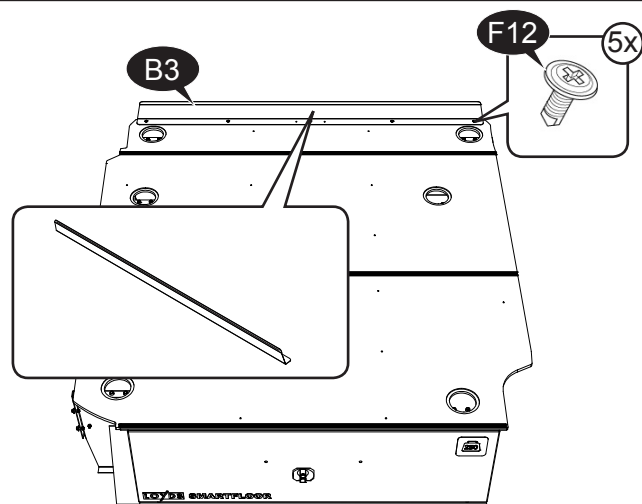


46.

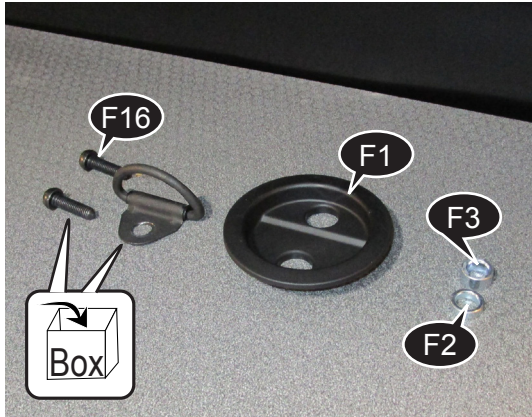


47.

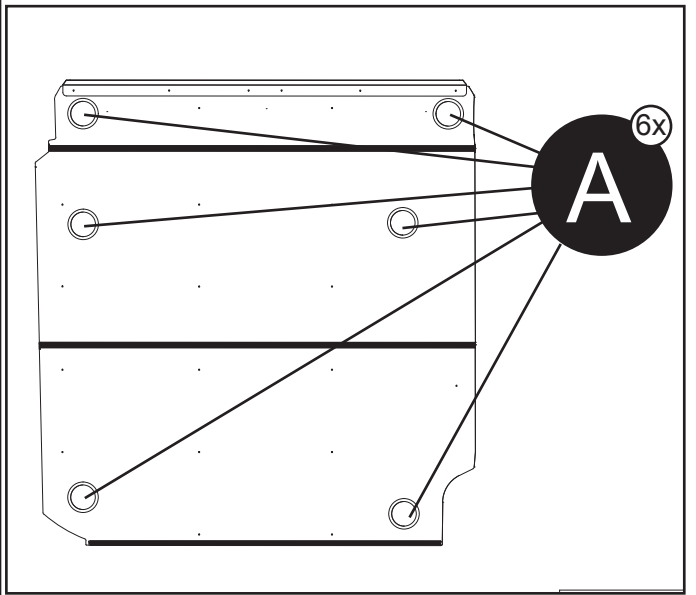

49.

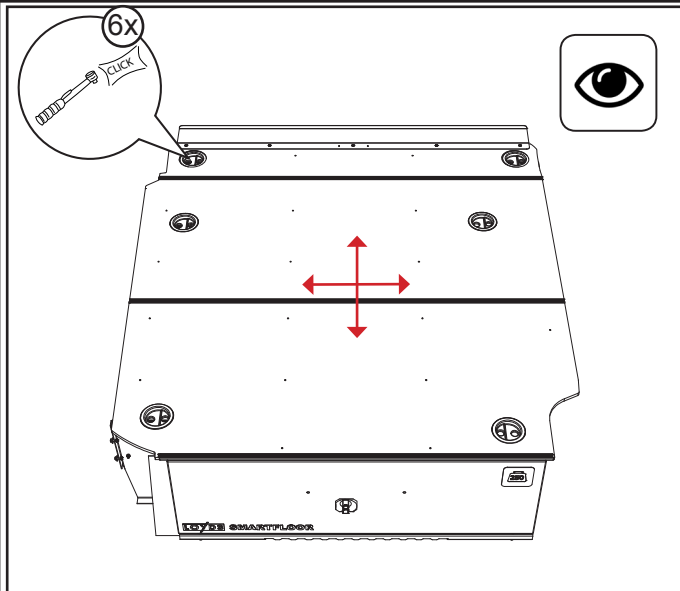


50.

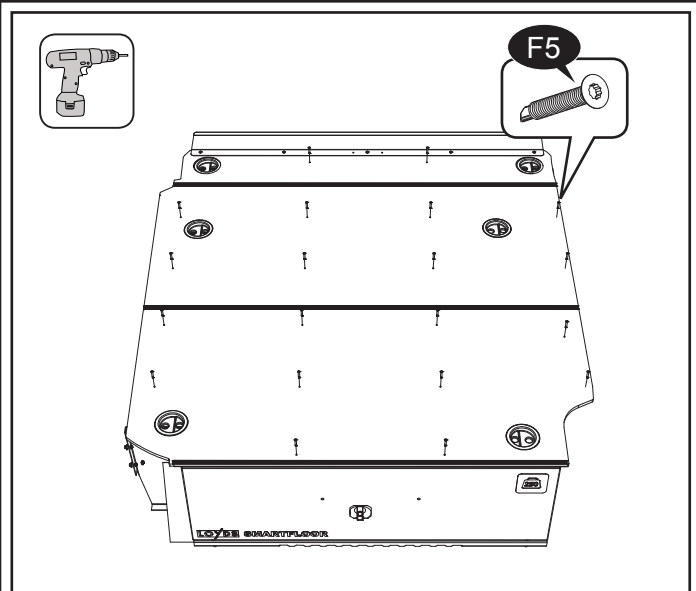


51.

LH RH ~~4~~

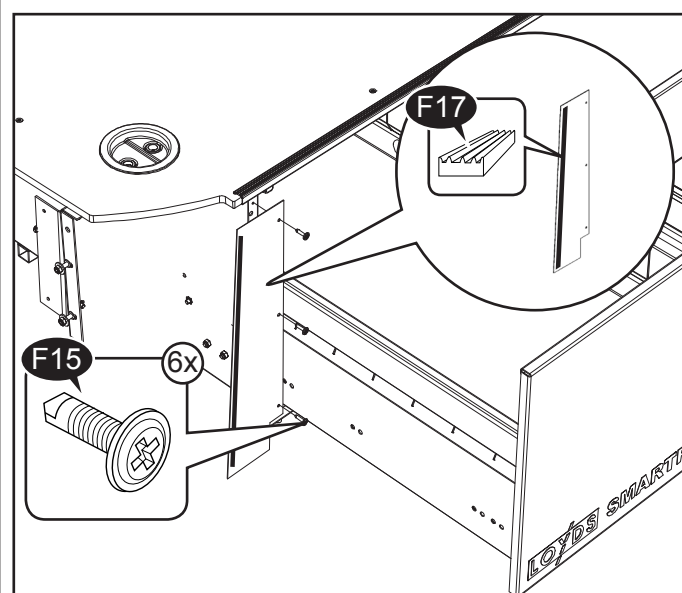


48.

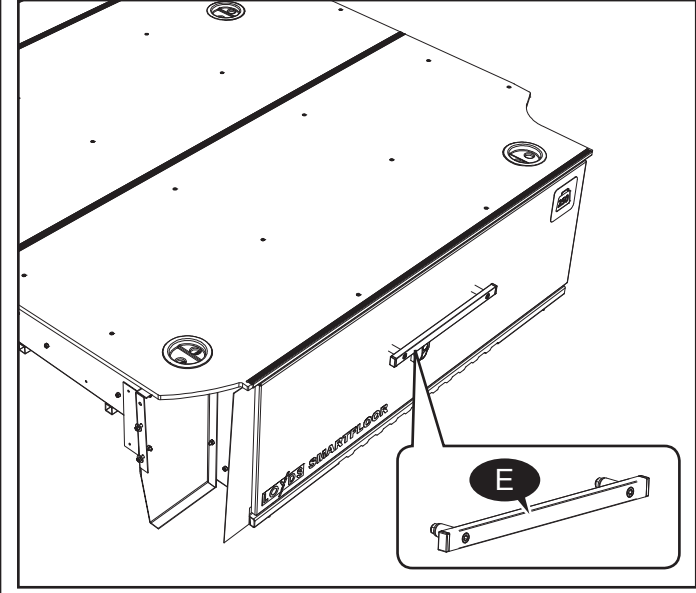


52.




53.

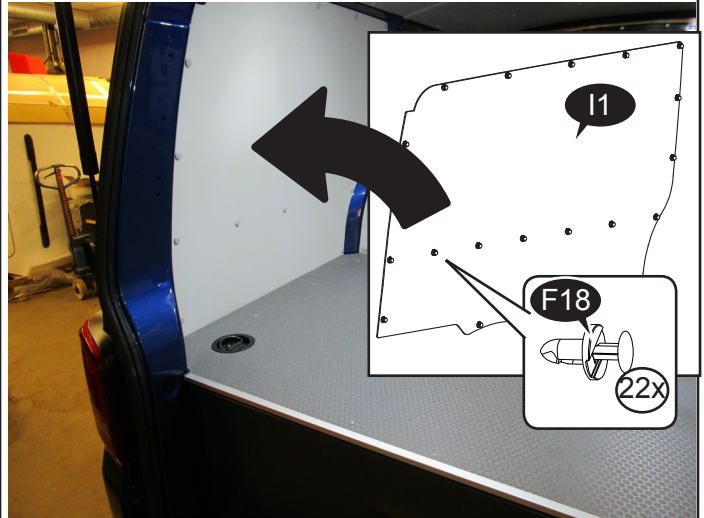


54.

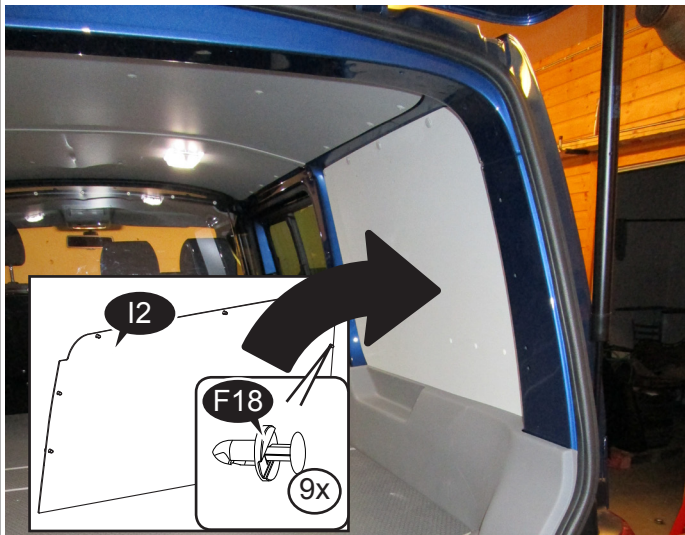

55.


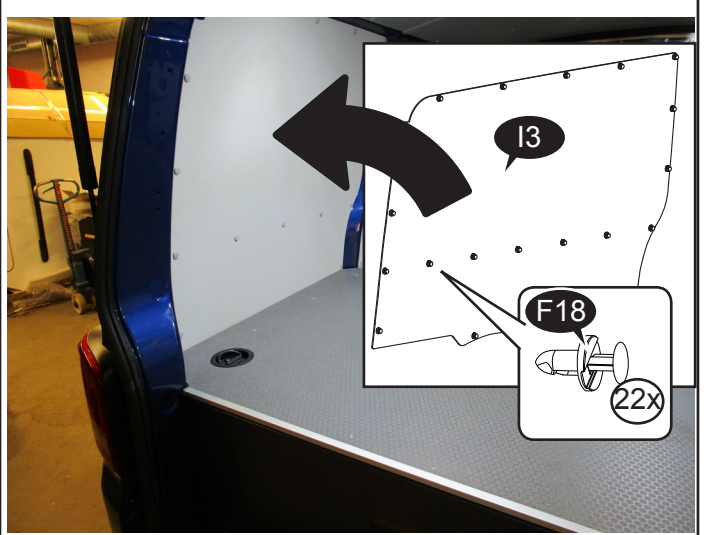


56.

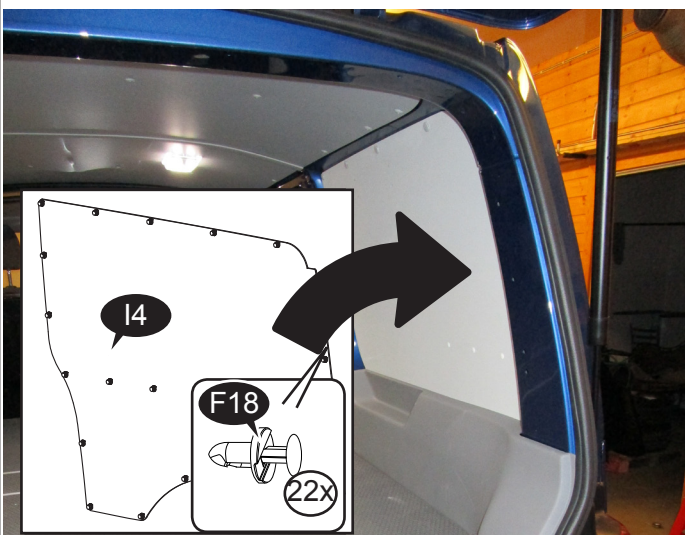

Option 1

Optional if one eyed latches is mounted:
Fitting Kit 15017958

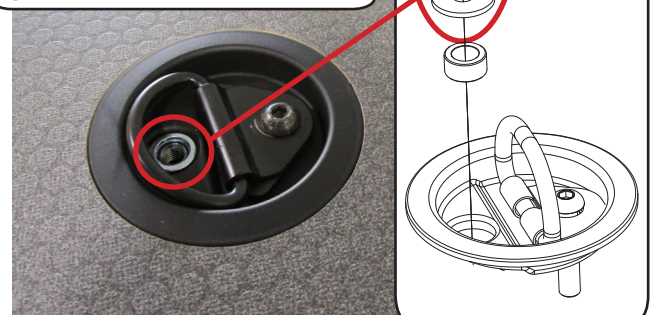

Option 2

Optional if one latch is missing:
Supplement Kit 15017989

