

SMARTFLOOR

Nissan Navara, Renault Alaskan and Mercedes X-Class Plastic Bedliner Installation Manual








Revision Record

Rev nr	Date	Page	Picture	Update	New	Deleted steps


Recommended torque for screws:

4,2mm Selfdrilling: 3,6 NM
 6mm: 6 NM
 8mm: 10 NM
 10mm: 42 NM

Tools

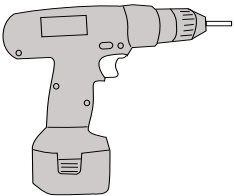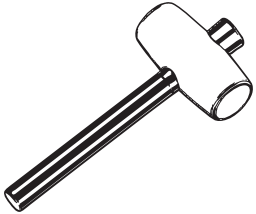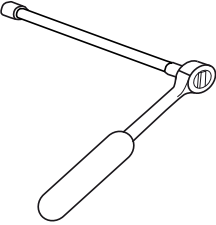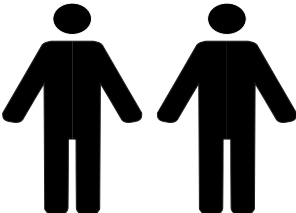
	PH 2 Torx Bits: T30 		
10-13 mm 	10-13 mm 		
			

15016970 Kit Complete SF Navara Alaskan X-Class Pickup 2019

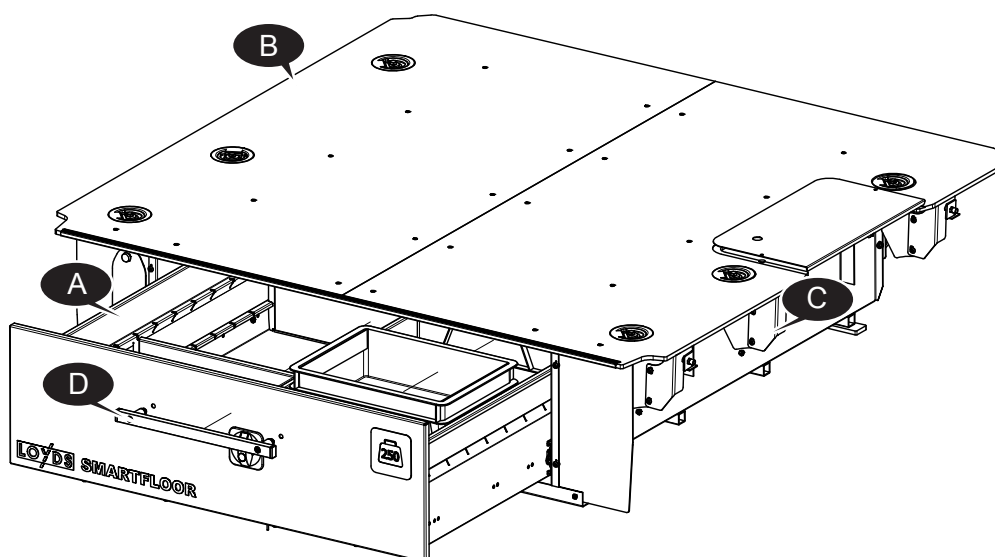

Item	Quantity	Part Number	Description
A	1	15016910	RD Drawer 1200 Pickup Main ASSY
B	1	15016965	Floor Kit NiReMe Pickup 2019
C	1	15016968	Steelbracket Set NiReMe 2019
D	1	15010236	Handle ASSY


15016965 Floor Kit NiReMe Pickup 2019

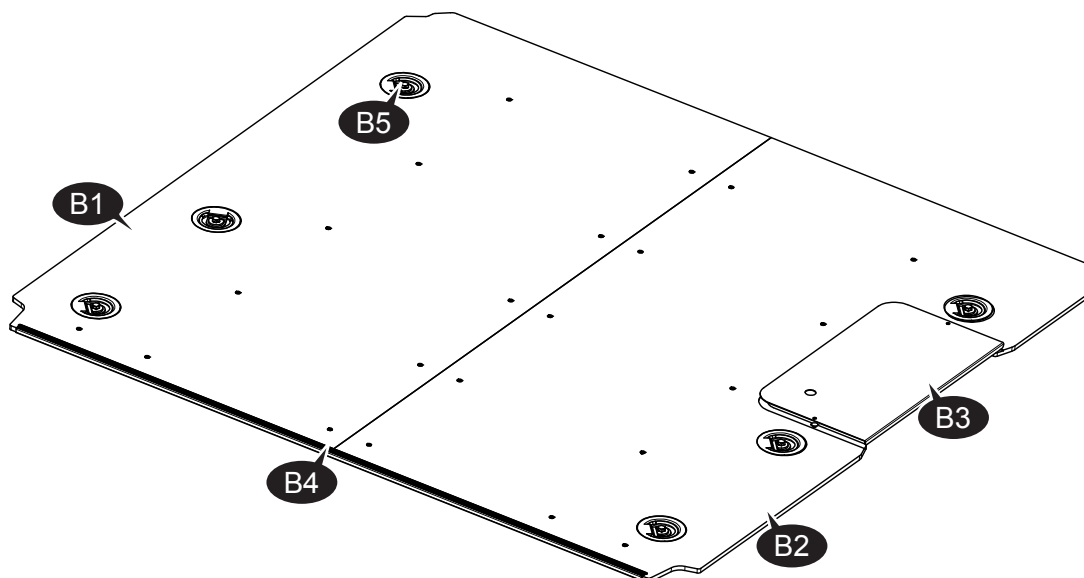

15016348 Floor Kit Amarok 2019


Item	Quantity	Part Number	Description
B1	1	15016961	Floor SF Left NiReMe 2019
B2	1	15016962	Floor SF Right NiReMe 2019
B3	1	15016943	Hatch Floor Right SF Ranger 2019
B4	1	15016966	U-Profile 9mm L=1399
B5	1	15016946	Fitting Kit Floor Set SF Ranger 2019

15016968 Steelbracket Set SF NiReMe 2019

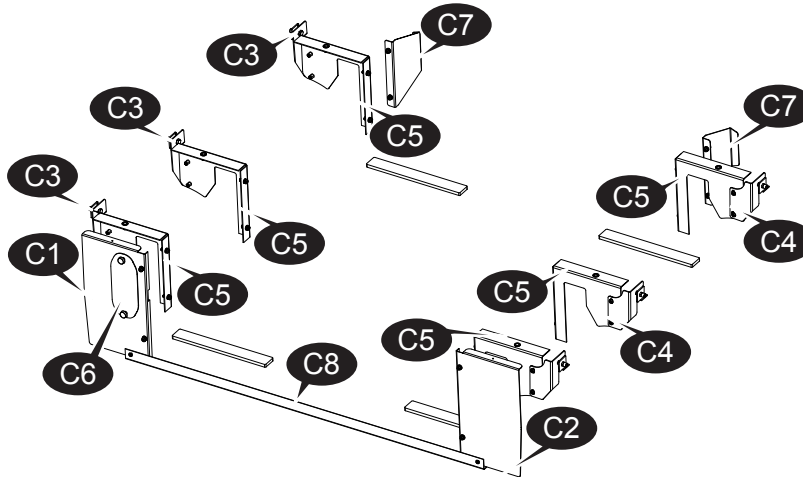











Item	Quantity	Part Number	Description
C1	1	15016957	Cover Rear Left NiReMe
C2	1	15016959	Cover Rear Right NiReMe
C3	3	15016953	Bracket for Rails Left SF NiReMe
C4	3	15016960	Bracket for Rails Right SF NiReMe
C5	6	15016955	Bracket Latches SF NiReMe
C6	1	15016923	Hatch Tube Channel Amarok
C7	2	15016964	Bracket Front SF NiReMe
C8	1	15016969	Cover Angle Rear Lower SF
	1	15016967	Fitting Kit Steelbracket Set SF NiReMe

15010236 Handle Assy

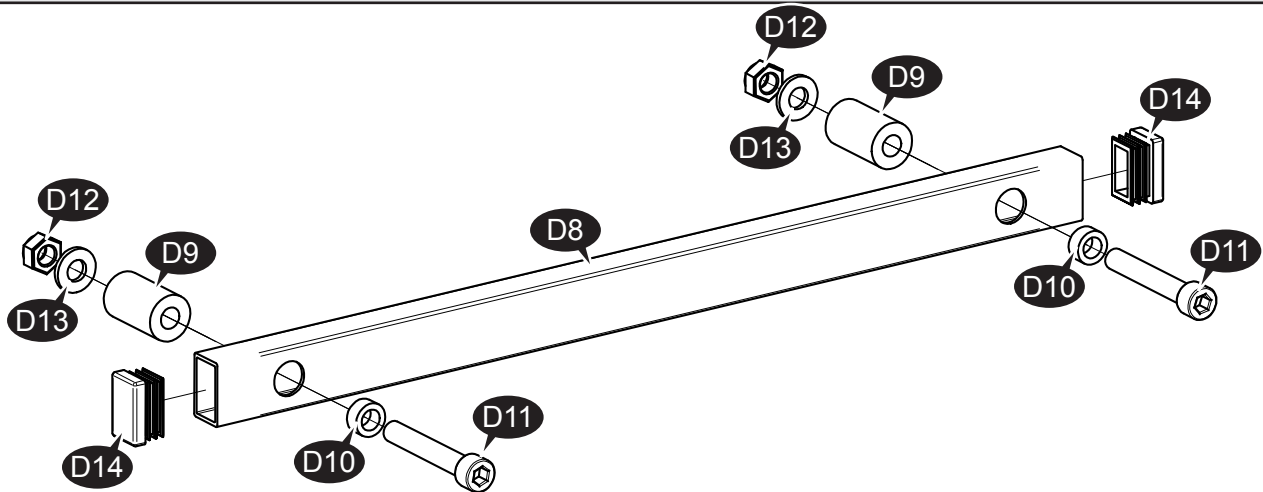

15010236 Handle Assy

Item	Quantity	Part Number	Description
D8	1	15009441	Handle Tube 25x15x286
D9	2	15009442	Spacer Ø8,3x18x30 Nylon Black
D10	2	15009443	Spacer Ø8,1x13x6mm Galv
D11	2	15009444	Screw M8x50 Cylinderh Hex
D12	2	8 NMU	Mutter M8 Nyloc DIN985
D13	2	8,4x17x2	M8 Washer, DIN 125
D14	2	15009438	End Plug Tube 25x15 Inside

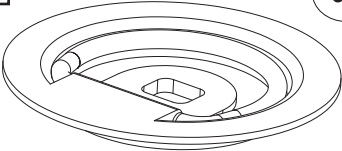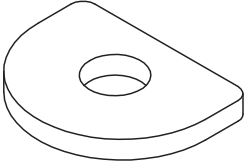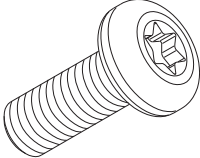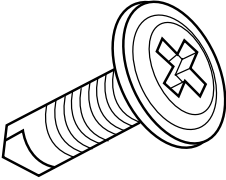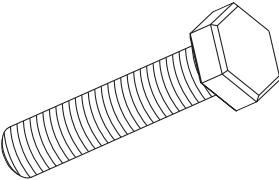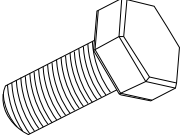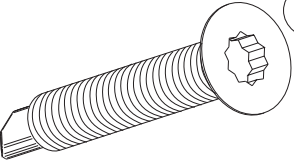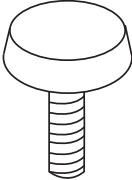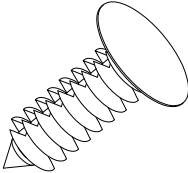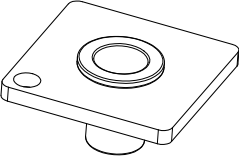Fitting Kit		
F1  15005497 Latch Cup Black Ø90 Ø12x15 1000Kp 6x	F2  15005884 Washer Latchcup for Ø8 6x	F3  15003551 M6x16 TX30 pan (DIN 7985) 32x
F4  4,2x16 FLS Platescrew selfdrilling E45759 Black 2x	F5  6x40 6KS Bolt Black, DIN 933 6x	F6  8x20 6K Skrue 8x20 6K S-523, NS1824 ELZ 8.8 Din 933 6x
F7  15016947 Screw 4,8x25 Selfdrill Counters Torx Elz 22x	F8  M6x20 Ø20 Rattskrue M6x20 Knob 2x	F9  Sort Plastpropp Black FTB 2x
F10  225 085 6516 Gummikloss 12x12x5 sort m tape 6x	F11  Spacer 300x40x9 05-99626 4x	F12  15017288 Bracket Rail NiReMe 6x
F13	F14	F15
F16	F17	F18
F19	F20	F21

1.

LH



2.

RH




3.




4.

RH

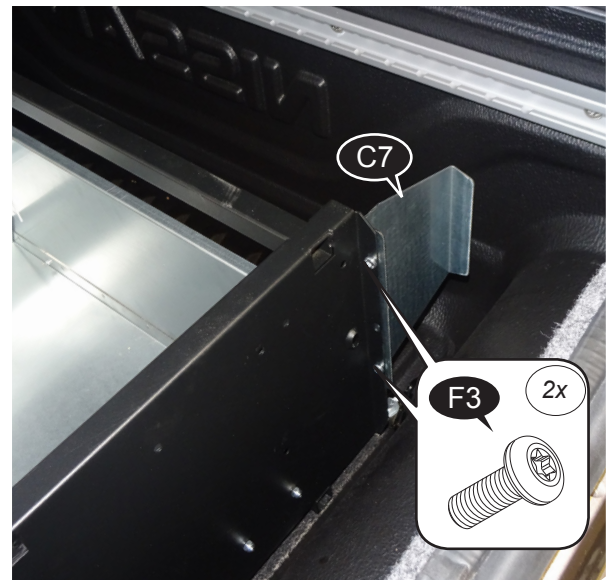

5.

LH

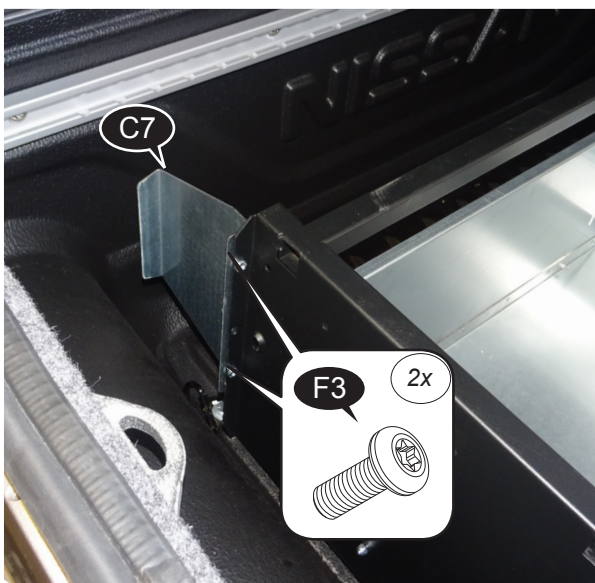


6.




7.

L&R

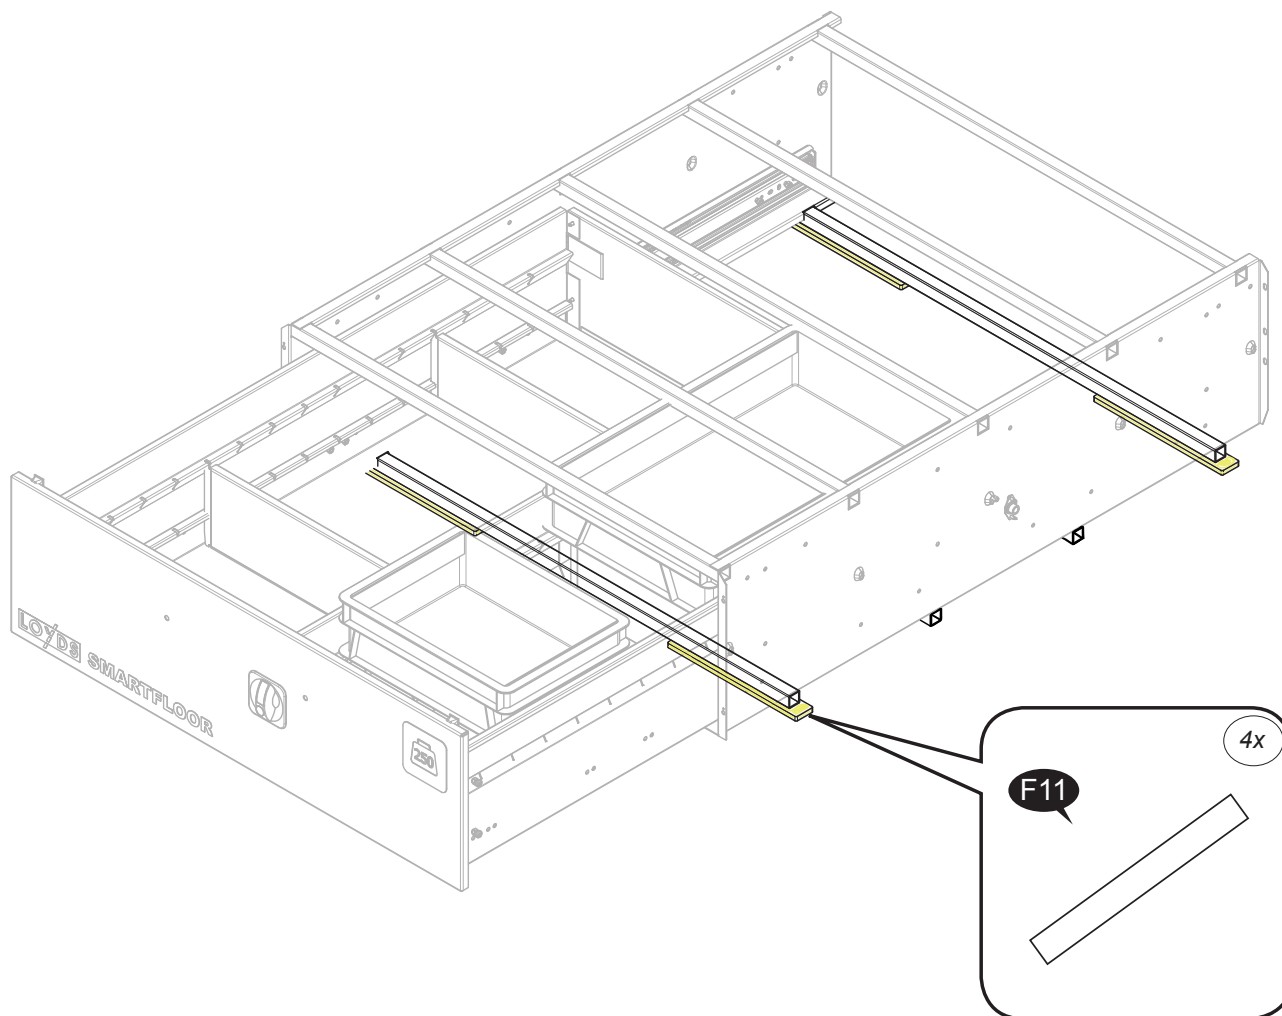


8.

L&R

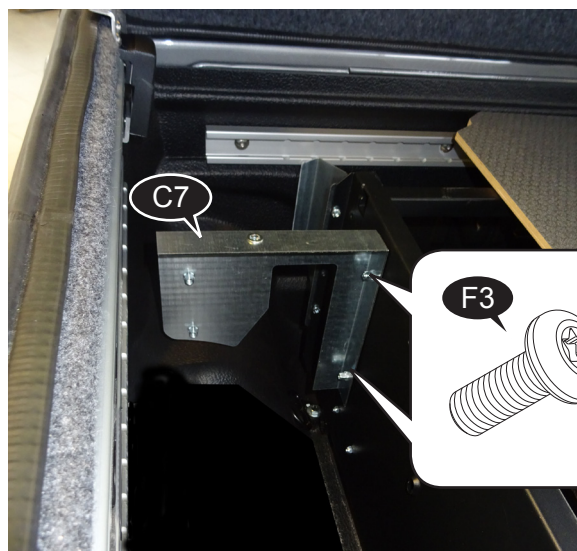


9.

L&R

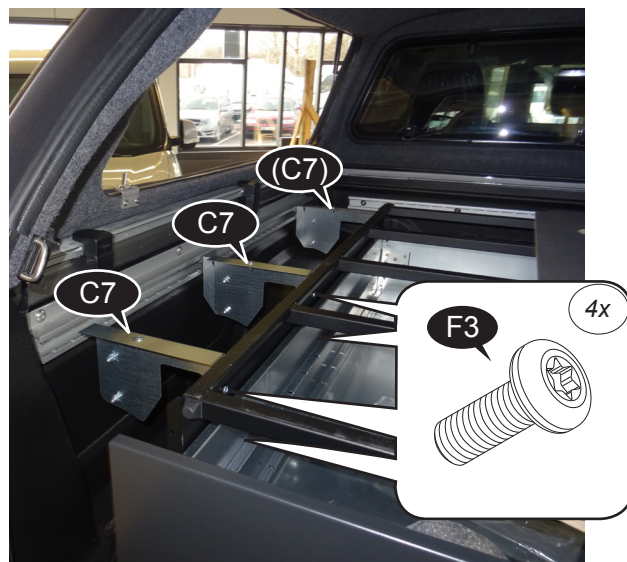


12.

L&R

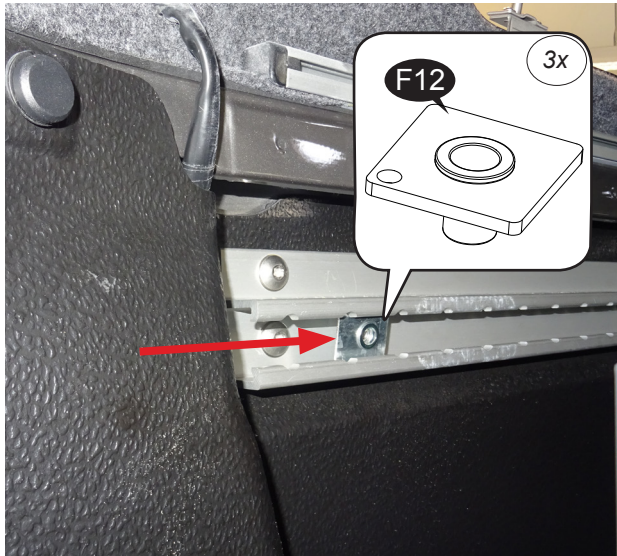


13.

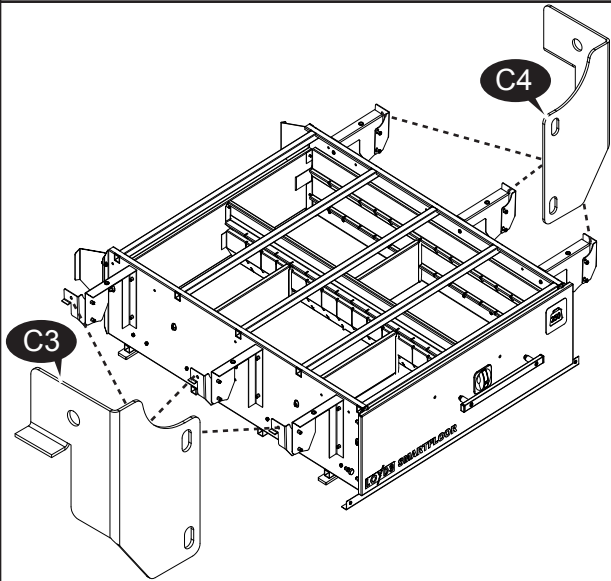


14.

L&R

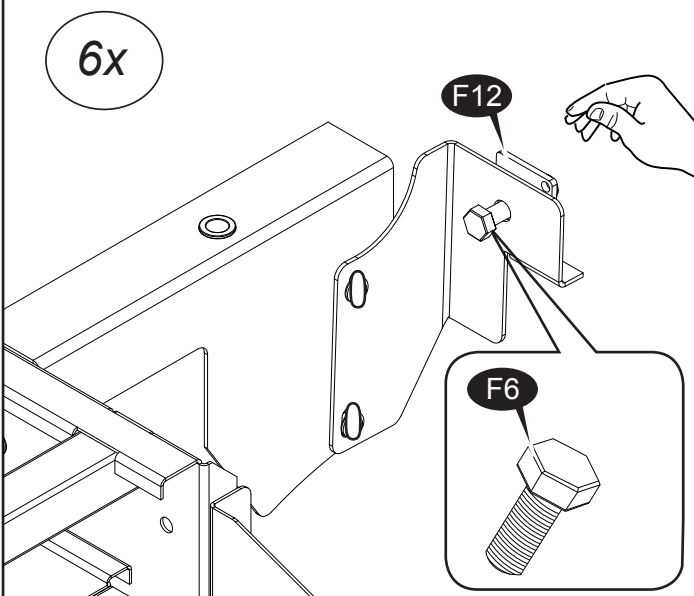

15.


L&R

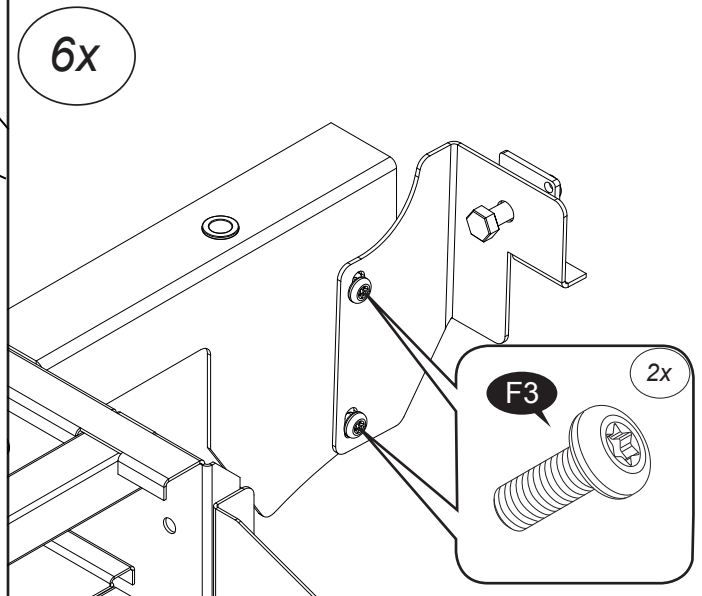


16.

17.

RH

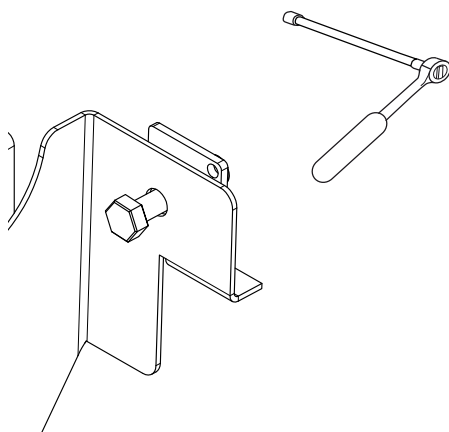


Tighten Step 14.

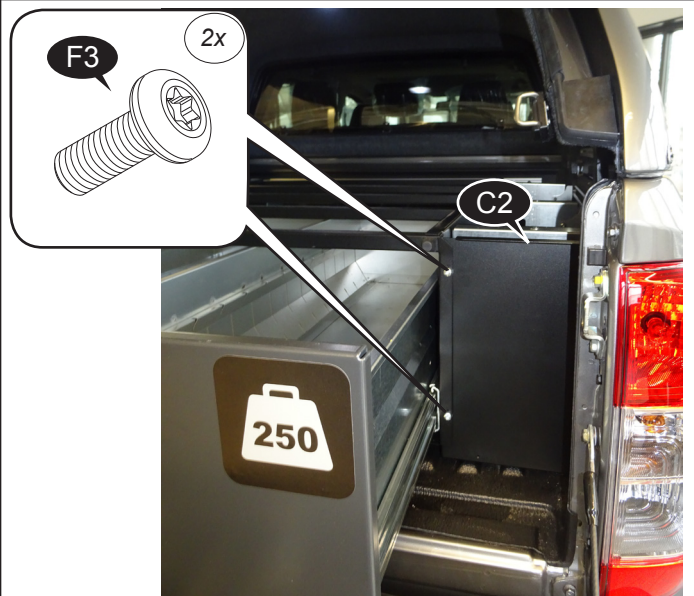


18.

LH

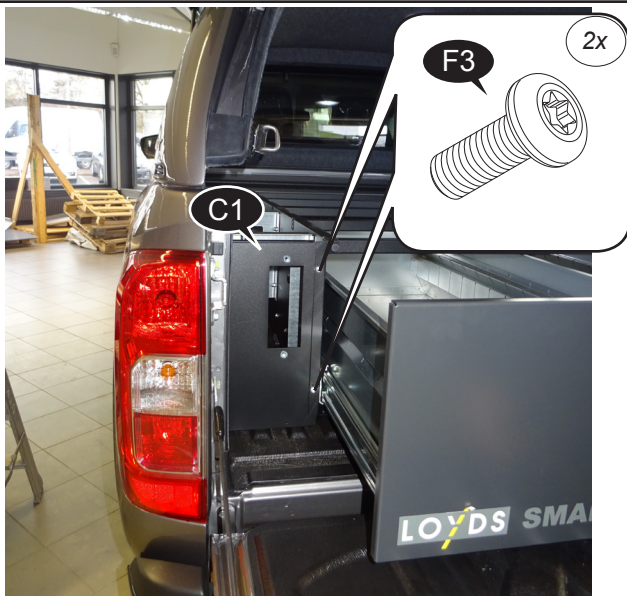


19.

LH

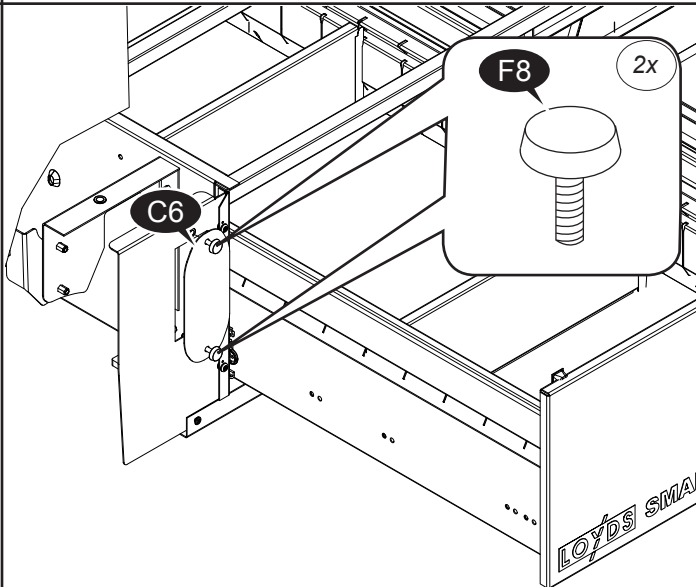


20.

L&R

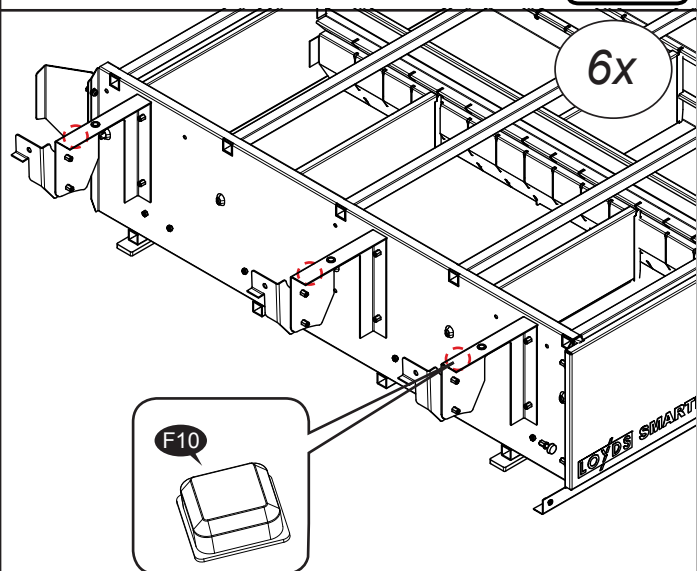


21.

L&R

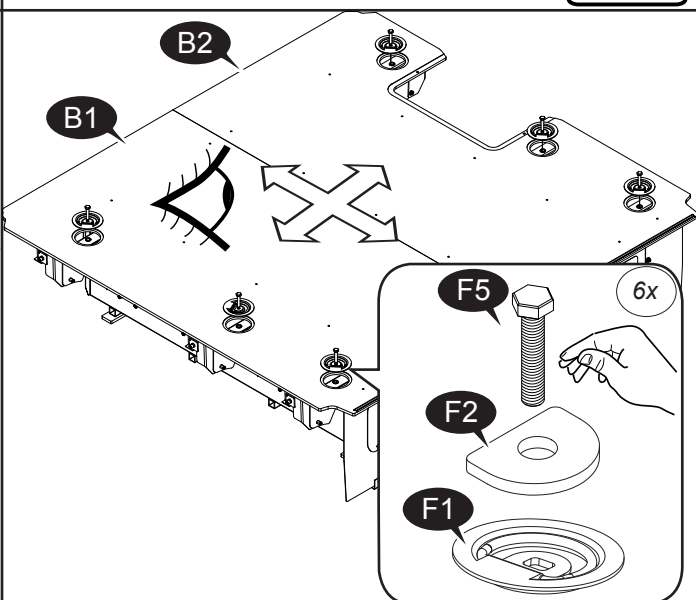


22.

L&R

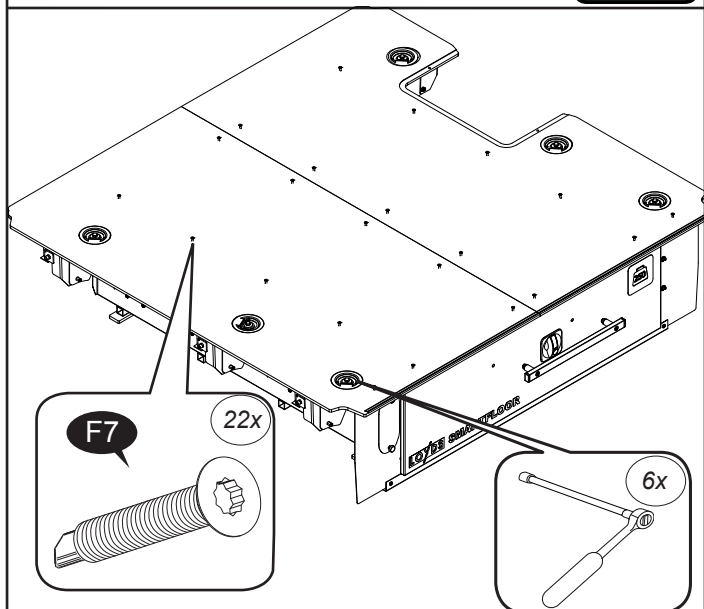

23.

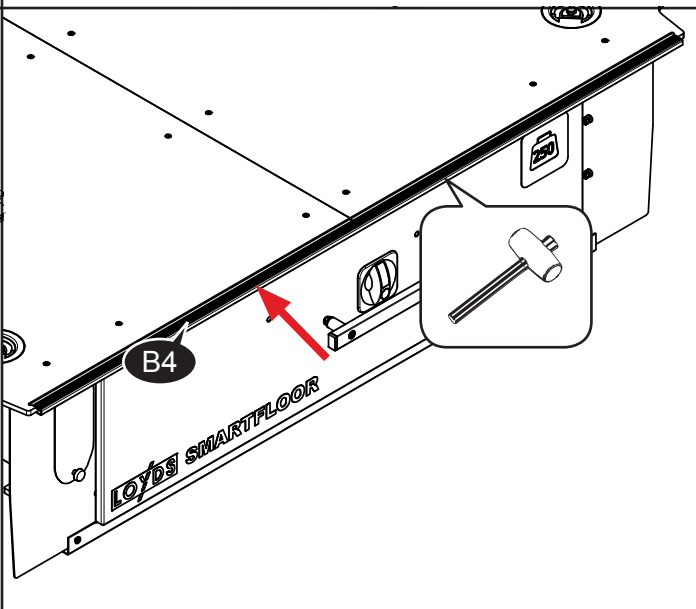

24. L&R	25. RH
